



(Photo of EUT to be connected between PC and monitor)

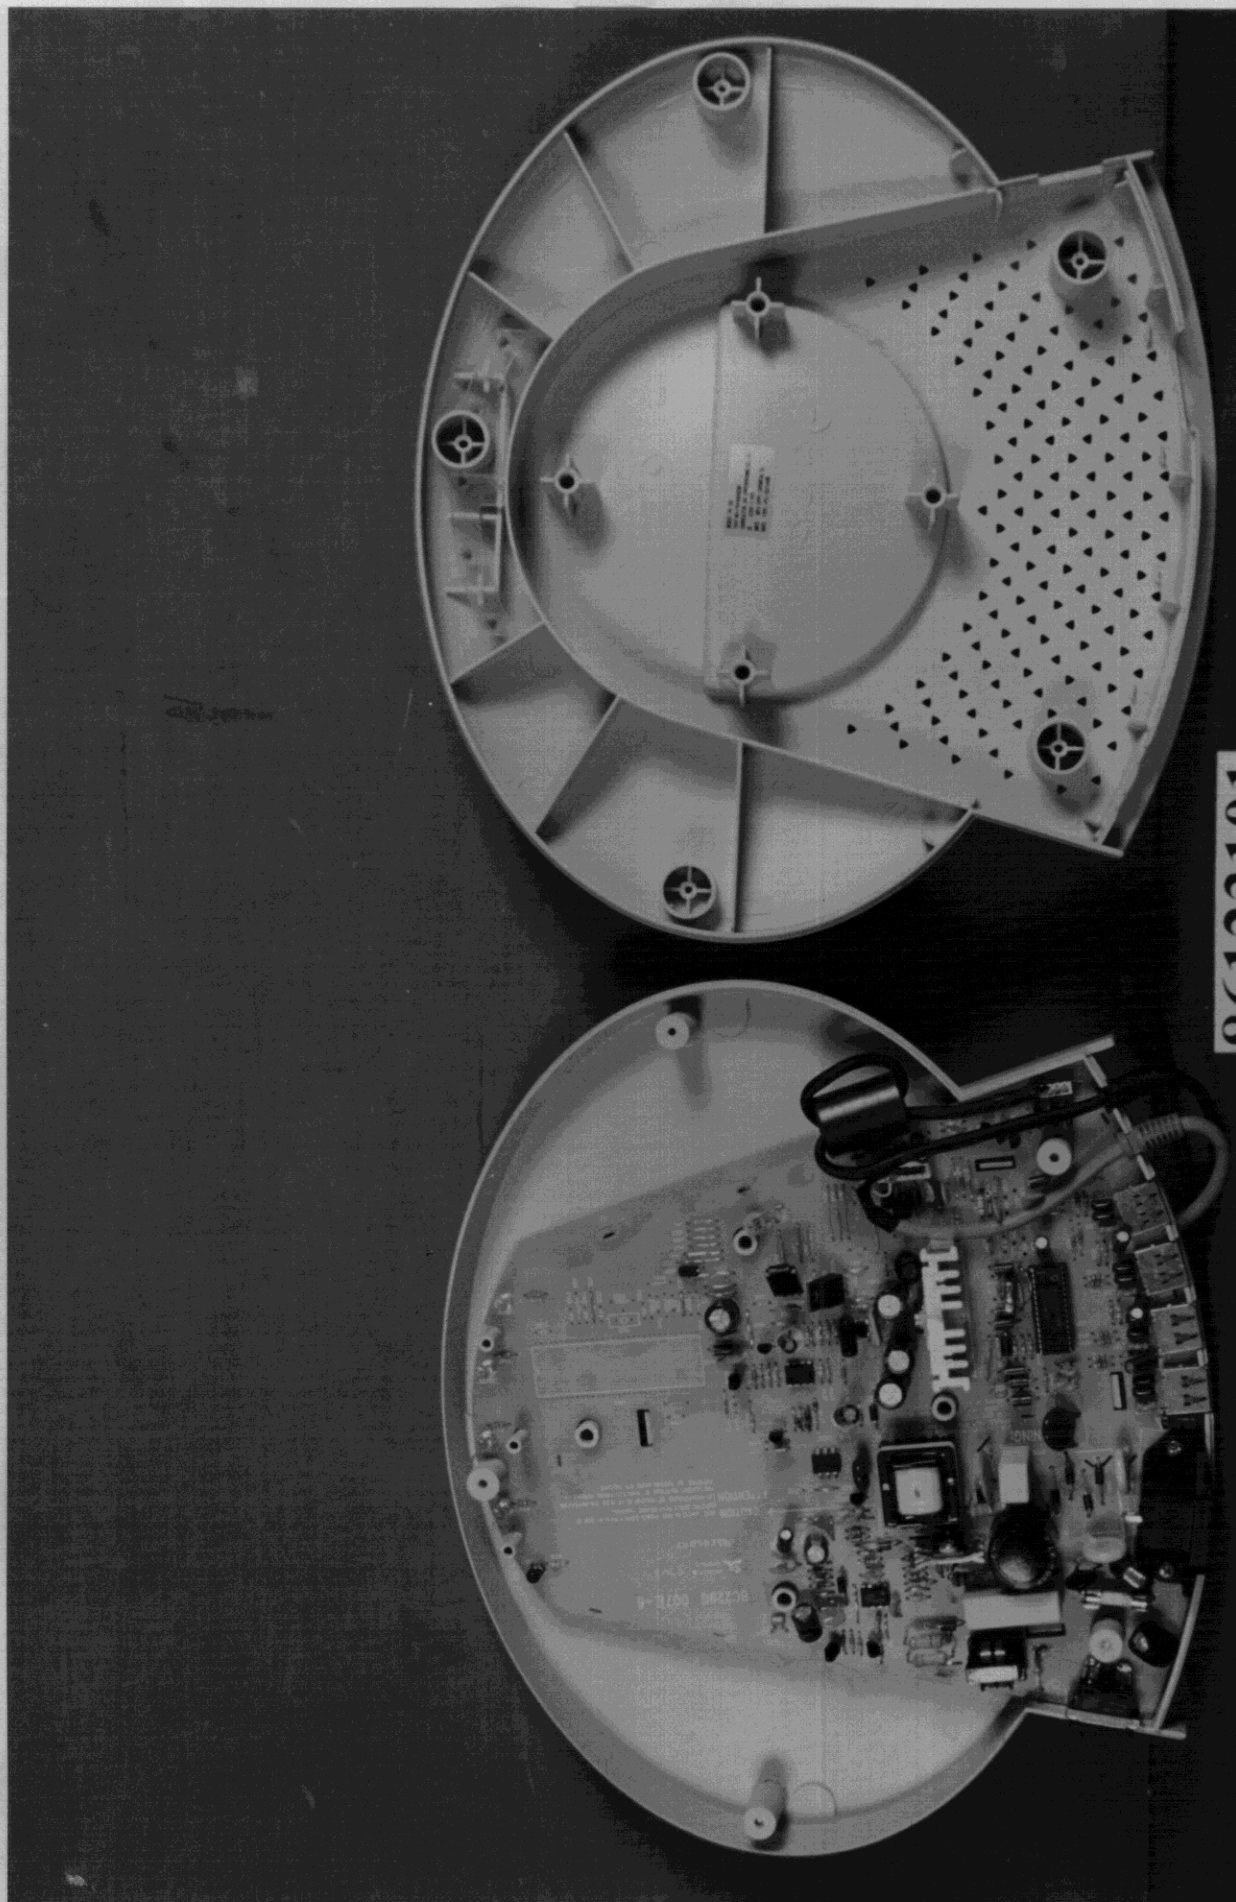


06123101

(Photo of EUT to be connected between PC and monitor)

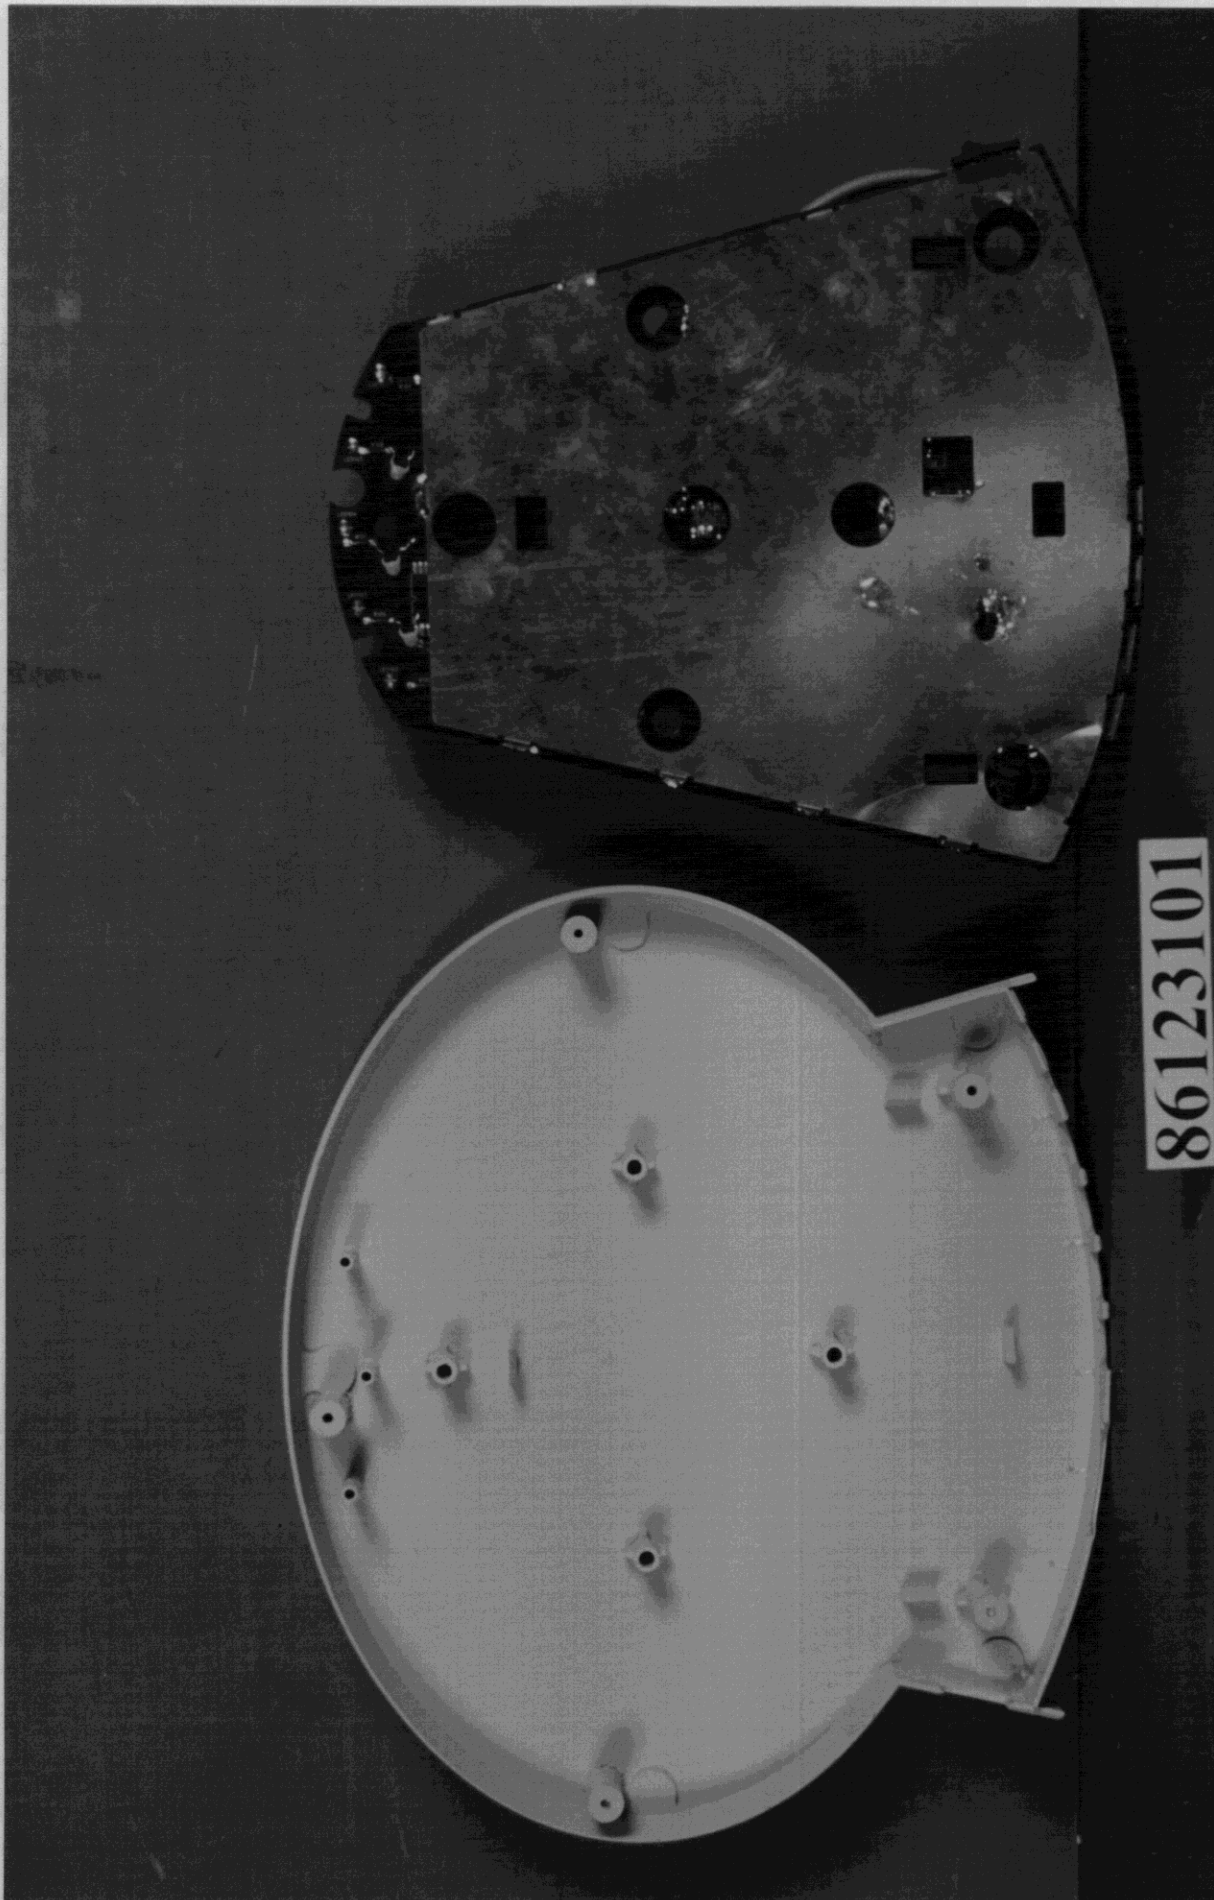


86123101


(Photo of EUT to be connected between PC and monitor)

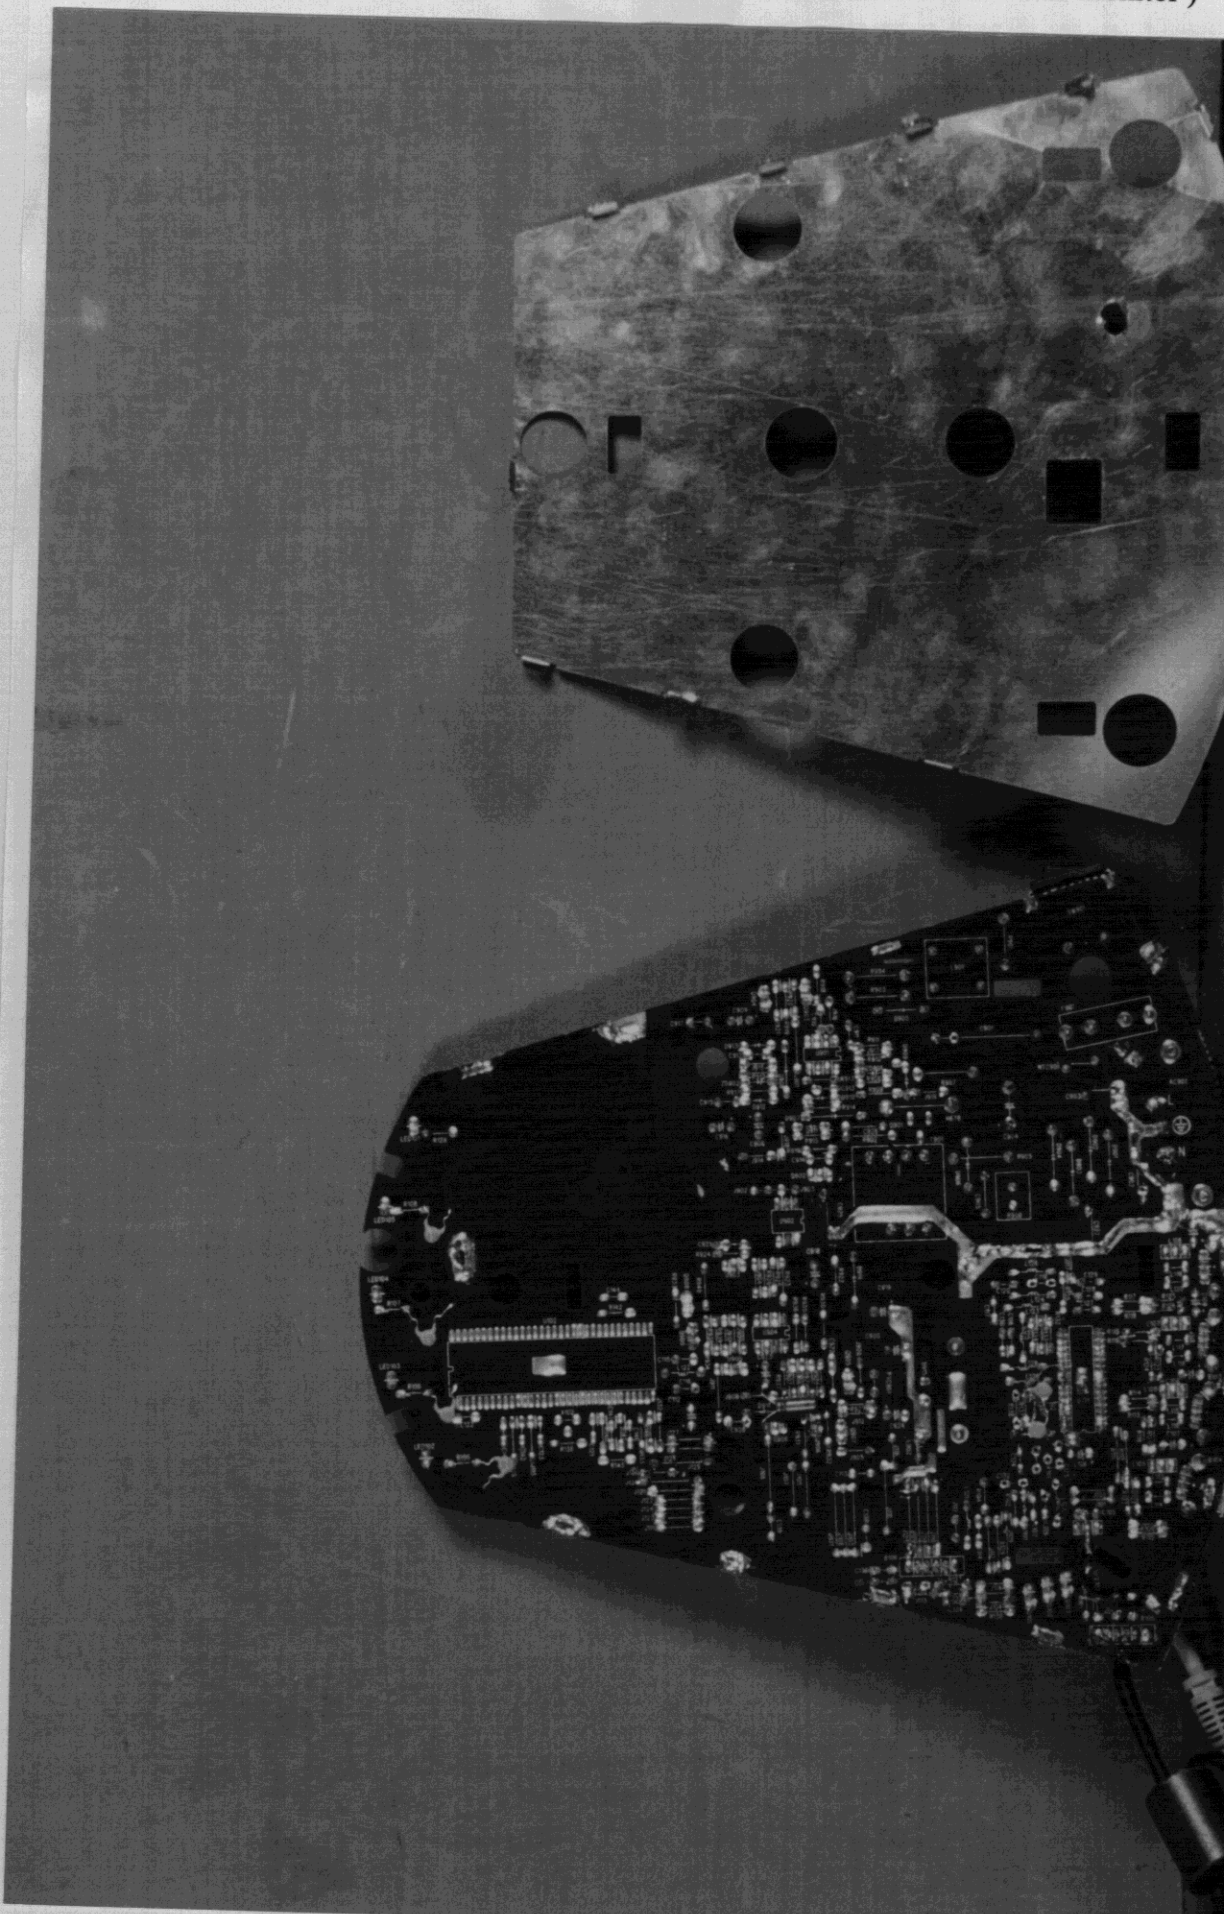

(Photo of EUT to be connected between PC and monitor)

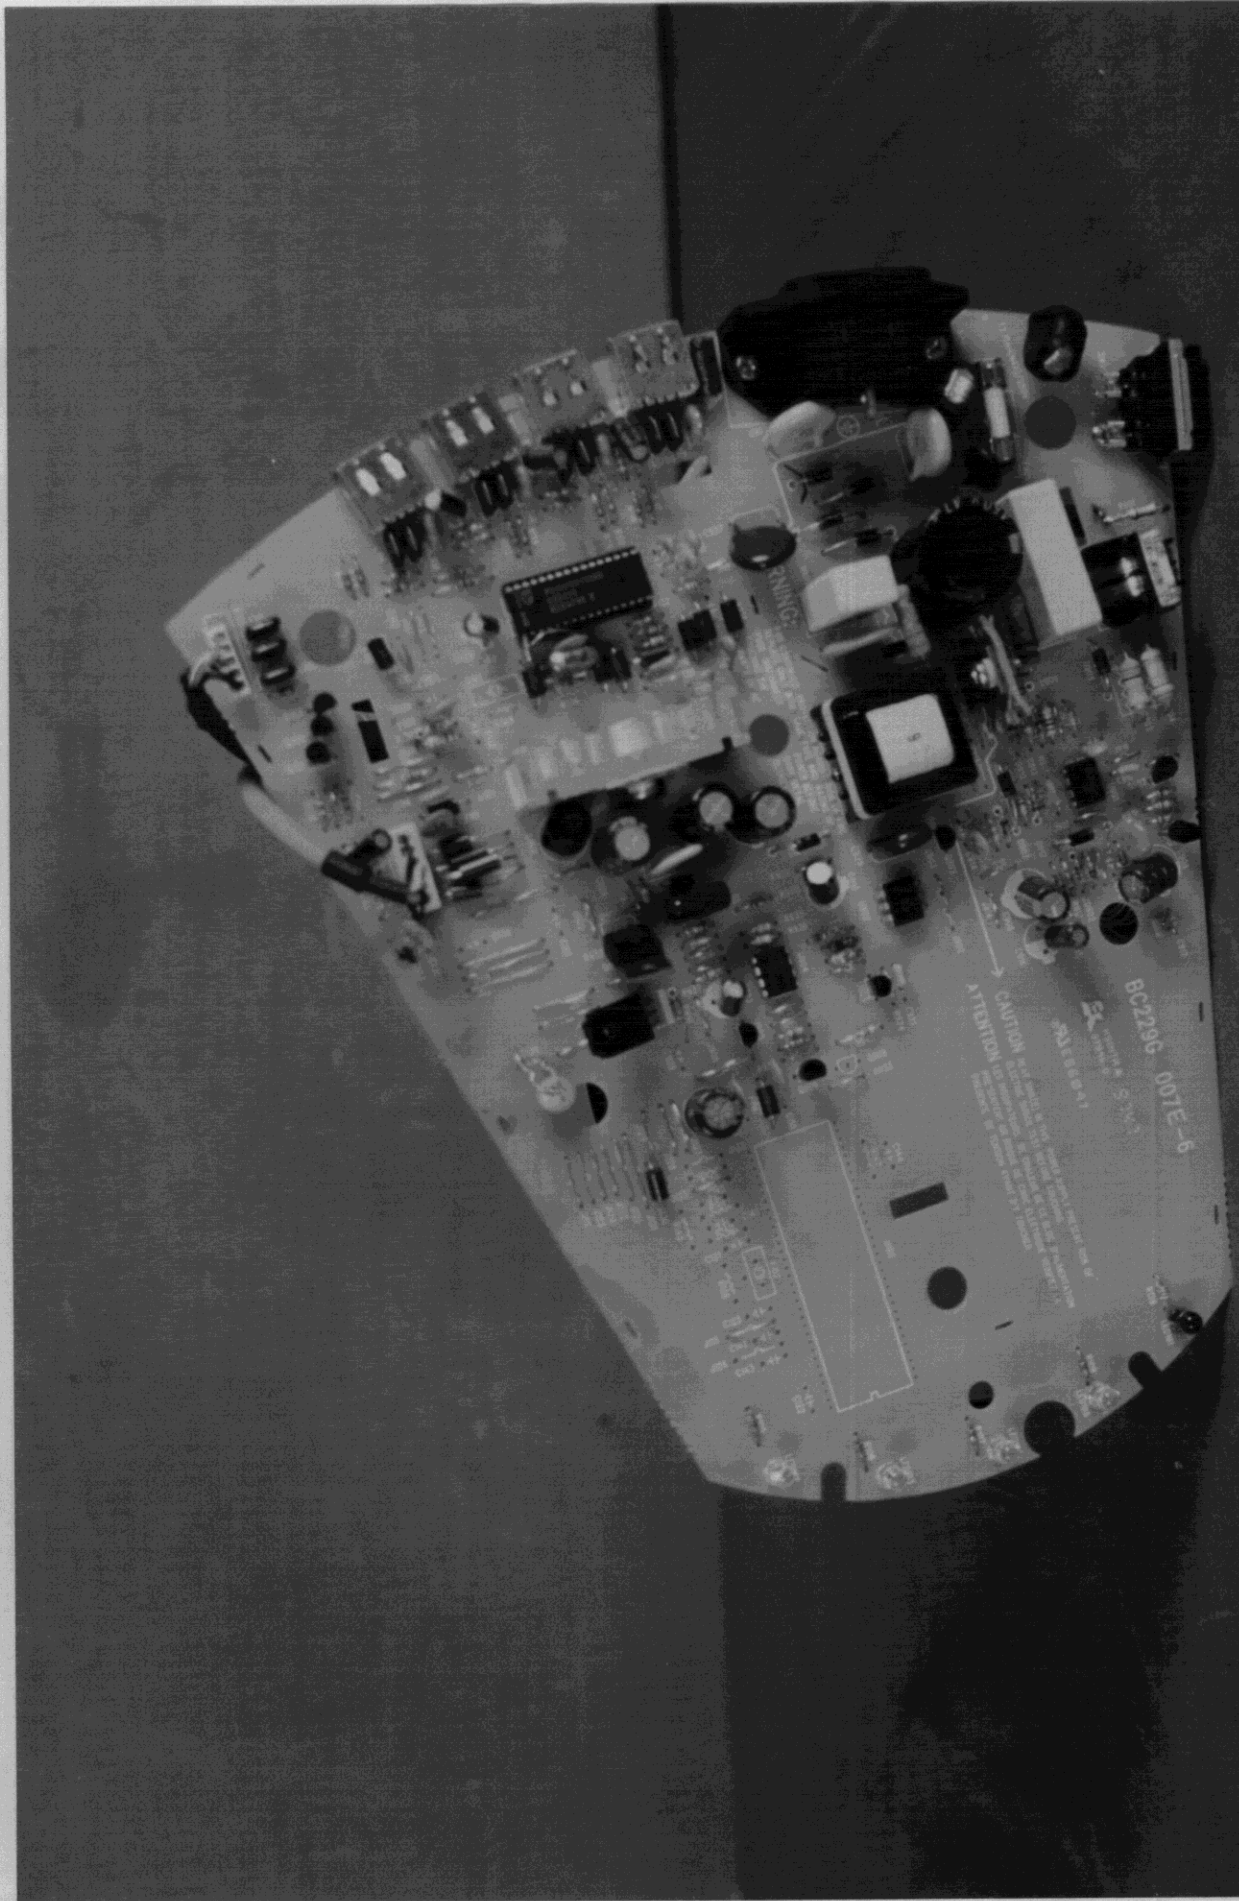


(Photo of EUT to be connected between PC and monitor)

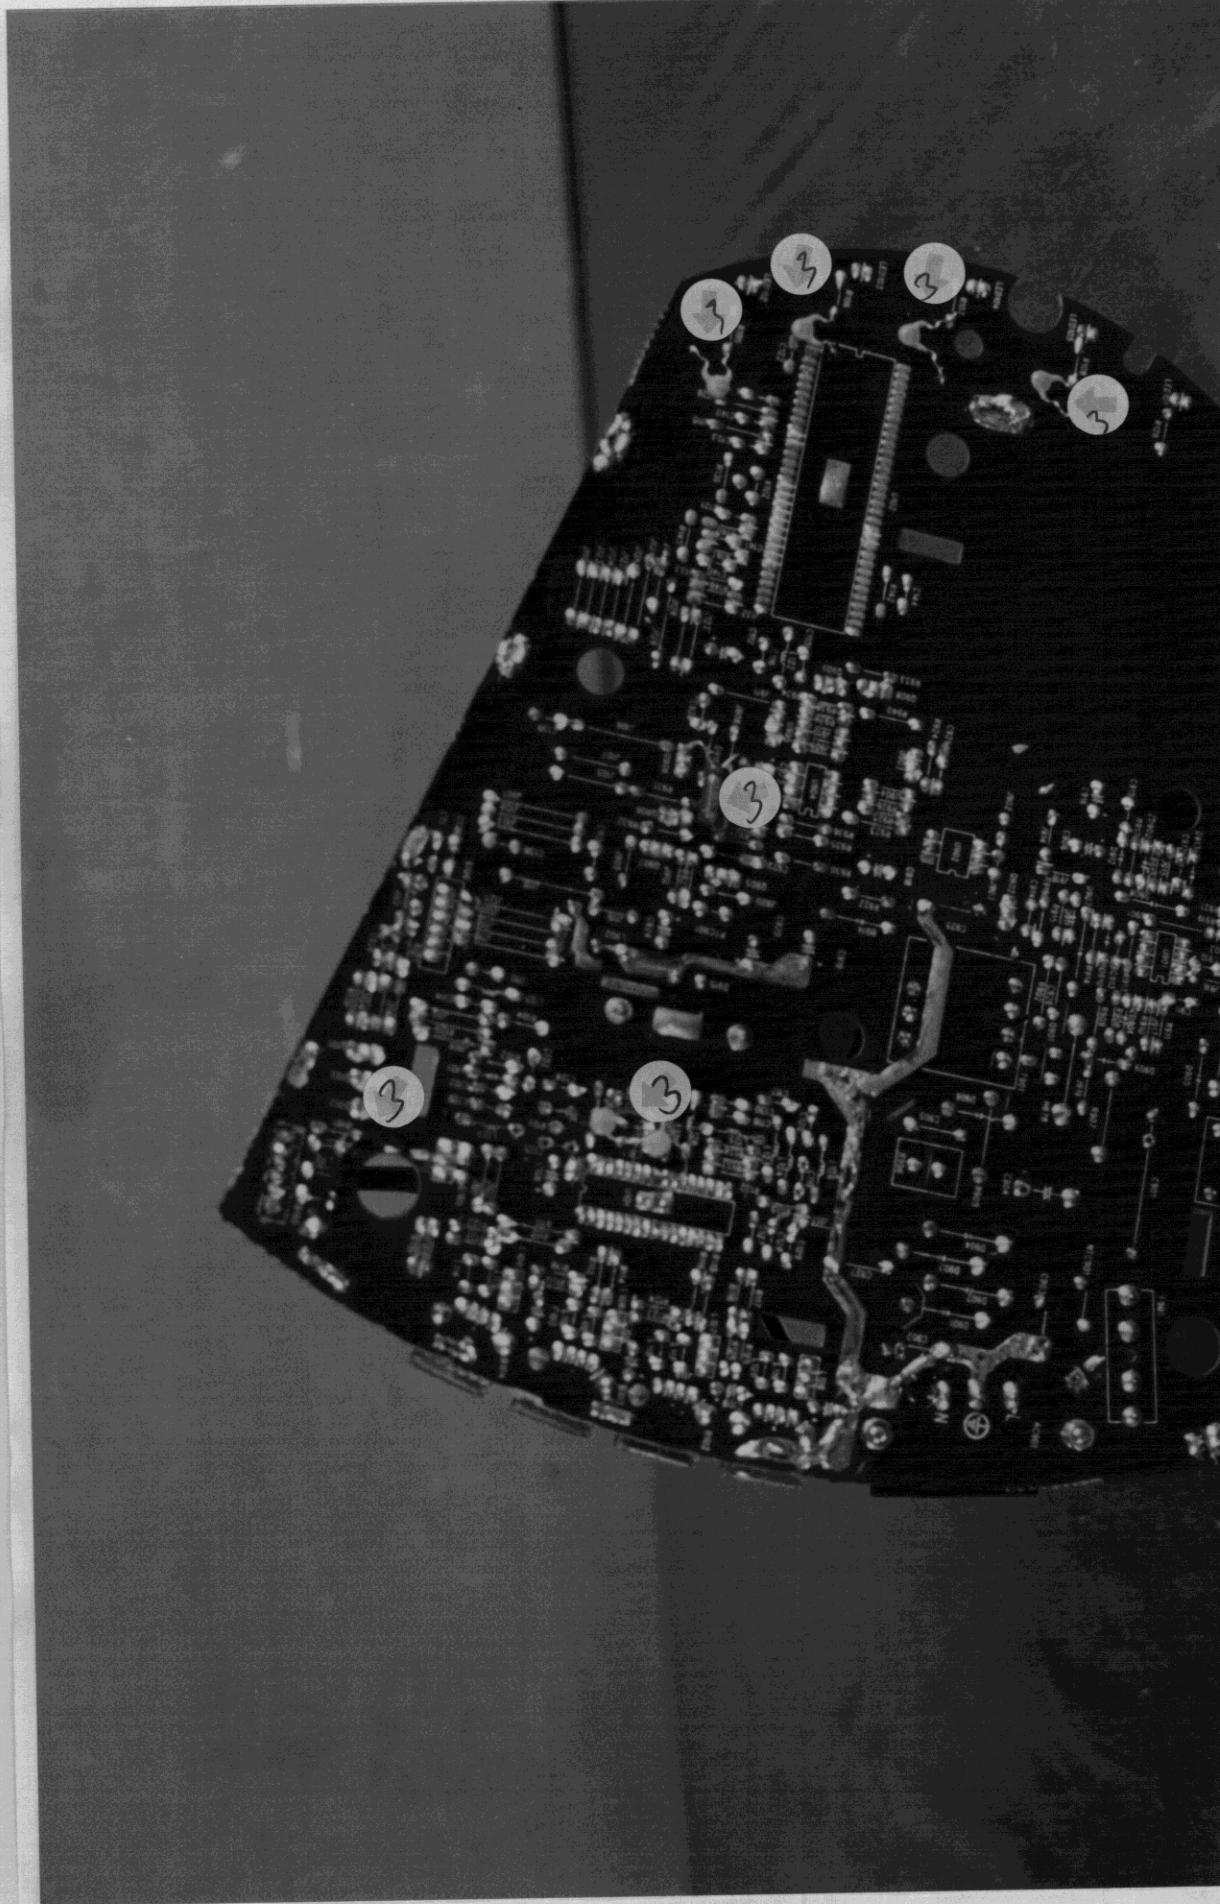


(Photo 16)

(Photo of EUT to be connected to USB port of PC)

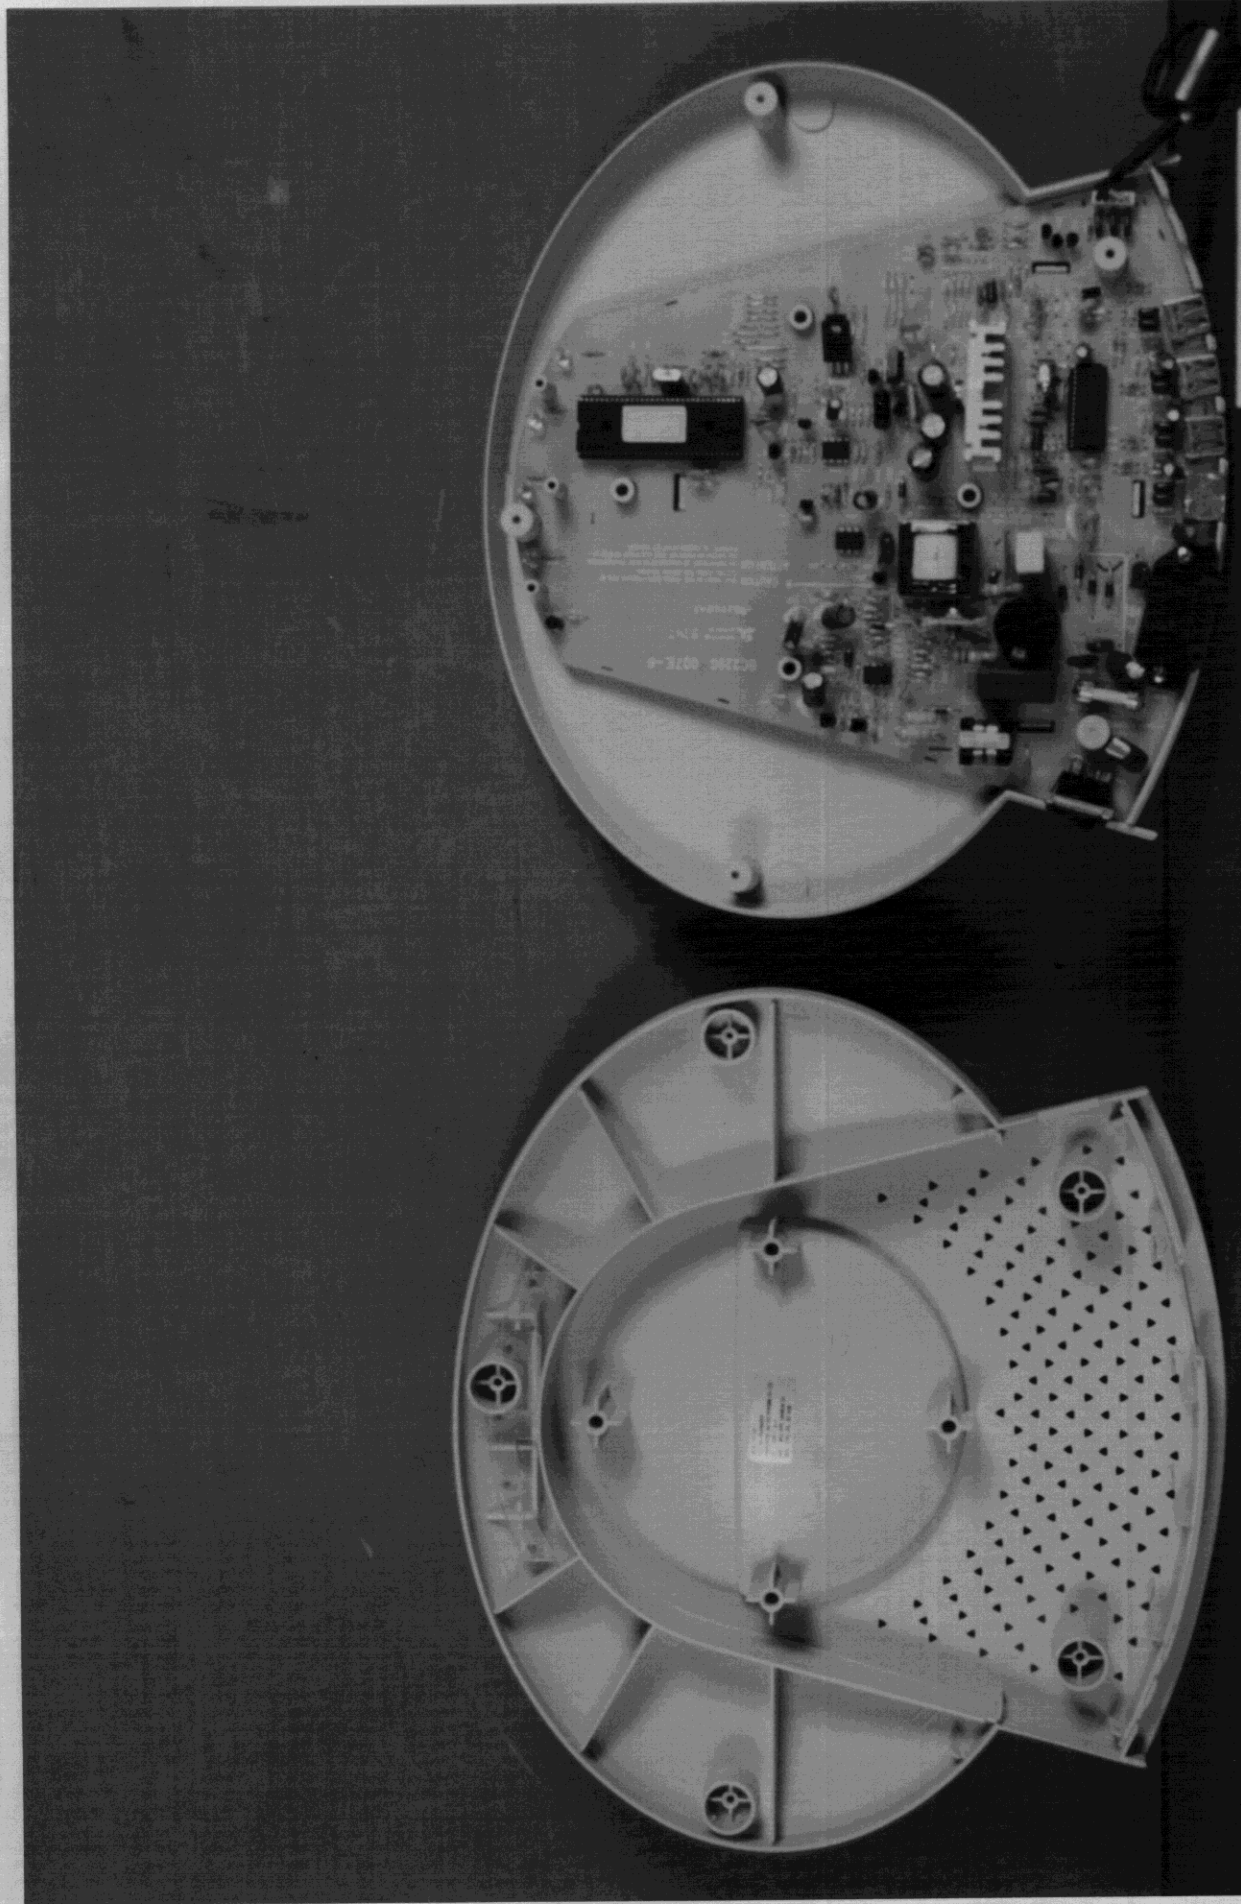


(Photo 6)

(Photo of EUT to be connected to USB port of PC)

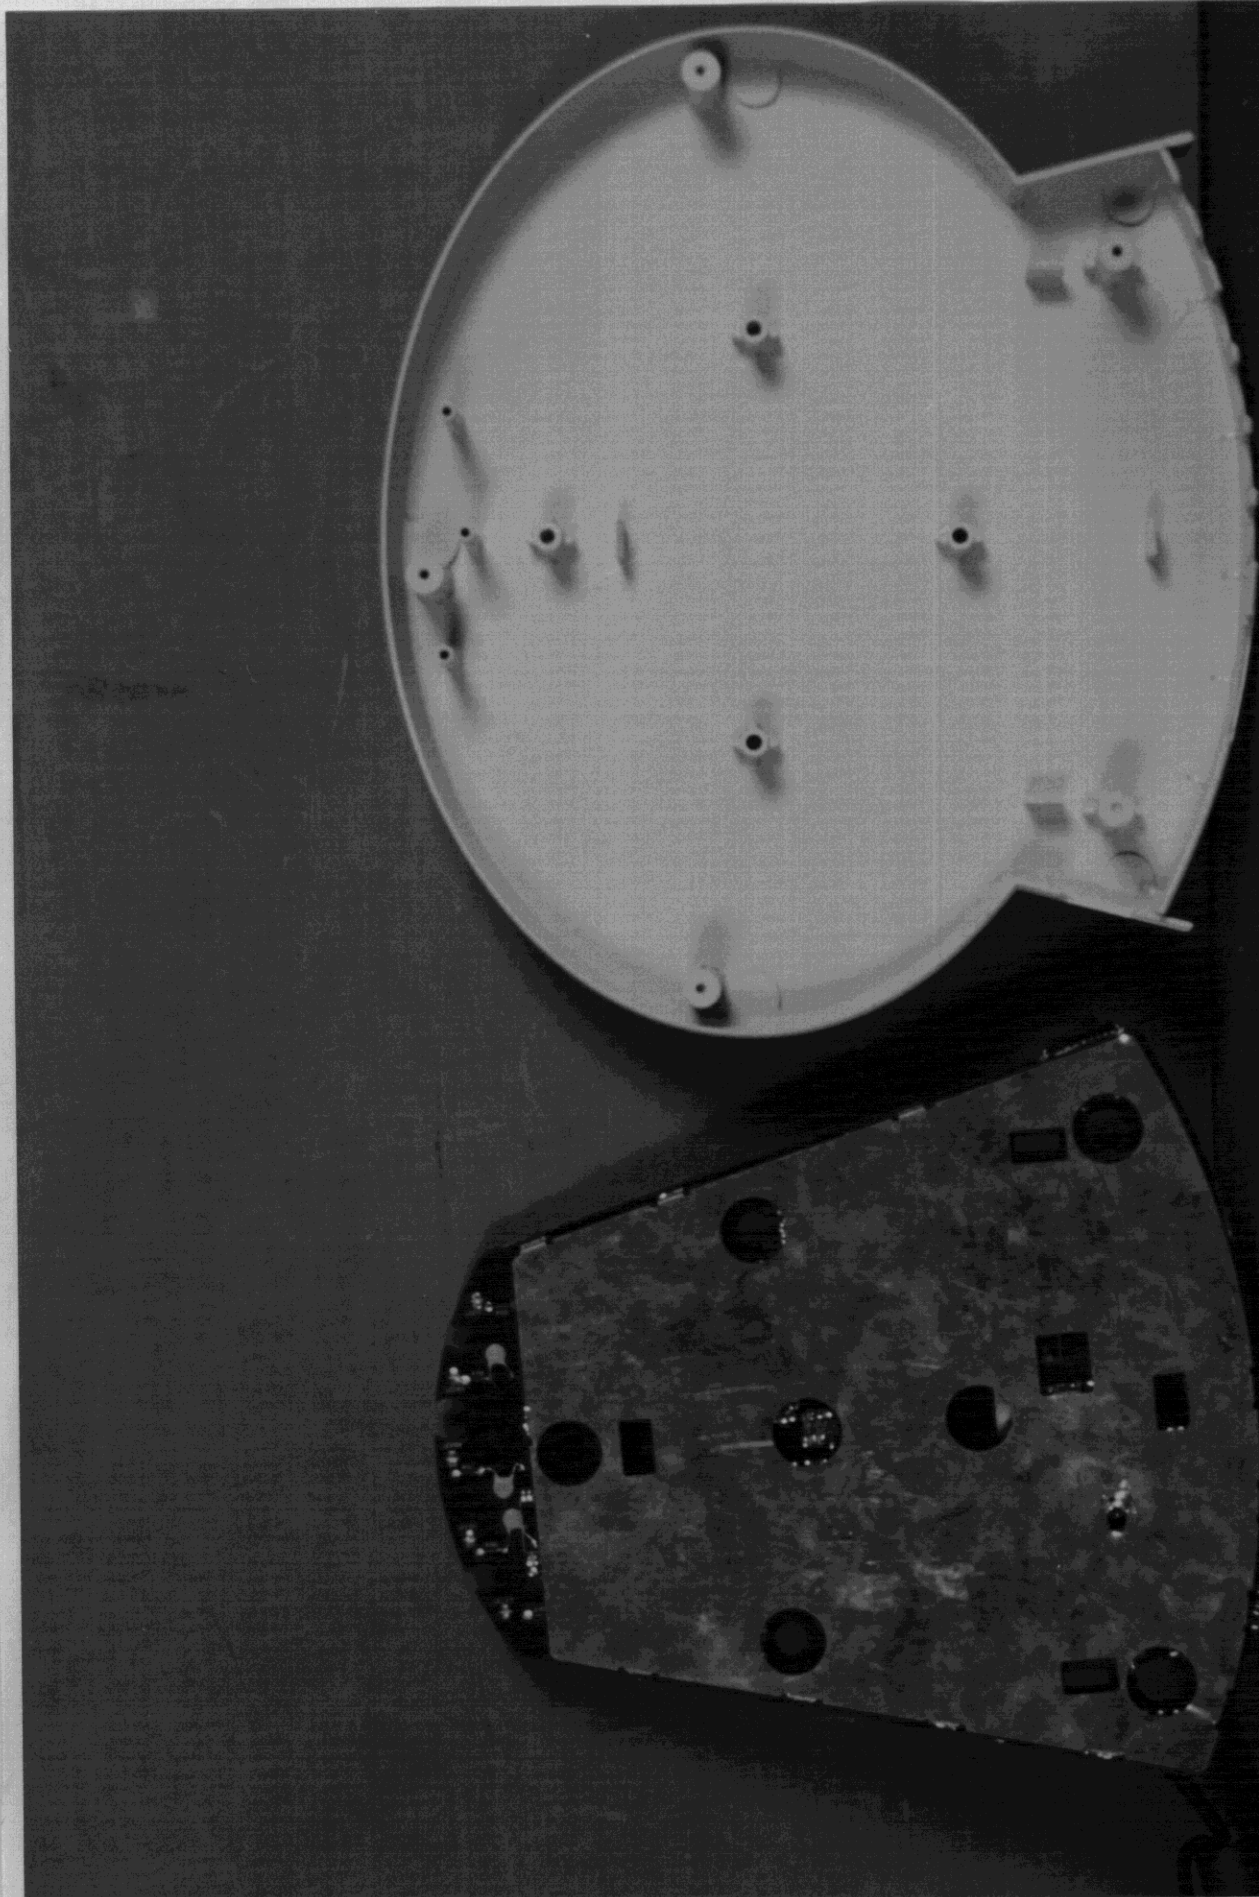


86123101

(Photo of EUT to be connected to USB port of PC)

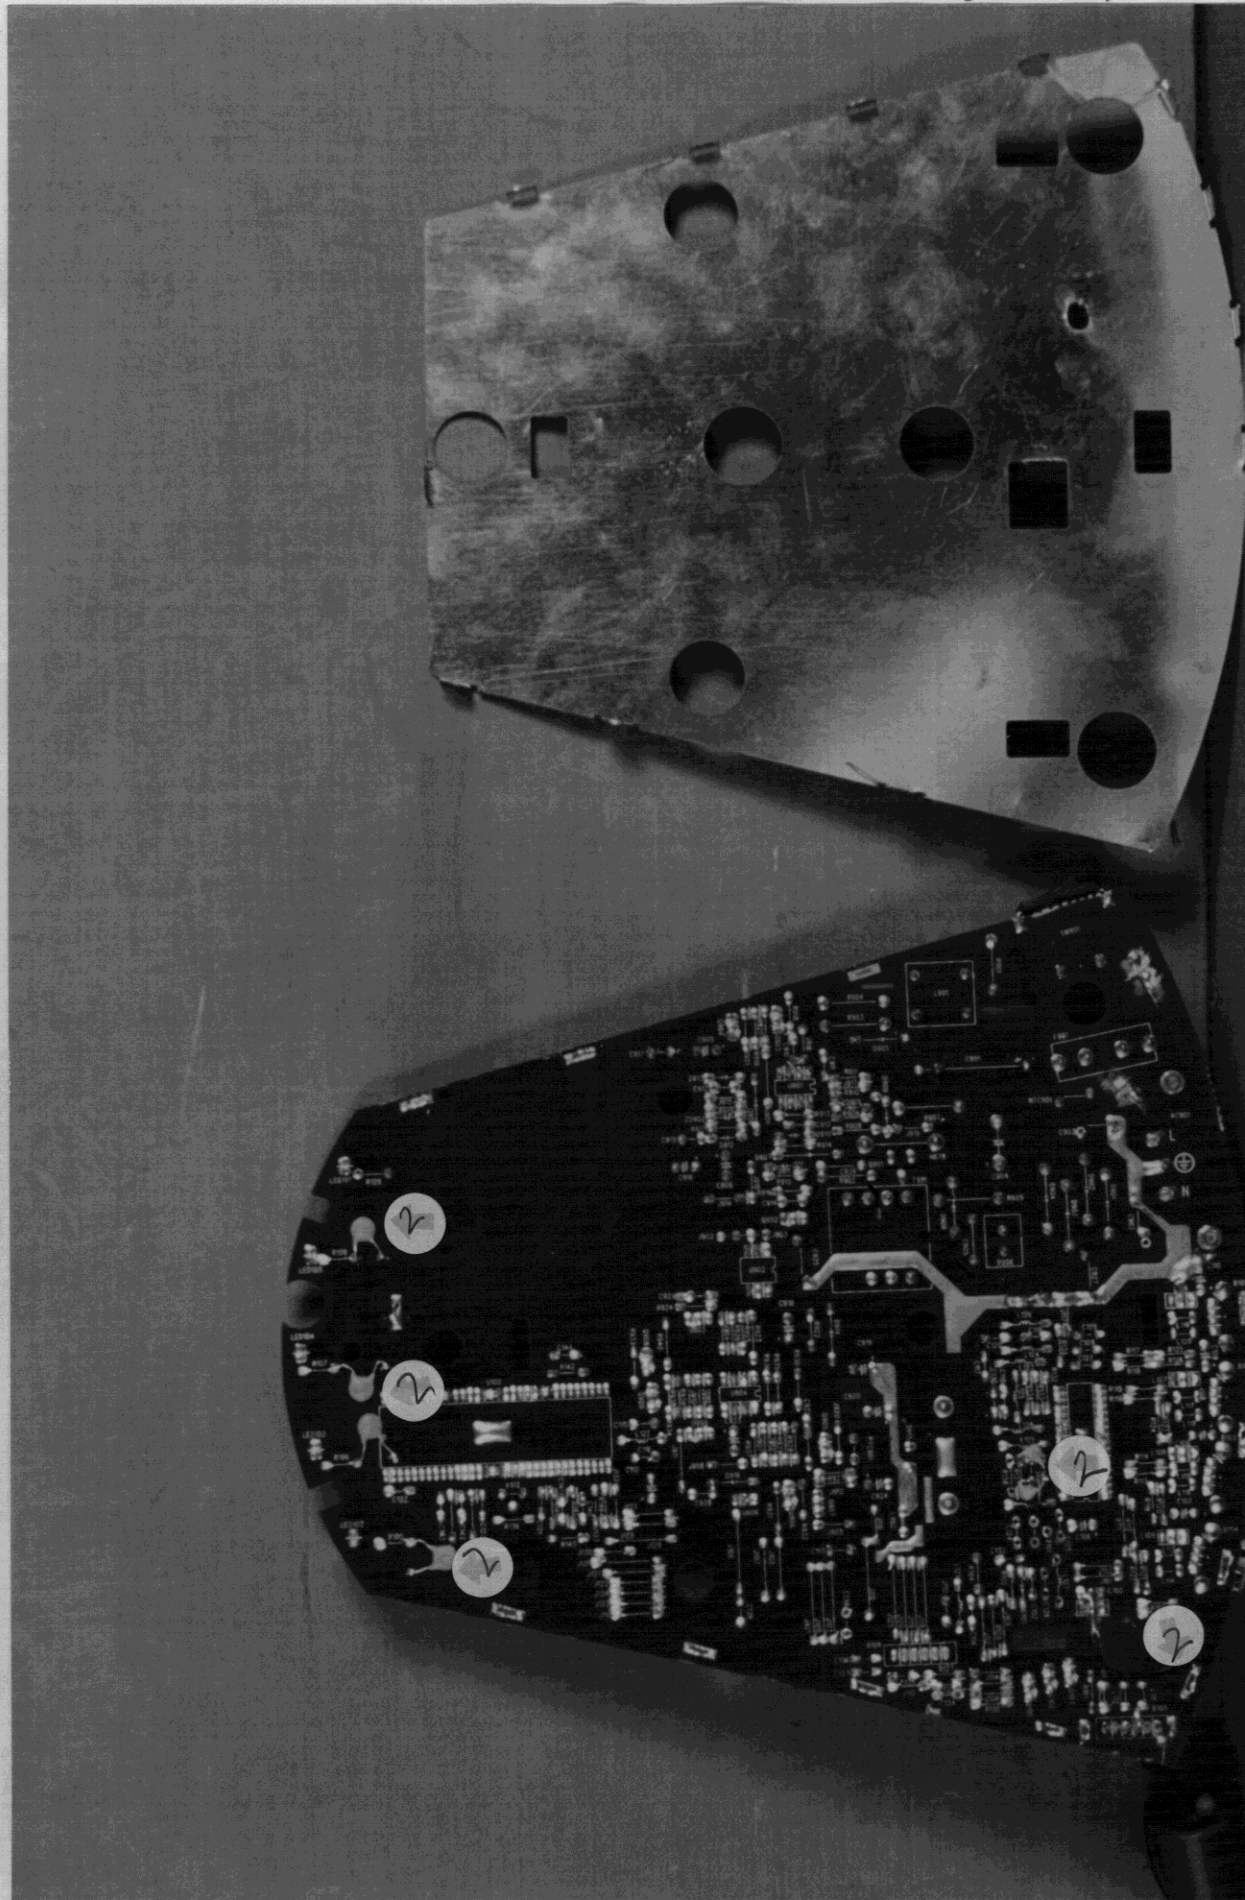


(Photo 8)

(Photo of EUT to be connected to USB port of PC)

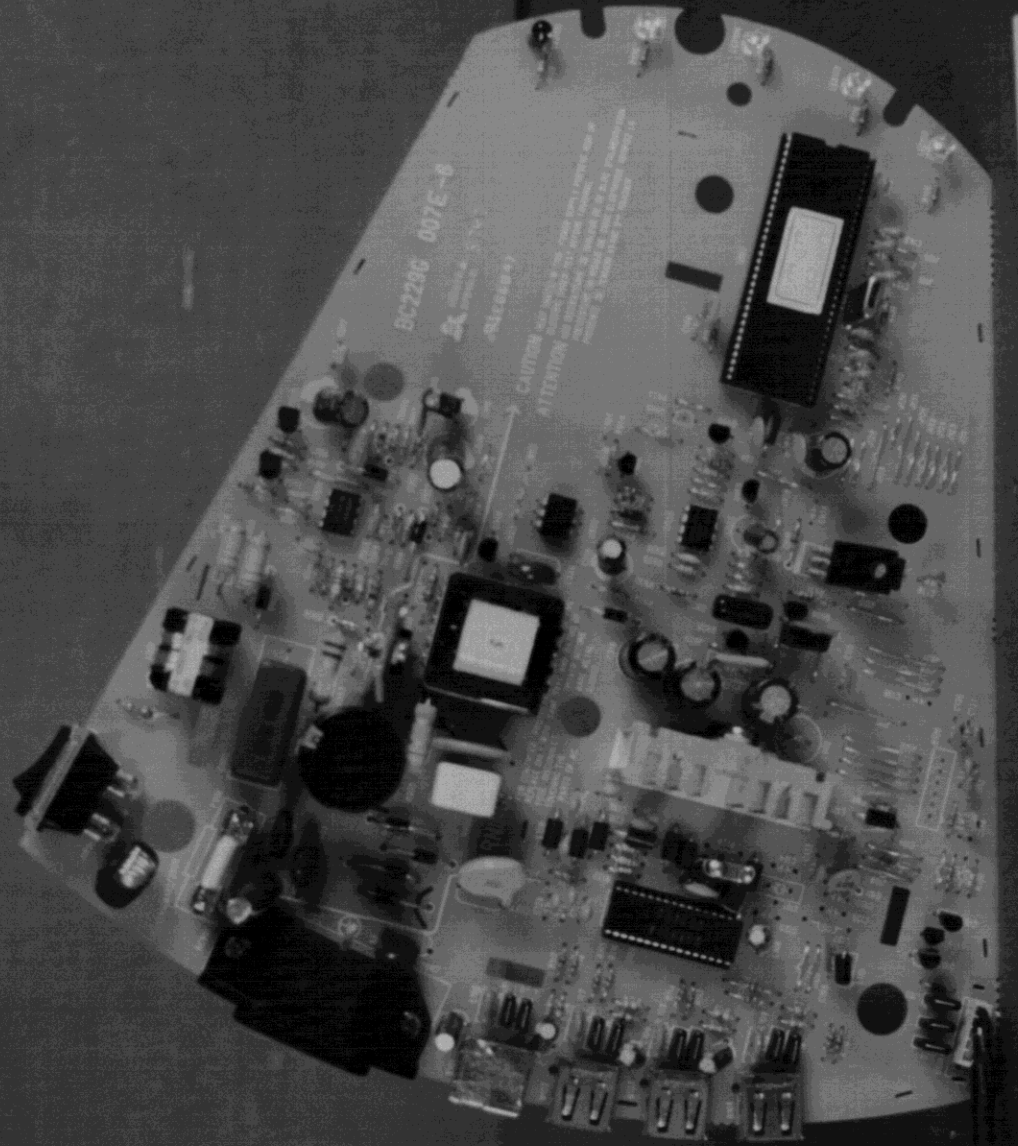

86123101

(Photo of EUT to be connected to USB port of PC)

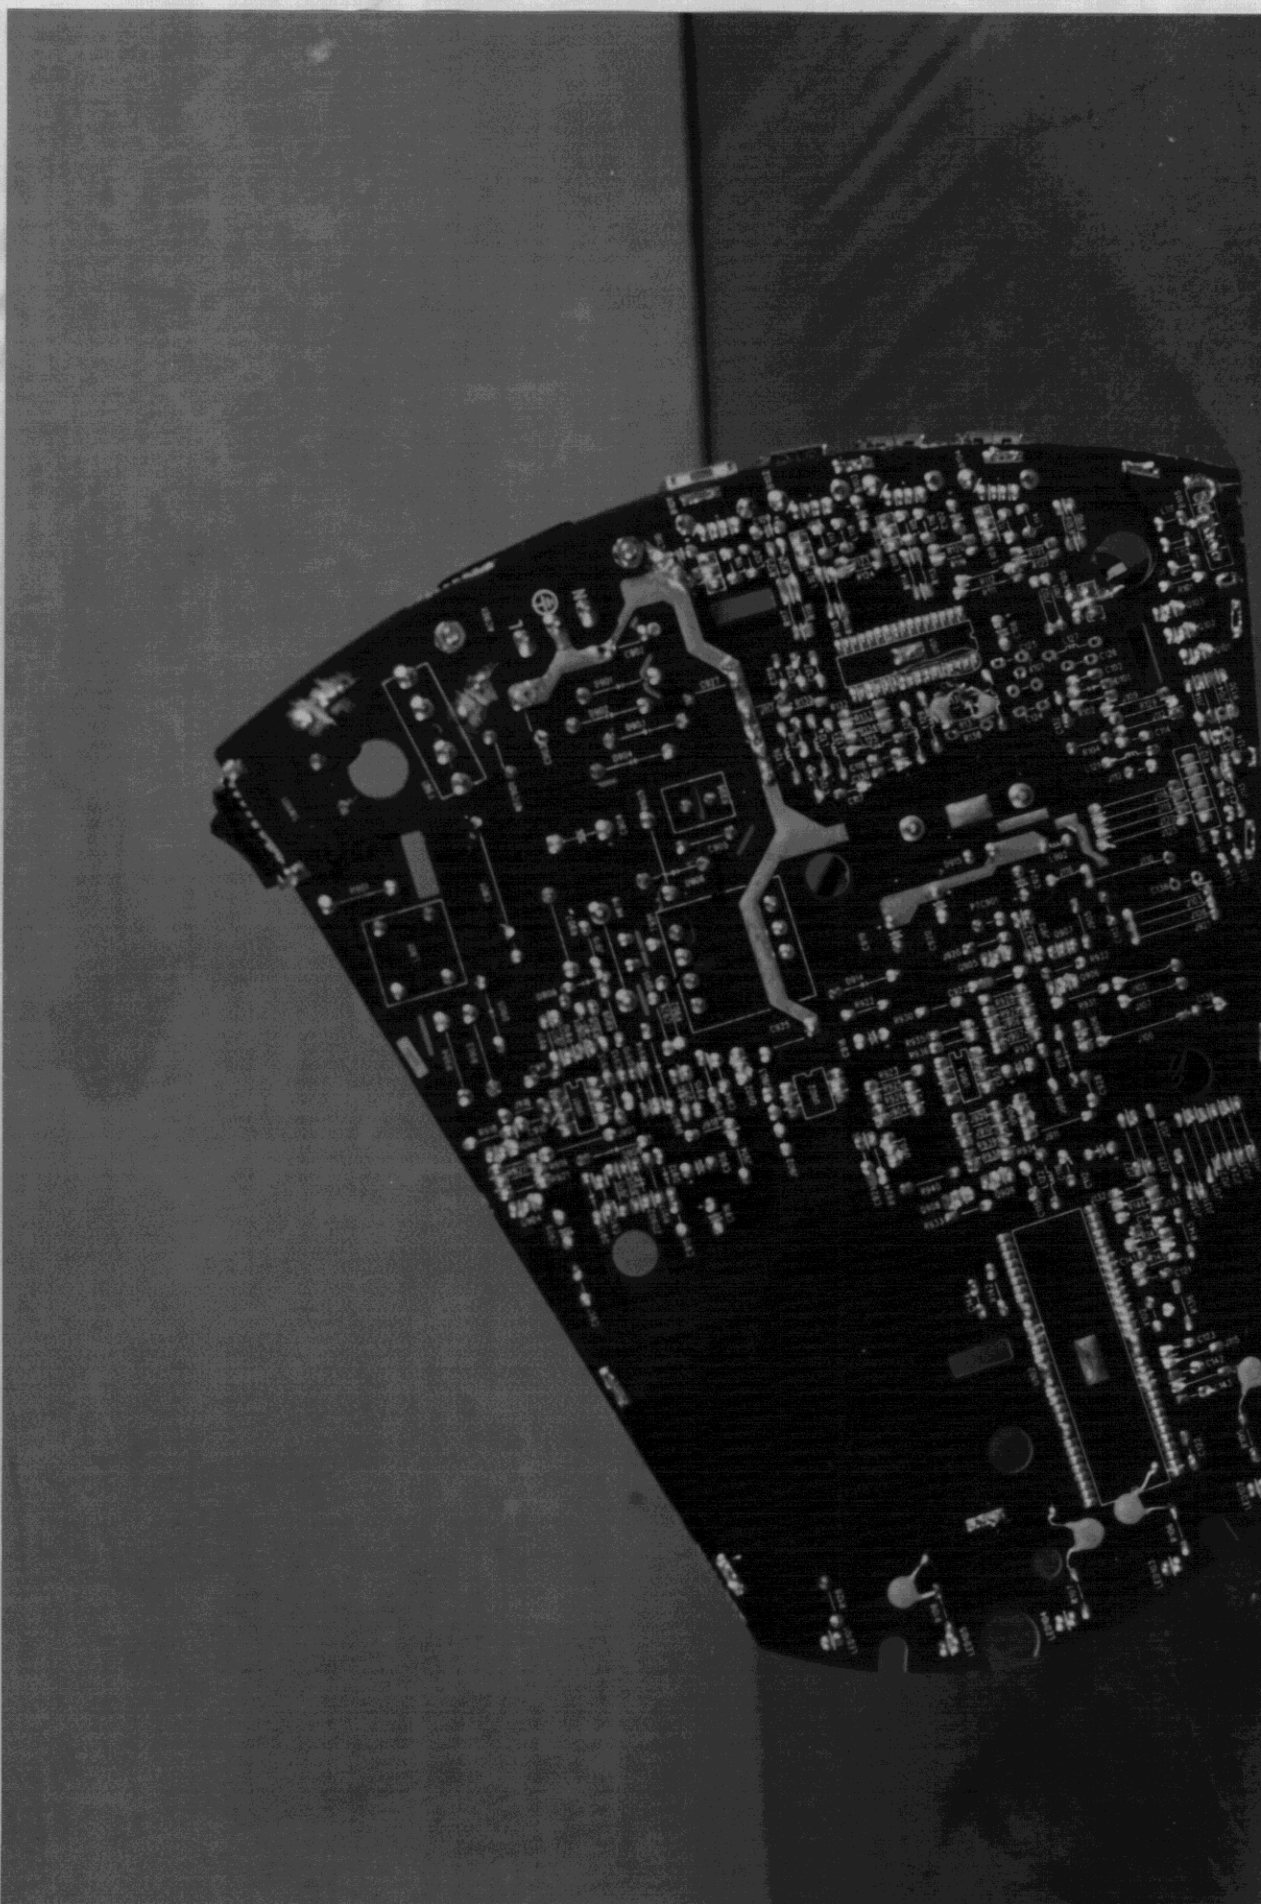

(Photo 10)