 


Smart phone Quick guide
(English)



FCC ID: BRCMB700
Model Name: MB700
Brand Name: Kineel

Part Description

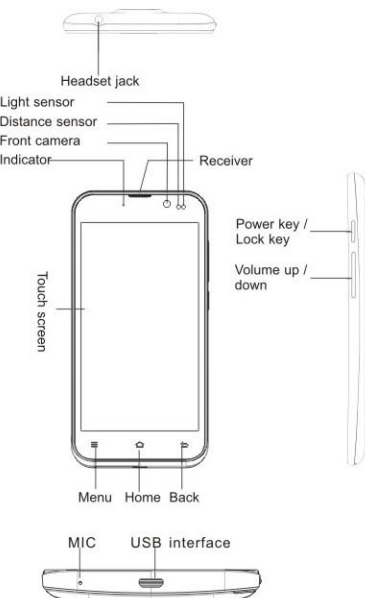 


Open the Back Cover




Open the notch on the lid and then pull lightly along the lid tracks.

Make-ready

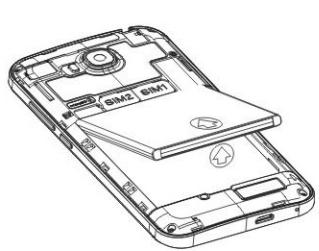


Notice in accordance with the instructions, you should be prompted to insert , remove the batteries to avoid unnecessary damage to the body or battery.
Plug the battery
Keep battery metal contacts and keypad battery contactor alignment, then gently press down to push the battery into the phone smoothly.

 Unlock/Lock Screen

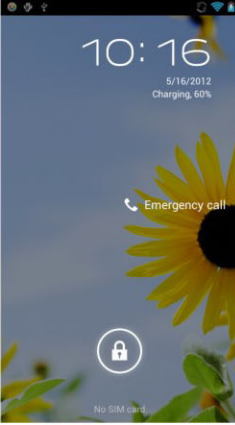


You can right drag the unlock ring or left drag the unlock ring to the function icon to unlock the screen and enter the corresponding function module. You can press the "power" button in any interface to lock the screen and enter "stand-by" mode.

 Enter Desktop

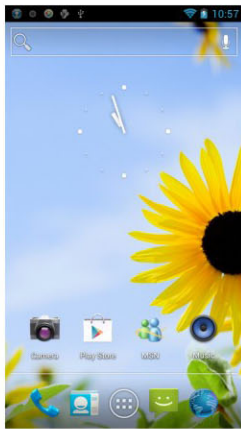


Unlock screen to enter desktop, you can click an icon to open corresponding application. You may also long press the icon then drag it to sort. If you want to delete the icon, hold down the icon until "X (Delete)" appears on screen, then drag the icon to that "X (Delete)", release the icon while it turns red. It will delete the program shortcut but not the program itself.

 Manage Contacts


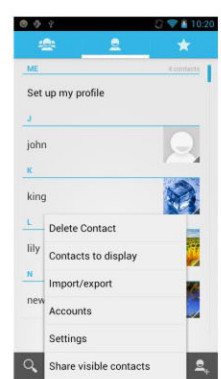


You may add contacts manually, or you may use various methods of importing contacts such as: Importing them through your SIM Card, synchronize with email account, or import them through your SD Card.

 Send Message

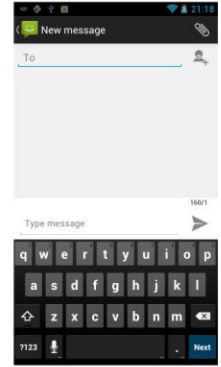

  While writing SMS, you may add one or more recipients. SMS content supports text, pictures, emoticons, contact information, and audio/video. When you long press this message, it is popping a new window. You can forward or lock it.

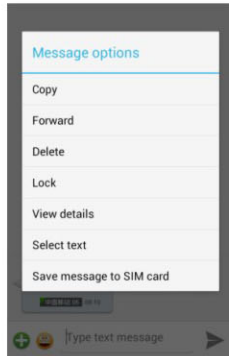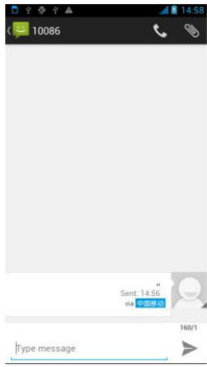

Important Regulatory Information

FCC RF EXPOSURE INFORMATION:

WARNING!! Read this information before using your phone

In August 1996 the Federal Communications Commission (FCC) of the United States with its action in Report and Order FCC 96-326 adopted an updated safety standard for human exposure to radio frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards. Use only the supplied or an approved antenna. Unauthorized antenna modifications, or attachments could impair call quality, damage the phone, or result in violation of FCC regulations. Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for replacement antenna.

BODY-WORN OPERATION:

This device was tested for typical body-worn operations with the back of the phone kept 0.5cm from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 0.5cm must be maintained between the user's body and the back of the phone, including the antenna, whether extended or retracted. Third-party belt-clips, holsters and similar accessories containing metallic components shall not be used. Body-worn accessories that cannot maintain 0.5cm separation distance between the user's body and the back of the phone, and have not been tested for typical body-worn operations may not comply with FCC RF exposure limits and should be avoided.

For more information about RF exposure, please visit the FCC website at www.fcc.gov

Your wireless handheld portable telephone is a low power radio transmitter and receiver. When it is ON, it receives and also sends out radio frequency (RF) signals. In August, 1996, the Federal Communications Commission (FCC) adopted RF exposure guidelines with safety levels for hand-held wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

<ANSI C95.1> (1992) / <ICRP Report 86> (1986) / <ICNIRP> (1996)

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1). Nevertheless, we recommend that you use a hands-free kit with your phone (such as an earpiece or headset) to avoid potential exposure to RF energy. The design of your phone complies with the FCC guidelines (and those standards).

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

NORMAL POSITION:

Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.

TIPS ON EFFICIENT OPERATION:

For your phone to operate most efficiently:

- Extend your antenna fully.
- Do not touch the antenna unnecessarily when the phone is in use. Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed.

RF Exposure Information:

This product is compliance to FCC RF Exposure requirements and refer to FCC website search for FCC ID: BRCMB700 to gain further information include SAR Values.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

 
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Do not use the device with the environment which below minimum -10°C or over maximum 50°C, the device may not work.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Ad Hoc function is supported but not able to operate on non-IS frequencies.

Make a Phone Call

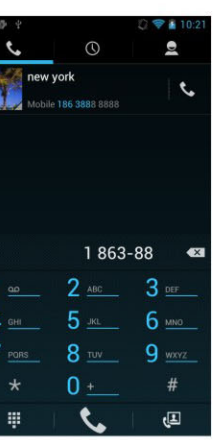

You can use the T9 keypad to make a phone call or access your contacts. For example, if you need to search information for Anna, You can input "A", "An" or "Anna" to search it. Search results will prioritize by matches and contact frequency. Missed calls will be shown in red.

Bluetooth

Bluetooth on/off: Use this check box to turn Bluetooth services on or off.

Bluetooth settings: With Bluetooth services on, you can open the Bluetooth settings screen to:

 
- Rename your device.
- Select to be discoverable for up to 120 seconds, or not discoverable.

- Pair or unpair with one of the Bluetooth devices in range -

You will be asked to type a PIN before pairing. Refer to the manufacturer's documentation for the PIN code.

- Return for devices.

Take Photo or Video

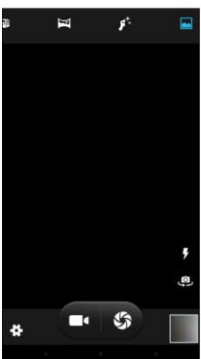

Start camera application to take pictures or videos. It supports professional shooting modes such as auto-focus, continuous, timing and special effects. You may switch from camera to video in the application menu.

Send Email



Once you have set up your email account, you can send/receive emails. You will be alerted when new emails arrive in your inbox.

Surf the Net



The browser allows you to zoom by double clicking the page or kneading. Also, it simplifies access of visiting frequently used websites by site navigation. The browser also supports multi-tabs; you can just click a tab to switch between pages, supports full-screen browse

 
Wi-Fi

Wi-Fi on/off: Select this check box if you prefer to use Wi-Fi for your data connection.

Wi-Fi settings: Open the Wi-Fi settings screen, select it from the network list. Provide your username or password if required.


Note: hotspot mode is supported.

View Pictures

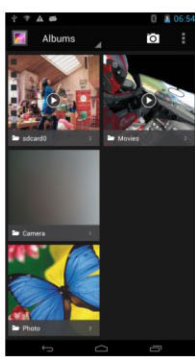


You can double click or kneading to zoom on a single picture, you can slide from left to right to scroll between pictures. By clicking on a picture, you can display/hide the menu. The menu has several options such as: send through SMS, Bluetooth, and email to simplify picture sharing. More operations may be realized in the picture menu.

 Notification Panel

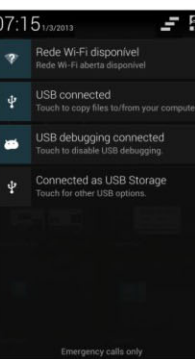

You can access your notification panel by pulling down the status bar. It simplifies access to Wi-Fi, Bluetooth, GPS, and data connection settings. You also receive SMS and calendar notifications.

 Listen To Music

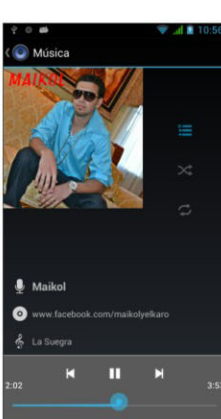


The music interface sorts the music you have locally on your device by: song name, artist, album, and playlists.

FM Radio

This device provides radio function.


Note: Within doors or shielded environment, the receiving effect of radio may be affected. You can improve the effect in the following ways: Near window, adjust the position of earphone cable or adopt manual adjustment.

 Switch Multiple Tasks

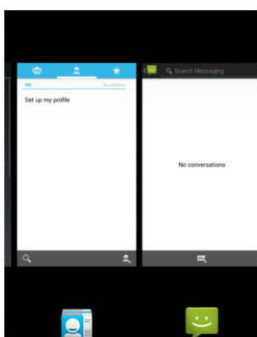

Switching between multiple tasks is as simple as holding down your home screen button. You may also delete any application from this list by sliding from left to right.

 Add Desktop Gadget

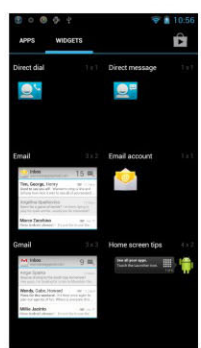

You may add a desktop gadget by selecting a gadget in the widget interface, hold down and drag the gadget to a blank space on the desktop.