

APPENDIX I
: USER'S MANUAL

OWNER'S MANUAL

**RF Remote Controller
RNW-3000**

KTV

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, (2) this device must accept any interference received, including interference that may cause undesired operation.

 
CAUTION

Any change or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

You must insert or replace the batteries in the remote controller when you:

Purchase the set.

Find that the remote controller is no longer operating correctly.

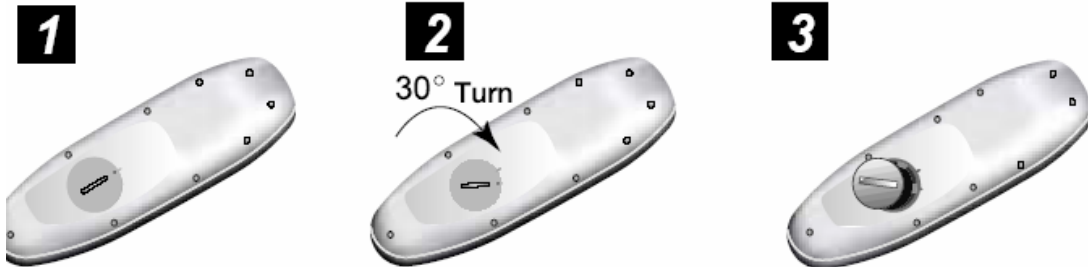


Use only Lithium Battery.
You open the battery lid
with coin.

- Wipe the battery dry cloth and set properly confirming ends(+,-).
- Use finger sacks or non-metallic tweezers.
- Keep the battery in a dark, cool and dry place.
- Do not throw the battery into fire, not recharge.



You can use your remote controller within a distance of 7-10m and an angle of 30 degrees from the left and right sides of the remote controller receptor of your monitor.

 Remote Control Unit

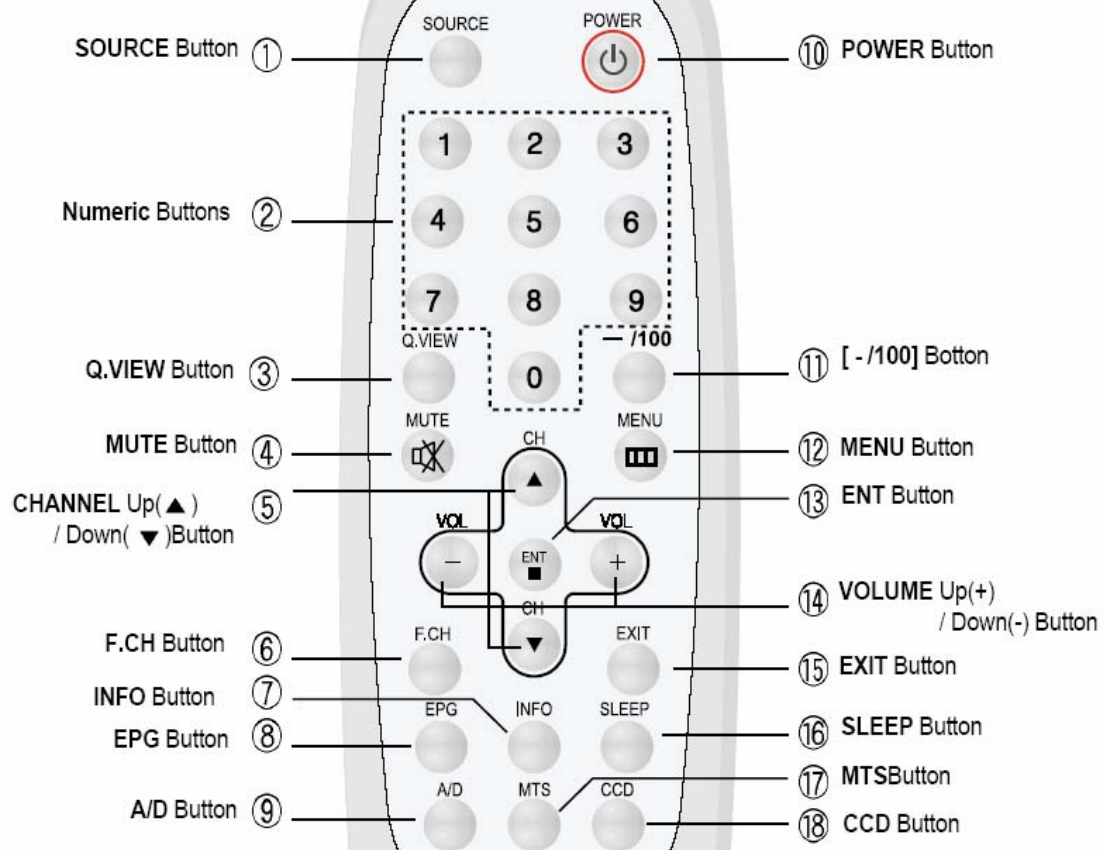

Basic Remote Control Operation

1. Source But t on

Select input source.

2. Numèri c But t ons

Direct Channel select.

3. Q. vi ew But t on

Quick view for previous channel.

4. Mut e But t on

Switch the sound output either ON or OFF.

5. Channel up ▲) / down ▼) But t on

- 1) It is used to select the channel you want to watch on either upward or downward direction.
- 2) It makes the cursor to move while in main MENU.

6. F. CH But t on

Watch your favorite channels.

7. I NFO But t on

Check the current program information, screen status, multi sound status and time.

8. EPG But t on

Press to view the DTV program information.

9. A/ D But t on

Press to add or delete a channel to form your channel list.

10. Power But t on

Turns the TV the TV on and OFF.

Power when On duing, the time is delayed, and "ATSC Booting" is displayed.

Basic Remote Control Operation

11. [- / 100] But t on

DTV Channel Select Button

(When selecting a digital broadcast channel, press the Main channel number → [-] → sub channel number. Analog channels can be viewed when the sub channel is zero.)

[100] But t on sets with the 100 key from the TV channel.

12. Menu But t on

It displays all the functions that user can control.

13. ENT But t on

Press to select the on-screen menu item.

14. Volume up(+) / down (-) But t on

1) It adjusts the volume level of sound.

 
2) It is used to choose a specified mode in the main MENU by pressing VOL(+) button.

3) It controls the increase or decrease of each mode you selected.

15. EXI T But t on

When you are satisfied with the settings, Press the EXIT Button repeatedly to return to normal viewing.

16. Sleep But t on



The television is automatically turned off after an elapse of the set sleep time.

1) The set time ranges from 10 to 180 minutes, which is repeated in sequence each time you press.

2) If you'd like to check the remaining SLEEP TIME after OSD disappears, press DISPLAY button.

17. MTS But t on

Press to select your favorite sound for digital broadcasting. You can select your favorite mode Mono / Stereo / SAP.

18. CCD But t on

Closed caption display.