INDUSTRIAL LTD.

MANUFACTURER, IMPORTER & EXPORTER

UNIT 1006, 10/F., EASTERN CENTRE. HOSS KING'S ROAD. HONG KONG.

 
MAILING ADDRESS: Q. P. O. BOX 10383, HONG KONG

TEL: 28119835 (5 LINES)

FAX: 25657752

Friend Maker

Friend maker likes a pager, it can receive messages and even send out messages. Range of picking up signals is within 25 feet.



The unit consists seven keys, a dot matrix LCD and voice output function. 3 batteries are used to operate with battery low detection.

KEY FUNCTION DESCRIPTION:-

Scroll through modes or characters in editing. Up/Down

In Time/Calendar setting, this key serves as digit key:

increment/decrement.

Select entries or move cursor in editing. Left/Right

In Time/Calendar setting, this key serves to key:

select fields.

Escape from current mode or hold 2 seconds to Cancel Key:

delete message.

In Time/Calendar mode, hold 2 seconds to enter Enter key:

setting or enter/confirm input otherwise.

Hold 3 seconds to turn off the whole unit. On/off key:

Serves as shift key during editing to shift between

capital or small letter.

MEMORY

The unit can store 5 outgoing messages with 42 characters long and 7 incoming messages. The oldest message will be deleted upon new message received while memory is full. Recipient of each outgoing message can be everyone, male, female or a specific person.

OPERATION DESCRIPTIONS

Upon first power up, the unit will start initialization sequence by inputting following:

- User's name 1.
- User's age 2.
- User's gender 7
- User's interest 4.
- Date/time

This sequence will be skipped during subsequent power up. The unit will go to Time/Calendar mode directly. In Time/Calendar mode, press Up/Down key will scroll through different modes. The modes are:

- Time/Calendar 1.
- Shows current time and date
- 2. Inbox
- Retrieve incoming messages
- Outbox 3. Expectation
- Write outgoing messages
- 4. Personal data 5.
- Set preferred public messages
- Set users personal information

Enter outgoing message

Enter Outbox mode, the screen shows:

平舟:**[1**2345

Total 5 outgoing messages can be stored, use Left/Right key to select message no., press Enter key once to recall recipient's name. Press Up/Down key to show recipient name and message content. To change recipient name, press Enter key once while recipient is shown. To edit message, press Enter key once while message is shown.

Recipient name editing:

 
Press On/Off key to select recipient type (Blank, Everyone. Male. Female or Specific name). To enter a private message, the recipient type must be a specific name and a name must be entered. Leave the recipient name blank will disable sending of the message. Press Enter key to confirm input.

Message editing:

Press On/Off key to toggle between upper and lower case. Use Left/Right key to move cursor and use Up/Down key to scroll through characters. Max. 42 characters can be used for message. Press Enter key to confirm input.

Retrieve incoming message

Enter inbox mode, the screen shows:



The display will show how many messages are stored. Press Enter key once under the message no. to display the corresponding message. Press and hold Cancel key for 2 seconds under the message no. to delete the corresponding message. While a message is shown, press Up/Down key to show receiving time and message content.

C. Pick preferred public message

Enter Expectation mode, the screen shows:



3 criteria are used to pick up preferred messages:

- 1. G Gender
- 2. A Age Range
- 3.1 Interest

Press enter once under the highlighted field will show the corresponding setting. While a criteria content is shown, press Enter key then use Up/Down key to change its content.

Change personal information

Enter Personal Data mode, the screen shows:



4 personal data are used:

- 1. N User's name
- G User's gender
- 3. A User's age
- 4. | User's interest

Press enter once under the highlighted field will show the corresponding setting. While a personal data content is shown, press Enter key once to enter setting mode of the shown content.

E. Time setting

In Time/Calendar mode, press and hold Enter key for 2 seconds to go to time setting state. In time setting state, press Left/Right key to select setting field, press Up/Down key to set the selected field, press Enter key to confirm setting

FCC ID: BSYHX4B

INDUSTRIAL LTD.

MANUFACTURER, IMPORTER & EXPORTER UNIT 1006, 10/F., EASTERN CENTRE. HOSS KING'S ROAD, HONG KONG. MAILING ADDRESS: Q. P. O. BOX 10382, HONG KONG

TEL: 28119835 (5 LINES) FAX: 25657752

F. Miscellaneous

1. Power On/Off Press and hold On/Off key for 3 seconds to power off the unit. Press once again to turn the power on.

2. Sound On/Off Press Right key once in Time/Calendar mode, then press Enter key to toggle between sound on and sound off.

3. RF Transmit/Receive On/Off Press Right key twice in Time/Calendar mode, then press Enter key to toggle between RF Transmit/Receive on and off.

4. Voice function

- The unit will say 'Welcome' on power up.

- The unit will say 'Goodbye' before power off.

- The unit will say 'You got mail' upon new message received.

5. Battery low detection

If the display shows LOW intermittently, battery low is detected and replacing battery is needed.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

WARNING:- Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE:- This equipment has been tested and found to comply with the limits for class be digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, use and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However there is no guarantee that interference will not occur in a particular installation. If this equipment does cause hamful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures;

Recrient or relocate the receiving antenna,

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the

Consult the dealer or an experienced radio/TV technician for help.

FCC ID: BSYHX4B