

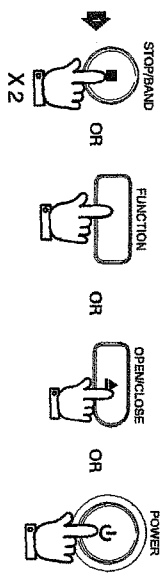





**CANCELING THE PROGRAM**  
 PARA CANCELAR LA REPRODUCCIÓN DEL PROGRAMA  
 POUR ANNULER LA LECTURE DU PROGRAMME

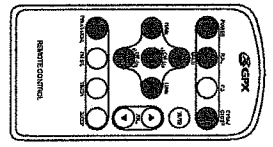


**REPEAT PLAY**  
 FUNCIÓN DE REPETICIÓN  
 FONCTION DE REPÉTITION

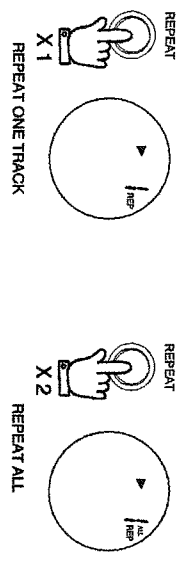


**SETTING KITCHEN TIMER**  
 AJUSTAR EL CONTADOR DE TIEMPO DE LA COCINA  
 RÉGLAGE DU TEMPORISATEUR DE CUISINE

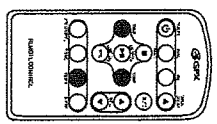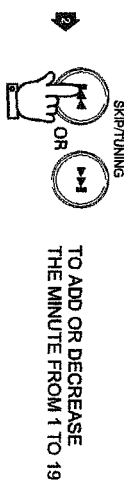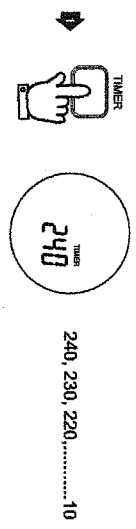


**EQ**  
 EQUALIZADOR  
 ÉQUALISEUR

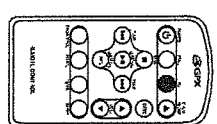


**SLEEP TIMER**  
 TEMPORIZADOR PARA DORMIR  
 MINUTERIE D'ARRÊT

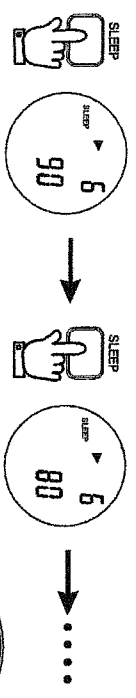

 AS YOU PRESS THE SLEEP BUTTON  
 IT COUNTS DOWN IN INCREMENTS OF 10.  
 ONCE IT REACHES 00 THE SLEEP MODE CANCELS



**CANCELING SLEEP**

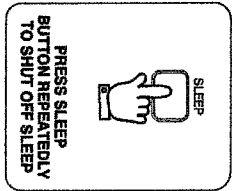

**AUX**  
 AUXILIAR  
 EXTÉRIEURE

