

**EXHIBIT 6**

**INSTRUCTION MANUAL**

## INTERTEK TESTING SERVICES

---

### 6.0 Instruction Manual

Attached is a preliminary copy of the Instruction Manual. The FCC information to user can be found in page 1 of this manual.

The manual will be provided to the end-user with each unit sold/leased in the United States.



- 20. WALL OR CEILING MOUNTING  
The product should be mounted to a wall or ceiling only as recommended by the manufacturer.
- 21. DAMAGE REQUIRING SERVICE  
Unplug the product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
  - a. When the power-supply cord or plug is damaged.
  - b. If liquid has been spilled, or objects have fallen into the product.
  - c. If the product has been exposed to rain or water.
  - d. If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions, as an adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
  - e. If the product has been dropped or the cabinet has been damaged.
- 22. HEAT  
The product should be situated away from heat sources such as radiators, heat registers, stoves or other products (including amplifiers) that produce heat.
- 23. NOTE TO CATV SYSTEM INSTALLER  
This reminder is provided to call the CATV system installer's attention to Article B20-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the building-grounding system or the building-as close to the point of cable entry as practical.

- indicated on the marking label. If you are not sure of the type of power supply to your home, consult your appliance dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instructions.
- 11. GROUNDING OR POLARIZATION  
This product is equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should not fit, do not contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.
- 12. POWER-CORD PROTECTION  
Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the appliance.
- 13. LIGHTNING  
To protect your product from a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges.
- 14. POWER LINES  
An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where they can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them may be fatal.
- 15. OVERLOADING  
Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock.
- 16. OBJECT AND LIQUID ENTRY  
Never push objects of any kind into this product through openings, as they may touch dangerous voltage parts or short out parts that could result in fire or electric shock. Never spill or spray any type of liquid on the product.
- 17. SERVICING  
Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
- 18. REPLACEMENT PARTS  
When replacement parts are required, be sure the service technician uses replacement parts specified by the manufacturer for those that have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.
- 19. SAFETY CHECK  
Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.

 
Dear Customer:  
Selecting fine audio equipment such as the unit you've just purchased is only the start of your musical enjoyment. Now it's time to consider how you can maximize the fun and excitement your equipment offers. This manufacturer and the Electronic Industries Association's Consumer Electronics Group want you to get the most out of your equipment by playing it at a safe level. One that lets the sound come through loud and clear without annoying hearing or distortion—and, most importantly, without affecting your sensitive hearing. Sound can be obscuring. Over time your hearing "comfort level" adapts to higher volumes of sound. So what sounds "normal" can actually be loud and harmful to your hearing. Guard against this by setting your equipment at a safe level BEFORE your hearing adapts.



E-3

E-4

**LOCATION OF CONTROLS**

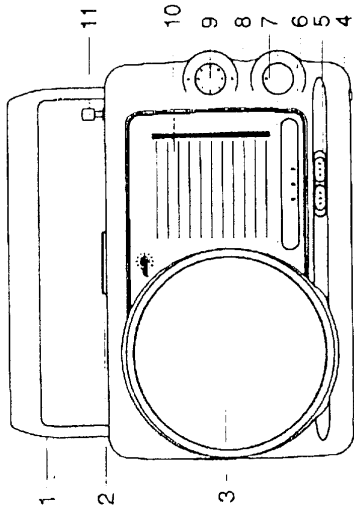

- 1. Carrying Handle
- 2. INSTANT WEATHER BAND Button
- 3. Speaker
- 4. Battery Compartment and AC Cord (inside compartment)
- 5. BAND SELECTOR (AM, FM/TV, TV2) Switch
- 6. Earphone Jack 3.5mm
- 7. VOLUME/Power ON/OFF Control
- 8. WEATHER BAND FINE TUNING Control (Rear of unit)
- 9. TUNING Control (Rear of unit)
- 10. AM/FM/TV Dial Scale and Pointer
- 11. FM/TV Antenna

E-6



- To establish a safe level:**
- Start your volume control at a low setting
  - Slowly increase the sound until you can hear it comfortably and clearly, and without distortion
- Once you have established a comfortable sound level:**
- Set the dial and leave it there.

Taking a minute to do this now will help to prevent hearing damage or loss in the future. After all, we want you listening for a lifetime.

**We Want You Listening For A Lifetime**

Used wisely, your new sound equipment will provide a lifetime of fun and enjoyment. Since hearing damage from loud noise is often undetectable until it is too late, this manual features and the Electronic Industries Association's Consumer Electronics Group recommend you avoid prolonged exposure to excessive noise. This list of sound levels is included for your protection.

Decibel Level	Example
30	Quiet library, soft whispers
40	Living room, refrigerator, bedroom away from traffic
50	Light traffic, normal conversation, quiet office
60	Air conditioner at 20 feet, sewing machine
70	Vacuum cleaner, hair dryer, noisy restaurant
80	Average city traffic, garbage disposals, alarm clock at two feet

**THE FOLLOWING NOISES CAN BE DANGEROUS UNDER CONSTANT EXPOSURE:**

- 90 Subway, motorcycle, truck traffic, lawn mower
- 100 Garbage truck, chain saw, pneumatic drill
- 120 Rock band concert in front of speakers, thunderclap
- 140 Gunshot blast, jet engine
- 180 Rocket launching pad

Information courtesy of the Deafness Research Foundation.




E-5



**OPERATION**


**TO LISTEN TO RADIO/TV**

**1**

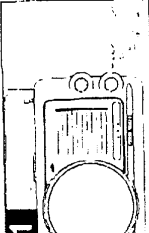


To turn the unit on, rotate the VOLUME/Power ON/OFF control clockwise until a click is heard.

**2**

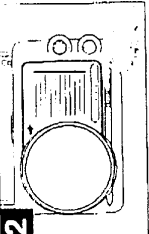


Slide the BAND SELECTOR switch to the desired band:  
 AM: AM stations  
 FM/TV1: FM or TV channels 2-6  
 TV2: TV channels 7-13

**3**

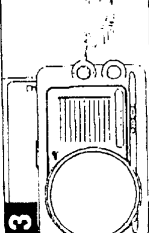

Tune a station by turning the TUNING control.

**4**

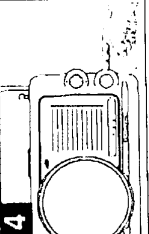

Adjust the VOLUME/Power ON/OFF control as desired. To turn the unit off, rotate the VOLUME/Power ON/OFF control counter-clockwise until a click is heard.

**ANTENNAS**  
 FM, TV1, TV2 and Weather Band: Extend the telescopic antenna for best reception.  
 AM: Turn the unit for better AM reception.

**INSTALLATION**

This unit is designed to operate on AC household current or DC (batteries).

**AC:**  
 Use the AC polarized line cord included with the unit in the battery compartment for operation on AC power. Insert the AC line cord (with the 2 blades) into a conveniently located AC outlet having 120V, 60 Hz. When the AC cord is plugged in, the batteries will be disconnected.

**NOTE:** The AC plug supplied with the unit is polarized to help minimize the possibility of electric shock. If the AC plug does not fit into a nonpolarized AC outlet, do not file or cut the wide blade. It is the user's responsibility to have an electrician replace the obsolete outlet.

**DC:**  
 Remove the battery cover on the rear of the unit and insert 4 "AA" cell batteries (not included), observing the battery polarity indicated inside the compartment. Replace the Battery Compartment cover.

**BATTERY PRECAUTIONS**

- Follow these precautions when using batteries in the device:
1. Use only the size and type of batteries specified in the battery compartment. Never use alkaline batteries in the battery compartment. Never use batteries together (e.g., Alkaline and Carbon-Zinc) or do not mix different types of batteries together.
  2. Be sure to follow the correct polarity when installing the batteries as indicated in the battery compartment. Reverse polarity will cause damage to the device.
  3. Do not mix different types of batteries together (e.g., Alkaline and Carbon-Zinc) or do not mix different types of batteries together.
  4. If the device is not to be used for a long period of time, remove the batteries to prevent possible battery leakage.
  5. Do not try to recharge batteries not intended to be recharged; they can overheat and rupture. (Follow battery manufacturer's directions.)

**TROUBLESHOOTING GUIDE**

SYMPTOM	CAUSE	SOLUTION
RADIO Noise or sound distorted on FM or TV stations.	Station not tuned properly.	Retune the station.
	Poor FM or TV reception.	Extend the Rod antenna.
	Poor AM reception.	Rotate the radio until reception improves.
Noise or sound distorted on AM stations	Poor Weather band reception.	Extend the Rod antenna.
	Noise or distortion on Weather Band.	Fine tune Weather band using Weather band tune tuning control.
No sound.	POWER not turned On.	Turn Power On.
	Volume control set to minimum.	Turn up volume control.
	Station not tuned properly.	Retune the station.
	Earphone plugged into Earphone jack.	Remove earphone from Earphone jack.
	AC cord not connected.	Connect AC cord to an AC outlet.
Batteries not installed or installed improperly.	Install four "AA" size batteries.	

**OPERATION**

**TO LISTEN TO THE WEATHER BAND**

**1**

To turn the unit on, rotate the VOLUME/Power ON/OFF control clockwise until a click is heard.

**2**

Press the INSTANT WEATHER BAND button to the in position to turn the Instant Weather Band on.

**3**

Fine tune the weather band by turning the WEATHER BAND FINE TUNING control on the rear of the unit. Extend the telescopic antenna for best reception.

**4**

Adjust the VOLUME/Power ON/OFF control as desired. Press the INSTANT WEATHER BAND button again to return to the AM, FM or TV bands. To turn the unit off, rotate the VOLUME/Power ON/OFF control counter-clockwise until a click is heard.

**EARPHONE JACK:**  
For private listening, plug an earphone (not included) into the Earphone jack and adjust the VOLUME/Power ON/OFF control as desired. The internal speaker will be disconnected when the earphone is plugged in.

**SPECIFICATIONS**

Power Source.....120V AC,60Hz, 4 "AA" size batteries  
 Speaker.....3" x 8 Ohm  
 Output.....300mW  
 Radio Frequency.....AM: 530-1710KHz  
 FM: 88-108MHz  
 TV1: Ch 2-6  
 TV2: Ch 7-13

Features and specifications are subject to change without notice.

**Cleaning the unit**

- To prevent fire or shock hazard, disconnect your unit from the AC power source when cleaning.
- The finish on your unit may be cleaned with a dust cloth and cared for as other furniture. Use caution when cleaning and wiping the plastic parts.
- Mild soap and a damp cloth may be used on the front panel.

**TO OBTAIN SERVICE ON YOUR PRODUCT,  
 PLEASE CALL:  
 1-800-231-9069**

**TO OBTAIN REPLACEMENT PARTS OR  
 ACCESSORY ITEMS, PLEASE CALL:  
 1-800-321-6993**

Trademark White-Westinghouse used under license  
 © 1997 White-Consolidated Industries, Inc. Printed in China  
 10109ES01





**ITS** Intertek Testing Services  
ETL Testing Laboratories

July 22, 1998


Federal Communications Commission  
c/o Mellon Bank  
Three Mellon Bank  
525 William Penn Way  
27th Floor, Room 153-2713  
Pittsburgh, PA 15251-5315  
Attn: Wholesale Lockbox Shift Supervisor

RE: FCC Part 15 Application for Notification  
GMT Industrial Ltd. (FCC ID: BSYP-109)

Dear Sir:

Enclosed please find the above-referenced Application, along with a check in the amount of \$140.00 to cover the filing fee. Please feel free to contact me with any questions.

Sincerely,

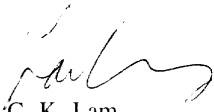

C. K. Lam  
Assistant Manager

FCC ID: BSYP-109

**Intertek Testing Services Hong Kong Ltd.**

2/F, Garment Centre, 576 Castle Peak Road, Kowloon, Hong Kong.  
Telephone (852) 2746 8600 Fax (852) 2785 5487

