 


## 1 Insert batteries:

Coloque las Pilas: / Insérez les Piles:

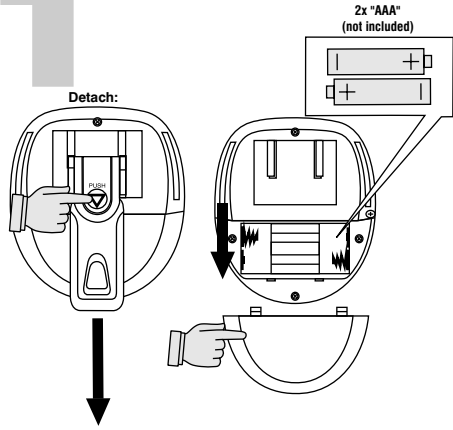

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Replace the batteries when the sound becomes unstable or cannot be heard.
- When you are not going to use your unit for a long time, remove the batteries to prevent damage from battery leakage and corrosion.
- No coloque pilas viejas con pilas nuevas.
- No coloque pilas alcalinas con pilas estándar (carbon-zinc) o recargables (niquel-cadmium).
- Cambie las pilas cuando el sonido sea irregular o cuando no pueda oírlo.
- Cuando no use su unidad por un periodo de tiempo prolongado, retire las pilas para evitar la fuga de electrolito y la corrosión.
- N'insérez pas des piles anciennes avec des piles neuves.
- N'insérez pas des piles alcalines avec des piles standard (charbon-zinc) ou rechargeables (niquel-cadmium).
- Changez les piles quand le son est distordu ou quand il est impossible de l'entendre.
- Si vous n'utilisez pas l'appareil pendant longtemps, enlevez les piles pour éviter des fuites et la corrosion.

## 2 Insert headphones:

 
Introduzca los auriculares: / Insérez les casques:



- Set the Volume to a low level before putting on the headphones. Gradually adjust the Volume to a comfortable listening level. Please do not play the volume too loudly for extended periods of time.
- Baje el volumen antes de utilizar los auriculares. Gradualmente ajuste el volumen a un nivel de escucha confortable. Por favor no coloque el volumen muy alto durante largos periodos de tiempo.
- Baissez le volume avant d'utiliser les casques. Réglez le volume graduellement jusqu'à atteindre le niveau d'écoute souhaité. S'il-vous-plait, ne mettez pas le volume trop fort pendant longtemps.

## 3 Set the clock:




Para colocar la hora: / Pour régler l'heure:

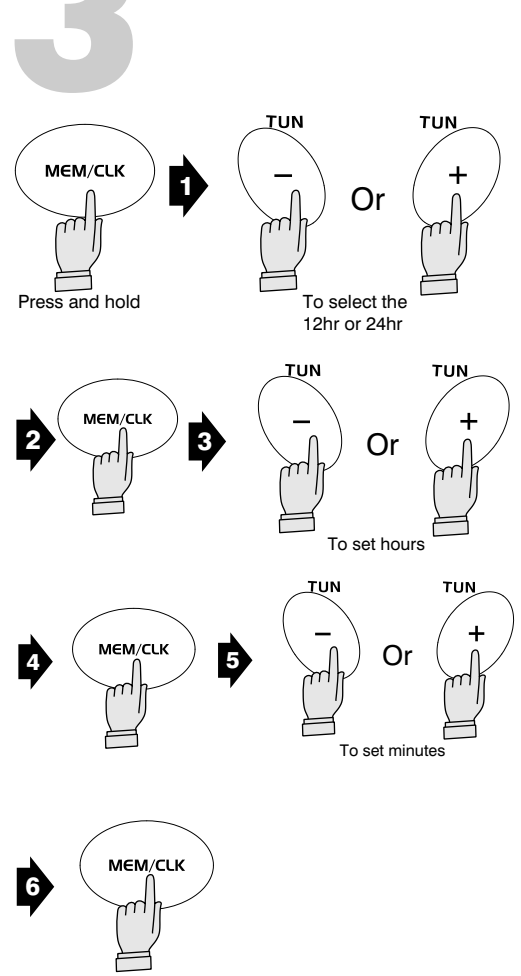

- NOTE:** Adjust the clock in the power off mode.
- NOTA:** Ajuste el reloj en el modo apagado.
- REMARQUE:** Réglez l'heure dans le mode éteint.


## 7 Volume:

   Volumen/Sonido Grave/ Volume Son Grave:

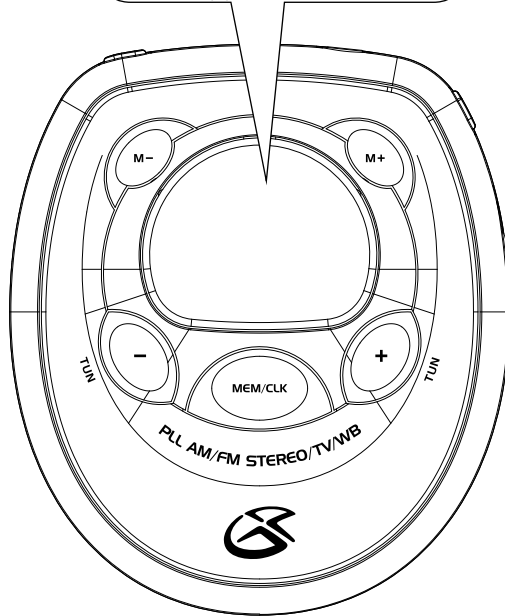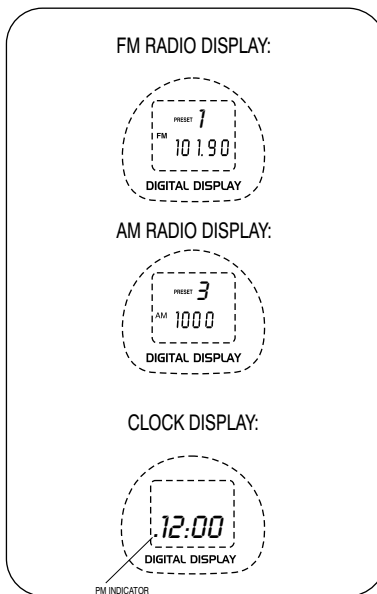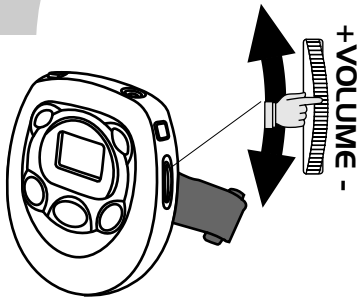

## 4 Power:

 
Encender la unidad: / Allumer l'appareil:

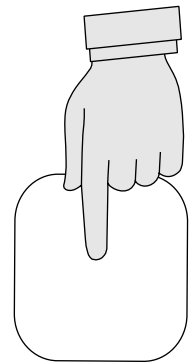

# POWER


## 6 Tune:

 Sintonización: / Réglage:

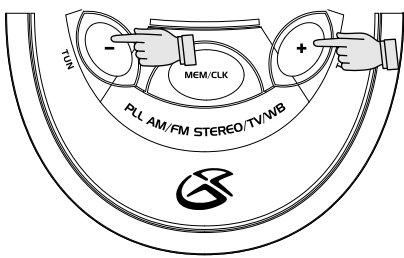


## 5b LISTENING TO TV BAND

 Escuchando la estación de TV / Écouter la bande de TV

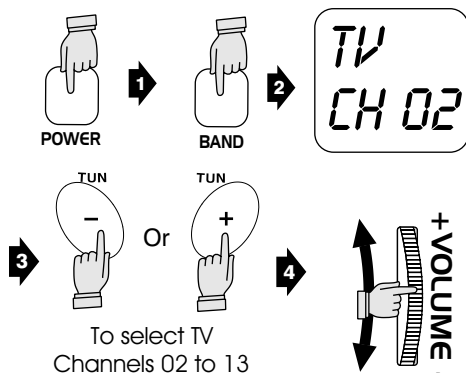

## 5a LISTENING TO WEATHERBAND RADIO

 
ESCUCHA DE LA BANDA METEOROLÓGICA DE RADIO / ÉCOUTE DE LA BANDE MÉTÉOROLOGIQUE DE RADIO

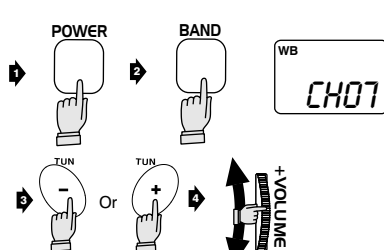

From the NOAA Weather Band chart, select a channel that coincides with your city. Seleccione un canal que coincida con su ciudad de acuerdo a la carta de venta del tiempo de NOAA. Du NOAA Survivex à au diagramme de bande, choisissez un canal qui coïncide avec votre ville.


## 5 Band:

 Banda/ Bande:

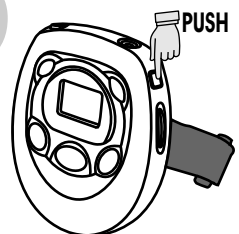

- Press the BAND button to cycle between AM, FM, WB and TV bands.
- Presione el botón BAND para cambiar entre las bandas AM, FM, WB y TV.
- Appuyez sur le bouton BAND pour changer entre les bandes AM, FM, WB et TV.


## NOAA WEATHER BAND CHART / TABLA DE BANDAS DE FRECUENCIAS METEOROLÓGICAS NOAA / TABLEAU DE BANDES DE FRÉQUENCES MÉTÉOROLOGIQUES NOAA

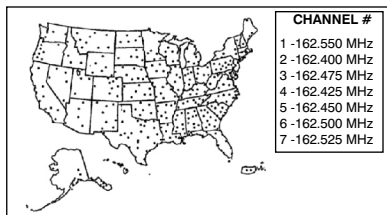 

LOCATION	FREQUENCY	LOCATION	FREQUENCY
<b>ALABAMA</b>		<b>ALABAMA</b>	
ANNISTON	3	ANNISTON	3
AUBURN	7	AUBURN	7
BIRMINGHAM	1	BIRMINGHAM	1
CULLMAN	5	CULLMAN	5
DEMOPOLIS	3	DEMOPOLIS	3
DOZIER	1	DOZIER	1
FLORENCE	3	FLORENCE	3
FT. PAYNE	6	FT. PAYNE	6
HUNTSVILLE	2	HUNTSVILLE	2
JACKSON	6	JACKSON	6
LOUISVILLE	3	LOUISVILLE	3
MOBILE	1	MOBILE	1
MONTGOMERY	2	MONTGOMERY	2
TUSCALOOSA	2	TUSCALOOSA	2
WINFIELD	7	WINFIELD	7
<b>ALASKA</b>		<b>ALASKA</b>	
ANCHORAGE	1	ANCHORAGE	1
CORDOVA	2	CORDOVA	2
CRAIG	3	CRAIG	3
FAIRBANKS	1	FAIRBANKS	1
HAINES	2	HAINES	2
HOMER	2	HOMER	2
JUNEAU	1	JUNEAU	1
KETCHIKAN	1	KETCHIKAN	1
KODIAK	1	KODIAK	1
NOME	1	NOME	1
SEWARD	1	SEWARD	1
SITKA	1	SITKA	1
SOLDOTNA	3	SOLDOTNA	3
VALDEZ	2	VALDEZ	2
WRANGELL	1	WRANGELL	1
YAKUTAT	2	YAKUTAT	2
<b>ARIZONA</b>		<b>ARIZONA</b>	
FLAGSTAFF	2	FLAGSTAFF	2
GILA COUNTY NORTH	4	GILA COUNTY NORTH	4
GILA COUNTY SOUTH	6	GILA COUNTY SOUTH	6
GRAND CANYON (Hopi Point)	3	GRAND CANYON (Hopi Point)	3
PHOENIX	1	PHOENIX	1
PRESCOTT	7	PRESCOTT	7
SHOW LOW	2	SHOW LOW	2
TUCSON	2	TUCSON	2
WINDOW ROCK	1	WINDOW ROCK	1
YUMA	1	YUMA	1
<b>ARKANSAS</b>		<b>ARKANSAS</b>	
FAYETTEVILLE	3	FAYETTEVILLE	3
FORT SMITH	1	FORT SMITH	1
GURDON	3	GURDON	3
JONESBORO	1	JONESBORO	1
LITTLE ROCK	1	LITTLE ROCK	1
MOUNTAIN VIEW	2	MOUNTAIN VIEW	2
RUSSELLVILLE	7	RUSSELLVILLE	7
STAR CITY	2	STAR CITY	2
TEXARKANA	1	TEXARKANA	1
<b>CALIFORNIA</b>		<b>CALIFORNIA</b>	
BAKERFIELD (P)	1	BAKERFIELD (P)	1
COACHELLA (P)	2	COACHELLA (P)	2
EIRELA	2	EIRELA	2
FRESNO	2	FRESNO	2
GRASS VALLEY	2	GRASS VALLEY	2
LOS ANGELES	1	LOS ANGELES	1
MONTEREY	1	MONTEREY	1
MONTEREY MARINE	5	MONTEREY MARINE	5
PT. ARENA/UKIAH	1	PT. ARENA/UKIAH	1
REDDING (P)	1	REDDING (P)	1
SACRAMENTO	1	SACRAMENTO	1
SAN DIEGO	2	SAN DIEGO	2
SAN FRANCISCO	2	SAN FRANCISCO	2
SANLUIS OBISPO	1	SANLUIS OBISPO	1
SANTA ANA	1	SANTA ANA	1
SANTA BARBARA MARINE	3	SANTA BARBARA MARINE	3
SANTA BARBARA	2	SANTA BARBARA	2
<b>ILLINOIS</b>		<b>ILLINOIS</b>	
CHAMPAIGN	1	CHAMPAIGN	1
CHICAGO	1	CHICAGO	1
MARION	5	MARION	5
PEORIA	4	PEORIA	4
ROCK ISLAND/MOLINE	1	ROCK ISLAND/MOLINE	1
ROCKFORD	3	ROCKFORD	3
SPRINGFIELD	2	SPRINGFIELD	2
<b>INDIANA</b>		<b>INDIANA</b>	
BLOOMINGTON	5	BLOOMINGTON	5
EVANSVILLE	1	EVANSVILLE	1
FORT WAYNE	1	FORT WAYNE	1
INDIANAPOLIS	1	INDIANAPOLIS	1
LAFAYETTE (Yeoman)	3	LAFAYETTE (Yeoman)	3
MARION	5	MARION	5
NORTH WEBSTER	5	NORTH WEBSTER	5
PUTNAMVILLE	2	PUTNAMVILLE	2
SOUTH BEND	2	SOUTH BEND	2
<b>IOWA</b>		<b>IOWA</b>	
CEDAR RAPIDS	3	CEDAR RAPIDS	3
DES MOINES	1	DES MOINES	1
DUBUQUE (P)	2	DUBUQUE (P)	2
SIoux CITY	3	SIoux CITY	3
WATERLOO	1	WATERLOO	1
<b>KANSAS</b>		<b>KANSAS</b>	
CHANUTE	2	CHANUTE	2
COLBY/GOODLAND	2	COLBY/GOODLAND	2
CONCORDIA	1	CONCORDIA	1
DODGE CITY	3	DODGE CITY	3
ELLSWORTH	2	ELLSWORTH	2
LENORA	4	LENORA	4
TOPEKA	3	TOPEKA	3
TRIBUNE	1	TRIBUNE	1
WICHITA	1	WICHITA	1
<b>KENTUCKY</b>		<b>KENTUCKY</b>	
ASHLAND	1	ASHLAND	1
BOWLING GREEN	2	BOWLING GREEN	2
COVINGTON	1	COVINGTON	1
ELIZABETHTOWN	1	ELIZABETHTOWN	1
HAZARD	3	HAZARD	3
JACKSON	4	JACKSON	4
LEXINGTON	2	LEXINGTON	2
LOUISVILLE	3	LOUISVILLE	3
MADISON COUNTY CSEPP7	7	MADISON COUNTY CSEPP7	7
MAYFIELD	3	MAYFIELD	3
PAINTSVILLE	7	PAINTSVILLE	7
PIKEVILLE	2	PIKEVILLE	2
SOMERSET	1	SOMERSET	1
<b>LOUISIANA</b>		<b>LOUISIANA</b>	
ALEXANDRIA	3	ALEXANDRIA	3
BATON ROUGE	2	BATON ROUGE	2
BURAS	3	BURAS	3
LAFAYETTE	1	LAFAYETTE	1
LAKE CHARLES	1	LAKE CHARLES	1
MONROE	2	MONROE	2
MORGAN CITY	3	MORGAN CITY	3
NEW ORLEANS	1	NEW ORLEANS	1
SHREVEPORT	2	SHREVEPORT	2
<b>MAINE</b>		<b>MAINE</b>	
CARIBOU	7	CARIBOU	7
DRESDEN	3	DRESDEN	3
ELLSWORTH	2	ELLSWORTH	2
FALMOUTH	1	FALMOUTH	1
<b>MARYLAND</b>		<b>MARYLAND</b>	
BALTIMORE	2	BALTIMORE	2
HAGERSTOWN	3	HAGERSTOWN	3
SALISBURY	3	SALISBURY	3
<b>MASSACHUSETTS</b>		<b>MASSACHUSETTS</b>	
BOSTON	3	BOSTON	3
HYANNIS (Camp Edwards)	1	HYANNIS (Camp Edwards)	1
WORCESTER	1	WORCESTER	1
<b>MICHIGAN</b>		<b>MICHIGAN</b>	
ALPENA	1	ALPENA	1
DETROIT	1	DETROIT	1
FLINT	3	FLINT	3
GAYLORD	6	GAYLORD	6
GRAND RAPIDS	1	GRAND RAPIDS	1
HESPERIA	3	HESPERIA	3
HOUGHTON	2	HOUGHTON	2
MARQUETTE	1	MARQUETTE	1
ONONDAGA	2	ONONDAGA	2
OSHTEMO	3	OSHTEMO	3
SAULT STE MARIE	1	SAULT STE MARIE	1
TRAVERSE CITY	2	TRAVERSE CITY	2
<b>MINNESOTA</b>		<b>MINNESOTA</b>	
BEMIDJI	4	BEMIDJI	4
DETROIT LAKES	2	DETROIT LAKES	2
DULUTH	1	DULUTH	1
INTERNATIONAL FALLS	1	INTERNATIONAL FALLS	1
MANKATO	2	MANKATO	2
MINNEAPOLIS/ST. PAUL	1	MINNEAPOLIS/ST. PAUL	1
ROCHESTER	3	ROCHESTER	3
ROOSEVELT	5	ROOSEVELT	5
ST. CLOUD (P)	3	ST. CLOUD (P)	3
THIEF RIVER FALLS	1	THIEF RIVER FALLS	1
WILLMAR (P)	3	WILLMAR (P)	3
<b>MISSISSIPPI</b>		<b>MISSISSIPPI</b>	
ACKERMAN	3	ACKERMAN	3
BOONEVILLE	1	BOONEVILLE	1
BUDE	1	BUDE	1
COLUMBIA	2	COLUMBIA	2
GULFPORT	2	GULFPORT	2
HATTIESBURG	3	HATTIESBURG	3
INVERNESS	1	INVERNESS	1
JACKSON	2	JACKSON	2
KOSCIUSKO	4	KOSCIUSKO	4
MERIDIAN	1	MERIDIAN	1
OXFORD	2	OXFORD	2
PAFFHAMAN	6	PAFFHAMAN	6
<b>MISSOURI</b>		<b>MISSOURI</b>	
BOURBON	7	BOURBON	7
CAMDETON	1	CAMDETON	1
COLUMBIA	2	COLUMBIA	2
HANNIBAL	1	HANNIBAL	1
HERMITAGE	5	HERMITAGE	5
JOPLIN	4	JOPLIN	4
KANSAS CITY	1	KANSAS CITY	1
SIKSTON	2	SIKSTON	2
SPRINGFIELD	2	SPRINGFIELD	2
ST. JOSEPH	2	ST. JOSEPH	2
ST. LOUIS	2	ST. LOUIS	2
SUMMERSVILLE	3	SUMMERSVILLE	3
<b>MONTANA</b>		<b>MONTANA</b>	
BILLINGS	1	BILLINGS	1
BUTTE	1	BUTTE	1
GLASGOW	2	GLASGOW	2
GLENVIEW	3	GLENVIEW	3
GREAT FALLS	1	GREAT FALLS	1
HAVRE (Squaw Butte) (P)	2	HAVRE (Squaw Butte) (P)	2
ELENA	2	ELENA	2
KALISPEL	2	KALISPEL	2
MILES CITY	2	MILES CITY	2
MISSOULA	2	MISSOULA	2
PLENTYWOOD	3	PLENTYWOOD	3
SCOBY	5	SCOBY	5
<b>NEBRASKA</b>		<b>NEBRASKA</b>	
BASSETT	3	BASSETT	3
GRAND ISLAND	2	GRAND ISLAND	2
HOLDREGE	3	HOLDREGE	3
LINCOLN	1	LINCOLN	1
MERRIMAN	2	MERRIMAN	2
NORFOLK	1	NORFOLK	1
NORTH PLATTE	1	NORTH PLATTE	1
OMAHA	2	OMAHA	2
SCOTTSDLUFF	1	SCOTTSDLUFF	1
<b>NEVADA</b>		<b>NEVADA</b>	
ELKO	1	ELKO	1
ELY (Cave Mt.)	2	ELY (Cave Mt.)	2
EUREKA	1	EUREKA	1
HAWTHORNE	3	HAWTHORNE	3
LAS VEGAS (Boulder City)	1	LAS VEGAS (Boulder City)	1
NORTHWEST NEVADA	5	NORTHWEST NEVADA	5
RENO	2	RENO	2
WINNEMUCCA	2	WINNEMUCCA	2
<b>NEW HAMPSHIRE</b>		<b>NEW HAMPSHIRE</b>	
CONCORD	2	CONCORD	2
<b>NEW JERSEY</b>		<b>NEW JERSEY</b>	
ATLANTIC CITY	2	ATLANTIC CITY	2
<b>NEW MEXICO</b>		<b>NEW MEXICO</b>	
ALBUQUERQUE	2	ALBUQUERQUE	2
CARLSBAD	3	CARLSBAD	3
CLOVIS	3	CLOVIS	3
DES MOINES	1	DES MOINES	1
FARMINGTON	2	FARMINGTON	2
HOBBS	3	HOBBS	3
LAS CRUCES	3	LAS CRUCES	3
ROSWELL	1	ROSWELL	1
RUIDOSO	5	RUIDOSO	5
SANTA FE	1	SANTA FE	1
<b>NEW YORK</b>		<b>NEW YORK</b>	
ALBANY	1	ALBANY	1
BINGHAMTON	3	BINGHAMTON	3
BUFFALO	1	BUFFALO	1
ELMIRA	2	ELMIRA	2
KINGSTON	3	KINGSTON	3
LITTLE VALLEY	4	LITTLE VALLEY	4
NEW YORK CITY	1	NEW YORK CITY	1
RIVERHEAD	3	RIVERHEAD	3
ROCHESTER	2	ROCHESTER	2
STAMFORD	2	STAMFORD	2
SYRACUSE	1	SYRACUSE	1
WATERTOWN	3	WATERTOWN	3
<b>NORTH CAROLINA</b>		<b>NORTH CAROLINA</b>	
ASHEVILLE	2	ASHEVILLE	2
BADIN	4	BADIN	4
CAPE HATTERAS	3	CAPE HATTERAS	3
CHARLOTTE	3	CHARLOTTE	3
FAYETTEVILLE	3	FAYETTEVILLE	3
LUMBER BRIDGE	7	LUMBER BRIDGE	7
MARGARETSVILLE	5	MARGARETSVILLE	5
NEW BERN	2	NEW BERN	2
RALEIGH/DURHAM	1	RALEIGH/DURHAM	1
ROCKY MOUNT	3	ROCKY MOUNT	3
WILMINGTON	1	WILMINGTON	1
WINSTON-SALEM	2	WINSTON-SALEM	2
<b>NORTH DAKOTA</b>		<b>NORTH DAKOTA</b>	
BISMARCK	3	BISMARCK	3
DEVILS LAKE	4	DEVILS LAKE	4
DICKINSON	2	DICKINSON	2
FARGO	3	FARGO	3
GRAND FORKS	3	GRAND FORKS	3
JAMESTOWN	2	JAMESTOWN	2
MINOT	1	MINOT	1
PETERSBURG	2	PETERSBURG	2
WILLISTON	1	WILLISTON	1
<b>NORTH DAKOTA</b>		<b>NORTH DAKOTA</b>	
BISMARCK	3	BISMARCK	3
DEVILS LAKE	4	DEVILS LAKE	4
DICKINSON	2	DICKINSON	2
FARGO	3	FARGO	3
GRAND FORKS	3	GRAND FORKS	3
JAMESTOWN	2	JAMESTOWN	2
MINOT	1	MINOT	1
PETERSBURG	2	PETERSBURG	2
WILLISTON	1	WILLISTON	1
<b>NORTH DAKOTA</b>		<b>NORTH DAKOTA</b>	
BISMARCK	3	BISMARCK	3
DEVILS LAKE	4	DEVILS LAKE	4
DICKINSON	2	DICKINSON	2
FARGO	3	FARGO	3
GRAND FORKS	3	GRAND FORKS	3
JAMESTOWN	2	JAMESTOWN	2
MINOT	1	MINOT	1
PETERSBURG	2	PETERSBURG	2
WILLISTON	1	WILLISTON	1
<b>NORTH DAKOTA</b>		<b>NORTH DAKOTA</b>	
BISMARCK	3	BISMARCK	3
DEVILS LAKE	4	DEVILS LAKE	4
DICKINSON	2	DICKINSON	2
FARGO	3	FARGO	3
GRAND FORKS	3	GRAND FORKS	3
JAMESTOWN	2	JAMESTOWN	2
MINOT	1	MINOT	1
PETERSBURG	2	PETERSBURG	2
WILLISTON	1	WILLISTON	1
<b>NORTH DAKOTA</b>		<b>NORTH DAKOTA</b>	
BISMARCK	3	BISMARCK	3
DEVILS LAKE	4	DEVILS LAKE	4
DICKINSON	2	DICKINSON	2
FARGO	3	FARGO	3
GRAND FORKS	3	GRAND FORKS	3
JAMESTOWN	2	JAMESTOWN	2
MINOT	1	MINOT	1
PETERSBURG	2	PETERSBURG	2
WILLISTON	1	WILLISTON	1
<b>NORTH DAKOTA</b>		<b>NORTH DAKOTA</b>	
BISMARCK	3	BISMARCK	3
DEVILS LAKE	4	DEVILS LAKE	4
DICKINSON	2	DICKINSON	2
FARGO	3	FARGO	3
GRAND FORKS	3	GRAND FORKS	3
JAMESTOWN	2	JAMESTOWN	2
MINOT	1	MINOT	1
PETERSBURG	2	PETERSBURG	2
WILLISTON	1	WILLISTON	1
<b>NORTH DAKOTA</b>		<b>NORTH DAKOTA</b>	
BISMARCK	3	BISMARCK	3
DEVILS LAKE	4	DEVILS LAKE	4
DICKINSON	2	DICKINSON	2
FARGO	3	FARGO	3
GRAND FORKS	3	GRAND FORKS	3
JAMESTOWN	2	JAMESTOWN	2
MINOT	1	MINOT	1
PETERSBURG	2	PETERSBURG	2
WILLISTON	1	WILLISTON	1
<b>NORTH DAKOTA</b>		<b>NORTH DAKOTA</b>	
BISMARCK	3	BISMARCK	3
DEVILS LAKE	4	DEVILS LAKE	4
DICKINSON	2	DICKINSON	2
FARGO	3	FARGO	3
GRAND FORKS	3	GRAND FORKS	3
JAMESTOWN	2	JAMESTOWN	2
MINOT	1	MINOT	1
PETERSBURG	2	PETERSBURG	2
WILLISTON			

## 10 Listen to a preset:

 Escucha de una estación programada: /  
Écoute d'une station programmée:

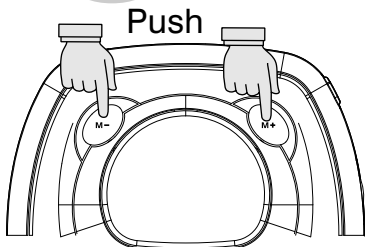

### WARNINGS AND PRECAUTIONS

TO PREVENT FIRE OR SHOCK HAZARDS, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.

**⚠** This symbol, located on back or bottom of the unit, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

**⚠** This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Any use of the controls or an adjustment to the procedures other than those specified herein may result in hazardous radiation.

**CAUTION:** TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). THERE ARE NO USER-SERVICEABLE PARTS INSIDE. PLEASE REFER ANY SERVICING TO QUALIFIED SERVICE PERSONNEL.

**WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### Special Note

 
When placing your unit on a lacquered or natural finish, protect your furniture with a cloth or other protective material.

### TROUBLESHOOTING GUIDE

No sound is heard/poor reception.	Press the POWER button to power on the unit.
	Adjust the VOLUME control.
	Press the BAND button to choose FM, AM, WB or TV.
	Press the TUN DN button and the TUN UP button to tune to a station.
	Extend the headphone cord and reorient the unit to improve reception.
LCD display not functioning correctly.	Replace the batteries with new ones.

## 11 Belt clip:

SopORTE cinturón: /  
Pince à ceinture:

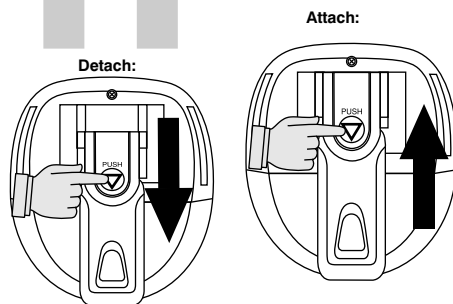

### ADVERTENCIAS Y PRECAUCIONES

PARA REDUCIR EL RIESGO DE INCENDIOS O DE SACUDIDAS ELÉCTRICAS, NO EXPONGA ESTE APARATO A LA LLUVIA O A LA HUMEDAD.

**⚠** Este símbolo, localizado detrás o en la parte de abajo de la unidad, indica la presencia de "tensiones peligrosas" sin aislar en el interior de la caja del producto que pueden ser de suficiente magnitud como para constituir un riesgo de sacudida eléctrica para las personas.

**⚠** Este símbolo indica la presencia de instrucciones de operación y de mantenimiento (reparación) en el material impreso que acompaña el aparato.

Usted puede recibir una radiación peligrosa si utiliza los botones o aplica los procedimientos de manera diferente a la que ha sido indicada en este documento.

**AVISO:** PARA EVITAR UNA DESCARGA ELÉCTRICA, INTRODUZCA LA HOJA MÁS ANCHA DEL ENCHUFE EN LA RANURA CORRESPONDIENTE DE LA TOMA Y EMPUJE HASTA EL FONDO.

PARA REDUCIR EL RIESGO DE SACUDIDAS ELÉCTRICAS, NO RETIRE LA TAPA (O LA PARTE POSTERIOR) DEL APARATO. DENTRO DEL APARATO NO HAY PARTES QUE PUEDAN SER REPARADAS POR EL USUARIO. LOS TRABAJOS DE REPARACIÓN DEBEN SER EFECTUADOS POR PERSONAL DE SERVICIO CALIFICADO.

**ADVERTENCIA:** El usuario puede perder el derecho de utilizar este aparato si efectúa cambios o modificaciones que no han sido expresamente aprobados por la autoridad responsable.

**NOTA:** Este equipo ha sido probado y ha demostrado cumplir con los límites establecidos para los aparatos digitales de Clase B, de acuerdo con el Apartado 15 de las Normas de la FCC. Estos límites han sido designados para proveer una protección razonable contra las interferencias perjudiciales en una instalación residencial. Este equipo genera, utiliza y puede irradiar energía radioeléctrica y, si no se instala y utiliza de acuerdo con las instrucciones, puede causar interferencias perjudiciales en las radiocomunicaciones. Sin embargo, no existe garantía de que no se produzcan interferencias en una instalación en particular. Si este aparato causa interferencias en la recepción de radio o de televisión, lo que puede determinarse desconectando y conectando el aparato, se recomienda tratar de corregir la interferencia de la siguiente manera:

- Vuelva a orientar la antena o cambie su lugar de instalación.
- Aumente la separación entre el equipo y el receptor.
- Conecte el equipo a una toma de corriente cuyo circuito no sea el mismo que aquel al que ha conectado el receptor.
- Consulte al concesionario o a un técnico de radio/televisión con experiencia.

### Nota Especial

 
Cuando coloque la unidad sobre un mueble con acabado laqueado o natural, proteja su mueble con un paño u otro material protector.

### GUÍA DE RESOLUCIÓN DE PROBLEMAS

No se oye el sonido/Recepción débil.	Presione el botón POWER para encender la unidad.
	Ajuste el control Volumen.
	Presione el botón BAND para elegir FM, AM, WB ó TV.
	Presione el botón TUN DN y TUN UP para sintonizar una estación.
	Ajuste el cable de los auriculares y reorienta la unidad para mejorar la recepción.
Visualizador LCD no funciona correctamente	Coloque pilas nuevas.

## 12 Armband:

Correa de brazo: /  
Courroie de bras:

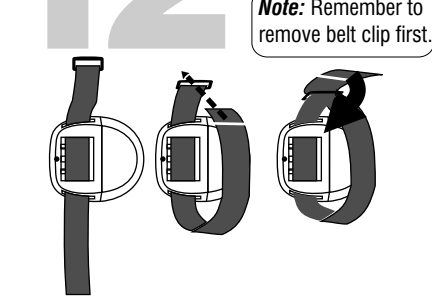

**Note:** Remember to remove belt clip first.

### AVERTISSEMENT ET PRÉCAUTIONS

POUR PRÉVENIR TOUT RISQUE D'INCENDIE OU D'ÉLECTROCUTION, NE PAS EXPOSER CET APPAREIL À LA PLUIE OU À L'HUMIDITÉ.

**⚠** Ce symbole, situé derrière ou dessous de l'appareil, est destiné à avertir l'utilisateur de la présence d'une "tension dangereuse" non isolée dans le boîtier de l'appareil, dont l'intensité pourrait être suffisante pour constituer un risque d'électrocution pour les personnes.

**⚠** Ce symbole est destiné à avertir l'utilisateur de la présence d'instructions importantes pour le fonctionnement et l'entretien (réparation) de l'appareil, dans la brochure qui accompagne celui-ci.

Vous pourriez subir des radiations dangereuses si vous utilisez les commandes ou si vous appliquez les procédures d'une manière différente de celle indiquée dans ce mode d'emploi.

**ATTENTION:** POUR ÉVITER LES CHOCS ÉLECTRIQUES, INTRODUIRE LA LAME LA PLUS LARGE DE LA FICHE DANS LA BORNE CORRESPONDANTE DE LA PRISE ET POUSSER JUSQU'AU FOND.

POUR PRÉVENIR TOUT RISQUE D'ÉLECTROCUTION, NE RETIREZ PAS LE COUVERCLE (OU LA PARTIE POSTÉRIEURE) DE L'APPAREIL. VOUS NE DEVEZ PAS RÉPARER DES PIÈCES SE TROUVANT À L'INTÉRIEUR DE L'APPAREIL. LES RÉPARATIONS DOIVENT ÊTRE EFFECTUÉES PAR DU PERSONNEL QUALIFIÉ.

**AVERTISSEMENT:** Tout changement ou modification apporté(e) à cet appareil sans autorisation, peut entraîner l'interdiction d'utilisation de ce dernier.

**REMARQUE:** Cet appareil a été testé et il a été constaté qu'il respecte les limites fixées pour les appareils numériques de la Catégorie B, par la Section 15 des Normes FCC. Ces limites ont été fixées afin de fournir une protection raisonnable contre les interférences nocives dans un logement résidentiel. Cet appareil produit, utilise et peut émettre de l'énergie radioélectrique et, s'il n'est pas installé et utilisé suivant le mode d'emploi, il peut produire des interférences nocives sur les radiocommunications. Cependant, il peut y avoir des interférences nocives dans des logements particuliers. Si l'appareil produit des interférences sur la réception radio ou télévision (ce qu'on peut constater lorsqu'on débranche ou lorsqu'on raccorde celui-ci), nous vous recommandons de corriger ce problème de la manière suivante:

- Réorientez l'antenne ou changez l'appareil de place.
- Séparez davantage l'appareil du récepteur.
- Branchez l'appareil à une prise de courant faisant partie d'un circuit différent de celui auquel est branché le récepteur.
- Consultez le vendeur ou un technicien de radio/télévision expérimenté.

 
### Note Spéciale

En plaçant votre unité sur une finition laquée ou normale, protégez vos meubles avec un tissu ou autre protecteur matériel.

### EN CAS DE PROBLÈMES

Il n'y a pas de son/Recepción est faible.	Appuyez sur le bouton POWER pour allumer l'appareil.
	Réglez le bouton Volume.
	Appuyez sur le bouton BAND pour choisir FM, AM, WB ou TV.
	Appuyez sur le bouton TUN DN et TUN UP pour régler sur une station.
	Réglez le câble des casques et réorientez l'appareil pour améliorer la réception.
Écran LCD ne fonctionne pas correctement.	Insérez des piles neuves.

### Professional Headphones

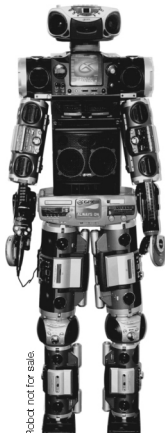

**HP-HF-620** Stylish pro headphones. \$9.99 +S/H



**HP-SRS-3** Features variable SRS-3 surround sound. \$14.99 +S/H



**HP-VS980** Features variable vibrating subwoofer. \$19.99 +S/H

Add new dimension to your music with these professional quality headphones! All three models feature:

- collapsible design
- attractive carrying pouch
- dual plug adapter.

### GPX Polo Style Shirts



Our Polo style shirts feature an embroidered GPX logo on the front chest. Available in M, L, XL and XXL sizes.

**\$14.99** +S/H