

12/3/89

TO: TR10

FROM: TR10

SUB: GMT

WT-130 2/B

GMT WT-80

1. BASE STATION AND THE TWO WALKIE TALKIES ARE ON THE SAME FREQUENCY. WHEN ALL UNITS ARE ON, IT IS POSSIBLE FOR THREE PEOPLE TO COMMUNICATE WITH EACH OTHER AT THE SAME TIME.
2. OPEN BATTERY COMPARTMENTS AND SNAP IN ONE 9-VOLT BATTERY. CLOSE BATTERY COMPARTMENT. (FIG. 2)
3. TURN THE ON/OFF/VOLUME CONTROL TO DESIRED SOUND LEVEL.
4. FOR BASE STATION USE, PRESS THE PUSH TO TALK BUTTON ON HAND HELD MICROPHONE FOR TRANSMITTING WHILE SPEAKING IN A NORMAL VOICE LEVEL INTO THE MICROPHONE GRILLE.
5. FOR HAND HELD WALKIE TALKIE USE, PRESS THE PUSH TO TALK BUTTON FOR TRANSMITTING WHILE SPEAKING IN A NORMAL VOICE LEVEL INTO THE SPEAKER/MICROPHONE GRILLE.
6. RELEASE THE PUSH TO TALK BUTTON FOR RECEIVING.
7. TO SEND MORSE-CODE SIGNALS: WHILE PUSHING THE PUSH-TO-TALK BUTTON, PRESS THE MORSE CODE BUTTON MOMENTARILY AND RELEASE FOR DESIRED SIGNALS.
8. YOU CAN PRACTICE MORSE-CODE WITHOUT TRANSMITTING TO OTHER BY PRESSING THE MORSE-CODE BUTTON AND NOT PRESSING THE PUSH TO TALK BUTTON.
9. REQUIRE 3 "9 VOLT" BATTERIES (NOT INCLUDED)
10. THE UNITS MAY HAVE FEEDBACK (SQUEALING NOISE) WHEN PLAYED TOO CLOSE TOGETHER. MOVE FARTHER APART WHEN IT HAPPENS.

## CAUTION:

1. YOUR TRANSCEIVER SET HAS BEEN FULLY ADJUSTED PRIOR TO SHIPMENT FROM THE FACTORY AND BE SURE NOT TO TOUCH THE INTERNAL COMPONENTS OTHER THAN REPLACING THE BATTERY.
2. WHEN THE SOUND BECOMES WEAK, IT IS TIME TO CHANGE THE BATTERY.
3. AFTER USE, ALWAYS RETURN THE ON-OFF SWITCH TO THE OFF POSITION.
4. KEEP YOUR SET IN DRY AND CLEAN PLACE.

WARNING: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

To: TR  
 8/12/99. Sid Kender  
 Jambur

Refer to your e-mail  
 re your report.