

# Menu Map

## 8. Extras



JAVA

Java List

Settings

About Java

Media center

Calculator

Games

Space chaos

Tank war

Ballpop

Red cap

Gobang

Black jack


Volume

Game Rule

Irda

# Menu Map

## 9. WAP

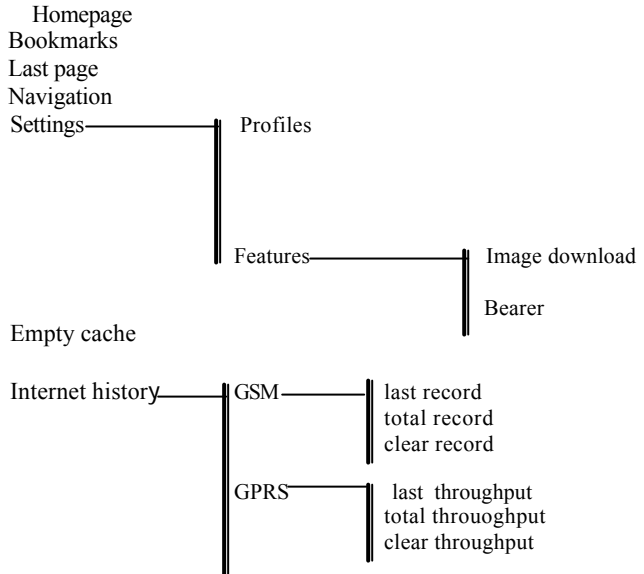

## 10. STK

The availability depends on your network service provider.



# Contents

<b>FOR YOUR SAFETY</b>	<b>1</b>	Phone status	18
<b>BASIC CALL OPERATIONS</b>	<b>3</b>	<b>MESSAGE</b>	<b>18</b>
Handset	3	SMS	19
SIM Card	4	Inbox	19
Install SIM card	5	Outbox	19
Removal of the SIM card	5	Write message	19
<b>Battery</b>	<b>5</b>	Draftbox	20
Battery charging	5	Delete message	20
Battery specifications	5	Voice box	20
Notice on battery charging and discharging	5	Cell broadcast	21
Use of battery	6	Message settings	21
<b>Turning your phone ON and OFF</b>		<b>MMS</b>	<b>21</b>
_____	6	Compose	22
When PIN is requested	6	Inbox	23
Unlock the blocked SIM card	7	Outbox	23
<b>Making calls</b>	<b>7</b>	Configure	23
International calls	7	Report	23
Making calls via the Phone Book	7	User Folder	23
Redial calls missed, received and dialed	7	<b>CALL METERS</b>	<b>24</b>
Speed dialing	8	Missed	24
Listening to voice message	8	Received	24
<b>Answering calls</b>	<b>8</b>	Dialed	24
Call waiting	8	Last call time	24
In-call menu	9	Call alert	24
Multiparty	10	Show call duration	24
<b>Other operations</b>	<b>11</b>	During call	24
Input text	11	Charge rate	24
Predictive Text	11	Total cost	24
Using Predictive Text input	11	<b>PROFILES</b>	<b>25</b>
<b>The functions of keys</b>	<b>12</b>	<b>DATE &amp; TIME</b>	<b>25</b>
<b>CAMERA</b>	<b>14</b>	Alarm	26
Photo Album	14	Calendar	26
Photo Size	14	Date&time	26
Photo Quality	14	Display mode	26
Photo Effect	14	Power Off	26
Self Timer	14	Format	27
Night Mode	14	Stopwatch	27
Profiles	14	Time Zone	27
Settings	15	Count down	27
<b>PHONE BOOK</b>	<b>16</b>	Alarm At Hour	27
Search	16	<b>SETTINGS</b>	<b>28</b>
Add new	17	Screen	28
Group Settings	17	Phone Setting	29
Copy	17	Call Setting	30
Delete	18	Network	31
Fixed Dial Control	18	Security	31
Speed Dials	18	Set shortcut	32
		<b>EXTRAS</b>	<b>34</b>

# Contents

JAVA	34
Media center	34
Calculator	34
Games	35
Irda	35
<b>WAP</b>	<b>37</b>
Homepage	37
Bookmark	37
Last page	37
Navigation	37
setting	37
Empty Cache	37
History	38
<b>STK</b>	<b>39</b>
<b>MAINTENANCE</b>	<b>40</b>
<b>ACCESS CODES</b>	<b>41</b>
Phone lock code	41
PIN code	41
PIN2 code	41
PUK code	41
PUK2 code	41
<b>REFERENCE INFORMATION</b>	<b>42</b>
EFR encoding decoder function	42
Accessories	42

# North America - SAR

For Your Safety

## SAR (North America)

This Model phone meets the North America Requirements for exposure to radio waves.

Your Mobile Phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the limits for exposure to radio frequency (RF) energy recommended by the Council of the North America. These limits are part of comprehensive guidelines and established permitted levels of RF energy for the general public. The guidelines were developed by independent scientific organizations through the evaluation of scientific studies. The limits include a substantial safety margin designed to ensure the safety of all persons, regardless of age and health.

The exposure standards for mobile phones employ a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit recommended by the rule of the North America is 1.6 W/kg.\* Tests for SAR have been conducted using normal operating conditions with the phone transmitting at the highest certified power in all tested frequency bands. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general,

the closer you are to the station antenna, the lower the power output.

Before a phone model is available for sale to the public, compliance with the FCC Rule must be shown. One of the essential requirements of this directive is the protection of the health and safety for the user and any other person. The highest SAR value for this model phone when tested for compliance against the standard is 0.485 W/kg. While there may be differences between the SAR levels of various phones and at various positions, they all meet the North America requirement for RF exposure.

*The SAR limit for mobile phones for public use is 1.6 watts/kilogram (W/kg) averaged over one gram of body tissue.*

*The limit incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.*

# For Your Safety

## Road safety



Exercise proper control of the car at all times. Do not use handheld phones whilst driving, always use the hands free kit.

## Special regulations



Always switch off your mobile wherever use is prohibited, such as in hospitals, as it may cause interference with medical equipment.



## Electronic devices

Mobile phones may interfere with appliances such as computers, televisions and other radio equipments.



## Other medical devices

Mobiles phones may interfere with signals of personal medical devices, such as pacemaker or hearing aid. Consult your doctor for advice before using the mobile.

## Aircraft



The use of mobile phones is prohibited in the air. Switch off your phone before boarding an aircraft.

## Accessories and battery



Use only approved accessories and batteries. Do not connect to any incompatible product. This

will invalidate any warranty applying to your mobile phone and may be dangerous.

## Disposal



Your mobile phone and other accessories must be disposed of properly. It must not be thrown away in municipal waste! Please dispose of used mobile phones and other accessories in accordance with local regulations.

## Potentially explosive atmospheres




Switch off your phone when in or near explosive areas, petrol stations and chemical plants.

## Emergency calls



Make sure your phone is switched ON and in a service area with adequate signal strength.


When in idle mode, key in the emergency number **911** and press  to be connected to the emergency services.

Provide all the necessary information as accurately as possible. Do not hang up until you are told to do so.

☞ If a PIN is set when switching on the mobile phone, you will be asked for

---

## For Your Safety

the PIN code. You can make an emergency call without entering the PIN code. Press  (SOS) to dial.

# Basic Call Operations

Basic Call Operations

## Handset

Your mobile phone is a radio transceiver. When the phone is turned on, it transmits and receives radio frequency (RF) signals

The internal and external front view of the 8055T handset are shown below:



- 1 headphones
- 2 LCD display
- 3 direction key
- 4 Power key/End call key
- 5 Alphanumeric keys
- 6 Charger port
- 7 Earphone jack
- 8 function key
- 9 Volume keys
- 10 Send key
- 11 Antenna
- 12 loudspeaker
- 13 Outside LCD display
- 14 flash lamp
- 15 digitally camera

### Outside LCD display:

The outside display indicating the signal strength, battery level, date and time, caller ID, new message, missed call or alarm are shown below.



**Battery charge indicator:** The longer the bar, the more power is available in the battery.



**Signal strength:** The longer the bar, the better the signal strength.



**Roaming:** Shown when registered with a system other than the original one (Inter-system Roaming).



**Short message:** Solid when there is an unread incoming text message. Flashes when the memory is full.



**Missed call.** Shown when there is an unanswered incoming call.





**Alarm.** Shown when the alarm is set.




# Basic Call Operations


 **Call divert:** Shown when the divert call is activated.


 **Silencer:** Shown when the phone is muted, the party on the phone will not hear you.


 **Call indicator:** Shown when a call is in progress or when there is dialing attempt.

## function key:


 Follow the prompt on the screen, press to access the following options: “Menu”, “Select”, “Option” or “Read”, etc. Press to access In-call menu during calls.

 Follow the prompt on the screen, press to access the following options: “Names”, “Clear” or “Back”, “Reject”, etc.

 Follow the prompt on the screen, press to access the following options: When in idle mode, Press to access camera.

 When in edit mode, input the character to the textbox. After edited the date, press to save.


## direction key:

 Press to scroll through the lists when accessing menus


Press to move the cursor left and right during word editing.

When in idle mode, press horizontally or vertically to access the corresponding functions that has been assigned as a hotkey.


## Power key/End send key:

 Press and hold to turn the phone on and off. During a call, press to end the active call. Press to return to idle mode from menu mode.




## Send key:

 Press to place a call or answer an incoming call.


 
When in idle mode, press to view the latest dialed, received and missed call list



Press  to call the selected number.

## Side Key:

- (1) Press upper key  can capture vision directly in camera mode;
- (2) Press middle key  and the third key  to change the volume in idle mode or call status.

## Alphanumeric keys:

Press  ~  to input digits or letters.

Press  and  to input the symbols displayed on the key. Its functions may vary according to the available menu.

## SIM Card

SIM card has two kinds, the big one is similar as ID card in size, the small one's size is 15x25mm. The phone adopts the smaller one.

⌘ Be care of the SIM card when installing or taking out it as it is easy to be damaged.

⌘ Please leave the SIM card away from

# Basic Call Operations

children.

- ⌘ Power off the mobile phone first, then install or take out the SIM card.

## Install SIM card

1. Before proceeding, ensure that the phone is switched off. Pulls the battery cover catch on the back of the phone upwards with one hand and lift the battery cover with another hand.
2. Insert the SIM card into the SIM card holder, ensuring that the angled corner is on the lower left-hand side with the gold metallic contact surface facing downward.
3. After inserting the SIM card, push the SIM card fasten tab to secure it in place. Replace the battery with its catch pins inserted into the catch slots and push it downwards until it clicks into place.

## Removal of the SIM card

Repeat the same procedure described in the “Installations of the SIM card and the battery” to remove the SIM card and the battery.

- ⌘ You may access the following functions before inserting the SIM card: Alarm, Time Different, Date & Time, Calculator, Games, Calendar, Wallpapers and Alarm at hour.

## **Battery**

### Battery charging

1. Plug the connector of the travel charger

into the charger port at the bottom of the phone.

2. Plug the charger into the AC power supply socket and the battery indicator will start scrolling.

*You can use the phone, if switched on while it is charging.*

If the battery is completely flat, the message “charging” will take a few minutes to appear after connecting it to the power supply.

3. When the battery is fully charged, the battery indicator will stop scrolling.

- ⌘ While charging, be sure that the charger is firmly connected to the charger port.

*! When charging the battery for the first time, charge it for at least 12 hours.*

*! For optimum battery power performance, 5 hours of battery charging is recommended.*

*! Do not remove the battery while charging is in progress, otherwise it may cause damage to your phone.*

*! The vibrator will not function for incoming call or SMS while charging.*

### Battery specifications

Please refer to “Accessories” in “Reference Information” or the battery label.

### Notice on battery charging and discharging

- ⌘ Your phone is powered by a rechargeable battery.

- ⌘ Use only the specified charger supplied by the manufacturer for charging. Any other

# Basic Call Operations

type of charger may be dangerous.

- ⌘ Note that the new battery will only reach its best performance after being fully charged and discharged for 2 or 3 times.
- ⌘ If used in gear, the battery can be charged and discharged about 300 times, and during this period, its capability will get more and more less. When the operation time get more short, please buy new battery.
- ⌘ When the charger is not in use, disconnect it from the power supply. Do not leave the battery on continuous charge for more than one week, as overcharging will shorten the battery life. If a fully charged battery is left unused, it will slowly discharge itself over time.
- ⌘ An environment with extremely high or low temperatures will affect the battery charging. Optimum charging will be achieved in moderate temperatures.


## Use of battery

- ⌘ Do not use the battery for other purpose.
- ⌘ Never use a damaged or non-recommended charger or battery.
- ⌘ Do not make the battery be short circuit.
- ⌘ Keep the battery at a temperature between 10° to 40° (50° to 104° ).  
The effectiveness of your battery is particularly affected in temperatures below 0° (32° ).
- ⌘ Do not dispose of the battery in a fire. This may cause a serious risk of explosion and/or release of highly toxic chemicals.
- ☐ Ensure that the battery is disposed of or

recycled properly.

- ☐ The battery must not be disposed of in municipal waste.

## Turning your phone ON and OFF




Press and hold  for 3 seconds and then release it.

! Always switch off your phone whenever it is forbidden to use it or when it may cause interference or danger.

## When PIN is requested

SIM cards are usually protected with a PIN code.

The PIN code usually comes with your SIM card provided by the network operator.

1. Key in your PIN code (note that the characters in your password are replaced with “\*”).
2. After you have entered the PIN code, press  (OK).
3. If you key in a wrong number, press  (Clear) to remove the last digit. Press and hold  to clear the entire entry.

# Basic Call Operations

4. If the PIN code entered is incorrect, a warning message will be displayed to inform you of the remaining attempt to enter your PIN.






! If an incorrect PIN code is entered 3 times in succession, your phone will automatically lock-up the SIM card and a message will be displayed to inform you that the SIM card is blocked.

## Unlock the blocked SIM card


If your SIM card is locked, you will be asked to enter the PUK code to unlock your phone in order to continue using it.

! The PUK consists of 8 digits and is provided with the SIM card. If not, please check with your network service provider for the code.





## **Making calls**

1. In idle mode, key in the area code and the phone number. Press  (Clear) to delete the last digit. Press and hold  for 3 seconds to clear the whole number.
2. Press  to dial the number.
3. Press  or  (End) to end an active call or stop dialing.


⌘ Example:

Call for DBT, in idle mode, input **02154422999**, then press  to dial.




## International calls

1. When in idle mode, press and hold  until a “+” sign appears, then key in the country code, the area code and the phone number accordingly.
2. Press  to place the call.
3. Press  or  (End) to end an active call or stop dialing.

⌘ Example:

For international call, in idle mode, key in + 8 8 6 2 2 2 6 8 2 0 8 1 and press  to make the phone call.



## Making calls via the Phone Book

1. Press  to enter into phone book.
2. Scroll  to choose one entry to dial.
3. Press  to dial.

## Redial calls missed, received and dialed




The last 10 phone calls dialed, received or missed are stored in the phone's memory. Use either of the following methods for dialing

⌘ Making calls via the menu:




1. Press  to enter into menu, then press  to enter into “Records”.
2. Select “Missed” to view the last unanswered incoming call list; select “Received” to view the recently answered

# Basic Call Operations



call list; select “Dialed” to view the recently dialed calls.

3. Scroll to one record with .
4. Press  to dial or press  (Select) to carry out another operation such as “Save”, “Delete” or “Delete All”.


## ☞ Making calls quick and easy

1. When in idle mode, press  to access the call record.
2. Scroll through the missed, dialed, answered list for the desired number with .
3. Press  to dial the number.

## Speed dialing







When in idle mode, hold down the corresponding alphanumeric  keys (  to), to dial the preset speed dial numbers. Ensure that you have entered the settings in “Speed Dial”.

## Listening to voice message

When in idle mode, dial the voice mailbox number provided by the network operator or press and hold  to access the voice mailbox directly.

! Obtain your voice mailbox number from your network operator, and ensure that the number has been entered in the “Voice Mailbox Number” option.




## Answering calls

1. Press  or  (Accept) to answer an incoming call.
2. Press  or  (End) to end the call.
3. Press  or  (Reject) to refuse an incoming call.

☞ If you have activated the “When Busy” function in Call Divert, any incoming calls will be diverted to the specified number while you are on a call. For example, you may divert incoming calls to your voice mailbox. If you have rejected an incoming call, the call will be diverted too. Please refer to “Call Divert”.



## Call waiting

If call waiting function is activated, you may answer a new incoming call while already on line.


1. If there is an incoming call while already on line, a tone will be heard and a “Call Waiting” message and the caller information will be displayed on the screen.
2. Press  (Accept) to answer the new call. The active call will be automatically switched to hold.
3. Press  (Reject) or press  and select “Reject Waiting” to reject the new

# Basic Call Operations

call.

**!** *The call waiting function allows you to manage up to two calls simultaneously (1 active, 1 on hold). To answer the third incoming call, end one of the active calls, or establish a multiparty call for the two online calls and press  to answer the third call. Press  to reject the new incoming call.*

## In-call menu

During a call, you can access the In-call menu by pressing  (Menu). Some of the options listed in In-call menu may not be available at a given time and vary depending on your network operator.

1. **Mute**: Mutes the mobile phone, the party on the phone will not hear you.
  2. **Mute Off**: Cancels the mute function, the party on the phone will hear you.
  3. **Hand Free**: Enables users to talk without holding the phone.
  4. **Hold**: Places an active call on hold.
  5. **Send SMS**: Sends short messages to other party during calls. For details of this operation, refer to “Messages”.
  6. **Names List**: Enables users to check or edit the data in Phone book during a call. For details of this operation, refer to “Phone Book”
  7. **Send DTMF Tone**: Activates or deactivates the DTMF tone.
  8. **Build Multiparty Call**: Starts a multiparty conference call with up to 6 participants. For details of this function, refer to “Multiparty”.
  9. **Accept Waiting**: Answers a new incoming while you are on the phone.
  10. **Reject Waiting**: Rejects a new incoming while you are on the phone.
  11. **End Active Call**: Disconnects the active call when there are two lines on the phone (1 active, 1 on hold).
  12. **Swap**: Switch between active calls and calls on hold when in call waiting mode.
  13. **End Held Call**: Ends the call on hold.
  14. **Recover**: Resumes the conversation with the call on hold.
  15. **Call divert**: Transfers the call to another phone number.
- ⌘ When the multiparty conference call function is activated, the phone gives you access to some specific functions. The availability depends on your network operator.
16. **Filter One Call In Party**: Chooses a participant from the multiparty conference call for a private conversation.
  17. **End One Call In Party**: Terminates the connection with one of the participants from the multiparty conference call.
  18. **Hold Multiparty Calls**: Places the current multiparty conference call on hold.
  19. **Retrieve Multiparty Calls**: Resumes conversation with the multiparty conference call on hold.
  20. **End Held MPTY**: Ends the multiparty conference call on hold.