

# CAUTION-ELECTRIC TOY:

Not recommended for children under 6 years of age. As with all electric products, precautions should be observed during handling and use to prevent electric shock.

# CAUTION-SUPERVISION REQUIRED-ELECTRIC TOY - UNPLUG WHEN NOT IN USE. INPUT: 120V AC, 60HZ, 10W OUTPUT: 12V DC, 350mA

## OPERATING INSTRUCTIONS

### KEEP PACKAGING AS IT CONTAINS IMPORTANT INFORMATION

#### BATTERY INSTALLATION:

(THE RECHARGEABLE BATTERY PACK IS NOT CHARGED, PLEASE CHARGE IT FOR 2 HOURS PRIOR TO USE)

1. Plug the wall pack battery charger into wall outlet. (See Diagram 1)
2. Click the battery pack into the charger. Make certain the battery pack is secure in charger.
3. To disconnect, push the button of the charger (See Diagram 1) and simultaneously slide battery pack out.
4. You should charge the battery pack for 2 hours.
5. If the speed of the car slows down suddenly, it is time to recharge.
6. After use, the battery pack will be hot! Wait at least 20 minutes until it cools before recharging. Recharging a warm or hot battery pack will greatly shorten the battery life.
7. The toy must be used with the recommended transformer.
8. The transformer is not a toy.

### ATTENTION PARENTS

IT IS RECOMMENDED THAT THIS TOY AND ALL ACCESSORIES BE PERIODICALLY EXAMINED FOR POTENTIAL HAZARDS AND THAT ANY POTENTIALLY HAZARDOUS PARTS BE REPAIRED OR REPLACED.

### CARE

Never drive the vehicle on a wet floor, on sand, grass, carpet, in mud, rain or snow. These can cause damage to the vehicle.  
Do not expose the vehicle to extreme temperatures.  
To protect the vehicle's wheel mechanisms from lint and hair, do not drive it on carpet. Occasionally wipe the vehicle with a damp cloth to keep the wheels clean of dirt and dust.  
Do not use harsh chemicals to clean the vehicle.  
Modifying or tampering with the vehicle or the transmitter's internal components can cause a malfunction.

### HELPFUL HINTS

Running the vehicle continuously for long periods of time generates high levels of heat. Heat causes wear and tear on the motor. When the vehicle's battery pack runs down, let the vehicle cool at least 10 minutes before installing a newly charged battery pack.  
This helps keep heat levels down. If the vehicle's motor runs but does not respond to the transmitter, move the transmitter closer to the vehicle and try again. If a CB radio is used nearby, it might interfere with control of the vehicle. If this happens, move the vehicle and transmitter away from the CB radio.  
The vehicle cannot be operated near devices with transmitters that use the same frequency. Check the packaging to see which frequency your vehicle uses. If the vehicle moves slowly, and a recharged battery pack has been installed, check the wheel mechanisms for lint, thread, hair or dust.

### INSERTING BATTERIES

1. Turn over the vehicle and push the ON/OFF to "OFF" position. (See Diagram 2)
2. Open the battery cover. (See Diagram 2)
3. Insert the 9.6V battery pack into battery compartment. (See Diagram 3)
4. Replace the battery cover.

### TRANSMITTER

1. Unscrew to open the battery lid and insert the 9V/6LR61 battery as per the directions shown inside. (See Diagram 4)
  2. Replace the battery cover.
- Note: Remove battery after you have finished using your vehicle.

## HOW TO PLAY

### START TO PLAY

#### PAIRING TRANSMITTER WITH VEHICLE

1. Turn ON the vehicle (See Diagram 5)
2. Install the 9V/6LR61 battery in the transmitter, the pairing LED light on the transmitter will flash.
3. If pairing success, the pairing LED light will turn OFF
4. You must pairing the transmitter with the vehicle within 45 seconds, after 45 seconds you must push the control on the transmitter to pair again.
5. You must repeat pairing again when the transmitter needs to replace new batteries.

### FORWARD RUNNING

6. Push both the Driving Control Sticks forwards for forward motion. (See Diagram 6)

### REVERSE RUNNING

7. Pull both the Driving Control Sticks backwards for reverse motion. (See Diagram 7)

### STEERING OPERATION

8. Push only the Left Driving Control Stick forwards to turn Right. (See Diagram 8)
9. Push only the Right Driving Control Stick forwards to turn Left. (See Diagram 9)

### 360 DEGREE SPINS

 
10. Push the Left Driving Control Stick forwards while pulling the Right Driving Control Stick backwards at the same time. (See Diagram 10)
11. Push the Right Driving Control Stick forwards while pulling the Left Driving Control Stick backwards at the same time. (See Diagram 11)

### STOP OPERATION

12. Release both Driving Control Sticks, the vehicle will Stop. (See Diagram 12)



**WARNING:**  
**CHOKING HAZARD-**  
Small parts, Not for children under 3 years












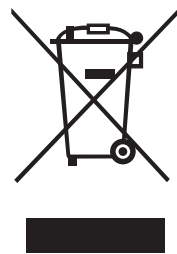


ENGLISH

**EZTEC**  
www.eztec.com

IS A REGISTERED TRADEMARK OWNED BY SCIENTIFIC TOYS, LTD.

            © 2015 SCIENTIFIC TOYS LTD. 1108, TOWER B,  
14 SCIENCE MUSEUM ROAD, TSIMSHATSUI, HONG KONG.  
PRINTED IN CHINA  
O.I. NO.5872

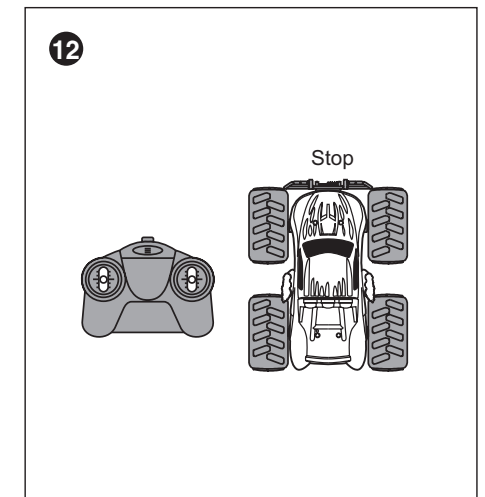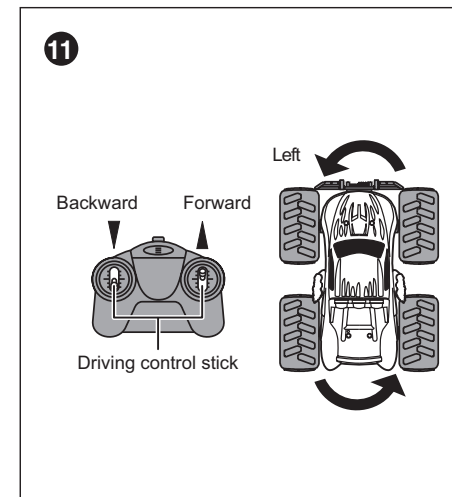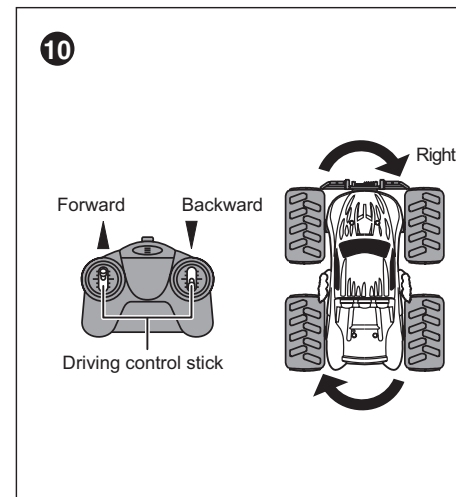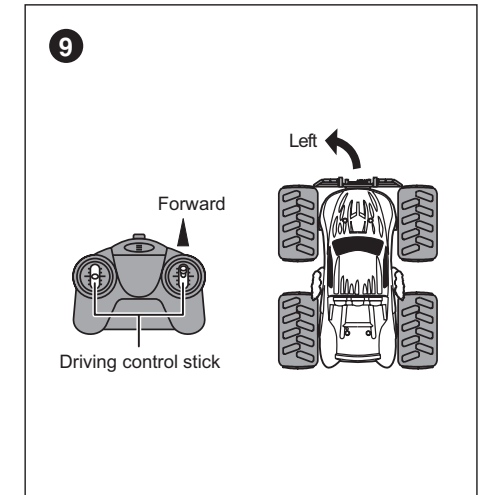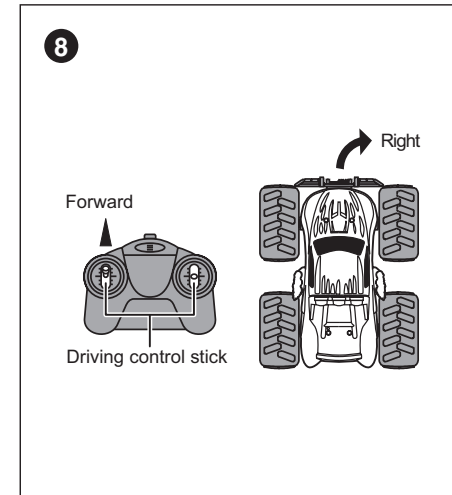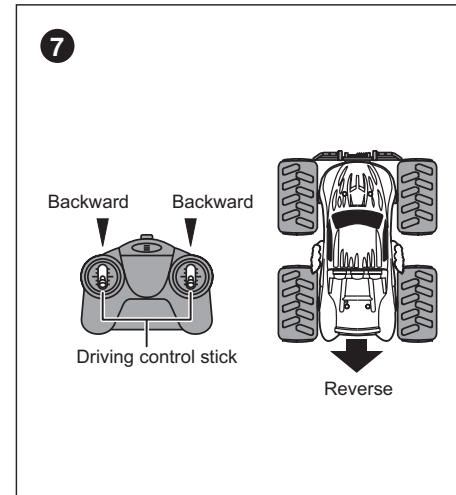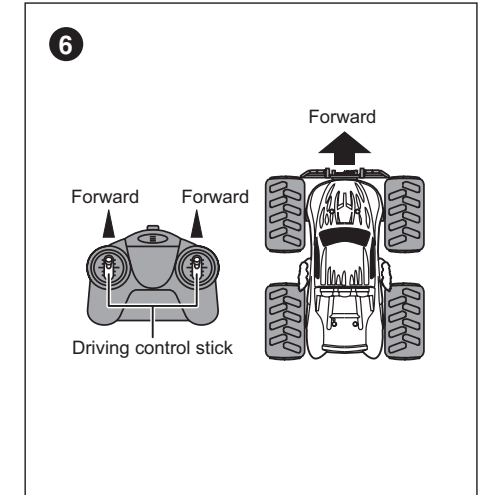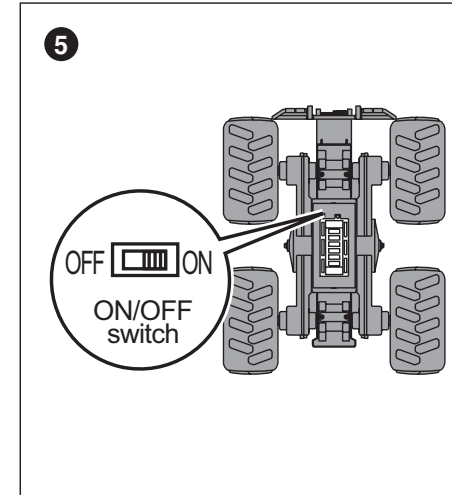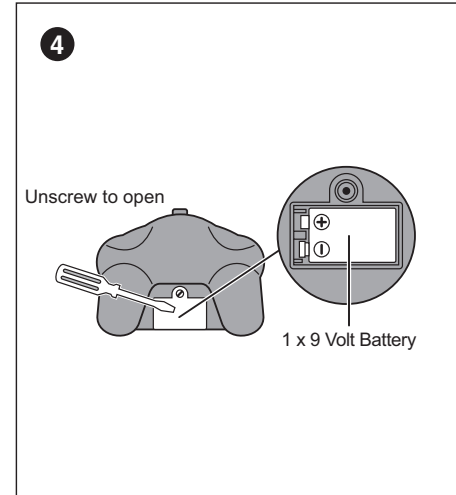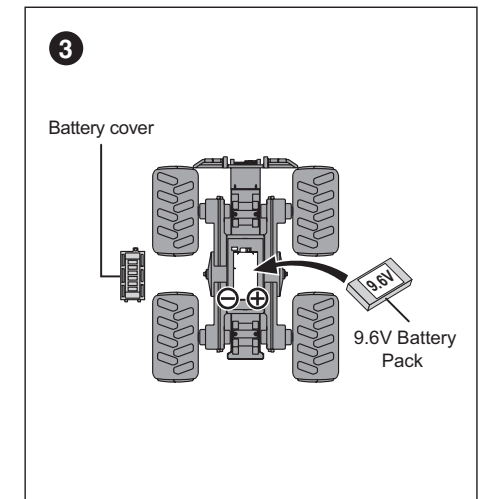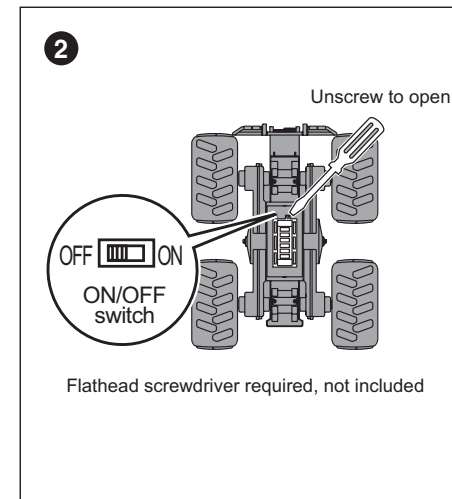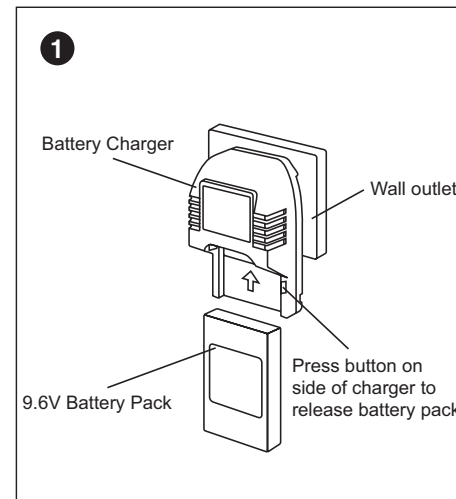

#99078 SIZE:210MM X 297MM PN#65-5872-000-0100