

DIAGRAM #1

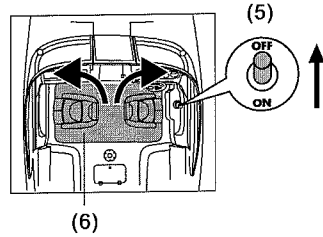


DIAGRAM #2

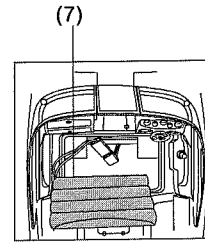


DIAGRAM #3

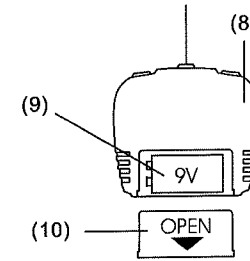


DIAGRAM #4

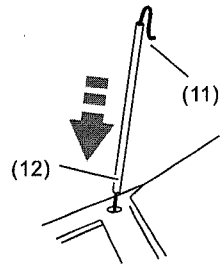


DIAGRAM #5

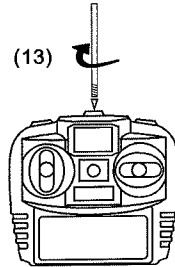


DIAGRAM #6

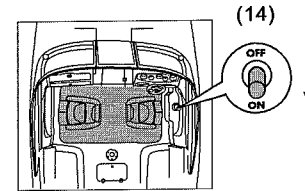


DIAGRAM #7

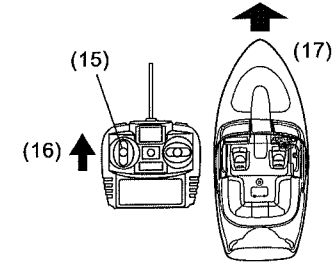


DIAGRAM #8

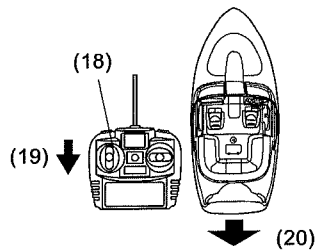


DIAGRAM #9

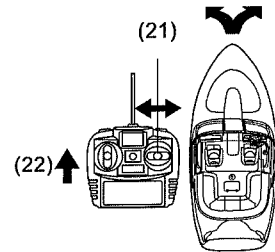


DIAGRAM #10

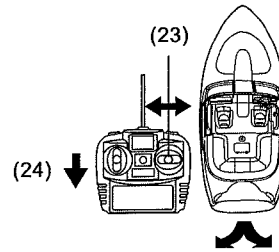


DIAGRAM #11

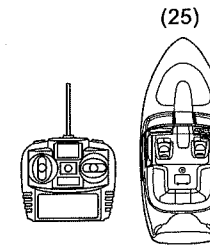


DIAGRAM #12



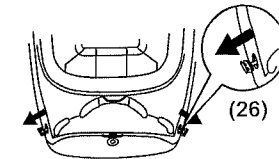


DIAGRAM #13

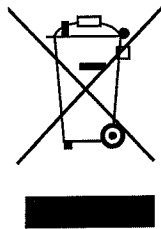

Please retain for future reference

CE 0681 !

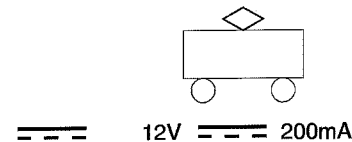

NEXT RETAIL LIMITED
 DESFORD ROAD, ENDERBY,
 LEICESTER LE19 4AT
 O.I. NO.3450

SIZE: 210MM X 148.5MM
 OI PN#65-3450-100-0100

RADIO CONTROLLED YAMAHA BOAT INSTRUCTIONS

ATTENTION PARENTS:

1. IT IS RECOMMENDED THAT THIS TOY AND ALL ACCESSORIES BE PERIODICALLY EXAMINED FOR POTENTIAL HAZARDS AND THAT ANY POTENTIAL HAZARDOUS PARTS BE REPAIRED OR REPLACED.
2. ADULT SUPERVISION IS REQUIRED WHEN PLAYING AROUND WATER.

CONTENTS:

This package contains:

- | | |
|------------------------------------|--|
| - 1 boat | - 2 plastic tube for the antenna cable |
| - 1 transmitter | - 1 antenna for the transmitter |
| - 1 9.6V rechargeable battery pack | - 1 9V battery |
| | - 1 four hours quick charger |

Please note the vehicle uses a 9.6V Rechargeable Battery Pack and the Battery Pack is charged by a Charger.

BATTERY CHARGING

(The rechargeable Ni-Cd battery pack is not charged, please charge it for 8 hours prior to use, then the battery pack can be used for about 15 minutes.)

1. Plug the battery charger into the plug socket.
2. Connect the cables leading from the Battery Pack and the Charger together by snapping the jack and the socket tightly. (See Diagram 1)
3. To disconnect cables, press down on the clip and pull apart. (See Diagram 1)
4. You should charge the battery pack for 8 hours the first two times. Then subsequent charges will only require 4 hours.
5. After charging for 4 hours, the battery will be warm. This condition is normal for fully charged batteries.
6. If the speed of the boat slows down suddenly, it is time to recharge.
7. After use, the battery pack will be hot! Wait at least 20 minutes until it cools before recharging. Recharging a warm or hot battery pack will greatly shorten the use life of the battery.

BATTERY CAUTIONS

- Batteries are to be inserted with the correct polarity (+/-) symbols.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not mix old and new batteries.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before recharging.
- Rechargeable batteries are to be recharged under adult supervision.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- Do not expose batteries to direct heat, let them become shorted or try to take apart.
- To avoid damage caused by leakage of battery fluid, replace the batteries every two years regardless of how much the unit has been used during that time.

- Do not charge battery pack that is hot, wet or shows signs of leakage or corrosion.
- Overcharging can damage the battery pack, Charge according to recommended time, Do not dispose of batteries in fire.
- Do not disassemble the battery pack.
- Do not dispose of batteries in fire.

HOW TO INSTALL BATTERY IN BOAT

1. Push the ON/OFF to "OFF" position. (See Diagram #2)
2. Open the battery cover by turning the seats sideways. (See Diagram #2)
3. Plug the jack of the boat into the socket of the Battery Pack just like Diagram 1. (See Diagram #3)
4. Place the Battery Pack inside the battery compartment properly.
5. Replace the battery cover and slide back.
6. Plug. (See Diagram #3)

HOW TO INSTALL BATTERY IN TRANSMITTER

1. Slide to open the battery cover at the back of the transmitter and place a new 9V battery inside following the correct polarity +/- . (See Diagram #4)
 2. Replace the battery cover.
- Note: Remove battery after you have finished using your boat.

HOW TO PLAY:

1. Route the cable through the antenna tube provided and Plug into the boat securely. (See Diagram 5)
2. Screw the antenna on the top of the transmitter and extend to full length. (See Diagram 6)
3. Push the power button to "ON" position to turn on boat. (See Diagram 7)
4. Place the boat in water.

BOAT OPERATION:

5. Push the transmitter driving control stick forward to move the boat forward. (See Diagram 8)
6. Pull the transmitter driving control stick backward to move the boat in reverse. (See Diagram 9)
7. To turn the boat to either right or left, turn the steering control stick left or right and push the driving control stick forward or backward simultaneously. (See Diagram 10 & 11)
8. Release both control sticks and the boat will come to a stop. (See Diagram 12)

PERFORMANCE TIPS / CAUTIONS:

1. Operate your boat in calm and clear water only.
2. Do not operate your boat in salt water as this can damage your boat permanently.
3. Do not expose the transmitter to moisture or water.
4. Do not expose the boat to water unless the battery compartment cover is securely closed and latched.
5. Bring the boat back to the water edge when it is running out of battery or starts to slow down.
6. Note that the approximate operation range averages 20 meters.

7. Do not pick up your boat while it is in motion.
8. The propeller rotates at high speed. Keep fingers, hair and clothing clear of the propeller while the propeller is spinning.
9. After playing, drain the water out of the hull by pulling out the two plugs located at either side of the back of the boat. Replace the plugs before using again.
10. Do not operate near swimmers.
11. Stay away from water edge when operating.
12. Dry the boat with a dry, clean cloth before storing.
13. To be operated under adult supervision.
14. Please retain the instructions for future reference.

FCC NOTE:

THE ANTENNA PROVIDED IS A UNIQUE ANTENNA. BY INSTALLATION OF UNAUTHORIZED ANTENNA TO THIS EQUIPMENT. SUCH UNAUTHORIZED INSTALLATION COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT. THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

(Diagram #1)	<1>	Press here when disconnecting
	<2>	Wall outlet
	<3>	Battery charger
	<4>	9.6V. Ni-Cd battery pack
(Diagram #2)	<5>	"ON/ OFF" switch
	<6>	Seats
(Diagram #3)	<7>	9.6V. Ni-Cd battery pack and compartment
(Diagram #4)	<8>	Back panel of transmitter
	<9>	9V battery
	<10>	Battery cover
(Diagram #5)	<11>	Cable
	<12>	Antenna tube
(Diagram #6)	<13>	Transmitter antenna
(Diagram #7)	<14>	"ON/OFF" switch
(Diagram #8)	<15>	Driving control stick
	<16>	Forward
	<17>	Forward
(Diagram #9)	<18>	Driving control stick
	<19>	Backward
	<20>	Reverse
(Diagram #10)	<21>	Steering control stick
	<22>	Forward
(Diagram #11)	<23>	Steering control stick
	<24>	Backward
(Diagram #12)	<25>	Stop
(Diagram #13)	<26>	Plug

SIZE: 210MM X 148.5MM
OI PN#65-3450-100-0100