

OPERATING INSTRUCTIONS:

BATTERY LOADING:

(FOR MAXIMUM PERFORMANCE, ONLY USE ALKALINE BATTERIES)

Remember to take out all batteries from the vehicle and transmitter after playing.

1. Do not mix old and new batteries.
2. Do not mix alkaline, standard (Carbon-Zinc), or rechargeable (Nickel-Cadmium) batteries.

 
BATTERY INSTALLATION

VEHICLE

1. Make sure the ON/OFF switch of the vehicle is at the OFF position (See Diagram 1).
2. Open the battery lid (See Diagram 1).
3. Take out the battery pack. Insert batteries by matching (+) and (-) sign as indicated in the battery pack (See Diagram 2). Only uses alkaline batteries.
4. Snap the battery pack into the battery compartment with the contacts as shown (See Diagram 2). Replace the battery lid (See Diagram 3).

TRANSMITTER

1. Remove battery cover and install 9 'V' battery by matching (+) and (-) sign as indicated in the battery compartment (See diagram 4).
2. Replace the battery cover.

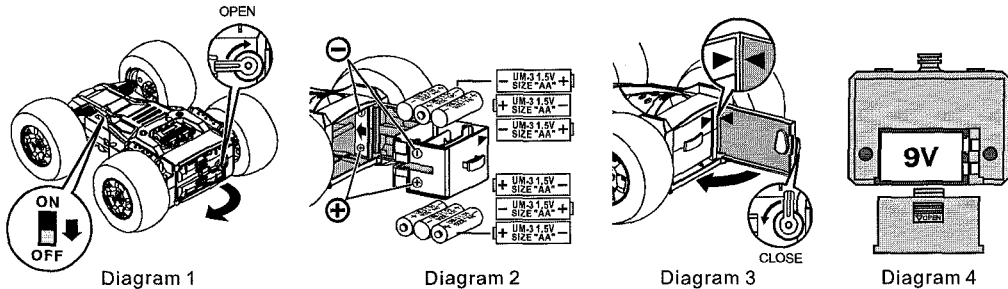

HOW TO PLAY

START TO PLAY

1. Push the ON/OFF switch to the "ON" position of the vehicle. (See Diagram 5).

FORWARD RUNNING

 
2. Push the Driving Control Stick forward for forward running. (See Diagram 6).

REVERSE RUNNING

3. Pull the Driving Control Stick backward for reverse running. (See Diagram 7).


STOP OPERATION

4. Release the Driving Control Stick to stop the vehicle. (See Diagram 8).

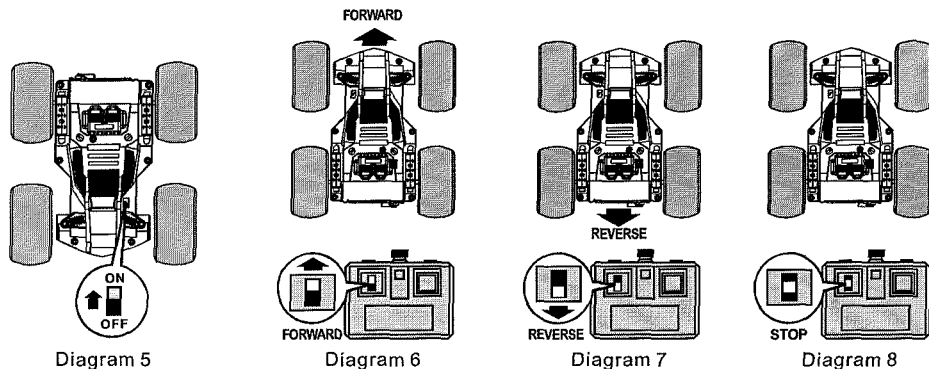

RAMP CLIMB / FLIP OVER

 - (• FOR BEST PERFORMANCE, ONLY USE ALKALINE BATTERIES.)
- (• PERFORMANCE MAY VARY ON DIFFERENT SURFACES.)

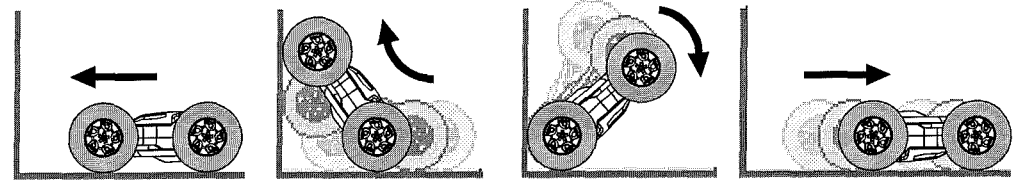

PERFORMANCE TIPS:

- Don't drive in grass, sand or carpet.
- Don't go through water.
- Use fresh alkaline batteries.
- Be sure to rest your vehicle for at least 30 minutes after every 15 minutes of operation.
- Make sure ON/OFF switch on your vehicle is OFF when not in use.
- Don't bend antenna.
- Electrical, CB interference, mobile phones, air conditioning, elevators and steel girders in building will affect the operation of your vehicle.
- Don't leave the vehicle or transmitter near sources of heat or under direct sunlight for long periods of time.
- Remove the batteries from the vehicle and transmitter when not in use.

BATTERY CAUTIONS

1. Do not mix old and new batteries.
2. Do not mix alkaline, standard (Carbon-Zinc), or rechargeable (Nickel-Cadmium) batteries.
3. Do not charge non-rechargeable batteries.
4. Remove rechargeable batteries from the toy before recharging.
5. Rechargeable batteries are to be recharged under adult supervision.
6. Different types of batteries, new and used batteries are not to be mixed.
7. Only batteries of the same or equivalent type as recommended are to be used.
8. Batteries are to be inserted with the correct polarity.
9. Exhausted batteries are to be removed from the toy.
10. The supply terminals are not to be short-circuited.

FCC NOTE:

THE ANTENNA PROVIDED IS A UNIQUE ANTENNA. BY INSTALLATION OF UNAUTHORIZED ANTENNA TO THIS EQUIPMENT. SUCH UNAUTHORIZED INSTALLATION COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:

- (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND
- (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRABLE OPERATION.

9V --- 1.8A

CE 0681



© 2007 SCIENTIFIC TOYS, LTD.
CHAI WAN, HONG KONG
PRINTED IN CHINA
O.I.NO. 3871