

STEERING OPERATION

- F. To make left or right turns while driving forward, turn the **STEERING CONTROL** stick to left or right while pushing the **DRIVING** stick forward at the same time. (See Diagram 10)

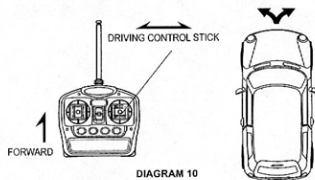


DIAGRAM 10

- G. To turn left or right while driving reverse, turn the **STEERING CONTROL** stick to left or right while pulling the **DRIVING** stick backward at the same time. (See Diagram 11)

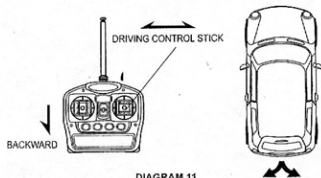


DIAGRAM 11

FRONT WHEELS STEERING ADJUSTMENT

- H. If the vehicle does not run straight forward, adjust the **LEVER** for satisfactory alignment on the underside of the vehicle. (See Diagram 3)
- I. If the vehicle runs toward left, turn the **STEERING ALIGNMENT** lever towards "R".
- J. If the vehicle runs toward right, turn the **STEERING ALIGNMENT** lever towards "L".

STOP OPERATION

- K. Release both **CONTROL** sticks to stop the vehicle.

Feature Detail

FORWARD:

- 3 different speeds from slow to fast by pressing the **GEAR** button on the Remote Control. See detail in section "GEAR"
- 3 engine sounds depending on the gear.
- the brake light comes "ON" when the vehicle stops.

REVERSE:

- activate the backward signal sound.
- the brake light comes "ON" when the vehicle stops.

LEFT & RIGHT SIGNAL LIGHTS:

- the signal light will flash when the vehicle turns left or right.

HORN:

- press the **HORN** button on the Remote Control to activate the vehicle's horn. (See Diagram 6)

HEAD LIGHT

- press the **LIGHT** button on the Remote Control to activate the vehicle's head lights. (See Diagram 6)

GEAR:

- there are 3 level of speeds from slow to fast, press the **GEAR** button on the Remote Control to change speeds. (See Diagram 6)
- the speed indicator lights up with a different color to identify the speed (See Diagram 12):

RED - SLOW
YELLOW - MEDIUM
GREEN - FAST

REMOTE CAR LOCK SYSTEM:

- press the **LOCK** button on the Remote Control to "lock" the car and "turn off" the engine (See Diagram 6). The lock indicator will flash (See Diagram 12).
- the vehicle cannot be operated while the car is "locked". (Note: the battery pack will continue to drain unless the car is switched off by using the **ON/OFF** switch.)
- to "unlock" the vehicle and begin operations again, press the **LOCK** button once more to turn on the engine.
- if the vehicle does not respond to the unlock command, check to see if the **ON/OFF** switch is at the "ON" position. If there is still no response, recharge the battery pack of the vehicle and/or replace the batteries of the Remote Control!

REALISTIC DESIGN

- pull to open the functional doors to access the working seat-belts at the front seats. (See Diagram 12)
- lift the hood to see the realistic engine. (See Diagram 12)
- lift to open the tailgate trunk. (See Diagram 12)
- there is enough room to fit a 12 inch doll or action figure.