



A. AUTO POWER OFF
B. FREQUENCY DISPLAY

C. LOW BATTER INDICATOR

OPERATION

Tuning:

- 1. Press the POWER button to turn on the TRANSMITTER.
- 2.A single press of the Up or Down tuning button will change The frequency up or down.



Specifications

Type: FM-Stereo TRANSMITTER

Output Power: 250 μ V MAX

Batteries: 3 volt(AAA/UM-4 size)X2

Dimension (WxHxD): 82x90x33mm

Weight: 128g

Notice: The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.