

1. Apply Audio Signal 400mVrms into the FM Stereo transmitter.
2. Select the frequency to transmit. Tested Frequencies: 88.3MHz, 98.0MHz, 107.7MHz.