

# DX200

## Wireless Intercom



## Operating Instructions



**HM ELECTRONICS, INC.**  
14110 Stowe Drive, Poway, CA 92064 USA

## Table of Contents

<b>SECTION 1. INTRODUCTION.....</b>	<b>1</b>
EQUIPMENT IDENTIFICATION.....	2
<b>SECTION 2. EQUIPMENT SETUP .....</b>	<b>3</b>
BATTERY CHARGER SETUP.....	3
Connect AC Adapter.....	3
Charge Batteries.....	3
BASE STATION SETUP .....	4
Equipment Connections .....	4
BELTPAC SETUP AND REGISTRATION.....	5
Set Up Beltpacs.....	5
Register Beltpacs .....	5
INTERCOM AND AUXILIARY EQUIPMENT SETUPS .....	7
2-Wire Intercom.....	7
4-Wire Intercom.....	7
Auxiliary Equipment.....	8
8-Ohm Speaker.....	8
Multiple DX200 Units.....	8
<b>SECTION 3. EQUIPMENT OPERATION.....</b>	<b>9</b>
BASE STATION OPERATION .....	9
Front Panel Controls, Indicators and Connector .....	9
BELTPAC OPERATION .....	11
Beltpac Controls and Indicator Lights.....	11
Batteries .....	12
<b>SECTION 4. TROUBLESHOOTING.....</b>	<b>13</b>
<b>SECTION 5. TECHNICAL DATA .....</b>	<b>14</b>
EQUIPMENT SPECIFICATIONS.....	14
Base Station.....	14
Beltpac .....	15
BLOCK DIAGRAM.....	16
DX200 Base Station.....	16
APPENDIX A: BATTERY CHARGER 230 VOLT AC ADAPTER CONNECTIONS.....	17

Illustrations in this publication are approximate representations of the actual equipment, and may not be exactly as the equipment appears.

HM Electronics, Inc. is not responsible for equipment malfunctions due to erroneous translation of its publications from their original English version.

### FCC NOTICE

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communication. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at his own expense.

Changes or modifications not expressly approved by HM Electronics, Inc. could void the users authority to operate this equipment.

### MANDATORY SAFETY INSTRUCTIONS FOR INSTALLERS AND USERS

Use only manufacturer or dealer supplied antennas.

The Federal Communications Commission has adopted a safety standard for human exposure to RF (Radio Frequency) energy, which is below the OSHA (Occupational Safety and Health Act) limits.

The term "IC:" before the certification/registration number only signifies that the Industry Canada technical specifications were met.

**Base Station Antenna minimum safe distance:** 7.9 inches (20 cm) at 100% duty cycle.

**Base Station Antenna gain:** This device has been designed to operate with an antenna having a maximum gain of up to 7dBi.

**Antenna mounting:** The antenna(s) used for the base transmitter must be installed to provide a separation distance of at least 7.9 inches (20 cm) from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.

**Antenna substitution:** Do not substitute any antenna for the one supplied by the manufacturer or radio dealer. You may be exposing person or persons to excess radio frequency radiation. You may contact your radio dealer or the manufacturer for further instructions.

**WARNING:** Maintain a separation distance from the base station transmit antenna to a person(s) of at least 7.9 inches (20 cm) at 100% duty cycle.

You, as the qualified end-user of this radio device must control the exposure conditions of bystanders to ensure the minimum separation distance (above) is maintained between the antenna and nearby persons for satisfying RF exposure compliance. The operation of this transmitter must satisfy the requirements of Occupational/Controlled Exposure Environment, for work-related use. Transmit only when person(s) are at least the minimum distance from the properly installed, externally mounted antenna.

Hereby, HM Electronics, Inc. declares that the DX200 is in compliance with the essential requirements and other relevant provisions of R&TTE Directive 1999/5/EC.



This product operates in the 2400 to 2483.5 MHz frequency range. The use of this frequency range is not yet harmonized between all countries. Some countries may restrict the use of a portion of this band or impose other restriction relating to power level or use. You should contact your Spectrum authority to determine possible restrictions.

## SECTION 1. INTRODUCTION


The DX200 provides private, secure communication. Each base station can have up to fifteen Beltpacs “registered” to it. Four of the fifteen Beltpacs can transmit at the same time. However, by connecting two or more base stations together, these numbers can be increased. For example, two base stations can support thirty Beltpacs, of which eight can transmit at the same time. Beltpacs can be used either in the push-to-talk or hands-free mode. The base station operator can stop any Beltpac from transmitting.

The DX200 can be used with RTS® and Clear-Com® cabled intercom systems. On the intercom channel, 2-wire and 4-wire cabled intercoms can be operated at the same time. Also, using the AUX In and AUX Out connections, a second 4-wire intercom channel can be used.

Either a monitor speaker or a local headset can be used with the DX200. Using a local headset, the base station operator can talk to crew members on the cabled intercom channel, Beltpacs only or all channels.

The base station can be operated using standard DC electricity or a vehicle electrical system for mobile operation. A power adapter and cable are included with the base station.

### System Usage Example

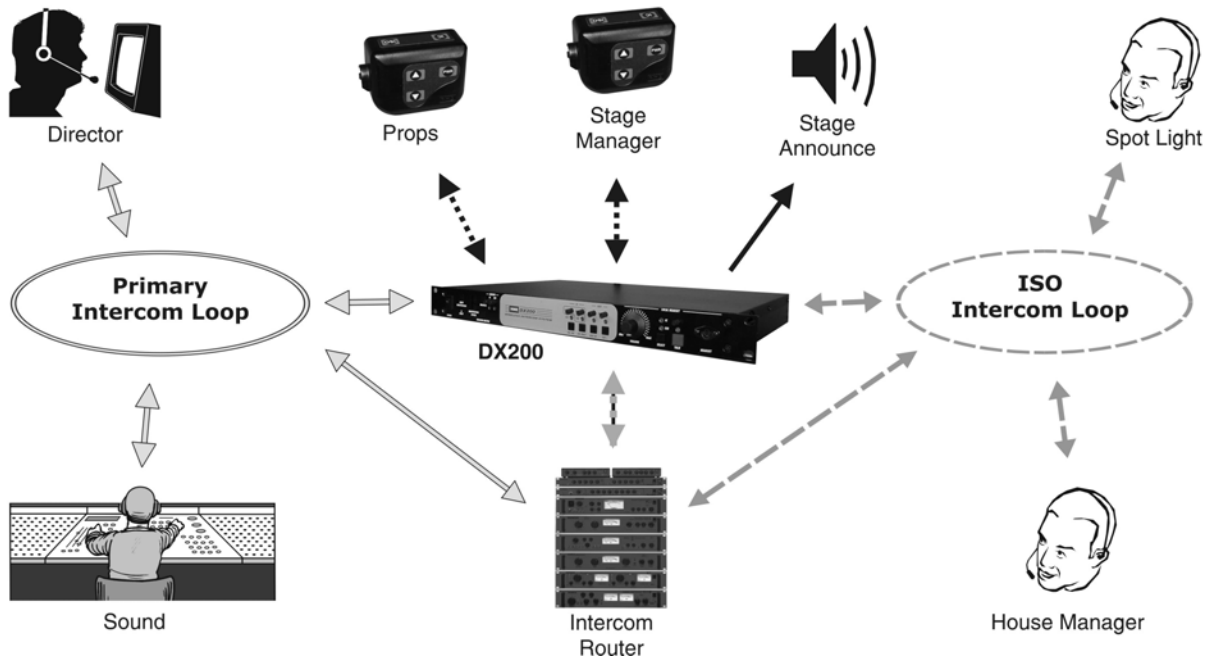

*w/Hand* 4/20/05

## EQUIPMENT IDENTIFICATION

The following equipment is standard with the DX200 Wireless Intercom System.  
As you unpack the equipment, check the packing list to be sure you received all items listed.



BS200 Base Station



115/230 Volt AC Power Supply  
(1 per Base Station, with Power Cables)



Base Station Antennas  
(2 per Base Station)



BP200 Beltpac



Beltpac Pouch



Beltpac Battery



HS11 Headset



AC40 Battery Charger



AC Power Adapter  
(1 per Battery Charger)

### OPTIONAL EQUIPMENT

**HS4-3** Single Earpiece & Lapel Microphone

**HS14** Single-Muff Medium-Weight Headset

**HS20-3** Dual-Earpiece Lightweight Headset

#### XLR Headset Adapters:

**MD-XLR4M** Mini-DIN to 4-Pin Male

**MD-XLR4F** Mini-DIN to 4-Pin Female

**MD-XLR5F** Mini-DIN to 5-Pin Female


## SECTION 2. EQUIPMENT SETUP

### BATTERY CHARGER SETUP

**IMPORTANT!** – Before installing the system, connect the AC adapter to the battery charger and plug it into an electrical outlet. Charge all the Beltpac batteries while the other equipment is being installed. Charging time is about 2.5 hours.

#### Connect AC Adapter

- Connect the battery charger cable to the AC adapter as shown to the right. Match the wires labeled **AC** and **GND** to the terminals on the adapter with the same labels.
- Plug the adapter into an electrical outlet.

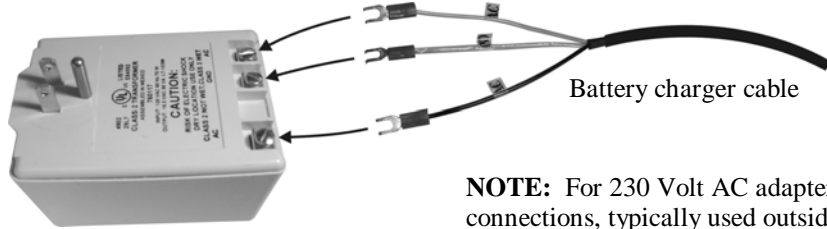

16.5 Volt AC adapter


**NOTE:** For 230 Volt AC adapter connections, typically used outside the U.S.A., refer to Appendix A.

The red lights on the charger will come on and go off, and then the yellow lights will come on and stay on.

#### Charge Batteries

Up to four batteries can be charged in the battery charger at the same time. The battery status lights next to each charging port are explained below. Up to six fully charged batteries can be stored in the battery storage ports.

- Insert a battery in each of four charging ports until it clicks in place.
- A yellow light next to each charging port stays on while the port is empty. When a battery is in a charging port, a flashing yellow light next to it indicates CHARGE PENDING, which means the battery is too hot. Adjust the room temperature or move the charger to a cooler area. When a battery is in a charging port, a yellow light on steady next to it means CHARGE FAILED. If this happens, follow the instructions on the side of battery charger.
- A red CHARGING light next to a battery port stays on while a battery in the port is charging. A green READY light next to a battery port goes on when a battery in the port is fully charged.

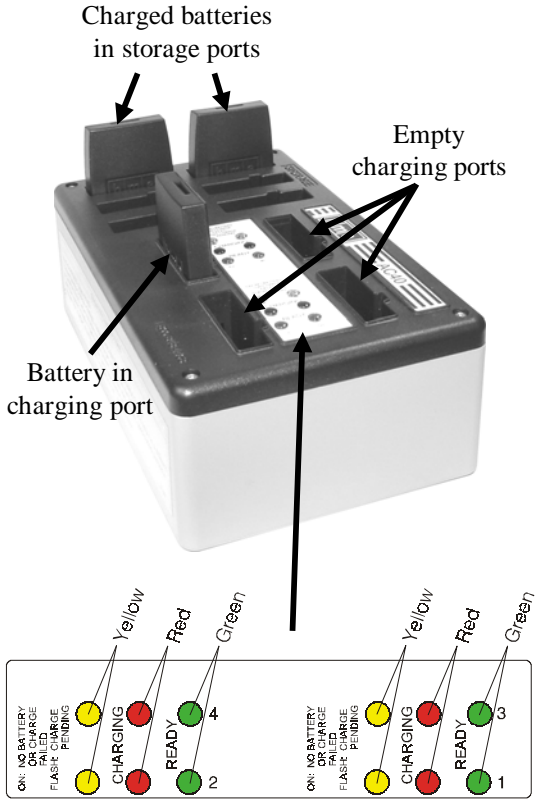


Store fully charged batteries in storage ports. Batteries should not be left in charge ports after being fully charged. If a battery is left in a charge port for more than three weeks, the yellow indicator may light up. In this case, it does not indicate a faulty battery.

*w/Hand* 4/20/05

## BASE STATION SETUP

The following description is for a basic, stand-alone DX200 system setup. Connections with 2-wire and 4-wire intercoms, and other auxiliary equipment are described in the INTERCOM AND AUXILIARY EQUIPMENT SETUPS on pages 7 and 8.

### Equipment Connections

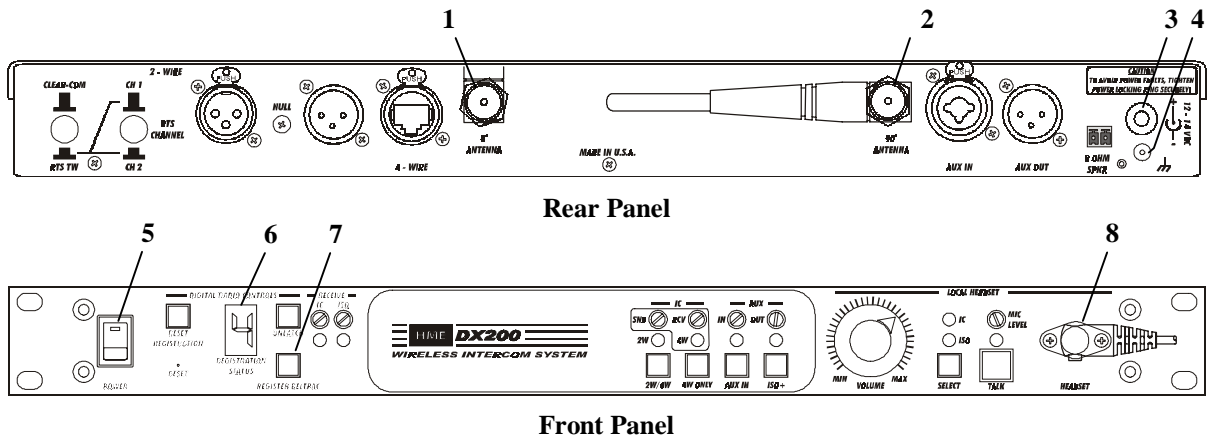

The numbers (#\_) below refer to items on the illustrations above.

- Step 1.** Connect the two enclosed antennas to the antenna connectors (#1 and #2) on the rear panel of the base station. Position the antenna at the **0° ANTENNA** connector (#1) vertically. Position the antenna at the **90° ANTENNA** connector (#2) horizontally, pointing to the left as indicated on the panel. Turn the sleeve on each of the antenna connectors clockwise to tighten them securely in place.
- Step 2.** Plug the connector at the end of the AC power supply cord into the **12-14VDC** power connector (#3) on the rear panel of the base station. Turn the nut on the cable connector clockwise to secure it to the base station. Plug the large female connector at one end of the AC power cord into the power supply. Plug the other end of the AC power cord into an electrical outlet.
- Step 3.** Connect a grounding wire from #4 to an earth ground.
- Step 4.** Plug a headset into the **HEADSET** connector (#8) on the front panel of the base station.
- Step 5.** Press the **POWER** switch (#5) to turn on the base station. The red light on the switch should go on.

## BELTPAC SETUP AND REGISTRATION

The first time you operate the DX200 system, you must register each Beltpac for use with a specific base station. The base station will then recognize all registered Beltpacs when their power is on, and will know the difference between them and other electronic equipment operating on the same frequencies. If a Beltpac is added or replaced later, the new one must be registered and the old one remains in memory. A maximum of 15 Beltpacs can be registered to a single base station at one time.

---

### Set Up Beltpacs

Before registering them, set up all Beltpacs as follows.

**Step 1.** Insert a fully charged battery in the Beltpac, with the metal contacts on the end of the battery inserted first. Press it in until it snaps.



**Step 2.** Place the Beltpac in the pouch.



**Step 3.** Plug the headset cable connector into the Beltpac.



---

### Register Beltpacs

Beltpacs must be within 6 feet (1.83 meters) of the base station while you are registering them. Be certain the base station power is on, and each Beltpac you are going to register is turned off before you begin. Beltpacs that are already registered can be on or off.

**Step 1.** Put the headset, of the Beltpac being registered, on your head.

**Step 2.** Press the **REGISTER BELTPAC** button on the front panel of the base station (#7 on base station front panel illustration).

- The **REGISTRATION STATUS** display (#6 on base station front panel illustration) will show a small "o" for open.

**NOTE:** If you wait too long before going on to Step 3, the base station will go out of the registration mode and you will have to repeat Step 2.

**Step 3.** Press and hold the **ISO** button on the Beltpac while you press and release the **PWR** (power) button to turn the unit on, then release the **ISO** button. This will cause the Beltpac to enter the registration mode.

- The two power lights at the corners of the Beltpac near the **IC** and **ISO** buttons will begin blinking red, then will blink green two or three times and go off.
- **Wait!** There may be a short delay.



#### If registration is successfully completed:

- A voice message in the headset will say "Power on, Beltpac #, Version #, Begin registration, Registration complete, ..."
- After a delay of up to 15 seconds, the **REGISTRATION STATUS** display will show the ID number assigned to this Beltpac for about 10 seconds.  
**NOTE:** ID numbers are assigned sequentially as 0 thru 9, A, b, C, d and E.
- The power light on the Beltpac, next to the **IC** button, will remain on steady green.
- **Repeat Steps 1 to 3 above for each Beltpac to be registered.**



w/Hand 4/20/05

**If registration failed:**

- A voice message in the headset will say “Power on, Beltpac #, Version #, Begin registration, ...” Both power lights on the Beltpac will be blinking red, and there may be a delay of up to 90 seconds before you hear “Registration failed.”
- Press the **RESET** button on the base station. To press the **RESET** button, insert a small paper clip or similar object into the **RESET** hole at the lower-left corner of the base station front panel. When the **REGISTRATION STATUS** display becomes blank, press the **REGISTER BELTPAC** button and register the Beltpac again. If registration fails again, call your dealer for assistance.


**If you try to register more than 15 Beltpacs:**

- An **F** will appear on the **REGISTRATION STATUS** display on the base station and you will hear “Registration failed” in the headset.
- Clear all current registrations by pressing the **RESET REGISTRATION** button and the **RESET** button at the same time. To press the **RESET** button, insert a small paper clip or similar object into the **RESET** hole at the lower-left corner of the base station front panel. Continue holding the **RESET REGISTRATION** button after you release the **RESET** button, until the clear code “c” (lower case) appears on the **REGISTRATION STATUS** display.
- Register all active Beltpacs, one at a time. Previously registered Beltpacs must be re-registered.

**NOTICE****You have completed the stand-alone system setup.**

The instructions under INTERCOM AND AUXILIARY EQUIPMENT SETUPS on the following pages are for setting up additional equipment which you may want to use with your DX200, such as a 2-wire intercom, 4-wire intercom, an external speaker or other auxiliary audio equipment. Instructions are also provided for daisy-chaining two or more base stations together.

## INTERCOM AND AUXILIARY EQUIPMENT SETUPS

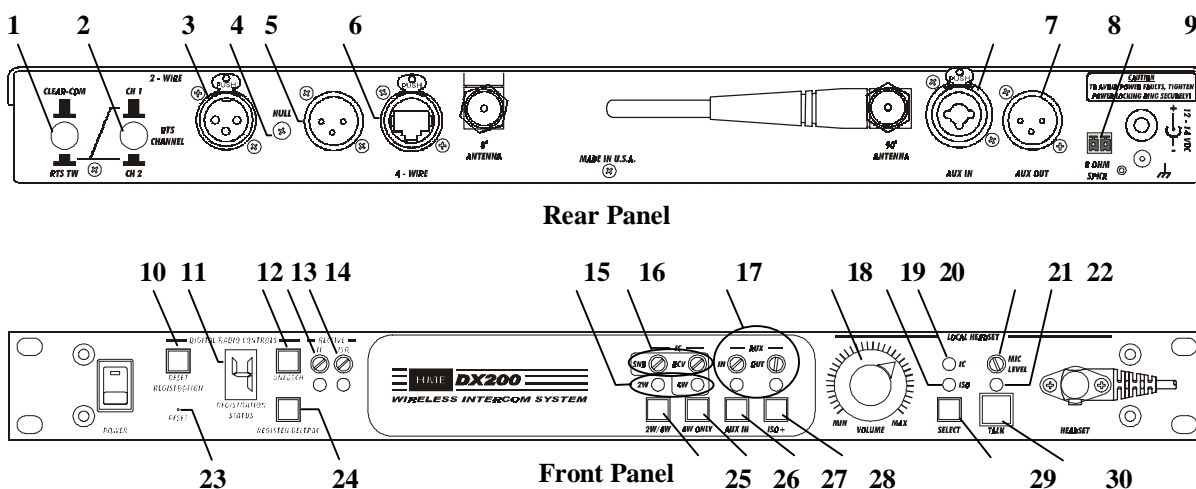

The numbers (#\_) below refer to items on the illustrations above.

### 2-Wire Intercom

- Step 1.** If using a 2-wire intercom, plug it into the base station at #3 or #5, depending on whether a male or female connection is required.
- Step 2.** Depending on whether you are using a Clear-Com® or RTS® compatible 2-wire intercom system, position the **CLEAR-COM / RTS TW** button (#1) as follows:  
 In position = RTS® Mode                      Out position = Clear-Com® Mode
- Step 3.** If you selected **RTS TW**, position the **RTS CHANNEL** select button (#2) to the desired channel as follows:  
 Out position = Channel 1                      In position = Channel 2
- Step 4.** Press the **2W/4W** button (#25) on the front panel of the base station. The **2W** and **4W** lights (#15) above the button should go on. Turn the Beltpac power on. Press the **IC** button on the Beltpac pressed and speak into the headset microphone. You will hear a delayed echo of your voice. Adjust the **NULL** control (#4) with a small screwdriver while you are speaking, until the echo is eliminated.


### 4-Wire Intercom

- Step 1.** If using only a 4-wire intercom, plug it into the **4-WIRE** connector (#6).
- Step 2.** Press the **4W ONLY** button (#26). The **4W** light (#15) above the button should go on.
- Step 3.** Adjust the 4-wire intercom send and receive levels with the **SND** and **RCV** controls (#16).

Pin designations for the RJ45

**4-WIRE** connector are as follows:

Pins 1, 2, 7 & 8 = N/C
Pin 3 = Intercom Out +
Pin 4 = Intercom In +
Pin 5 = Intercom In -
Pin 6 = Intercom Out -

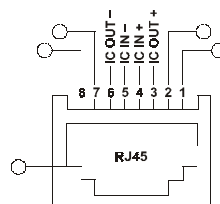

**NOTE:** If no 2-wire intercom will be used, you must press the **4W ONLY** button (#26), or a squeal will be heard in the headsets.


The numbers (#\_) below refer to items on the illustrations on page 7.

## Auxiliary Equipment

**Step 1.** If using auxiliary equipment, such as another intercom, a CD player or other audio source, connect its output cable connector (male) to the **AUX IN** connector (#7), and its input cable connector (female) to the **AUX OUT** connector (#8) (if applicable).

The cable connectors must be 3-pin XLR type for balanced +20dBV maximum audio input/output, with the following pin connections:

Pin 1 = Ground  
 Pin 2 = Audio +  
 Pin 3 = Audio -

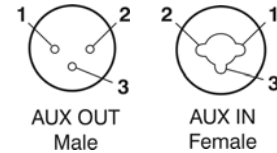

**Step 2.** If the auxiliary equipment provides audio input only, press the **AUX IN** button (#27). The light above the button (#17) should go on. Listen to the audio input in your headset as you adjust the **IN** control (#17) above the light to the desired level.

**Step 3.** If the auxiliary equipment requires two-way communication, have someone listening at the auxiliary unit. Press the **ISO+** button (#28) on the front panel of the base station. The light above the button should go on. While speaking into your headset microphone, adjust the **OUT** control (#17) above the light to the desired listening level at the auxiliary unit. Listen to the audio input in your headset as you adjust the **IN** control (#17) above the light to the desired level.

## 8-Ohm Speaker

**Step 1.** If an external 8 ohm speaker will be used, connect its cable wires to the **8 OHM SPKR** 2-pin Phoenix connector (#9).

**Step 2.** Adjust the speaker volume with the **LOCAL HEADSET VOLUME** control knob (#18).

**NOTE:** Either a local headset or an external speaker can be used, but not both. The **LOCAL HEADSET VOLUME** control knob is the adjustment for both.

## Multiple DX200 Units

Two or more DX200 units can be “daisy-chained” together with cables connected to the 2-wire connectors (#3 and #5) on the rear panels of each base station, following Clear-Com®/RTS® standards.

**NOTE:** DX200 does not provide or require 2-wire line power.


The cable connectors must be 3-pin XLR type for balanced +20dBV maximum audio input/output, with the following pin connections:

### RTS® Mode

Pin 1 = Common  
 Pin 2 = Channel 1  
 Pin 3 = Channel 2

### Clear-Com® Mode


Pin 1 = Common  
 Pin 2 = N/C  
 Pin 3 = Audio

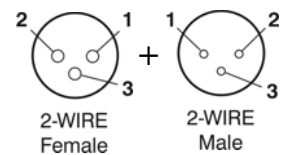

If “daisy-chaining” multiple base stations, you must do the following:

**Step 1.** Remove the cover from one of the base stations and locate the JP1 jumper on the main circuit board. Slide the jumper to the upward position and replace the cover on the base station. Be sure you do this in only one base station.

**Step 2.** For each base station, follow all the steps for the base station setup on page 4.

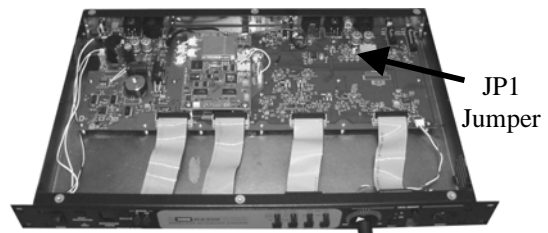


w/Hand 4/20/05

## SECTION 3. EQUIPMENT OPERATION

### BASE STATION OPERATION

#### Front Panel Controls, Indicators and Connector

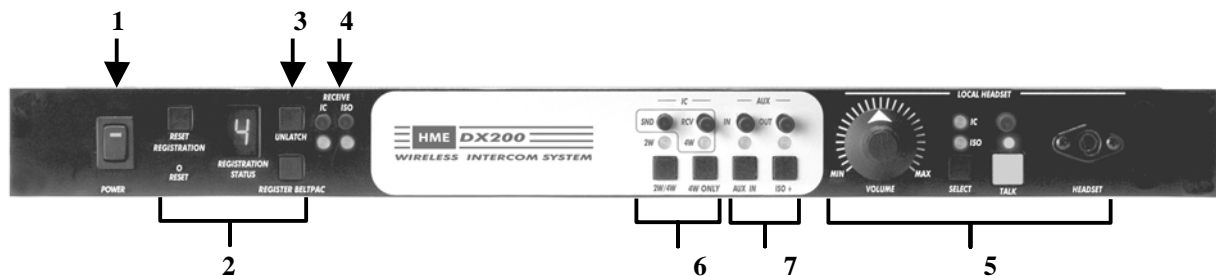

#### 1. POWER Switch

Press the upper part of the switch to turn the power on. A red light on the switch will be lit when the base station power is on. Press the lower part of the switch to turn the power off. The red light will go off. All settings are preserved when the power is turned off, and will be restored when the power is turned on again.

#### 2. Beltpac Registration Controls and Status Indicator

Use these controls to register each Beltpac used with a specific base station, as described on pages 7 and 8.

#### 3. UNLATCH Button

Use this button to unlatch all Beltpac transmitters. (Beltpac users can “latch” their Belpacs on, in order to talk and listen to each other. Base station operators can use the **UNLATCH** button to stop Beltpac conversations, in order to have uninterrupted communication with the Beltpac users.)

 
#### 4. IC (Intercom) and ISO (Isolate) Receiver Indicators and Controls

Lights indicate whether Beltpac reception is **IC** or **ISO**. Use **IC** and **ISO** controls to independently adjust **IC** and **ISO** receive levels. **NOTE:** This adjustment does not affect Beltpac-to-Beltpac communication.

#### 5. Local Headset Connector, Indicators and Controls

- Adjust the microphone level control, above the **TALK** button on the front panel, to mid-point. The level can be readjusted during use, as needed.
- Adjust the receive level by turning on a Beltpac, speaking into the Beltpac headset microphone and listening through the local headset earpiece while adjusting the **VOLUME** control on the base station to the desired level.
- Use the **SELECT** button to select communication via **IC** or **ISO**. Above the **SELECT** button, the indicator light will be lit for the selection you made. **IC** will allow you to communicate via the intercom channel. **ISO** will send your audio to Belpacs and auxiliary output if **ISO+** is enabled (See #7 above). **NOTE:** If neither **2W** nor **4W** is on, this will have no effect. It will stay on **ISO**.
- For open communication, press and release the **TALK** button quickly to “latch on.” To “latch off,” press and release the button again quickly.
- For momentary communication, press and hold the **TALK** button for more than one second. In this mode, the selected channel will remain open only as long as you are pressing the **TALK** button. The **TALK** light indicates the **TALK** mode is active via the local headset.
- Use the **TALK** control knob to adjust the outbound audio level from the local headset microphone.
- Use the **VOLUME** control knob to adjust the input to the local headset earpiece.

The following base station indicators and controls are used only if 2-wire or 4-wire intercoms, or other auxiliary equipment is being used with the DX200, as described under **INTERCOM AND AUXILIARY EQUIPMENT SETUPS** on pages 7 and 8.

Handwritten signature and date: W. H. ... 4/20/05

#### 6. 2Wire/4Wire IC Indicators and Controls

The **2W/4W** button turns on/off both 2-wire and 4-wire intercoms simultaneously. The 2W light above the button indicates intercom on/off status. The **4W ONLY** button turns on/off the 4-wire intercom alone. The **4W** light above the button indicates intercom on/off status. Use the **SND** and **RCV** controls in the outlined area to adjust the 4-wire intercom send and receive levels.

#### 7. AUX IN and ISO+ Indicators and Controls

The **AUX IN** button enables/disables the auxiliary input. The light above the button indicates auxiliary equipment's on/off status. **IN** and **OUT** controls adjust auxiliary inbound and outbound audio levels. **ISO+** button enables/disables the **AUX IN / OUT** audio input and output. The light above the button indicates **ISO+** on/off status. Either **AUX IN** or **ISO+** can be on, but not both at the same time. If **ISO+** is on and you push the **AUX IN** button, **ISO+** will automatically go off when **AUX IN** goes on, and vice versa. Enabling **ISO+** will open an audio path from the Beltpacs and local headset to **AUX OUT**.

w/Hand 4/20/05

## BELTPAC OPERATION

### Belpac Controls and Indicator Lights

The Belpac control buttons have a snap action. They will activate when pressed firmly. Use your fingertips, not your fingernails, to press the buttons.



#### Power On/Off

- **Power On** — Press and release the **PWR** (power) button.  
A voice message in the earpiece will say “power on,” and the red power lights at the corners of the **IC** and **ISO** buttons will go on. After a short time, one light will go off and the other will change to green, indicating the Belpac is ready for use.  
The **REGISTRATION STATUS** indicator on the base station will momentarily indicate the ID of the Belpac.
- **Power Off** — Press and hold the **PWR** button for approximately two seconds.  
A voice message in the earpiece will say “power off,” and the green power light will go off.

**NOTE:** While the Belpac is transmitting, the green power light will be flashing.

The green power light will be on steady whenever the Belpac is ready, but not transmitting.

#### ISO (Isolate) and IC (Intercom)

Use the **ISO** button to communicate with other Belpac users and the DX200 base station operator. Pressing **ISO** on the Belpac will send audio to **AUX OUT** if **ISO+** button on the base station is on.

Use the **IC** button to communicate via the intercom channel and with the DX200 base station operator, or anyone listening to a local speaker connected to the DX200 base station. Pressing **IC** on the Belpac will send audio to the intercom if intercom is on.

- **Push-To-Talk Mode Setting** — To set the Belpac for push-to-talk (PTT) communication, with the power off, press and hold the volume-down ▼ and **ISO** buttons while you press and release the **PWR** (power) button. You will hear “Hands-free off” in the headset earpiece. Press and hold the **IC** or **ISO** button while talking.
- **Hands-free Mode Setting** — To set the Belpac for hands-free communication, with the power off, press and hold the volume-up ▲ and **ISO** buttons while you press and release the **PWR** (power) button. You will hear “Hands-free on” in your headset earpiece. When set up for hands-free communication, the Belpac can be operated in either hands-free or PTT.

**NOTE:** The above settings are saved in memory and only need to be repeated when you want to change between hands-free and PTT operation. When changing modes, if both power lights begin blinking, turn the Belpac off and begin again.

Hands-free and Push-To-Talk mode settings affect both **IC** and **ISO**. Individual adjustment is not possible.

- **Push-To-Talk Mode Operation** — press and hold the **IC** or **ISO** button for more than one second. In PTT operation, audio will be transmitted only while you are pressing the **IC** or **ISO** button.
- **Hands-free Mode Operation** — Quickly press and release the **IC** or **ISO** button to “latch” the transmitter on. Talk and listen, as in a normal telephone conversation. Press and release the **IC** or **ISO** button again to “unlatch,” to end the conversation. All Belpacs can be unlatched by the base station operator, by pressing the **UNLATCH** button on the base station.

**NOTE:** In hands-free mode, pressing the **IC** button while latched in **ISO** will latch on **IC**. Pressing the **ISO** button while latched in **IC** will latch on **ISO**.

#### Volume Up/Down

- **Volume Up Adjustment** — Each time you press and release the volume-up ▲ button, a beep will be heard in the earpiece as the volume increases one step. If you press and hold the volume-up button, repeating beeps will be heard as the volume steps up to maximum. When maximum volume is reached, “maximum” will be heard in the earpiece, and will be repeated until you release the volume-up button.
- **Volume Down Adjustment** — Each time you press and release the volume-down ▼ button, a beep will be heard in the earpiece as the volume decreases one step. If you press and hold the volume-down button, repeating beeps will be heard as the volume steps down to minimum. When minimum volume is reached, rapidly repeating beeps will be heard.

*w/Hand 4/20/05*

---

## Microphone Gain Adjustment

Some users talk louder or softer than others. To allow for this, microphone gain adjustment is provided.


**To increase microphone gain** — Press the volume-up ▲ button while holding down the **ISO** button in the normal operating mode. The microphone gain increase can be monitored through sidetone, or preferably by someone else on a Beltpac or at the base station.

**To Decrease microphone gain** — Press the volume-down ▼ button while holding down the **ISO** button in the normal operating mode. The microphone gain decrease can be monitored through sidetone, or preferably by someone else on a Beltpac or at the base station.

**NOTE:** You will hear “Maximum” if you attempt to go higher than maximum microphone gain. You will hear beeps if you attempt to go lower than minimum microphone gain. Microphone gain will be saved in non-volatile memory and does not require readjustment each time the power is turned on.

---

## Batteries

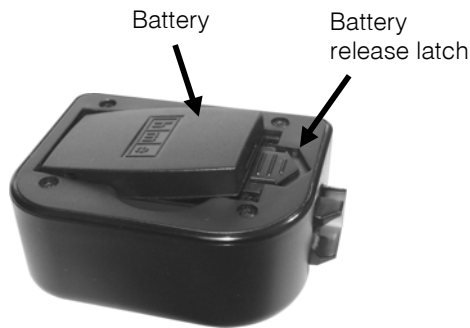

### Change Batteries

When a battery becomes weak, a voice in the earpiece will say “Change battery.” When this happens, take the Beltpac out of its pouch and remove its battery. Slide the arrow-shaped battery-release latch in the direction of the arrow. Pull up on the end of the battery near the battery-release latch and lift the battery out of the Beltpac, or turn the Beltpac over and catch the battery in your hand.

When replacing a battery in the Beltpac, place the end of the battery with the metal contacts into the battery holder on the Beltpac, in the same position as the battery you removed. Press the top of the battery carefully into the battery holder until it snaps in place under the battery-release latch.

w/Hand 4/20/05

## SECTION 4. TROUBLESHOOTING

If you are unable to correct any of the problems described below, contact your dealer for assistance.

- **Red light on base station power switch does not come on.**

Be certain power cords are properly connected to base station, power supply and electrical outlet.

- **Beltpac power lights do not turn green and “out of range” is heard in the headset.**

Be certain your base station power is on. Turn the Beltpac and base station power on and off.

You may be too far from the base station. The range varies with each location’s layout.

- **When trying to register, it keeps saying registration failed.**

Clear registration as described on page 7, and repeat the registration procedure.

- **Others cannot hear me when I talk.**

Be certain the headset is securely connected to the Beltpac or base station, and that you are pressing the **IC** or **ISO** button on the Beltpac, or the **TALK** button on the base station. Be certain the appropriate **IC** or **ISO** setting is selected under **LOCAL HEADSET** on the base station.

- **People on the 4-wire intercom cannot hear me or I cannot hear them.**

Be certain the cables are securely connected and the 4-wire intercom is on. If using a local headset, be certain the **IC** setting is selected under **LOCAL HEADSET** on the base station.

- **People on the RTS/ClearCom systems cannot hear me or I cannot hear them.**

Be certain the cables are securely connected and the 2-wire intercom is on. If using a local headset, be certain the **IC** setting is selected under **LOCAL HEADSET** on the base station.

- **The 2-wire intercom is on and there is a loud squeal whenever I try to talk.**

This can occur if two or more base stations are daisy-chained and the JP1 jumper on the circuit board in one of the base stations has not been adjusted as described in Step 12 on page 6.

- **Settings are not retained when the base station power is turned off and on again.**

The internal battery may be low. Contact your dealer.

### **2400MHz cordless telephone interference —**

If there is a 2400MHz cordless telephone nearby, interference may occur. However, because the DX200 is a frequency-hopping system, this problem is unlikely. If it does occur, changing frequencies on the telephone may alleviate the problem. If not, move the phone as far as practical from the base station, or use another type phone.

### **In the event of an electrical power outage —**

such as from a lightning storm or power generator failure, if you experience problems with your HME equipment after the electricity comes on again, unplug the AC power adapters from their electrical outlets and wait 15 seconds, then plug them back in.



w/Hand 4/20/05

**SECTION 5. TECHNICAL DATA****EQUIPMENT SPECIFICATIONS****Base Station****GENERAL —**

Frequency Range:	2400 – 2483.5 MHz
Frequency Response:	200 Hz to 3.5 kHz
Power Requirements:	100-240VAC, 50-60Hz or 12-14VDC
Temperature Range:	32-122°F (0-50°C)
Size:	19" x 1.72" x 17.13" (1-RU) (48.26 x 4.37 x 43.51 cm)
Weight:	9.2 lbs. (4.18 kg) maximum
# of Belpacs per Base:	15 can be registered Any 4 can have simultaneous full-duplex communication at one time
4-Wire I/O:	RJ45, 600Ω balanced, level adjustable, simultaneous operation with 2-wire
2-Wire I/O:	XLR-3M, XLR-3F, externally-switchable RTS® or Clear-Com® mode, 200Ω, level adjustable, null adjustable
Auxiliary Input:	XLR-3F¼" (6.35 mm) combo jack, 600Ω balanced, level adjustable
Auxiliary Output:	XLR-3M, 600Ω balanced, level adjustable
8Ω Speaker Output:	1W into 8Ω
Headset Connector:	4-pin mini-DIN Electret microphone
Headset Output:	250mW into 32Ω
Front Panel Controls:	Power switch Reset Registration, Reset, Unlatch and Register Belpac buttons, IC and ISO Receive level adjustments, IC 2W/4W and 4W-Only buttons, IC4W-Only Send and Receive level adjustments, Auxiliary In and ISO+ buttons, Auxiliary In and Out level adjustments, Rotary knob for volume adjustment, Headset IC/ISO Select button and Headset Talk button
Front Panel Indicators:	Registration Status indicator, IC and ISO Receive LEDs, IC 2W and 4W-Only LEDs, Auxiliary In/Out LEDs, Headset IC/ISO select LEDs, Headset PTT LED
Rear Panel Controls:	Clear-Com®/RTS® mode switch, RTS® Channel 1/2 switch, 2-wire channel line null adjustment
Antenna Type:	External ½ -wave dipole (R-TNC connector) RX/TX horizontal/vertical diversity
System Distortion:	<2%
Communication Security:	64-bit encryption dual-slot diversity

**TRANSMITTER —**

Type:	Frequency hopping, spread spectrum
Transmit Power:	100mW burst
Modulation Type:	Gaussian filtered FSK, TDM
Frequency Stability:	13 ppm
Harmonics/Spurious:	Exceeds FCC and ETSI specifications over temperature

**RECEIVER —**

Type:	Frequency hopping, spread spectrum
RF Sensitivity:	<-90dBm w 10 <sup>-3</sup> BER
Frequency Stability:	13 ppm
Distortion:	<2%

w/Hand 4/20/05

---

## Beltpac

### GENERAL —

Frequency Range:	2400 MHz – 2483.5 MHz
Antenna Type:	Internal, horizontal/vertical diversity
Frequency Response:	200 Hz to 3.5 kHz
Battery Requirements:	3.6V lithium ion
Battery Life:	Up to 20 hours
Temperature Range:	32-122°F (0-50°C)
Weight:	7.4 oz (.21 kg) with battery and pouch
Headset Connector:	4-pin, mini-DIN
Mic Input:	Electret microphone
Headset Output:	160mW into 32Ω
Controls:	Power, Volume-up ▲, Volume-down ▼, IC, ISO
Indicators:	Dual-color LED (red/green)
Communication Security:	64-bit encryption
System Distortion:	<2%

### TRANSMITTER —


Type:	Frequency hopping, spread spectrum
Transmit Power:	100mW burst
Transmission Modes:	Momentary or latch
Modulation Type:	Gaussian filtered FSK, TDM
Frequency Stability:	13 ppm
Harmonics/Spurious:	Exceeds FCC and ETSI specifications

### RECEIVER —

Type:	Frequency hopping, spread spectrum
RF Sensitivity:	<-90dBm w $10^{-3}$ BER
Frequency Stability:	13 ppm
Distortion:	<2%

# BLOCK DIAGRAM

## DX200 Base Station

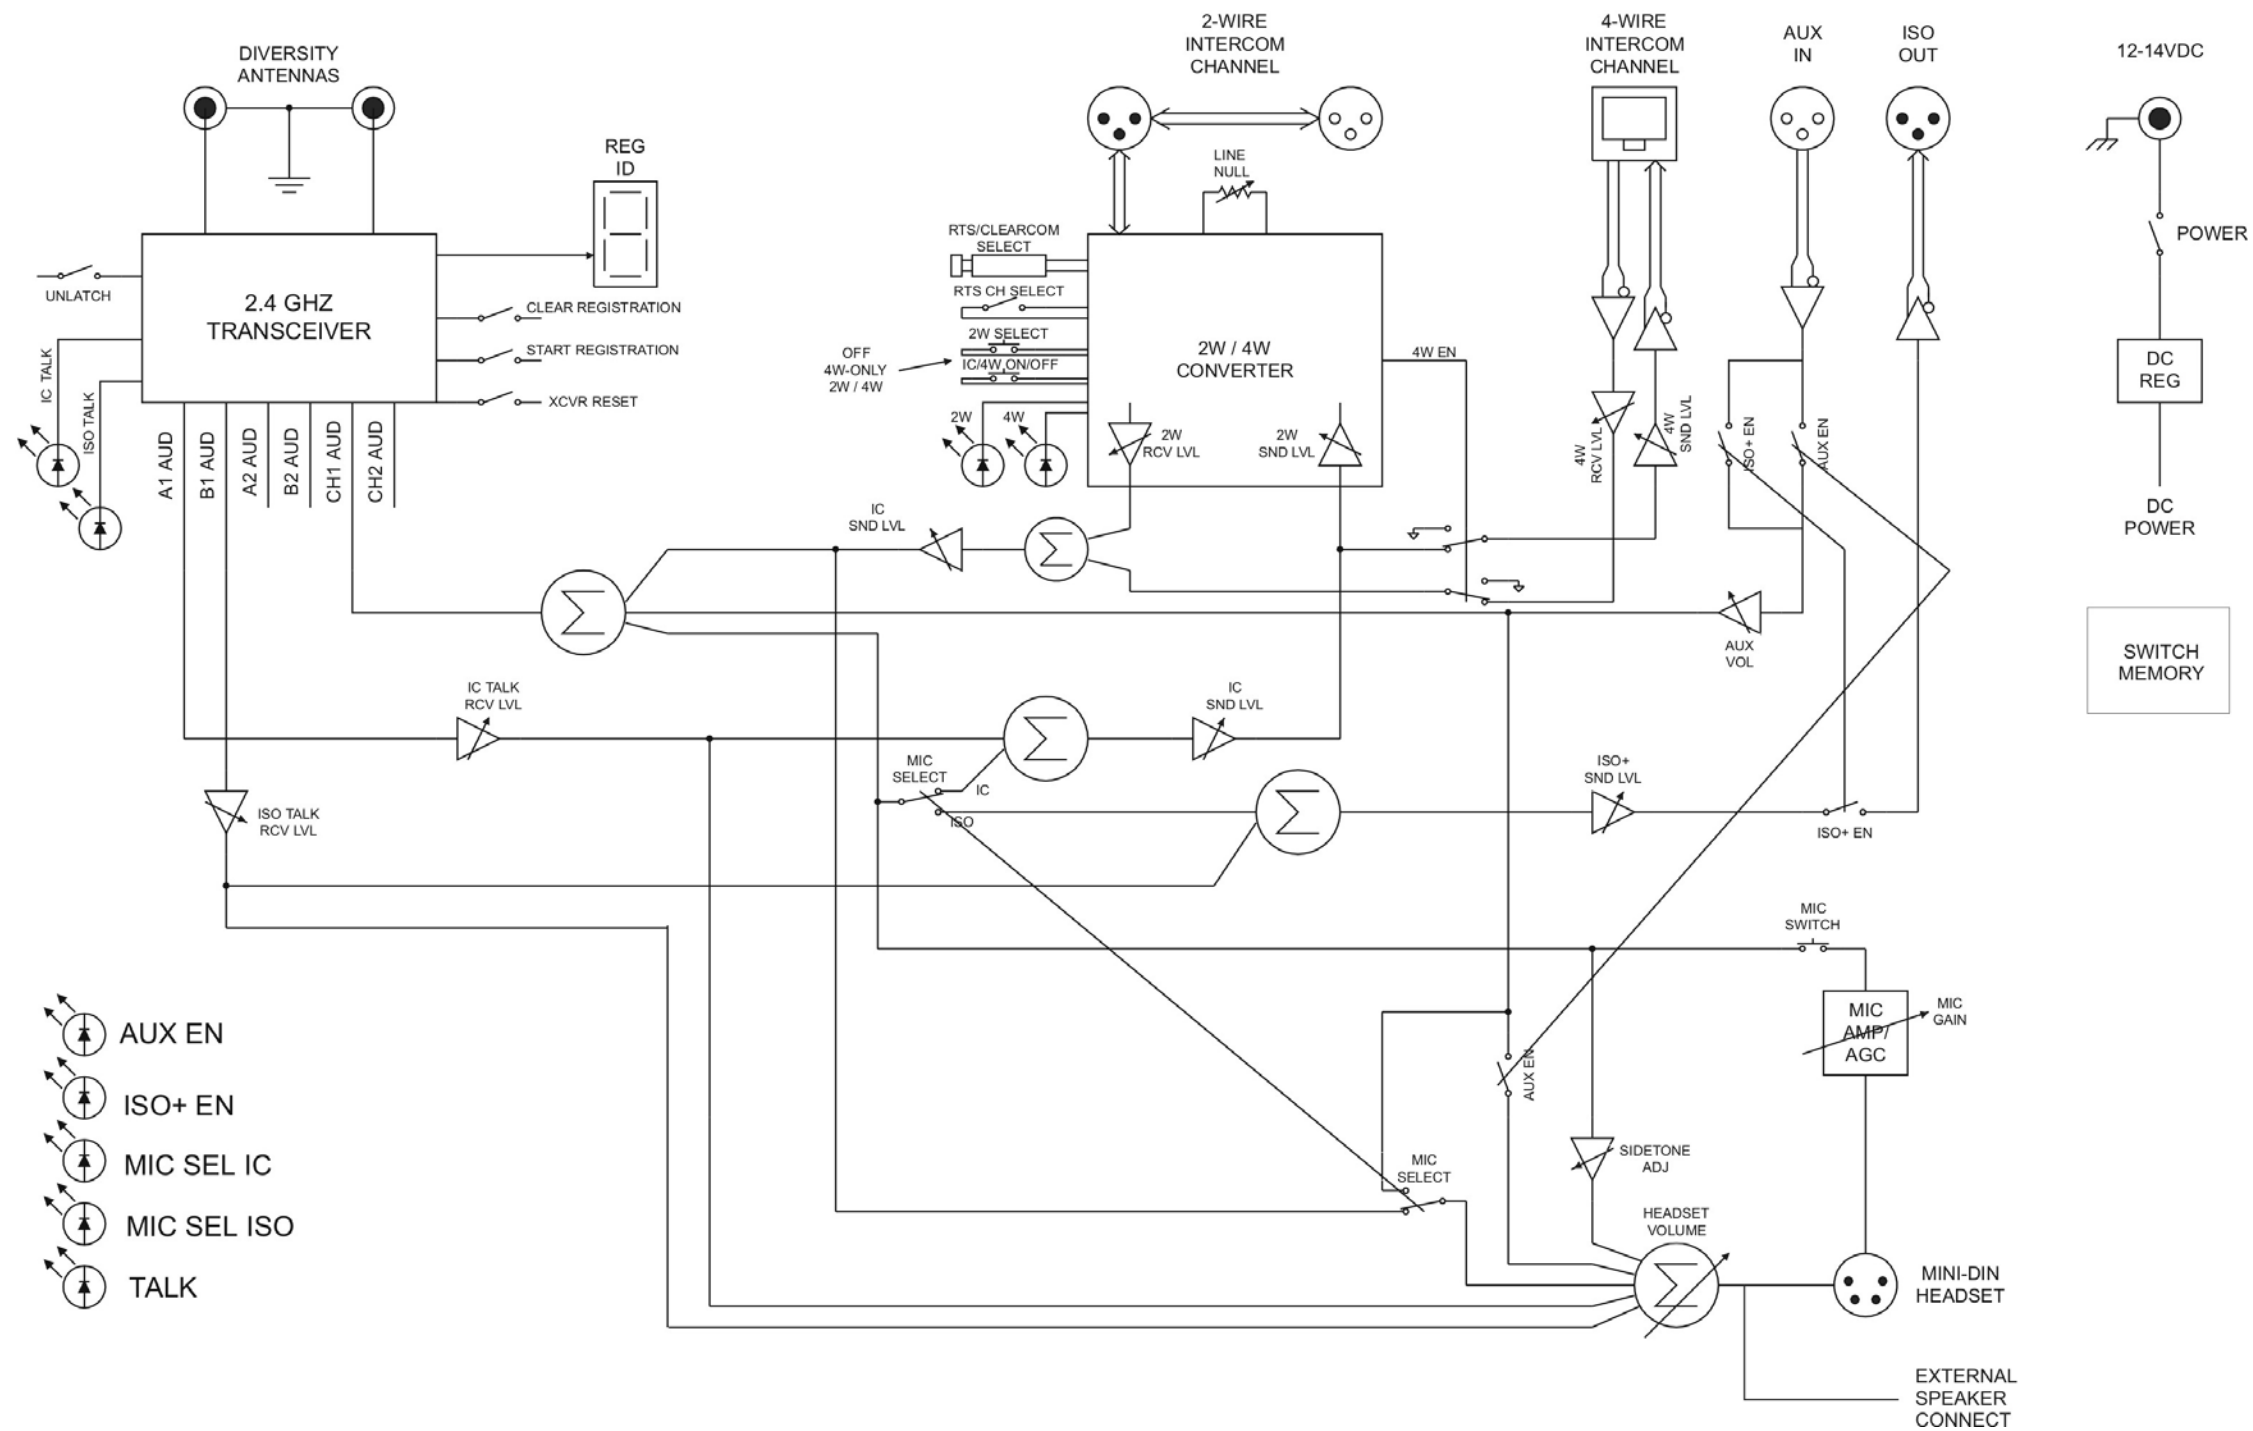

## APPENDIX A:

# BATTERY CHARGER 230 VOLT AC ADAPTER CONNECTIONS

---

If your DX200 will be used outside the U.S.A., where a 230 Volt AC adapter is required for your battery charger, connect the AC adapter to the battery charger as follows.

- Step 1.** Connect an electrical plug to the wires on the power cable according to color codes.  
(**Brown** = live, **Blue** = neutral, **Green with yellow stripes** = ground)
- Step 2.** Plug the other end of the power cable into the receptacle on the AC adapter.
- Step 3.** Remove the spade lugs from the brown and blue wires of the battery charger cable and cut the green/yellow wire as short as possible. No ground wire will be used. Cut the connector off the AC adapter output cable. Strip enough of the insulation from the wires of both cables so they can be spliced. Splice the wires from the AC adapter cable to the “AC” wires of the battery charger cable. Cover the splice with electrical tape or shrink tubing.
- Step 4.** Plug the electrical plug into an AC electrical outlet.

