

HBT200W

Cat. No.: 4000464

Bluetooth Speaker

Instruction Manual

Safety Information





CAUTION:

TO REDUCE THE RISK OF ELECTRIC SHOCK:
DO NOT REMOVE SCREWS, COVERS OR THE CABINENT.
NO USER SERVICING PARTS INSIDE.
REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of electrical shock, fire, etc.:

- 1. Read these instructions.
- 2. Keep these Instructions.
- 3. Heed all Warnings.
- 4. Follow all instructions.
- 5. Do not use this apparatus near water.
- 6. Clean only with dry cloth. For stubborn stains, use a soft cloth dampened with a weak solution of mild detergent and water. Dry the apparatus immediately afterwards with a clean cloth. Do not use abrasive clothes, thinners, alcohol, or other chemical solvents, because they may damage the finish or remove the panel lettering.
- 7.Do not block any ventilation openings. The ventilation shall not be impeded by covering the ventilation openings with items, such as newspapers, table clothes, curtains, etc.

- 8.Do not install near any heat source such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- the appliance should be connected to power supply only of the type described in the operating instructions or as marked on the appliance
- 10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus. If the power cord is damaged, it must be repaired by a qualified repairer.
- 11. Only use attachments/accessories specified by the manufacturer.
- 12. Use only with the cart, stand, tripod, bracket or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



PORTABLE CART WARNING

- 13. Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 15. The apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.
- 16. The mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- 17. Please read Rating Labels at the back of the unit for power input and other safety information.

Contents


Safety Information	2
Contents	3
Introduction	4
Package content	4
Front View	
Back View	6
Bluetooth Mode	7
Turning on	7
Pairing with Bluetooth devices	
Aux in Mode	
Troubleshooting	9
Technical information	
Statements	10

Introduction


Thank you for purchasing the Bluetooth Speaker. Enjoy music wirelessly from your smart phone, tablet, laptop, or other Bluetooth enabled device anywhere you choose.

Package content

What you can find inside of your package:

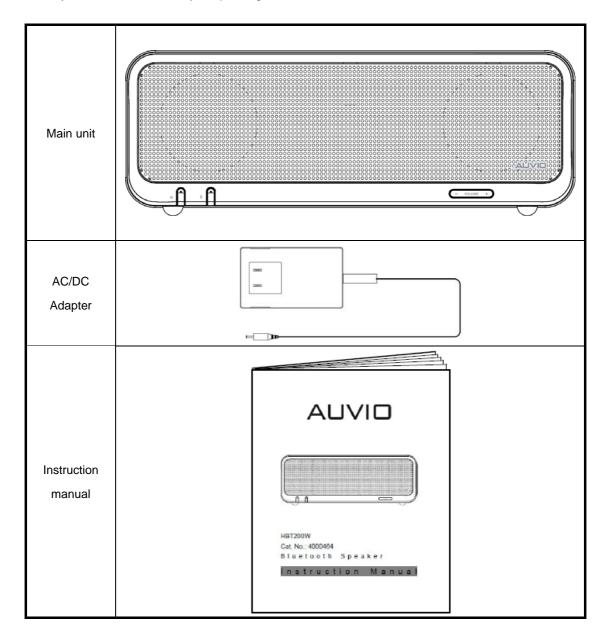


Front View

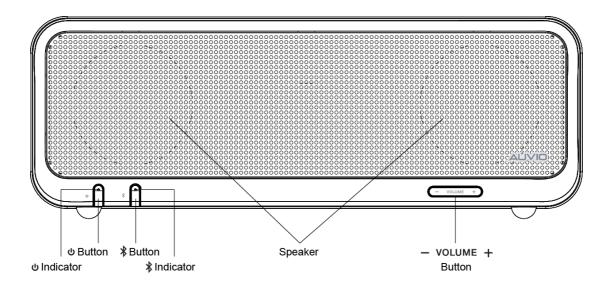

Control	All mode
ပ် Button	Press to turn on speaker.
	Press again to switch speaker into standby mode.
≯ Button	Press and hold to disconnect Bluetooth connection.
- VOLUME +	Press to adjust volume level.
Button	
し Indicator	Illuminate in Red light indicates speaker is in standby mode.
	Red light off indicates speaker is turned on.
	Flash 2s in Red light and then off indicates speaker is in Aux
	mode.
隊 Indicator	Flash in Red and Blue light means speaker is pairing with a
	Bluetooth device or connecting with a paired Bluetooth device.
	Flash once for 3s in Blue light indicates speaker is connected
	with a Bluetooth device.

Back View

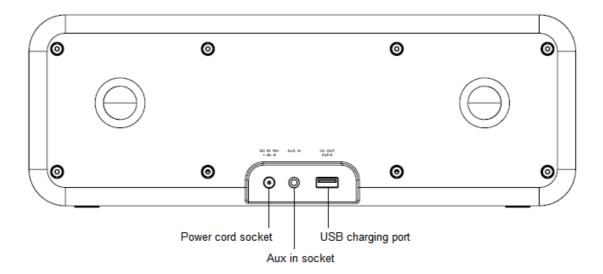

Items	Remark:
Power cord socket:	Connect to DC adaptor.
AUX IN socket:	It is for connecting the audio cable.
USB charging port	Output a 5V voltage for charging your personal devices such as your smart phone.

Bluetooth Mode

Turning on

- 1. Before using your new Bluetooth Speaker the first time, you should connect adapter to your speaker.
- 2. Press **U** Button to switch on. The **Indicator** flashing fast in Blue light and waiting for pairing with a Bluetooth device or connecting to a paired Bluetooth device.

Pairing with Bluetooth devices

Pairing occurs when two Bluetooth devices communicate with each other and establish a connection. A record of information about this connection is then stored in the memory of each device. Once you pair a device with the Speaker, you should not have to pair it again.

To begin pairing with a Bluetooth device

- 1. Turn on your Bluetooth device.
- 2. Activate your Bluetooth device and select the search mode.
- 3. Press Button on Speaker to enable pairing.
- 4. From the Bluetooth device list, select the device "HBT2000W".
- 5. If your device asks for a password, enter digits 0000 (four zeros) and press OK. Some devices also ask you to accept the connection.

Your Bluetooth device indicates when pairing is complete. The Speaker indicates pairing is complete when the ** Indicator flash slow in Blue light.

To pair additional devices

Note: when you have paired Speaker with a Bluetooth device and want to use another device instead, please disable the Bluetooth function of your previous Bluetooth device.

Follow "To begin pairing with a Bluetooth device" steps 1-5.

Aux in Mode

You can use another audio device with your Speaker. This requires using an audio cable with a 3.5mm plug on one end to connect with the Aux input on the Speaker system.

- 1. Plug the 3.5mm audio cable from the audio device into the Aux connector on the back of the Speaker.
- 2. Your Speaker will automatically shift to Aux in mode. The U Indicator will flash 2s in Red light and then off.
- 3. To gain optimal volume levels, adjusting the output volume level on both the source device and the Speaker itself are recommended.

Troubleshooting

Problem	What to do
Speaker will not	Males are serviced as a service and the servic
turn on	Make sure your system is connected to a working mains outlet.
	If your device requires a passkey, make sure the one you entered was
Paired Bluetooth	correct.
device will not	Turn the Speaker off and back on.
connect	Remove the Speaker from the pairing list on your Bluetooth device
	pairing list. Then pair the device and the Speaker again.
Speaker	
indicates a	Turn off or disable Bluetooth on all other paired devices nearby and
connection, but	reconnect the device you want to hear.
is not playing	Turn the Speaker off and back on.
music	
	Make sure your Bluetooth device is discoverable.
	Your Bluetooth device may be out of range – try moving it closer to the
	Speaker.
Cannot pair the	Make sure your Bluetooth device supports the transfer of audio.
Speaker with my	Move your Bluetooth device and/or Speaker away from other devices
Bluetooth device	that generate electromagnetic interference.
	If possible, turn off all other nearby Bluetooth devices or disable their
	Bluetooth functionality.
	Turn the Speaker off and back on.
	Make sure your Speaker is not muted, and the volume is up.
	Make sure your Bluetooth device is playing audio, and the volume is
No audio from a	up.
Bluetooth device	Your Bluetooth device may be out of range – try moving it closer to the
	Speaker.
	Turn the Speaker off and back on.
No audio from	Make sure your connected device is on and playing.
the AUX source	Make sure your Speaker is in Aux in mode.
and AGA Source	Make sure the 3.5mm plug is fully inserted into the Speaker.

Technical information

Power supply rating

Input: 100-240VAC, 50/60Hz Output: 18VDC, 2A Max

Output power 10Wrms x 2 Dimensions

H x W x D: 330mm x 135mm x115mm

Statements

FCC RF Radiation Exposure Statement

Caution: To maintain compliance with the FCC's RF exposure guidelines, place the unit at least 20cm from nearby persons."

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: The manufacturer is not responsible for any RADIO or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -- Reorient or relocate the receiving antenna.
- -- Increase the separation between the equipment and receiver.
- -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -- Consult the dealer or an experienced radio/TV technician for help.