

IMPORTANT SAFETY INSTRUCTIONS

- 1 Read these instructions.
- 2 Keep these instructions.
- 3 Heed all warnings.
- 4 Follow all instructions.
- 5 Do not use this apparatus near water.
- 6 Clean only with dry cloth.
- 7 Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8 Do not install near heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9 Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10 Protect the power cord from being walked on or pinched, particularly at the point where they exit from the apparatus.
- 11 Only use attachments/accessories specified by the manufacturer.
- 12 Use only with the cart, stand, tripod, bracket or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 13 Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14 Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 15 Do not expose this apparatus to drips or splashes.
- 16 Do not place any object filled with liquids, such as vases, on the apparatus.
- 17 Do not install this apparatus in a confined space such as a book case or similar unit.
- 18 The apparatus draws nominal non-operating power from the AC outlet with its STANDBY/ON switch in standby position.
- 19 The apparatus should be located close enough to the AC outlet so that you can easily grasp the power cord plug at any time.
- 20 Disconnect the product from the AC mains power by removing the product's AC power plug from the AC power outlet.

Removable Battery

- 21 The battery must be recycled or disposed of properly. Contact local agencies for recycling and disposal information.
- 22 Do not allow metal objects to touch the terminals of your battery.
- 23 If there is leakage, an offensive odor, discoloration or deformation during charging or use, remove the battery and do not use it again. Clean your hands well before touching food or sensitive areas, for example, your eyes.

Wireless Device

- 24 Switch off the device where it is prohibited, or when its use may cause danger or interference such as inside an aircraft, hospitals, or near refuelling points.

Radio Frequency

Operation Frequency Range ---- 2412-2484MHz

Channel Number or List ----Ch1 to Ch14 (refer to the link for the channel frequency)

Channel Separated ----Overlap

Modulated Type ---- OFDM/DSSS

Antenna Type --- integrated PIFA antenna.

Operating RF distance: normal 30-50m, many factors will affect this parameter.

RF transmitter power output: 15dBm

CAUTION

- DO NOT REMOVE THE EXTERNAL CASES OR CABINETS TO EXPOSE THE ELECTRONICS. NO USER SERVICEABLE PARTS ARE INSIDE.
- IF YOU ARE EXPERIENCING PROBLEMS WITH THIS PRODUCT, CONTACT CAMBRIDGE SOUNDWORKS FOR A SERVICE REFERRAL. DO NOT USE THE PRODUCT UNTIL IT HAS BEEN REPAIRED.

For CANADA

AC POWER CORD CONNECTION

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

Pour le CANADA

CORDE DE CONNEXION CA

ATTENTION: POUR EVITER LES CHOCS ELECTRIQUES, INTRODUIRE LA LAME LA PLUS LARGE DE LA FICHE DANS LA BORNE CORRESPONDANTE DE LA PRISE ET POUSETTUS JUSQU'AU FOND.

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

All cables used to connect to the computer and peripherals must be shielded and grounded. Operation with non-certified computers or non-shielded cables may result in interference to radio or television reception.

Federal Communication Commission (FCC) Interference Statement

FCC Part 15: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

CAUTION: To comply with the limits of the Class B digital device, pursuant to Part 15 of the FCC Rules, this device must be installed with computer equipment certified to comply with Class B limits.

MODIFICATION: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER AUTHORITY TO OPERATE THE EQUIPMENT.

California Proposition 65 Statement

WARNING: Handling this product may expose you to chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

Wash hands after handling.

Explanatory Note: California Safe Drinking Water and Toxic Enforcement Act of 1986 (Proposition 65) requires special product labeling for products containing certain chemicals known to the State of California to cause cancer, birth defects or other reproductive harm. Creative has chosen to provide a warning based on its knowledge about the presence of one or more listed chemicals without attempting to evaluate the level of exposure. With Creative's products, the exposure may be below the Proposition 65 level of concern, or could even be zero. However, out of an abundance of caution, Creative has elected to place the Proposition 65 warning on its products.

Déclaration de la Proposition 65 de la Californie

AVERTISSEMENT: La manipulation de ce produit peut vous exposer à des produits chimiques qui sont reconnus par l'État de la Californie comme pouvant provoquer le cancer, des anomalies congénitales ou d'autres effets nuisibles à la reproduction.

Veuillez vous laver les mains après l'avoir manipuler.

Note explicative: La Proposition 65 (California Safe Drinking Water and Toxic Enforcement Act of 1986) de la Californie sur les matières dangereuses et l'eau potable exige un étiquetage spécial pour les produits contenant certains produits chimiques qui sont reconnus par l'État de la Californie comme pouvant provoquer le cancer, des anomalies congénitales ou d'autres effets nuisibles à la reproduction. Creative a choisi d'inclure une mise en garde s'appuyant sur sa connaissance de la présence d'un ou de plusieurs de ces produits chimiques sans essayer d'en évaluer le niveau d'exposition. Pour les produits de Creative, le niveau d'exposition peut être inférieur au niveau critique établi par la Proposition 65 ou même être nul. Néanmoins, par souci extrême de prudence, Creative a choisi de placer l'avertissement de la Proposition 65 sur ses produits.

Copyright © 2011 Creative Technology Ltd. All rights reserved. Cambridge SoundWorks and the Cambridge SoundWorks logo are trademarks or registered trademarks of Creative Technology Ltd. in the United States and/or other countries.


 
 
 
 


Table of Contents


About Your Radio	-----4
Introduction	-----6
Using the Touchscreen Interface	-----7
Setup wizard	-----8
Navigating Around	-----10
Internet Setup	-----10
Radio Mode (AM/FM)	-----11
Pandora Mode	-----12
Internet Radio Mode	-----13
Settings	-----14
Auxiliary Mode	-----16
iPod Mode	-----17
Music Player Mode	-----19
Alarm Settings	-----20
Other Information	-----21

 


4

About Your Radio

 
Front / Top

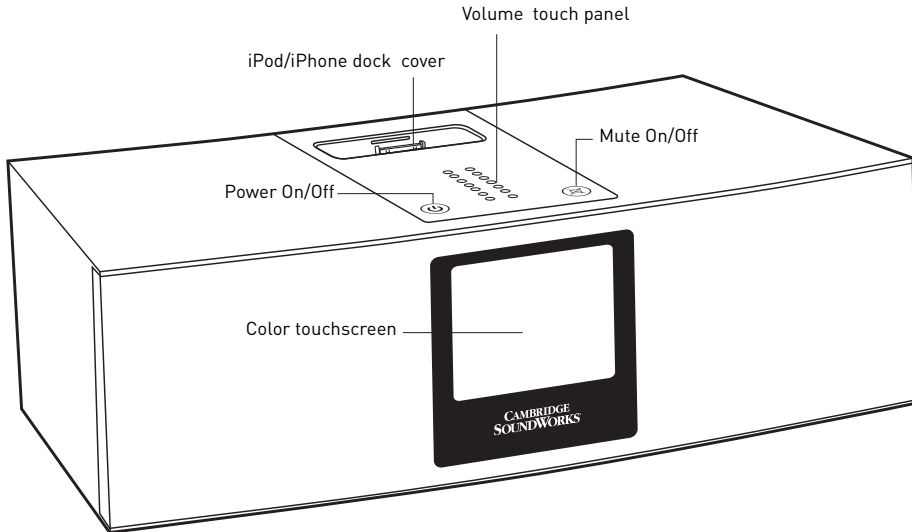


Back

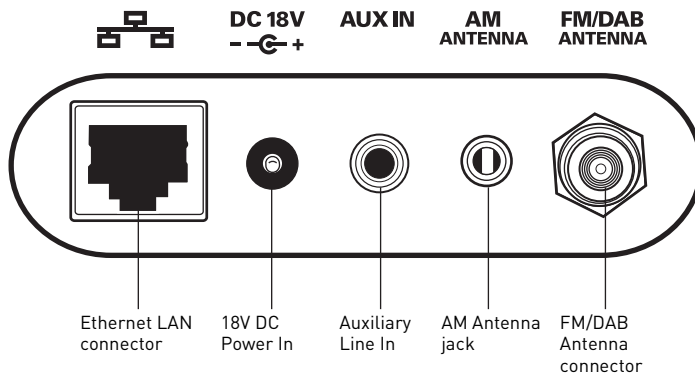 


Remote Control

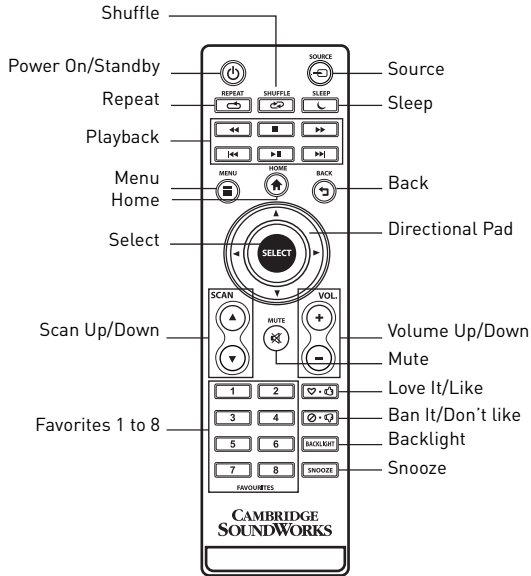 

Inserting Batteries

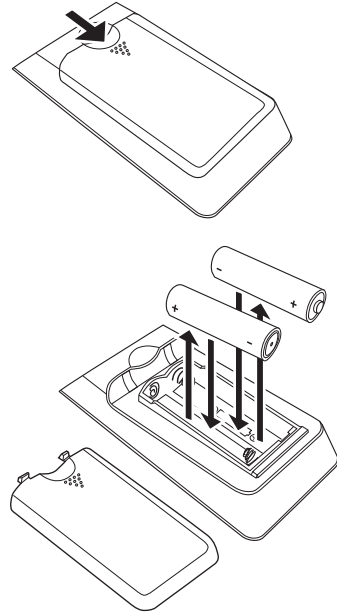 

 

6

Congratulations!

Thank you for purchasing Cambridge SoundWorks® Ambiance Touch Radio! We are sure that it will provide you with years of enjoyment and entertainment!

 
 
 
 
 
 
The Ambiance Touch Radio is a cutting-edge, multi-format digital audio system, featuring Wi-Fi internet streaming capabilities and an innovative, color touchscreen interface.

Introduction

As a standalone device, your radio functions as a AM/FM receiver, as well as an iPod/iPhone docking station and alarm clock.

Connected to a wireless broadband network, your radio can receive thousands of internet radio stations and podcasts from around the globe.

On the same wireless network as your computer, your radio can also act as a remote streaming device for your music collection. You can also use Frontier Silicon internet radio portal from your computer to tailor the content received by your radio.



Using the Touchscreen Interface

The touchscreen is the key point of interaction with Ambiance Touch Radio. The radio's many functions can be controlled simply by tapping gently on the icons and buttons you see on the screen. Some of these icons and buttons allow you to tap and hold to change a value while you keep your finger on it (e.g. increasing volume).

The Main Menu is the primary screen to navigate around the main radio functions and settings. Gently tap an icon to access the relevant modes as described below:

Main Menu



Radio (AM/FM)

Receives AM and FM broadcasts, including RDS data. See page 11



Pandora (US only)

Personalized interactive radio stations based on your choice of artists and songs, similar music analysis.



Internet Radio

Allows access thousands of online radio stations and podcasts from around the world. See page 13



Settings

Allows you to configure Network settings, sound EQ levels, software updates, timing preferences and many more. See page 13



Auxiliary Mode

Use the radio to play audio from any external source via a standard 3.5mm audio cable. See page 16



iPod Mode

Provides docking, charging, control and playback for your Apple iPod and iPhone. See page 17



Music Player

Lets you stream audio files across your network from PC or MAC. See page 12



Navigation Arrows

Tap to reveal other main menu icons.

Setup Wizard

When you power up your radio for the first time, the setup wizard will guide you to configure the radio settings.

Step 1: Select 'YES' to start setup wizard. If you select 'NO', and later when you wish to start setup wizard, you can go to the 'settings'->'Setup Wizard'



Step 2: Select the language



Step 3: Select the time format 24hr or 12h



Step 4: Select source to sync Time



Step 5: Select time Zone



Step 6: Select Turn on or off Daylight Saving




Step 7: Select WLAN Region

 
Step 10: Press 'OK' to complete the setup



Step 8: Select your preferred network from the list of available networks




Step 9: If the selected network is password protected, enter it using the on-screen keyboard, followed by **Confirm** 

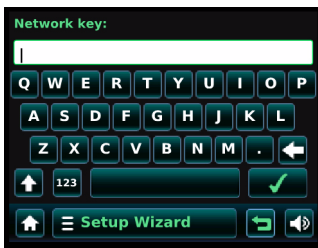

Navigating Around

 Tapping on a mode will take you to the main screen of that mode. Each mode will have its own set of buttons that you can interact with. An example is shown below:

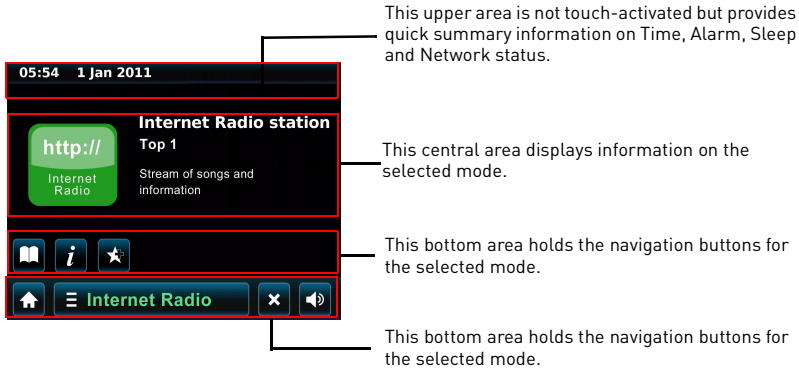

Internet Setup

Ambiance Touch Radio makes use of your local wired or wireless network to connect to the Internet and the setup is very straightforward.

To easiest way to get started is to simply enter Internet Radio mode, where you will be led through the process of connecting to your network and getting online.

 
- Step 1: Select your WLAN region from the list to begin scanning.



- Step 2: Select your preferred network from the list of available networks.



- Step 3: If the selected network is password protected, enter it in using the on-screen keyboard, followed by **Confirm**

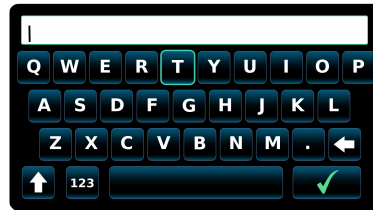

Radio Mode (AM/FM)

 
Radio Mode receives analog radio from the AM or FM band and displays Radio Data System (RDS) information about the station and show being broadcast.

Before entering Radio mode, connect both the AM and FM aerials to their respective Antenna connector at the rear of the radio and fully extend the aerial.

From the main menu, tap:





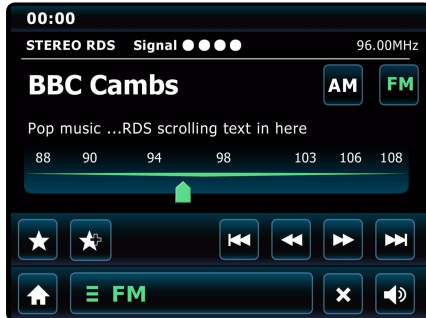



You'll see the following screen, with your last selected AM or FM frequency displayed.



Navigating Radio Stations

You can use the frequency scale across the center of the screen to search for radio stations. Simply tap any part of this scale to tune the radio to the corresponding radio frequency.

The following actions are available on this screen.

-  Select the AM radio frequency band.
-  Select the FM radio frequency band.
-  Tune the radio frequency up one step at a time.
-  Tune the radio frequency down one step at a time.
-  Scan up the radio frequency till the next available station is found.
-  Scan down the radio frequency till the next available station is found.

For stations with good signal strength which broadcast RDS (Radio Data System) information, the screen will display the RDS data.

Favorite Station Presets

You can store up to 10 favorite station presets in Radio Mode.



Add the station you're listening to as a new favorite. Select a slot in your Favorites list to save to. If there is an existing favorite in the slot you selected, it will be replaced automatically.



Review your Favorites list. Select the favorite station you want by tapping the corresponding slot.

Current settings

This displays the full details of your currently active network profile. This can be useful for troubleshooting.

WLAN region

This lets you change the global location of your radio. The currently selected location is outlined.

Miscellaneous Settings

Lets you set a range of preferences for your radio.

Language

The default language is English. To change, just pick an option from the available list.

Alarm Snooze

Lets you specify the delay interval between alarms. Configurable from 1 to 30 minutes.

Idle Timeout

This setting lets you to specific the time interval where there is no interaction with the radio before switching to a screensaver mode.

Sleep

This is a handy function which automatically switches the radio into standby mode after a specified time period.

The default setting is "Off".

You can adjust the specified time by tapping the **Sleep** button on the screen or the remote control multiple times to cycle through the options of 15, 30, 45, 60, 75, 90, 105 or 120 minutes.

If Sleep mode is activated, a crescent moon icon with the time remaining will be displayed on the top part of the screen.

Software Update

Software updates for maintenance or added features for your radio will become available from time to time. If this option is enabled, the radio will automatically check for new software every time it connects to the internet. If an update is available, it will ask for your confirmation before commencing download. Software updates may take a few moments to download and require you to restart the radio.

Pandora Mode

Pandora is a personalized Internet radio that is designed to help you discover new music you'll love mixed in with music you already know. You start a Pandora station by entering an artist name or song title that is similar to the kind of music you'll like to hear and Pandora will find and play similar songs from a related corner of the musical universe.

Before using Pandora, you need to create an account with them by visiting www.pandora.com. Pandora is a free service with the option to pay for additional features.

From the menu, tap:



The first time you start Pandora, you'll be asked to sign-up for a new account. If you already have one, tap **OK** and you'll be asked to enter your account username and password. Type these in using the onscreen keyboard, followed by **Confirm**

Once you have logged in successfully, your details will be saved so that you don't have to enter them again.

You can save several Pandora accounts, see <?> for details

Navigating Pandora Radio Stations

There are several different types of streams and radio stations available via Pandora. If you are new to Pandora, it is best to use the first two options listed below as they let you search Pandora's enormous music database for tracks that you can use to build up your profile.

My Stations

Displays your list of stations that you have already saved to your Pandora account.

Genre Stations

Displays a list of music genres. Some genres may contain sub-genres.

Create Station





Create a station by entering all or part of an artist or band name using the onscreen keyboard, followed by the **search** <?> button. Select your choice from the list of results, then tap **OK**.

Using Pandora

Once you have started playing a radio station using one of the options listed earlier, you will see a screen similar to the one below on your display.



The following actions are available on this screen.

-  View information about the song that you are listening to.
-  View technical information about the station that you are listening to.
-  Plays the currently selected song.
-  Stops playing the currently selected song.

Internet Radio Mode

Ambiance Touch Radio can play radio broadcasts from stations all around the world using your broadband Internet connection. Listen to thousands of radio stations and podcasts and discover music from different countries.

From the main menu, tap:



??The first time you enter Internet Radio mode, you'll be taken to the main Station Directory menu screen.??

When entering Internet Radio mode, the last-listened to station is selected automatically.

Using Internet Radio

Once you have started playing a radio station using one of the options listed earlier, you will see a screen similar to the one below on your display.



The following actions are available on this screen.



Display the Station Directory menu screen.



Display technical information about the station that is currently playing.



Add the station you're listening to as a new favorite. Select a slot in your Favorites list to save to. If there is an existing favorite in the slot you selected, it will be replaced automatically.

Navigating Internet Radio Stations

My Favorites

Displays a list of your favorite radio stations and podcasts that you have saved.

Local <Country>

Browse through the radio stations that are available in your country. To change country, refer to <??>

Stations

Browse for radio stations sorted by location or genre. You can also search for radio stations.

Podcasts

Browse for podcasts sorted by location or genre. You can also search for podcasts.

My added stations

Displays a list of stations that you have added to your station list by accessing the Frontier Silicon Radio Portal. Refer to page ?? for details.

Help

Get your Ambiance Touch Radio's unique access code or listen to some troubleshooting tips.

Submenu Options

Browse station list

Displays the Radio Station menu.

Return to playing screen

Exits the Submenu and returns to the Now Playing screen.

Last Listened

Display a list of recently listened to stations. The most recent station will appear at the top of the list.

Searching for Stations and Podcasts

In the Station Directory menu, you can search for radio stations and podcasts by name or by a keyword in its title or description.

Type in the keyword or part of the station name using the onscreen keyboard, followed by the **Search** button. Any matching results will be displayed, simply select a station from the list to begin playing it.

Settings

The System Settings menu provides a convenient place to configure all the radio settings. The following options are available:

- Alarms
- Time and Date
- Equalizer (Equaliser?)
- X-Fi
- Network
- Miscellaneous
- Setup Wizard

From the main menu, tap:



Alarms Settings

This is an alternative method to access your radio's alarm clock settings, which is directly accessible from the main menu screen. To learn more about configuring your radio's alarms, refer to ???

Time and Date Settings

By default, the radio will automatically set its time and date when you connect to the internet. However if you do need to set or change it yourself, the Time Settings menu includes the following options:

Time Zone

This setting displays a list of global time zones to choose from. The current setting is highlighted in yellow.

Use Analog Clock

Tap to select whether to show the time using an analog clock display when the radio is on standby.

Turn on/off Daylight Saving

Tap to toggle daylight saving on or off.

Time Source

Lets you specify where the radio should sync its clock from. By default, this is set to fetch time from the internet.

You can select the time to sync source to "None" if you wish to set it yourself. For "DAB" or "FM-RDS" modes, you need to receive a good station signal for several seconds to extract the time data.

Set Time Manually

Lets you set the time and date yourself. Use the Up/Down buttons to adjust the time. Tap the **Back** button to save your changes and take you to the previous screen.

Select 12h/24h

Tap to toggle between the 12 or 24 hour clock display format.

Equaliser Settings

By default, the radio is set to "Normal" EQ, which is an all-around, relatively neutral option. You can choose from a range of alternative presets suited for the following musical styles:

- Classic

- Jazz
- Pop
- Rock
- Speech

You can also select "Custom" to set your own preferences Bass, Treble and Loudness.

Tap the **Back** button to save your settings and return to the previous screen.

X-Fi Settings

Lets you enhance your audio listening experience with the following options:

Surround

Control the level of audio immersion in your music.

Crystalizer

Enhance music to make them sound livelier.

Bass

Enhance the sound quality and bass of any speaker system for a better listening experience

Dialog Plus

Enhance the vocals in music for better clarity.

Smart Volume

Adjust the loudness of your audio playback automatically to minimize sudden volume changes.

Network Settings

Ambiance Touch Radio is able to remember the last four wireless networks that you have connected to, and automatically tries to connect to whichever one that it can find. You can configure these settings using the following options:

Network Wizard

This setting lets you scan the area for any available wireless network. To connect, just select the network from the list, followed by the type of security you want to use: PIN number, Push button or no WPS

If you are using a wired internet connection, you can select it here.

For advanced users, you can setup the network yourself by selecting **Manual** settings which will walk you through a detailed multiple-step process.

WPS push button setup...

Setup the radio with your network using the Wi-Fi Protected Setup (WPS) security protocol.

Network profiles

This displays a list of your saved network profiles. Switch to any one of your profiles by selecting it. You can delete an existing profile by tapping the **Delete** button next to it.

NOTE You cannot delete the currently active network profile.

You can also run the Network Wizard as explained above.

Manual settings

For advanced users, you can setup the network yourself using the multiple-step process.

Current settings

This displays the full details of your currently active network profile. This can be useful for troubleshooting.

WLAN region

This lets you change the global location of your radio. The currently selected location is outlined.

Miscellaneous Settings

Lets you set a range of preferences for your radio.

Language

The default language is English. To change, just pick an option from the available list.

Alarm Snooze

Lets you specify the delay interval between alarms. Configurable from 1 to 30 minutes.

Idle Timeout

This setting lets you to specific the time interval where there is no interaction with the radio before switching to a screensaver mode.

Sleep

This is a handy function which automatically switches the radio into standby mode after a specified time period.

The default setting is "Off".

You can adjust the specified time by tapping the **Sleep** button on the screen or the remote control multiple times to cyle through the options of 15, 30, 45, 60, 75, 90, 105 or 120 minutes.

If Sleep mode is activated, a crescent moon icon with the time remaining will be displayed on the top part of the screen.

Software Update

Software updates for maintenance or added features for your radio will become available from time to time. If this option is enabled, the radio will automatically check for new software every time it connects to the internet. If an update is available, it will ask for your confirmation before commencing download. Software updates may take a few moments to download and require you to restart the radio.

Check for Updates

If you do not want the radi to automatically check for new software, select this option to check for updates on-demand. If there is new software available, you will be asked to confirm whether your wish to proceed to download.

Standby Backlight

This setting lets you adjust the brightness of the radio's display by using a sliding bar. Default setting is maximum. Tap the **Back** button to save your changes.

Software Verison

Displays your radio's current software installation version.

Factory Reset

This option resets the radio to its default factory values, erasing any personal settings which may have been configured.

You will be asked for confirmation before factory reset is carried out.

Setup Wizard

Please refer to the section on "Setup Wizard" on page 8

16

 
Auxiliary Mode

Auxiliary mode allows you to play audio from almost any external source (e.g. MP3 player) through your Ambiance Touch Radio.

Turn the volume of both Ambiance Touch Radio and your external device low before connecting.

Connect your external device using a cable to the 3.5mm Aux Input jack of Ambiance Touch Radio

From the main menu, tap:

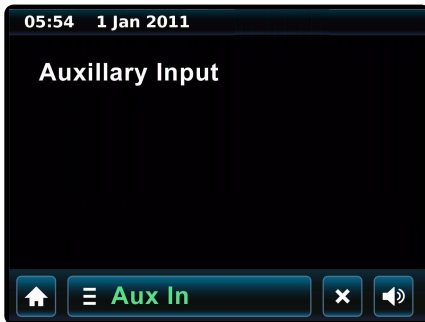

Adjust the volume of Ambiance Touch Radio and your external device to the desired level.

NOTE Ambiance Touch Radio only provides amplification audio for your external device. Use the controls on your external device to handle playback.

iPod Mode

Ambiance Touch radio has a dock that is effortless to setup with your iPod or iPhone. You can use Ambiance Touch Radio as a high quality amplifier and even charge your device while it is docked.

Docking your iPod/iPhone

 
Remove the dock cover at the top of the radio with your fingernail.

Note: Retain the cover in order to conceal the dock when it is not in use, especially for long periods of time.





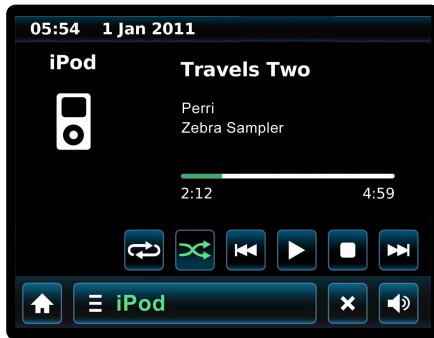

Mount your iPod or iPhone carefully onto the dock, Ambiance Touch Radio will ask if you want to switch to iPod mode. Tap **Yes**. You can also enter iPod mode from the main menu by tapping:



Using iPod Mode



The following actions are available on this screen.

-  Cycle between the Repeat Once, Repeat All and No Repeat options.
-  Turn on or off shuffled playback of your playlist.
-  Skip to the next song in the playlist. Tap and hold to fast forward the currently playing song.
-  Skip to the previous song in the playlist. Tap and hold to rewind the currently playing song.
-  Plays the currently selected song.
-  Stops playing the currently selected song.

The track title, artist name, album title, current position and track duration information are displayed on screen when the track is being played.

Control and Playback

You can use Ambiance Touch Radio's touchscreen interface or the remote control to operate the basic playback features of your device.

You can access other features and controls of your iPod or iPhone as normal while it is docked on the radio. Only the volume control will be disabled. Use the radio's volume control to adjust the volume.

Submenu Options

Play similar artist in Last.fm

Search Last.fm for artists similar to the one of your currently playing track. ??Requires Last.fm account/subscription.??See Last.fm chapter for more information.

Models compatible with your radio



iPhone 4
16GB 32GB



iPhone 3GS
8GB 16GB 32GB



iPhone 3G
8GB 16GB



iPhone
4GB 8GB 16GB



iPod touch
4th generation
8GB 32GB 64GB



iPod touch
3rd generation
32GB 64GB



iPod touch
2nd generation
8GB 16GB 32GB



iPod touch
1st generation
8GB 16GB 32GB



iPod nano
6th generation
8GB 16GB



iPod nano
5th generation
(video camera)
8GB 16GB



iPod
4th generation
40GB



iPod
4th generation
20GB



iPod nano
4th generation
(video)
8GB 16GB



iPod nano
3rd generation
(video)
4GB 8GB



iPod
3rd generation
30GB 40GB



iPod
3rd generation
10GB 15GB 20GB



iPod nano
2nd generation
(aluminium)
2GB 4GB 8GB



iPod nano
1st generation
1GB 2GB 4GB



iPod
1st + 2nd generation
5GB 10GB 20GB



iPod classic
160GB (2009)



iPod classic
160GB (2007)



iPod classic
80GB



iPod mini
4GB 8GB



iPod
5th generation
(video)
60GB 80GB



iPod
5th generation
(video)
30GB



iPod
4th generation
(color display)
40GB 60GB



iPod
4th generation
(color display)
20GB 30GB

 
Music Player Mode

In Music Player mode, you can browse and play audio files wirelessly from any PC or Mac computers across your network. Once you've set up your computer for sharing, you can browse your digital music collection via different categories such as Artist Name, Album Title or Genre.







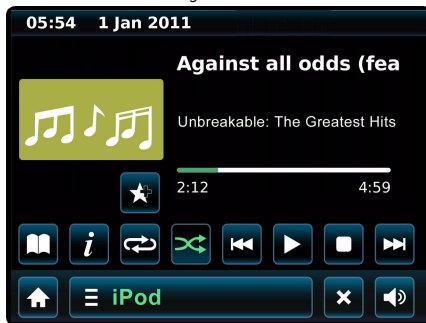


From the main menu, tap:



You will see the following screen



The following actions are available on this screen

-  View information about the song that you are listening to.
-  View technical information about the station that you are listening to.
-  Add the station you are listening to as a new favorite. Select a slot in your Favorites list to save to. If there is an existing favorite in the slot you selected, it will be replaced automatically.
-  Cycle between the Repeat Once, Repeat All and No Repeat options.
-  Turn on or off shuffled playback of your playlist.
-  Skip to the previous song in the playlist. Tap and hold to rewind the currently playing song.
-  Skip to the next song in the playlist. Tap and hold to fast forward the currently playing song.
-  Plays the currently selected song.
-  Stops playing the currently selected song.

Submenu Options

Repeat

Toggle repeat playback on/off.

Shuffle

Toggle shuffled playback on/off.

Add to My Playlist

Add the current song to your playlist.

Clear My Playlist

Remove all songs from the current playlist.

Return to playing screen

Exits the Submenu and returns to the Now Playing screen.

Streaming Audio Setup

Touch Radio uses the UPnP (Universal Plug and Play) protocol to play digital music files from your PC or Mac computer. First you must configure your computer for media sharing.

These are the recommended system requirements:

- For a Windows PC, use Windows Media Player (WMP) version 11 or higher.
- For a Mac computer, it should be running OS X or later with a UPnP application installed to access an iTunes library.

NOTE

 
- There are alternative UPnP platforms which can be used, but the following instructions are for WMP.
- iTunes does not currently operate a UPnP media server, but there are a number of third-party software applications (many of them free) which can enable you to access your iTunes library.

Alarm Settings

The radio comes with two alarm clocks and each of these can be programmed differently. To configure the alarm settings, from the main menu screen, tap one of the alarm icons.



Each alarm has an on/off toggle button and four adjustable settings. Tap any setting to review or edit it.

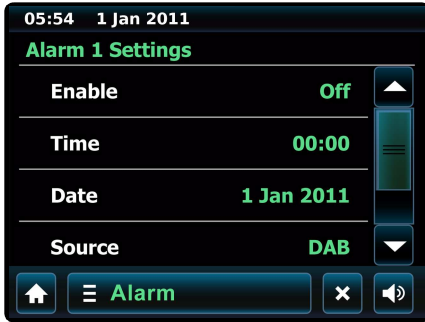

Enable

Set the alarm to go off Daily, Once, Each Weekday or Each Weekend Days. If you select "Once", you will also need to set a specific date. You can also turn the alarm Off.

NOTE When setting the alarm to Off, use the **Back** button after selecting it instead of the **Next** and **Prev** buttons, otherwise the Off setting will not be saved.

Time (and Date if applicable)

Set the alarm to go off at your desired time.

Source

Set the alarm to wake you with audio from one of the following modes: DAB Radio, Radio, iPod, Internet Radio, Last.fm, Pandora or Buzzer.

Volume

Set the volume level of the alarm from 0-30.

Alarm Snooze

When an alarm goes off, you'll see the following screen flashing



Tap anywhere on the touchscreen to "Snooze" the alarm. This puts the radio back into standby mode with the following screen displayed.

 


Tap the **Alarm Off** button at the top of the screen to turn the alarm off.

The snooze time remaining is displayed at the bottom of the screen. Tap it once to reset the countdown. Tap it multiple times to increase the duration by an additional five minutes each time.

The initial snooze duration can be set in the **System Settings** menu.

Tap "Miscellaneous Settings", then "Alarm Snooze". The Snooze interval can be set from between 1 to 30 minutes.



Other Information

Product Registration

Registering your product ensures you receive the most appropriate service and product support available. You can register your product at www.creative.com/register. Please note that your warranty rights are not dependent on registration.

Technical & Customer Support Services

Go to www.creative.com/support to resolve and troubleshoot technical queries at Creative's 24-hour self-help Knowledge Base. You can also find Customer Support Services and other helpful information here.

Warranty

Warranty information is supplied with your product.

Please keep your Proof of Purchase for the duration of the Warranty period.

