


REVO.

Internet, DAB/DAB+ and FM Digital Radio with Bluetooth and CD

Instruction Manual

SUPERCD

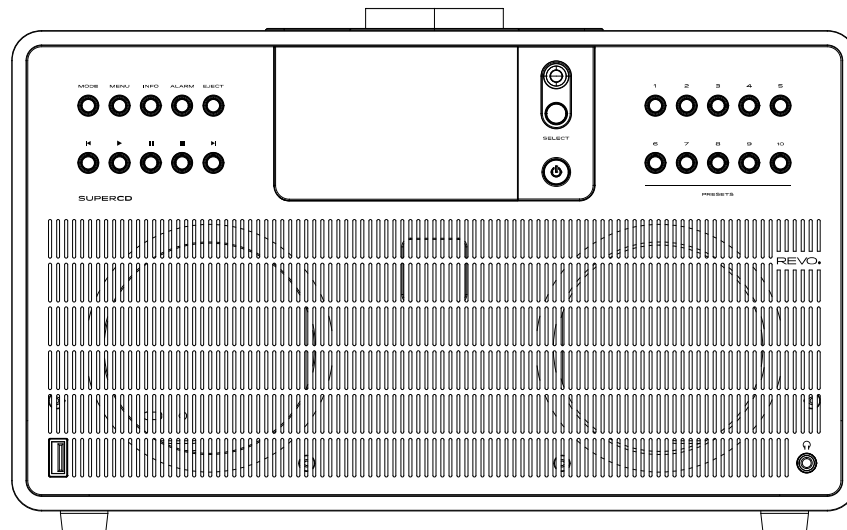



SAFETY INSTRUCTIONS



Please read and keep these instructions - All the safety and operating instructions should be read before this product is operated.

Safety notice



WARNING!

Check the device before use.

In the event of damage or a defect, the device must not be put into operation.

Risk of injury!

Risk of injury to children and people with reduced physical, sensory or mental abilities (e.g. partially disabled people, elderly people with limited physical and mental abilities) or a lack of experience and knowledge.

- > Only keep the device in places inaccessible to children.
- > This device can be used by children from the age of 8 and by people with reduced physical, sensory or mental capabilities or a lack of experience and/or knowledge if they are supervised or have been instructed in the safe use of the device and have understood the resulting dangers.
- > Never let children use the device unsupervised.

Suffocation hazard!

- > Packaging material is not a toy!
- > Keep the packaging materials used (bags, polystyrene pieces, etc.) out of the reach of children. Children are not allowed to play with the packaging. There is a risk of suffocation, especially with packaging films.

Operational safety



DANGER!

Risk of injury!

Risk of injury from electric shock from live parts. There is a risk of electric shock or fire due to an unintentional short circuit.

Check the device for damage before each use.

If you notice visible damage or the device shows visible damage, do not use it anymore.

If you discover a technical or mechanical problem, please contact TELESTAR Service.

In the event of malfunctions, immediately disconnect the device from the power source. To do this, immediately disconnect the power adapter from the mains socket and from the device.

Use only spare parts and accessories that have been supplied or approved by us.

Do not modify the device and do not use any additional devices or spare parts that have not been explicitly approved or supplied by us.

Do not use the device in potentially explosive areas. These include for example fuel storage areas, tank systems, or areas in which solvents are stored or processed.

Do not operate the device in areas with airborne particles (e.g. flour or wood dust).

Operating malfunctions can take the form of heating of the device or the development of smoke from the device or the device's power adapter.



Operational safety

Loud or unusual noises can also be a sign of a malfunction.

In this case, pull the power adapter out of the socket immediately.

Only touch the power adapter by the housing.

Never pull the power adapter by the cable.

If you are going to be absent for a long period of time or during a thunderstorm, pull the device out of the socket.

Make sure that contact with moisture, water or splash water is avoided and that no objects filled with liquids - such as vases - are placed on or near the appliance or power adapter.

If foreign bodies or liquids get into the device or the power adapter, pull the power adapter out of the socket immediately. Have the device checked by qualified personnel before you use it again.

Otherwise, there is a risk of electric shock.

Make sure that the device or the power adapter is not exposed to dripping or splashing water and that there are no open sources of fire (e.g. burning candles) near the device or the power adapter.

Connect device

- > Please ensure that the power source (socket) is easily accessible.
- > Do not kink or squeeze any cable connections.
- > Before using the device, check that the voltage information on the device corresponds to the local mains voltage. The information on the power adapter must correspond to the local power supply.
- > Place the device on a firm, level surface.
- > The device consumes power in standby mode. To completely disconnect the device from the mains, the power adapter must be disconnected.

Protect the device from defects

NOTE!

- > Unfavourable environmental conditions such as moisture, excessive heat or lack of ventilation can damage the device.
- > Only use the device in dry rooms.
 - Avoid the direct vicinity of: Heat sources such as radiators, open flames such as candles, devices with strong magnetic fields such as speakers.
 - Do not expose the device to extreme conditions, e.g. direct sunlight, high humidity, moisture, extremely high or low temperatures, open fire.
- > Ensure that there is sufficient distance from other objects so that the device is not covered so that adequate ventilation is always guaranteed.
- > Avoid direct sunlight and locations with an unusually large amount of dust.
- > Do not place any heavy objects on the device or the power adapter.
- > Do not use the device in potentially explosive areas.
- > These include for example fuel storage areas, tank systems, or areas in which solvents are stored or processed.
- > Do not operate the device in areas with air contaminated with particles (e.g. flour or wood dust).



Risk of injury

WARNING!

Excessive sound pressure when using earphones or headphones can cause damage or loss of hearing.

Listening with earphones or headphones at a high volume over a long period of time can cause damage to the user.

Please check the volume before inserting or putting on earphones or headphones in your ears. Set the volume to a low value and only increase the volume enough that you still find it comfortable.

Notes on the radio interface

The device generates an electromagnetic field.

Please pay attention to notices in your area that prohibit or restrict the operation of electronic devices.

This can be the case, for example, in hospitals, at petrol stations and tank farms or at airports. If there are corresponding warnings, immediately disconnect the device from the power adapter.

The components contained in the device generate electromagnetic energy and magnetic fields. These can affect medical devices such as pacemakers or defibrillators.

Therefore, please keep a safe and sufficient distance between medical devices and the radio.

If you have reason to believe that the radio is causing interference with a medical device, immediately turn off or unplug the radio.

Handling batteries

In principle, only use the type of battery included in the scope of delivery.

DANGER!

Risk of injury!

Improper handling of batteries poses a risk of injury!

Never open, short-circuit or throw batteries into open flames.

Never charge batteries. Attempting to charge batteries can create a risk of explosion.

The polarity must be observed! Make sure that the plus (+) and minus (-) poles are inserted correctly to avoid a short circuit.

Use only batteries specified for this product.

Remove batteries from the device if it is not going to be used for a long period of time.

Immediately remove exhausted or leaked batteries from the device.

If batteries have leaked, there is a risk of burns if they come into contact with the skin.

Keep both new and used batteries out of the reach of children.

There is a risk of internal injuries if batteries are swallowed. The battery acid in the batteries can cause injuries if it comes into contact with the skin.

In the event of accidental ingestion or signs of skin burns, rinse the affected areas with plenty of clean water and seek medical help immediately.

Batteries are not toys! Always keep new and used batteries away from children.



Remove leaking batteries from the device immediately and clean the contacts before inserting new batteries.

 **WARNING!**

There is a risk of explosion if batteries are used improperly!

- > Only use new batteries of the same type.
- > Please never use new and old batteries together in one device.
- > Pay attention to the correct polarisation when inserting the batteries.
- > Never charge batteries.
- > Batteries should only be stored in cool and dry places.
- > Never throw batteries into fire.
- > If the device is not used for a longer period of time, please remove the batteries from the device.
- > Never expose batteries to extreme heat or direct sunlight.
- > Batteries must not be deformed or opened.
- > Stop using the remote control if the battery door no longer closes properly.

Cleaning the device

Before cleaning, unplug the device from the socket.

Use a dry, soft cloth to clean the device. Please do not use any liquids to clean the device.

Do not use any solvents or cleaning agents, as these will damage the surface and/or markings on the device.

Cleaning must not be carried out by children.



TECHNICAL SUPPORT

Should you encounter problems using this product, please refer to the troubleshooting section on page 43 of this owner's guide.

Alternatively, call Revo technical support on :

+49 (0) 2676 / 9 52 01 01

Alternatively, e-mail support@revo.co.uk or visit the troubleshooting section of our website at: www.revo.co.uk/support

ENVIRONMENTAL INFO



PRODUCT DISPOSAL INSTRUCTIONS (WEEE DIRECTIVE)

The symbol shown here and on the product means that it is classed as Electrical or Electronic Equipment and should not be disposed with other household or commercial waste at the end of its working life.

The Waste of Electrical and Electronic Equipment (WEEE) Directive (2002/96/EC) has been put in place to recycle products using best available recovery and recycling techniques to minimise the impact on the environment, treat any hazardous substances and avoid the increasing landfill.

For more information please contact your local authority or the retailer where the product was purchased.

RoHS COMPLIANT & CE MARK



This product has been designed to comply with international directives on the Restriction of Hazardous Substances (RoHS) and has been designed and type-tested to comply with EU requirements and carries a CE mark.

SAFETY WARNINGS

- Do not operate this radio near water
- Do not remove screws or casing parts
- Use only the power supply unit supplied
- Avoid small objects and liquids from entering the product

Declaration of Conformity (RED)

Hereby, TELESTAR-DIGITAL GmbH declares that the radio equipment type SUPERSIGNAL is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: www.revo.co.uk/support

TELESTAR-DIGITAL GmbH,
Am Weiher 14, 56766 Ulmen, Germany



FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION

Changes or Modifications not expressly approved by the party responsible could void the user's authority to operate this device.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF Exposure statement

This equipment complies with the FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body.



WARRANTY

TELESTAR-DIGITAL GmbH warrants to the end user that this product will be free from defects in materials and workmanship in the course of normal use for a period of one year from the date of purchase.

This guarantee covers breakdowns due to manufacturing faults and does not apply in cases such as accidental damage, general wear and tear, user negligence, modification or repair not authorised by TELESTAR DIGITAL GmbH.

COPYRIGHTS AND ACKNOWLEDGEMENTS

Copyright 2020 TELESTAR DIGITAL GmbH. All rights reserved.

No part of this publication may be copied, distributed, transmitted or transcribed without the permission of TELESTAR DIGITAL GmbH.

REVO and SUPERCD and are trademarks or registered trademarks of TELESTAR DIGITAL GmbH.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks is under license.

TELESTAR-DIGITAL GmbH, Am Weiher 14, 56766 Ulmen, Germany

Tel: + 49 (0) 26 76 / 9 52 01 01

Email: enquiries@revo.co.uk

The Spotify software is subject to third party licenses found here:
www.spotify.com/connect/third-party-licenses

DISCLAIMER

TELESTAR-DIGITAL GmbH makes no representation or warranties with respect to the content of this publication, and specifically disclaims any implied warranties of merchantability or fitness for any particular purpose. Further, TELESTAR-DIGITAL GmbH reserves the right to make changes to this publication from time to time, without notification to any person or organisation.



CONTENTS

SAFETY INSTRUCTIONS.....	2
TECHNICAL SUPPORT	6
ENVIRONMENTAL INFO	6
Declaration of Conformity (RED).....	6
FCC STATEMENT	7
WARRANTY	8
COPYRIGHTS AND ACKNOWLEDGEMENTS	8
DISCLAIMER.....	8
CONTENTS	9
WELCOME	11
UNPACKING YOUR RADIO.....	11
YOUR RADIO.....	12
Front View	12
Rear View.....	13
Remote Control View	13
GETTING STARTED	15
SETUP WIZARD	17
INTERNET RADIO MODE	19
Now Playing Information	19
Storing Preset Stations	19
Recalling a Preset Station.....	20
PODCASTS.....	21
Storing Preset Stations	21
Recalling a Preset Station.....	22
SPOTIFY	23
AMAZON MUSIC.....	24
Play Music via UNDOK App.....	24
DEEZER	25
DAB MODE	26
Selecting DAB Mode.....	26
Selecting another Station	26
Secondary Service	26
Scanning Stations	26
Manual Tune.....	27
Prune Invalid	27
DRC (Dynamic Range Control) value	27
Changing Station Order	27
Now Playing Information	28
Storing Preset Stations	28
Recalling a Preset Station.....	29
FM MODE.....	30
Selecting FM Mode	30
Scan settings.....	30



Audio Settings	30
Storing Preset Stations	31
Recalling a Preset Station	31
BLUETOOTH MODE	32
AUX IN MODE	33
CD MODE	34
Inserting CD	34
Playing CD Track	34
Track Information	35
Shuffle Play	35
Repeat Play	35
Ejecting CD	35
USB MODE	36
USB Playback	36
Shuffle Play	36
Repeat Play	36
Now Playing Information	36
WIRELESS CONTROL APP - UNDOK	37
GENERAL OPERATION	39
Setting Sleep	39
Setting Alarm	39
Setting Equaliser	40
Streaming Audio Quality	40
Network Setup	40
Setting Time/Date	41
Setting Language	41
Factory Reset	41
Software Update – Over the network	41
Setup Wizard	42
Viewing System Info	42
Privacy Policy Notice	42
Setting Backlight	42
TROUBLESHOOTING	43
SPECIFICATIONS	45



WELCOME

Thank you for purchasing our SUPERCD radio, we are sure that it will provide you with many years of enjoyment and reliable service.

SUPERCD is the ultimate expression of our design and engineering philosophy, and the culmination of everything we have learnt in 10 years of award-winning product design and development.

Functionalism meets craft and technology, a next-generation audio device that beats at the heart of your musical ecosystem, providing whatever soundtrack you need. Radio from around in the globe, access to your personal music collection or an almost limitless supply of songs from the world's leading music streaming service.

This guide has been designed to quickly get you up-and-running with your radio, offer guidance on the more complex features of this product and provide information on safety, warranty details and troubleshooting.

UNPACKING YOUR RADIO

The SUPERCD box should include the following items:

- SUPERCD radio
- Remote control
- Power supply with multi-country adaptors
- Screen cleaning cloth
- Warranty card
- Owner's guide


Should any item be missing or damaged, please contact your point of purchase or call Revo directly on **+ 49 (0) 26 76 / 9 52 01 01**

NOTE: All packaging should be retained for possible future use, it is the safest way to transport your radio should it be necessary.



YOUR RADIO


Front View

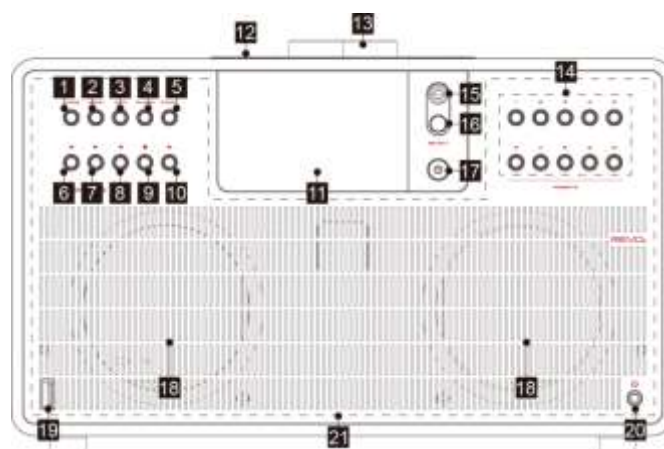

- 1. MODE** button
Press to switch among Internet radio, Podcasts, Spotify, Amazon Music, Deezer, DAB, FM, Bluetooth, CD, USB and Aux in mode.
- 2. MENU** button
Press to display or exit menu screen.
- 3. INFO** button
Press to view station information when a program is playing.
- 4. ALARM** button
Press to set alarms.
- 5. EJECT** button
Press to eject CD in CD mode.
- 6. ◀** button
Press to skip to previous track in Podcasts, Spotify, Amazon Music and Bluetooth mode.
Press and hold to fast reverse current playing track in Podcasts and Amazon Music mode.
- 7. ▶** button
Press to play track in Podcasts, Spotify, Amazon Music and Bluetooth mode.
- 8. ||** button
Press to pause current playing track in Podcasts, Spotify, Amazon Music and Bluetooth mode.
- 9. ■** button
Press to stop current playing track in Podcasts and Amazon Music mode.
- 10. ▶** button
Press to skip to next track in Podcasts, Spotify, Amazon Music and Bluetooth mode.
Press and hold to fast forward current playing track in Podcasts and Amazon Music mode.
- 11. Display**
- 12. CD slot**
- 13. VOLUME** knob
Turn to adjust volume level.
- 14. PRESETS 1-10** button
Press and hold to save preset station.
Press to recall preset station.
- 15. Joystick Controller**
Scroll Up/Down/Left/Right to browse options.
Press to confirm selection.
- 16. SELECT** button
Press to confirm selection.
- 17. ⏻** button
Press to switch unit on or standby.
- 18. Speaker**
- 19. USB** port
- 20. Headphones** socket
- 21. SNOOZE** area
Press to activate snooze function when alarm sounds.




Rear View

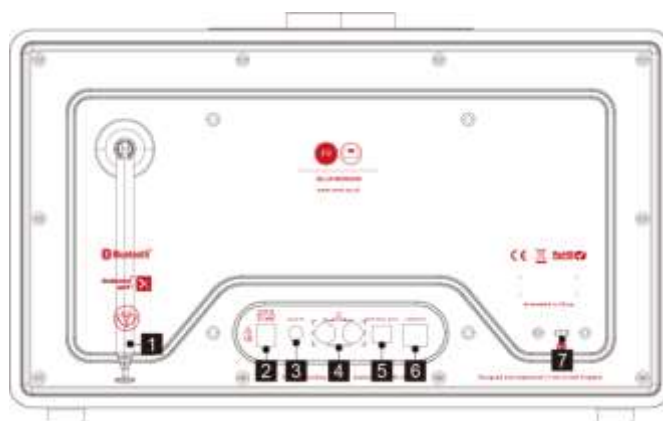

1. DAB/FM antenna
2. **DC IN** socket
3. **AUX IN** socket
4. **RCA** sockets
5. **DIGITAL OPTICAL OUT** socket
6. **UPDATE** socket
7. Kensington Lock slot

Remote Control View

- 01 - Power
- 02 - Volume Decrease
- 03 - Mode
- 04 - Scroll Up
- 05 - Left (Back)
- 06 - Favourite
- 07 - Skip Back (Fast Rewind)
- 08 - Stop
- 09 - Mute
- 10 - Alarm
- 11 - DAB Mode
- 12 - Preset 1-6
- 13 - Volume Increase
- 14 - Menu
- 15 - Select
- 16 - Right (Forward)
- 17 - Scroll Down
- 18 - Info
- 19 - Skip Forward (Fast Forward)
- 20 - Play, Pause
- 21 - Sleep
- 22 - Internet Mode
- 23 - Bluetooth Mode

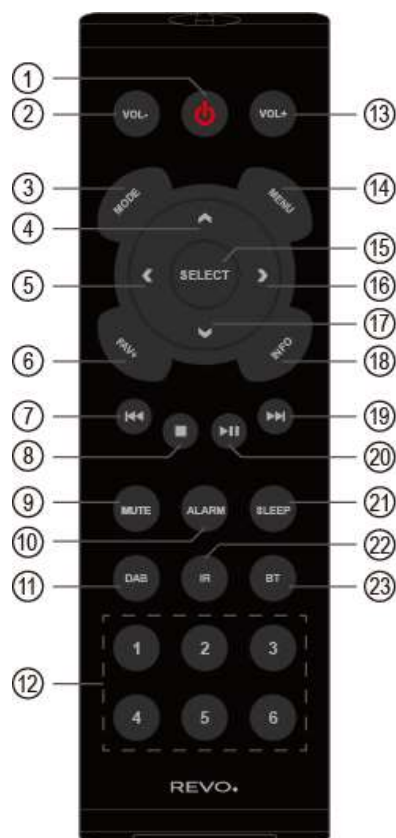




BATTERY REPLACEMENT

The SUPERCD remote control is powered by a single 3V lithium battery. Depending on usage, the battery should happily run for between 1 and 2 years.

Replace the battery when button presses seem sluggish, or when the operating range appears to have reduced significantly.

Replace the old battery with a new CR2025 lithium cell.

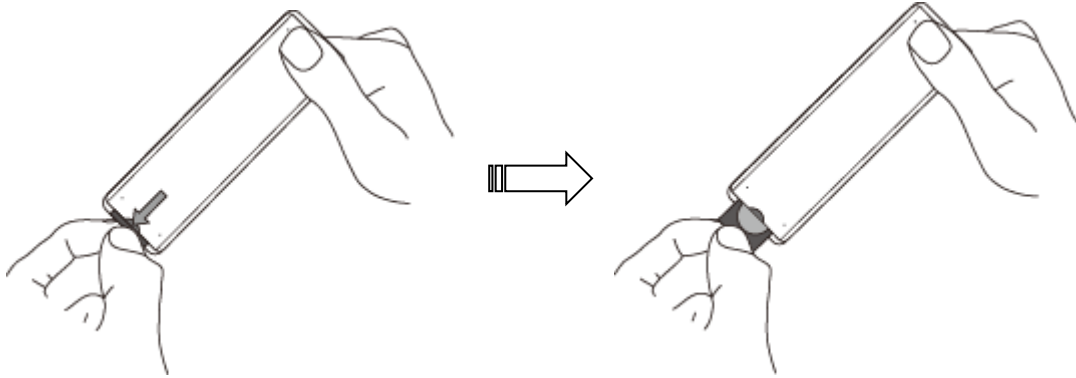



GETTING STARTED

Positioning your Radio

Place your radio on a flat / stable surface that is not subject to vibrations.

Avoid the following locations:

- Where the unit will be exposed to direct sunlight.
- Where the unit will be close to heat radiating sources.
- Where the humidity is high and ventilation is poor.
- Where it is dusty.
- Where it is damp or there is a possibility of water dripping or splashing onto unit.


Adjusting the Antenna

Fully extend antenna to ensure you receive the best reception possible in both DAB and FM radio modes. It may be necessary to adjust the position of the radio and/or antenna to achieve the best signal.

Power Supply


Your SUPERCD is supplied with a multi-region power supply, meaning that it can be operated in a number of countries around the world.

Select the correct plug for your country then connect it to the transformer block.

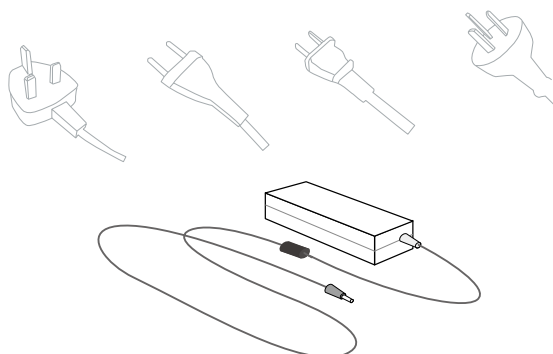

Turning the Unit On/Off

Connect the plug at the end of power adapter cable to the **DC IN** socket on the rear of unit. Then insert the power adapter into the mains socket. For initial use the unit will switch on.

Press  button to switch unit standby.

To turn off unit completely, unplug the power adapter from the mains socket.

Automatically Setting the Clock

The clock can be set and updated automatically if are connected to the internet or receive DAB/FM signals in your location. In order for the clock to synchronise to the current local time you must leave it on an Internet Radio, DAB or FM station for a short period of time. You can also choose how you would like to keep the clock up to date the Internet, DAB or FM radio signals. Go to **Main menu - System settings - Time/Date - Auto update**.

Volume Control


Turn **VOLUME** knob anti-clockwise/clockwise to decrease or increase volume level.



Using Headphones

You will require headphones fitted with a 3.5 mm diameter stereo plug. The **Headphones** socket is located at the front of unit. Headphones are not supplied with this radio.

Turn down the volume before connecting headphones. Slowly raise the volume with the headphones on until you reach your desired level.

 **Caution:** *long-term exposure to loud music may cause hearing damage. It is best to avoid extreme volume when using headphones, especially for extended periods of time.*

Using the AUDIO (RCA) Connection

Connect the Red and Black plugs at one end of the RCA cable to the **RCA** sockets on the rear of unit, and then insert the other end of the RCA cable to your audio system. You can enjoy music that transmits from your radio to your existing audio system.


Using the DIGITAL OUT (Optical) Connection

Use an optical cable (not supplied) to connect **DIGITAL OPTICAL OUT** socket of unit to audio system's OPTICAL IN socket. You can enjoy music that transmits from your radio to your existing audio system.

Charging from USB port

The USB port (5V 1A) is designed for media playback and mobile devices charging (e.g. MP3 player, mobile phone, etc.). It supplies 5 V DC at a charging current of up to 1000 mA (1 A).

Use a USB cable (not included) to connect mobile device to the USB port (5V 1A) on the front of unit and the mobile device will start charging.

 **Note:** *the USB port is only suitable for charging 5V 1A (or less) mobile phone device.*

Radio Auto-standby

To avoid unnecessary energy consumption, the radio will automatically go to standby after 15 minutes if the radio isn't playing any program/track.

Wireless LAN Setting

- A broadband Internet connection.
- A wireless access point (Wi-Fi) connected to your broadband Internet, preferably via a router.
- If your wireless network is configured to use Wired Equivalent Privacy (WEP) or Wi-Fi Protected Access (WPA) data encryption then you need to know the WEP or WPA code so you can get the radio to communicate with the network.
- If your wireless network is configured for trusted stations you will need to enter the Radio's MAC address into your wireless access point. To find the Radio's MAC address use menu items as follows: **Main menu - System settings - Network - View settings - MAC address.**

Before you continue, make sure that your wireless access point is powered up and connected to your broadband Internet. To get this part of the system working, read the instruction supplied with the wireless access point.



SETUP WIZARD

1. For initial use, you will be invited to visit website www.frontiersmart.com/privacy to learn Privacy Policy. To continue, press **SELECT** button on your radio.
2. Now you will enter **Setup wizard**.



3. Press **SELECT** button to confirm “YES” to start setup. Options in the setup wizard include the following:

Date/Time

Set 12 or 24 hour format

Auto update

Synchronously update clock from the playing program you selected or set by yourself.

- Update from DAB
- Update from FM
- Update from Network
Select your time zone and daylight savings is needed.
- No update
Set the date and time is needed.

Keep network connected

Keeps network connected especially in non-internet mode (i.e. DAB, FM, Bluetooth, CD, USB and Aux in mode).

Select YES or NO

4. The Wizard will now scan your location for accessible wireless networks. When the scan has finished, a list of networks will be displayed.

Names of wireless networks in range.




WPS security is available for this network.


Devices that support connection via WPS (Wi-Fi Protected Setup) are identified in the list as **[WPS]**.

5. Scroll Joystick and then press **SELECT** button to select a wireless network you wanted.
 - 1) If a WEP/WPA key (password) is required, radio will ask you to input the WEP/WPA code and display the password entry screen as follows:




 **Note:** If a password (WEP/WPA) isn't required by your network, radio will connect to the network automatically.

a. Scroll Joystick to cycle through the alphanumeric character list, press **SELECT** button to select an appointed character.

 **Note:** WEP/WPA pass codes are case-sensitive.

b. If a wrong operation is being conducted, select **BKSP** to delete designated character.

 **Note:** **BKSP** = Backspace; **CANCEL** means return to previous track; radio will automatically save the WEP/WPA you've input, so no bother to re-enter these codes.

c. After selecting the final character of your password, scroll Joystick to select **OK**, and then press **SELECT** button to confirm. The radio is connected to wireless network.

2) If you wish to establish a connection via WPS, press **SELECT** button after you have selected desired network. The radio then offers the option to initiate WPS.

Scroll Joystick to select through Push Button, Pin and Skip WPS, press **SELECT** button to confirm.

Push Button	You must start the WPS scan on the remote station (e.g. router). Consult the manual for your router or Access Points (AP) to learn how to do this. After you have done this, press SELECT button on the radio and then both devices will establish a connection.
Pin	The radio creates an 8-digit number, which you then have to enter into the remote station. After entering the PIN, press the SELECT button to establish the connection between both devices.
Skip WPS	In addition to a WPS connection, you can also establish a connection using a Pre-Shared-Key. The required key is often on the rear of the router, or you may have defined it yourself. This method is used automatically for networks without WPS. You can call up the Pre-Shared-Key function on networks with WPS by selecting menu item "Skip WPS". An input field should now appear. You can enter the required key (PSK) by scrolling Joystick and then pressing SELECT button, and then select "OK" and press SELECT button complete the entry. The radio should now establish the connection to the network.

6. Setup wizard completed, press **SELECT** button again to exit.



INTERNET RADIO MODE

1. The display will show “Main menu” after “Setup wizard” completed. Press **SELECT** button to select Internet radio mode.



2. Scroll Joystick and then press **SELECT** button to select a station.

“Local country”:	Stations change according to your current location (e.g. China). It displays local stations of your current location.
Search:	Enter all or part of station name to find a station.
Location:	Choose from the radio stations provided by any country which you choose from a list.
Popular:	List the stations that have the most listeners.
Discover:	Discovery of internet radio stations by country, genre or language.

Note: if failed to connect to network, please follow:

- a. Check your Router, see it working normally or not.
- b. Relocate your radio to a stronger signal position is necessary.
- c. Make sure your password is correct input.

Now Playing Information

Internet programs broadcast additional information. Press **INFO** button repeatedly while a program is playing, the display will show the information through Program, Slogan, Description, Language, Location, Bit rate, Codec, Sampling Rate, Playback Buffer and Date.

Storing Preset Stations

Your radio can store up to 10 of your favourite Internet stations and podcasts. This will enable you to access your favourite station/podcast quickly and easily.

Storing Preset via main unit:

1. While a program is playing, press and hold one of **PRESETS 1-10** button on main unit to store station/podcast directly to preset number 1 - 10.
2. Display will show “Preset stored” and then preset number “★#” will show on the display.




Storing Preset via remote control:

1. While a program is playing, press and hold one of **Presets 1-6** button on remote control to store station/podcast directly to preset number 1 - 6.
2. Display will show "Preset stored" and then preset number "★#" will show on the display.

Alternatively,

1. Press and hold **FAV+** button on the remote control until display shows "Save to Preset".
2. Scroll Joystick to select among preset numbers 1-10.
3. Press **SELECT** button to confirm, the display shows "Preset stored".

 **Note:** the occupied preset number will be overwritten automatically if willing to store another station/podcast.

Recalling a Preset Station

Recalling Preset via main unit:

1. Press one of **PRESETS 1-10** button on main unit to directly play preset station/podcast 1 - 10.
2. "Preset empty" will be shown if the preset station/podcast isn't allocated.

Recalling Preset via remote control:

1. Press one of **Presets 1-6** button on remote control to directly play preset station/podcast 1 - 6.
2. "Preset empty" will be shown if the preset station/podcast isn't allocated.

Alternatively,

1. Press **FAV+** button on the remote control to show "Recall from Preset".
2. Scroll Joystick to select through stored preset station list, and then press **SELECT** button to confirm the station which you want to play.
3. "Preset empty" will be shown if the preset station/podcast isn't allocated.



PODCASTS

1. Press **MODE** button to select Podcasts mode.



2. Scroll Joystick and then press **SELECT** button to select a podcast.

“Local country”:	Podcasts change according to your current location (e.g. China). It displays local podcasts of your current location.
Search:	Enter all or part of podcast name to find a podcast.
Location:	Choose from the podcasts provided by any country which you choose from a list.
Discover:	Discovery of podcasts by country, genre or language.

Storing Preset Stations

Your radio can store up to 10 of your favourite Internet stations and podcasts. This will enable you to access your favourite station/podcast quickly and easily.

Storing Preset via main unit:


1. While a program is playing, press and hold one of **PRESETS 1-10** button on main unit to store station/podcast directly to preset number 1 - 10.
2. Display will show “Preset stored” and then preset number “★#” will show on the display.

Storing Preset via remote control:

1. While a program is playing, press and hold one of **Presets 1-6** button on remote control to store station/podcast directly to preset number 1 - 6.
2. Display will show “Preset stored” and then preset number “★#” will show on the display.

Alternatively,

1. Press and hold **FAV+** button on the remote control until display shows “Save to Preset”.
2. Scroll Joystick to select among preset numbers 1-10.
3. Press **SELECT** button to confirm, the display shows “Preset stored”.

 **Note:** the occupied preset number will be overwritten automatically if willing to store another station/podcast.



Recalling a Preset Station

Recalling Preset via main unit:

1. Press one of **PRESETS 1-10** button on main unit to directly play preset station/podcast 1 - 10.
2. "Preset empty" will be shown if the preset station/podcast isn't allocated.

Recalling Preset via remote control:

1. Press one of **Presets 1-6** button on remote control to directly play preset station/podcast 1 - 6.
2. "Preset empty" will be shown if the preset station/podcast isn't allocated.

Alternatively,

1. Press **FAV+** button on the remote control to show "Recall from preset".
2. Scroll Joystick to select through stored preset station list, and then press **SELECT** button to confirm the station which you want to play.
3. "Preset empty" will be shown if the preset station/podcast isn't allocated.



SPOTIFY

Your radio has Spotify Connect built in. Press **MODE** button to select Spotify Connect mode.

Use your phone, tablet or computer as a remote control for Spotify.

Go to spotify.com/connect to learn how.

The Spotify software is subject to third party licenses found here:

www.spotify.com/connect/third-party-licenses



AMAZON MUSIC


Your radio has Amazon Music built in. This enables you control the music using the UNDOK app on your mobile, tablet or PC.

You'll need an Amazon account to use Amazon Music.

Play Music via UNDOK App

Please refer to “**Wireless Control App - UNDOK**” on page 37 to learn more about how to use UNDOK app.

1. Download Amazon Music app and UNDOK app for your smartphone or tablet (iOS or Android).
2. Start UNDOK app on your smartphone or tablet using the same WiFi network as your radio.
3. Select “Revo SuperCD” from list on UNDOK app.
4. Select “Amazon Music” on “SOURCE” tab.
*Note: alternatively, press **MODE** button on the unit to select Amazon Music mode.*
5. “NOW PLAYING” screen appears and no anything is playing.
6. Tap “BROWSE” tab to select music to play. For initial use, you will be required to login with an Amazon account.

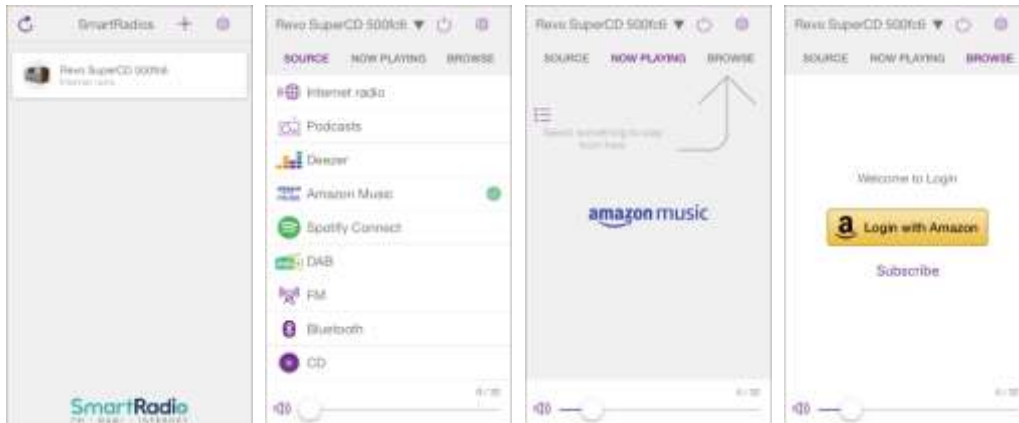



DEEZER

Deezer comes preinstalled on your radio. Tracks, playlists and other programmes available from Deezer can be selected using your radio or UNDOK app, and enjoy music on your radio.

You'll need a Deezer account. Learn more at www.deezer.com.

Play Music on Your radio

1. Press **MODE** button to select Deezer mode.
2. You're require to input Deezer username and then password as follows:



Alternatively, use UNDOK app to login.

3. Once login successfully, operate joystick and **SELECT** button on the radio or use UNDOK app to access you preferred music.




DAB MODE

Selecting DAB Mode

1. Press **MODE** button to select DAB mode.
2. For initial use, radio will carry out a full scan and store stations list in memory.



3. Once the scanning is completed, the DAB/DAB+ stations will be displayed in alphanumeric order. Scroll Joystick to select you desired station and then press **SELECT** button to broadcast.

 **Note:** if no DAB/DAB+ signal is found in your area, it may be necessary to relocate your radio to a stronger signal area.

Selecting another Station

1. While a program is playing, press **MENU** button, scroll Joystick to select “Station list”, and then press **SELECT** button to confirm.
2. Scroll Joystick to select the station you want to play, and then press **SELECT** button to confirm.

Secondary Service

You may see a “>>” symbol after the name of the station, this indicates that there are secondary services available to that station. These secondary services contain extra services that are related to the primary station. E.g. a sports station may want to add extra commentaries. The secondary services are inserted directly after the primary station (a “<<” symbol is before the name of the station) in the station list.

To select the secondary station, press **MENU** button, scroll Joystick to select “Station list”, and then press **SELECT** button to confirm. Scroll Joystick until you find the secondary service you want, then press **SELECT** button to select it.

When the secondary service ends, the unit will automatically switch back to the primary station.

Scanning Stations

Press **MENU** button, scroll Joystick to select “Scan”, and then press **SELECT** button to full scan.




Manual Tune

This can help you when adjusting your antenna or when adding stations that were missed while auto tuning.

1. Press **MENU** button, scroll Joystick to select “Manual tune”, and then press **SELECT** button to confirm, the display will show the channel number and frequency.
2. Scroll Joystick to select the channel you wanted, and then press **SELECT** button to confirm.



 **Note:** If there is a multiplex corresponding to this channel and frequency, then the display will show a tuning meter with the signal strength and the multiplex name after a few seconds. The new stations will be added to station list automatically.

3. To play the station, first press **MENU** button repeatedly to exit manual tune.

Prune Invalid

You may remove all unavailable stations from the station list.

1. Press **MENU** button, scroll Joystick to select “Prune invalid”, and then press **SELECT** button to confirm.
2. Scroll Joystick to select “YES”, and then press **SELECT** button to confirm removing all invalid stations.

DRC (Dynamic Range Control) value

If you are listening to music with high dynamic range in a noisy environment (for example classical music while cooking), you may wish to compress the audio dynamic range. This makes quiet sounds louder and loud sounds quieter.

1. Press **MENU** button, scroll Joystick to select “DRC”, and then press **SELECT** button to confirm.
2. Scroll Joystick to select “DRC high”, “DRC low” or “DRC off”, and then press **SELECT** button to confirm.

Changing Station Order

You may want to display the stations in different order.

1. Press **MENU** button, scroll Joystick to select “Station order”, and then press **SELECT** button to confirm.
2. Scroll Joystick to select “Alphanumeric” or “Ensemble”, and then press **SELECT** button to confirm your selecting option.

Alphanumeric	Display all stations in alphanumeric order.
Ensemble	List currently broadcasting active stations before inactive ones.




Now Playing Information


DAB/DAB+ stations broadcast additional information. Press **INFO** button repeatedly while a program is playing to view information through DLS (Dynamic Label Segment), Ensemble, Program Frequency, Signal Quality, Signal Strength, Bitrate, Codec, Channel and Date.

Showing Signal Strength

While you selected signal strength, a signal bar with the strength of the current station will show on the display.

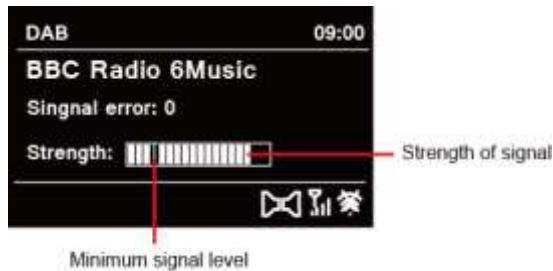

The indicator on the signal bar shows the minimum acceptable signal level.

 **Note:** Stations with signal strength below the minimum signal level may not provide a steady stream of audio.

Storing Preset Stations

Your radio can store up to 10 of your favourite DAB. This will enable you to access your favourite station quickly and easily.

Storing Preset via main unit:


1. While a program is playing, press and hold one of **PRESETS 1-10** button on main unit to store station directly to preset number 1 - 10.
2. Display will show "Preset stored" and then preset number "★#" will show on the display.

Storing Preset via remote control:

1. While a program is playing, press and hold one of **Presets 1-6** button on remote control to store station directly to preset number 1 - 6.
2. Display will show "Preset stored" and then preset number "★#" will show on the display.

Alternatively,

1. Press and hold **FAV+** button on the remote control until display shows "Save to Preset".
2. Scroll Joystick to select among preset numbers 1-10.
3. Press **SELECT** button to confirm, the display shows "Preset stored".

 **Note:** the occupied preset number will be overwritten automatically if willing to store another station.



Recalling a Preset Station

Recalling Preset via main unit:

1. Press one of **PRESETS 1-10** button on main unit to directly play preset station 1 - 10.
2. "Preset empty" will be shown if the preset station isn't allocated.

Recalling Preset via remote control:

1. Press one of **Presets 1-6** button on remote control to directly play preset station 1 - 6.
2. "Preset empty" will be shown if the preset station isn't allocated.

Alternatively,


1. Press **FAV+** button on the remote control to show "Recall from Preset".
2. Scroll Joystick to select through stored preset station list, and then press **SELECT** button to confirm the station which you want to play.
3. "Preset empty" will be shown if the preset station/podcast isn't allocated.



FM MODE

Selecting FM Mode

1. Press **MODE** button to select FM mode.
2. For initial use, it will start at the beginning of the FM frequency range (87.50MHz). Otherwise, the last listened FM station will be selected.

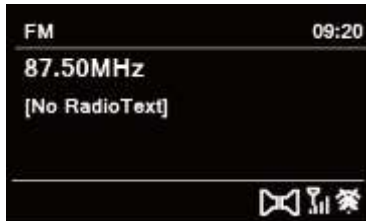

3. **To manually scan**, while FM frequency shows up, scroll Joystick up/down to change frequency by 0.05MHz per step.
4. **To automatically scan**, while FM frequency shows up, press **SELECT** button, your radio will automatically search until it reached the next available station.

Scan settings

This enables you set FM scans stop at stations with strong signal or stop at any available station.

1. Press **MENU** button, scroll Joystick to select “Scan setting”, and then press **SELECT** button to confirm.
2. Display will show “Strong stations only?”, scroll Joystick to select “YES”, and then press **SELECT** button to confirm. The scans stop only at stations with good signal strength.
3. Scroll Joystick to select “NO”, and then press **SELECT** button to confirm. The scans stop at any available station. This may result in a poor quality audio from weak stations.

Audio Settings

By default, all stereo stations are reproduced in stereo. For weak stations, this may result in a poor quality audio. The audio quality can be improved using mono.

1. To play weak stations in mono, press **MENU** button, scroll Joystick to select “Audio setting”, and then press **SELECT** button to confirm.
2. Display will show “Listen in Mono only?”, scroll Joystick to select “YES”, and then press **SELECT** button to confirm.



Storing Preset Stations

Your radio can store up to 10 of your favourite FM. This will enable you to access your favourite station quickly and easily.

Storing Preset via main unit:


1. While a program is playing, press and hold one of **PRESETS 1-10** button on main unit to store station directly to preset number 1 - 10.
2. Display will show "Preset stored" and then preset number "★#" will show on the display.

Storing Preset via remote control:

1. While a program is playing, press and hold one of **Presets 1-6** button on remote control to store station directly to preset number 1 - 6.
2. Display will show "Preset stored" and then preset number "★#" will show on the display.

Alternatively,

1. Press and hold **FAV+** button on the remote control until display shows "Save to Preset".
2. Scroll Joystick to select among preset numbers 1-10.
3. Press **SELECT** button to confirm, the display shows "Preset stored".

 **Note:** the occupied preset number will be overwritten automatically if willing to store another station.

Recalling a Preset Station

Recalling Preset via main unit:

1. Press one of **PRESETS 1-10** button on main unit to directly play preset station 1 - 10.
2. "Preset empty" will be shown if the preset station isn't allocated.

Recalling Preset via remote control:

1. Press one of **Presets 1-6** button on remote control to directly play preset station 1 - 6.
2. "Preset empty" will be shown if the preset station isn't allocated.

Alternatively,

1. Press **FAV+** button on the remote control to show "Recall from Preset".
2. Scroll Joystick to select through stored preset station list, and then press **SELECT** button to confirm the station which you want to play.
3. "Preset empty" will be shown if the preset station/podcast isn't allocated.



BLUETOOTH MODE

Pair the unit with a Bluetooth device to listen to music:

1. Press **MODE** button to select Bluetooth mode.



2. The display will show “Bluetooth Discoverable”.
3. Activate your Bluetooth device and look for your radio’s model number “Revo SuperCD” in the Bluetooth list. Select it.
4. Display will show “Connected” when connection is successful.
5. To learn more about Bluetooth connection, press **MENU** button, and then scroll Joystick to select “View details”, press **SELECT** button to confirm.

Bluetooth Info:	Bluetooth status, firmware and friendly name of the unit
Connected Device:	Current connected Bluetooth device and AVRCP version
Paired Device List:	List of devices which paired with the unit


6. To connect with other Bluetooth device, press **MENU** button, and then scroll Joystick to select “Setup Bluetooth”, press **SELECT** button to disconnect connection. Then follow steps 2-4 to connect another Bluetooth device.



AUX IN MODE

AUX IN allows for quick and easy connection to an MP3 player or other external audio sources.

1. Before connecting to the mains socket, use a 3.5mm audio cable (not supplied) to connect to your external audio device through the **AUX IN** socket at the rear of unit.
2. Connect power adapter to mains socket, press **⏻** button to switch unit on.
3. Press **MODE** button to select Auxiliary Input mode.

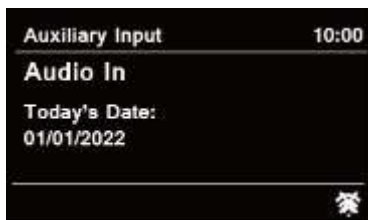

4. In Aux in mode, you may operate your audio device directly for playback features.
5. To gain optimal volume levels, adjusting the output volume level on the audio device as well is recommended.



CD MODE

Inserting CD

Press **MODE** button to select CD mode, and then insert a CD into CD slot with the imprinted side facing up, the display will show “Loading” after few seconds.

Note: press **EJECT** button to avoid CD stuck in CD slot before inserting a new CD is recommended.

Alternatively, insert a CD into CD slot in any mode, the radio will switch to CD mode.

Caution: do not put any mini CDs or audio carriers into the CD tray which differ from the standard CD formats. Those may potentially not play properly and may not be ejected again. Only insert one CD at the time into the CD tray. CD with audio format CD-DA, MP3 and WMA are compatible. Playback depends on the CD quality and recording quality.

Playing CD Track

1. During Audio CD playback, the display shows the File name, Folder number (only available for MP3/WMA format), Track number and the elapsed time.



- Note:** CD may jumps and plays inconstantly due to unit vibrate when playing track with heavy bass at high volume level. Turn down the volume is recommended.
2. When a track is playing, you can:
 - a. Press **◀** button to return to the beginning of track, press **◀** button a second time to skip to previous track.
 - b. Press and hold **◀** button to fast reverse current playing track.
 - c. Press **▶** button to skip to next track.
 - d. Press and hold **▶** button to fast forward current playing track.
 - e. Press **▶** button to play track.
 - f. Press **⏸** button to pause current playing track.
 - g. Press **■** button to stop playing.

Note: tracks in MP3/WMA format will be listed in folder “Browse”. Follow the steps below to select track.

 - i Press **MENU** button, and then scroll Joystick to select “Browse”, and then press **SELECT** button to confirm.
 - ii Scroll Joystick to cycle through the track list, and then press **SELECT** button to select your desired track.



Track Information

While a MP3/WMA track is playing, press **INFO** button on the remote control repeatedly can view tags through File name, Folder, Album, Artist and Title.

Shuffle Play

- 1 Press **MENU** button, scroll Joystick to select "Shuffle", and then press **SELECT** button to confirm.
- 2 To randomly play tracks, scroll Joystick to select "On", and then press **SELECT** button to confirm.
- 3 To exit shuffle play, scroll Joystick to select "Off", and then press **SELECT** button to confirm.

Repeat Play

1. Press **MENU** button, scroll Joystick to select "Repeat", and then press **SELECT** button to confirm.
2. To repeat current track, scroll Joystick to select "Repeat one", and then press **SELECT** button to confirm.
3. To repeat the folder of current track, scroll Joystick to select "Repeat folder", and then press **SELECT** button to confirm.

 **Note:** only available for CD with MP3/WMA format.

4. To repeat all tracks, scroll Joystick to select "Repeat all", and then press **SELECT** button to confirm.
5. To exit repeat play, scroll Joystick to select "Off", and then press **SELECT** button to confirm.

Ejecting CD


Press **EJECT** button, the display will show "Eject", and then CD can be ejected from unit. Take the CD out.



USB MODE

USB Playback


The USB playback enables you to play MP3, WMA and AAC music which in your USB disk.

1. Press **MODE** button to select USB mode.
 2. Insert USB disk to USB port at the front of unit, the music will be played after few seconds.
-  **Note:** tracks in MP3/WMA format will be listed in folder "Browse". Follow the steps below to select track.
- iii Press **MENU** button, and then scroll Joystick to select "Browse", and then press **SELECT** button to confirm.
 - iv Scroll Joystick to cycle through the track list, and then press **SELECT** button to select your desired track.

Shuffle Play

1. Press **MENU** button, scroll Joystick to select "Shuffle", and then press **SELECT** button to confirm.
2. To randomly play tracks, scroll Joystick to select "On", and then press **SELECT** button to confirm.
3. To exit shuffle play, scroll Joystick to select "Off", and then press **SELECT** button to confirm.

Repeat Play

1. Press **MENU** button, scroll Joystick to select "Repeat", and then press **SELECT** button to confirm.
 2. To repeat current track, scroll Joystick to select "Repeat one", and then press **SELECT** button to confirm.
 3. To repeat the folder of current track, scroll Joystick to select "Repeat folder", and then press **SELECT** button to confirm.
-  **Note:** only available for track with MP3/WMA format.
4. To repeat all tracks, scroll Joystick to select "Repeat all", and then press **SELECT** button to confirm.
 5. To exit repeat play, scroll Joystick to select "Off", and then press **SELECT** button to confirm.


Now Playing Information


While a MP3/WMA track is playing, press **INFO** button on the remote control repeatedly can view tags through File name, Folder, Album, Artist and Title.



WIRELESS CONTROL APP - UNDOK

UNDOK App enables you use your smartphone (or tablet) to wirelessly control your radio when both devices connecting to same network.

1. Download **UNDOK**  app from **App Store** (iOS) or **Google Play** (Android) on your smartphone or tablet.
2. Start UNDOK app, making sure your radio and smartphone are connected to same WiFi network.
3. All available devices will be listed. Tap your radio “Revo SuperCD” to connect to.
4. Now playing screen is shown. (Play Internet radio mode for example.)

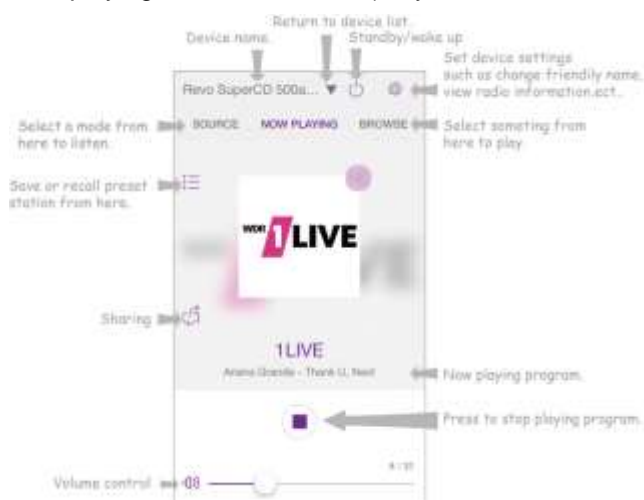



5. To save a preset station, tap Preset  icon on now playing screen and then Presets screen will pop up. Tap the plus sign  after number 1 - 10 to save preset station. (Fig. 1)
6. To recall a preset station, tap the station name on the Presets screen to play the station. (Fig. 2)



Fig. 1



Fig. 2

7. To ensure your radio only can be controlled by definite smartphone, you can set a PIN code which you should input on UNDOK app to get authority to connect to your radio. The default code is 1234, you also can give a user-defined code from **Main menu - System settings - Network – NetRemote PIN setup**.



-
8. To ensure you can use UNDOK app in all modes especially in non-internet modes (i.e. in DAB, FM, Bluetooth, CD, USB or Aux in mode) you need to select **Main menu - System settings - Network - Keep network connected - YES**. This also allows you to wake the radio from standby by using your UNDOK app.


*🗒 **Note:** If unattended to use radio for long periods of time, e.g. overnight, while on holiday or while out of the house, select "NO" to avoid unnecessary energy consumption.*



GENERAL OPERATION

Setting Sleep

This feature enables your radio to switch to standby mode by itself after a set sleep time.

1. Press **MENU** button - **Main menu** - **Sleep**, and then press **SELECT** button to confirm.
2. Scroll Joystick to select a sleep time, and then press **SELECT** button to confirm. The sleep icon  and sleep time will show on the display.

The sleep time options: Sleep OFF/15/30/45/60 MINS.

3. To turn the sleep function off while the sleep timer is still counting down, select “Sleep” option, scroll Joystick to select “Sleep OFF”.

 **Note:** alternatively, press **SLEEP** button on remote control to set sleep time.

Setting Alarm





Your radio includes dual alarms. Set Alarm, making sure set time at first.

1. Press **MENU** button - **Main menu** - **Alarms**, and then press **SELECT** button to confirm.
2. Scroll Joystick to select “Alarm 1” or “Alarm 2”, and then press **SELECT** button to confirm.

 **Note:** alternatively, you can also press **ALARM** button and then scroll Joystick to select “Alarm 1” or “Alarm 2”, press **SELECT** button to confirm.

3. Scroll Joystick to select options, and then press **SELECT** button to confirm the setting.

Enable:	Alarm active day: Off, Daily, Once, Weekends or Weekdays
Time:	Alarm time: 00:00 (manually set up the time)
Mode:	Alarm mode: Buzzer, Internet radio, DAB or FM (If the wake-up mode is DAB and the DAB signal strength is low, the buzzer alarm will be triggered.)
Preset:	Last listened or saved preset station (not available for Buzzer mode).
Volume:	Alarm volume
Save:	Save the alarm

4. When the display shows “Alarm Saved”, the alarm setting is successful.  or  will show on the display.
5. **To temporarily switch off alarm**, touch **SNOOZE** area to activate snooze and set snooze time for 5, 10, 15 or 30 minutes in turn. The unit will go to standby and snooze time will show on the display.
6. **To turn off alarm**, press **ALARM** button when the alarm sounds.
7. **To cancel Alarm**, refer to steps1-3 to enable alarm “Off”.  or  will disappear from display.



Setting Equaliser

This feature enables you to choose a sound equalization profile. Each of the equalization setting will change the tone of the sound from your radio when selected.

1. Press **MENU** button - **Main menu - System settings - Equaliser**, and then press **SELECT** button to confirm.
2. Scroll Joystick and then press **SELECT** button to select a profile. The equalization profile options: Normal/Jazz/Rock/Movie/Classic/Pop/News/My EQ.
3. To set up My EQ, select “My EQ profile setup”, and then press **SELECT** button to confirm.
 - a. Scroll Joystick to select “Bass”, “Treble” or “Loudness”, and then press **SELECT** button to confirm.
 - b. Scroll Joystick to change the value of Bass or Treble, or set Loudness “On” or “Off”, and then press **SELECT** button to confirm.
 - c. Press **MENU** button, display will show “Save changes”. Scroll Joystick and press **SELECT** button to select “YES” to save changes.

Streaming Audio Quality

This feature applies to music service, such as Spotify, Amazon Music, Deezer. Users have opportunity to choose streaming media with different bitrate to get better audio quality.

1. Press **MENU** button - **Main menu - System settings - Streaming audio quality**, and then press **SELECT** button to confirm.
2. Scroll Joystick to select “Low quality”, “Normal quality” or “High quality”, then press **SELECT** button to confirm.

Network Setup

Users encountering networking issue may find these options useful for diagnosing and fixing network problems.

1. Press **MENU** button - **Main menu - System settings - Network**, and then press **SELECT** button to confirm.
2. Scroll Joystick and press **SELECT** button to select your preferred network setting option:

Network wizard:	Scan for available networks
PBC Wlan setup:	Set up a WPS encrypted network (only support the router uses WPS 2.0)
View settings.:	View network settings such as MAC address, Wlan region, IP address etc.
Manual settings:	Set wireless connection
NetRemote PIN setup	The default PIN code is 1234. Set a PIN code to secure radio connection.
Network profile:	List of registered networks or press SELECT button delete some unwanted networks
Clear network settings:	Clear current network settings
Keep network connected:	Keep network connected in DAB, FM, Bluetooth, CD, USB, Aux in and standby modes

3. Press **SELECT** button to confirm your setting.



Setting Time/Date

1. Press **MENU** button - **Main menu** - **System settings** - **Time/Date**, and then press **SELECT** button to confirm.
2. Scroll Joystick to select options, and then press **SELECT** button to confirm the setting.

Set Time/date:	Manually set-up both Time and Date
Auto update:	“Update from DAB”, “Update from FM”, “Update from Network” or “No update”
Set format:	12 or 24 hour format
Set timezone:	Select a timezone (Only available when auto update from Network.)
Daylight saving:	Daylight saving settings (Only available when auto update from Network.)

3. Then setting time according to your personal preference.

Setting Language

This feature enables you to change menu language. There are thirteen languages available: English/Danish/Dutch/Finnish/French/German/Italian/Norwegian/Polish/Portuguese/Spanish/Swedish/Turkish.

1. Press **MENU** button - **Main menu** - **System settings** - **Language**, and then press **SELECT** button to confirm.
2. Scroll Joystick to select language, and then press **SELECT** button to confirm.

Factory Reset

Doing a factory reset clears all user defined setting, replacing them with the original default values, so time/date, DAB station list and preset stations are all lost.

1. Press **MENU** button - **Main menu** - **System settings** - **Factory Reset**, and then press **SELECT** button to confirm.
2. Scroll Joystick to select “YES”, and then press **SELECT** button to confirm.

Software Update – Over the network

From time to time, your radio may make software upgrades available with bug fixes and/or additional features.

If your radio detects that newer software is available, it will ask if you want to go ahead with an update. If you agree, the new software is then downloaded and installed.

After a software upgrade, all user settings are maintained.

C A U T I O N

Before starting a software upgrade, ensure that your radio is plugged into a stable mains power connection. Remove power during a software update may permanently damage the unit.



1. Press **MENU** button - **Main menu - System settings - Software update**, and then press **SELECT** button to confirm.
2. Scroll Joystick to select “Auto-check setting”, your radio will check periodically for new version software.
3. Scroll Joystick to select “Check now”, your radio will now to check new version software and automatically upgrade the detected new version software.

Setup Wizard

When this unit is started for the first time, it runs through a setup wizard to configure settings for date/time and network. Once this has finished, the system is ready to use in most modes. Redo setup wizard will not erase user settings such as searched stations and presets.

1. Press **MENU** button - **Main menu - System settings - Setup wizard**, and then press **SELECT** button to confirm.
2. Scroll Joystick to select “YES”, and then press **SELECT** button to confirm. Please refer to page 17 for following settings.

Viewing System Info

This information may be requested when dealing with technical support issues.

1. Press **MENU** button - **Main menu - System settings - Info**, and then press **SELECT** button to confirm.
2. Scroll Joystick to view “SW version”, “Spotify version”, “Radio ID” and “Friendly Name”.

Privacy Policy Notice

This notice provides the website which you can browse Frontier Privacy Policy.

Press **MENU** button - **Main menu - System settings - Privacy Policy**, and then press **SELECT** button to confirm.

Setting Backlight

This radio display has a backlight with adjustable brightness level and adjustable timeout (this is the time delay, in seconds, after which the display switch to set backlight level).

1. Press **MENU** button - **Main menu - System settings - Brightness**, and then press **SELECT** button to confirm.
2. Scroll Joystick to select “Timeout”, “Power-on Level” or “Standby Level”, and then press **SELECT** button to confirm.
3. Scroll Joystick to select backlight level, and then press **SELECT** button to confirm the setting.

Timeout	<ul style="list-style-type: none">• On• 10/20/30/45/60/90/120/180 sec
Power-on Level	<ul style="list-style-type: none">• High• Medium• Low
Standby Level	<ul style="list-style-type: none">• High• Medium• Low• Off



TROUBLESHOOTING

If a problem occurs, it may often be due to something very minor. The following table contains various tips.

Problem	Cause	Solution
FM: HISS DAB: Burbling/Intermittent Cut-Out	Low signal strength.	Check/move antenna. Move radio to another location. Rescan local (high-strength) stations only. For DAB, check local coverage at www.ukdigitalradio.com/coverage
DAB: 'No stations available'	Low signal strength.	As above, then rescan stations.
Cannot connect to network	Network down.	Check that network is working between computer and the router.
	Router restricts access to listed MAC addresses.	Obtain the SUPERCD MAC address from MENU > SYSTEM SETTINGS > NETWORK > VIEW SETTINGS and add to router list
	Insufficient Wi-Fi signal strength.	Check distance to router. See if a computer can connect to the network in this location.
	Unknown encryption method.	Change encryption method on router. SUPERCD supports WEP, WPA and WPA2.
	Unusual network configuration.	Setup network manually through MENU > SYSTEM SETTINGS > NETWORK > MANUAL SETTINGS
	Firewall preventing access.	Check the following ports are open on the router: UDP and TCP ports 80 and 123 DNS port 53 Windows shares: ports 135 - 139 and 445 Windows media player: varies Non-Microsoft firewalls may require configuration for UPnP.
Cannot connect to Internet	Internet connection down	Check that the Internet is working for a computer connected to the same network.
	Firewall preventing access	Check the following ports are open: UDP and TCP ports 80 and 123 DNS port 53. Some Internet radio stations may require additional ports to be opened.



Cannot play particular Internet radio station	Station not broadcasting Overloaded or insufficient bandwidth. Station broadcasting using unknown codec. Link out of date.	Try other stations. Try listening on computer via Internet radio portal website. Try later.
Bluetooth Mode: Can't connect to a paired device		Select BT DISCONNECT from the Bluetooth Menu and delete SUPERCD's profile from your Bluetooth device, then re-pair the devices as normal
Bluetooth Mode: Poor audio quality	Your Bluetooth device may be out of range Electromagnetic interference	Move your Bluetooth device closer to SUPERCD Move your Bluetooth device away from other sources of interference such as other Bluetooth devices, wireless routers etc.
Failed to connect	Correct key entered, but router rejects request.	MAC filtering enabled on router.
Format error	Cannot recognise file format independent of network.	Received wma. but found that the stream wasn't WMA when trying to decode.
Network error	Problem past router - incorrect data being received from network.	Data obtained from server is unreadable.
Network timeout	Problem past router - no response being received from network.	Streaming IR station and suddenly station becomes unavailable.
No UPnP media found	No UPnP servers found.	
Service not available (DAB)	No DAB reception.	
Unauthorised	Access not granted by UPnP server.	Allow access for SUPERCD in UPnP server settings.
Update failed	Software upgrade failed.	
Network not ready	Problem with connection to router.	Router switched off.

If any functional abnormality is encountered, unplug the unit from the mains socket and reconnect it again.



SPECIFICATIONS

Model:	SuperCD
Radio Frequency:	DAB/DAB+: 174 - 240MHz FM: 87.5 - 108MHz Bluetooth: 2.402 - 2.480GHz WIFI: 2.412 - 2.462GHz, 5.150 - 5.250GHz
Maximum radio-frequency power transmitted:	Bluetooth: 4dBm WIFI: 20dBm
Speaker Output Power:	15W rms x 2
Ecodesign Information	
Information on Power Consumption	Power Consumption of Operation Mode: 60.0W (Max)
	Power Consumption of Standby Mode: < 1W
	Network Standby Power Consumption: < 2W
Time interval for power management function switched to unit automatically into standby:	Switch to standby mode if no any audio playback after 15 minutes.
How to activate wireless network port: <ul style="list-style-type: none">● Connect the unit with power● Switch to wireless mode (e.g. Internet, Podcasts, Spotify, Amazon music or Deezer)● Go to Main menu - System settings - Network - Keep network connected. Select Yes and then press SELECT button to keep network connected (page 17 and page 40).	
How to deactivate wireless network port: <ul style="list-style-type: none">● Go to Main menu - System settings - Network - Keep network connected. Select No and then press SELECT button to keep network disconnected (page 17 and page 40).● Disconnect power adapter.	
Working Environment - Temperature:	0°C ~ 40°C
Working Environment - Relative Humidity:	5% ~ 80%
Storage Condition - Temperature:	-10°C ~ 50°C
Storage Condition - Humidity:	< 95%
Dimension (W x D x H):	270mm x 190mm x 120mm



Technical Data of the supplied Power Supply

Manufacturer:	TELESTAR-DIGITAL GmbH, Am Weiher 14, 56766 Ulmen, Deutschland
Model number:	BQ60A-2003000-D
Input voltage:	AC 100-240V
Input frequency:	50/60Hz
Output voltage:	DC 20.0V
Output current:	3.0A
Output power:	60.0W
Average efficiency in operation:	89.98%
Low load efficiency (10%):	80.26%
No-load power consumption:	0.10W