 


M u s i c L i n k
W i r e l e s s S p e a k e r

Safety Information

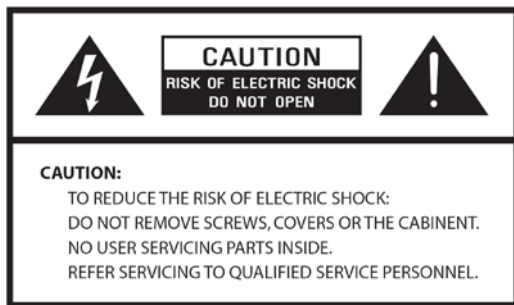

The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of electrical shock, fire, etc.:

1. Read these instructions.
2. Keep these Instructions.
3. Heed all Warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth. For stubborn stains, use a soft cloth dampened with a weak solution of mild detergent and water. Dry the apparatus immediately afterwards with a clean cloth. Do not use abrasive clothes, thinners, alcohol, or other chemical solvents, because they may damage the finish or remove the panel lettering.
7. Do not block any ventilation openings. The ventilation shall not be impeded by covering the ventilation openings with items, such as newspapers, table clothes, curtains, etc.
8. Do not install near any heat source such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.

9. Do not defeat the safety purpose of the polarized or grounding - type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. The optimum operating temperature is 0°C~40°C.
11. The optimum humidity is 30%~80%.
12. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus. If the power cord is damaged, it must be repaired by a qualified repairer.
13. Only use attachments/accessories specified by the manufacturer.
14. Use only with the cart, stand, tripod, bracket or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



PORTABLE CART WARNING

15. Unplug this apparatus during lightning storms or when unused for long periods of time.
16. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
17. The apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.
18. The mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
19. Please read Rating Labels at the back of the unit for power input and other safety information.

Contents



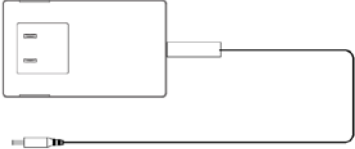
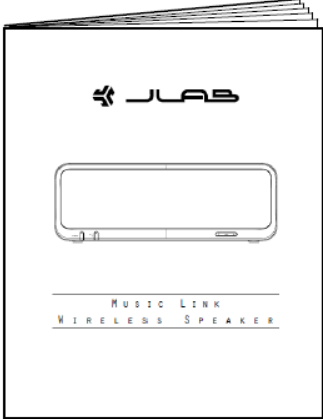
Safety Information	2
Contents	3
Introduction	4
Package content	4
Front Overview	5
Back Overview	6
Remote Control Overview	6
Bluetooth Mode	7
Turning on	7
Pairing with Bluetooth devices.....	7
Calling and Answering.....	8
Making a call	8
Answering a call	8
Aux in Mode	8
Troubleshooting	9
Technical information	10
Statements	10

Introduction


Thank you for purchasing the Wireless Link Mobile Speaker. Enjoy music wirelessly from your smartphone, tablet, laptop, or other Bluetooth enabled device anywhere you choose.

Package content

What you can find inside of your package:

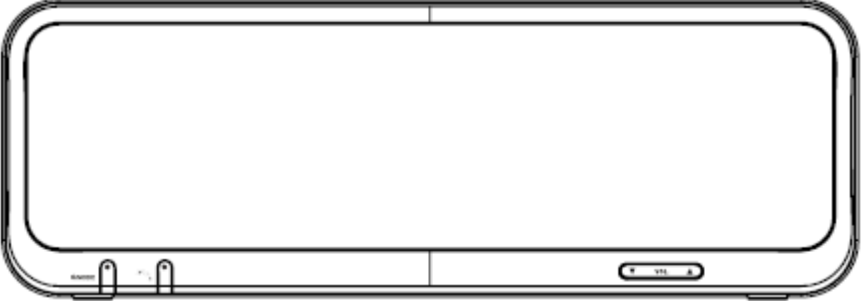
Main unit	 A line drawing of the main unit, a rectangular wireless speaker with rounded corners. It features a large speaker grille on the front and a control panel on the bottom edge with several buttons and a small display.
Remote Control	 A black remote control with a central touchpad and several physical buttons. The JLAB logo is visible at the bottom.
AC/DC Adapter	 A white AC/DC adapter with a power cord and a USB-C cable.
Instruction manual	 The instruction manual cover, featuring the JLAB logo at the top, a line drawing of the speaker in the center, and the text "MUSIC LINK WIRELESS SPEAKER" at the bottom.

 Front Overview

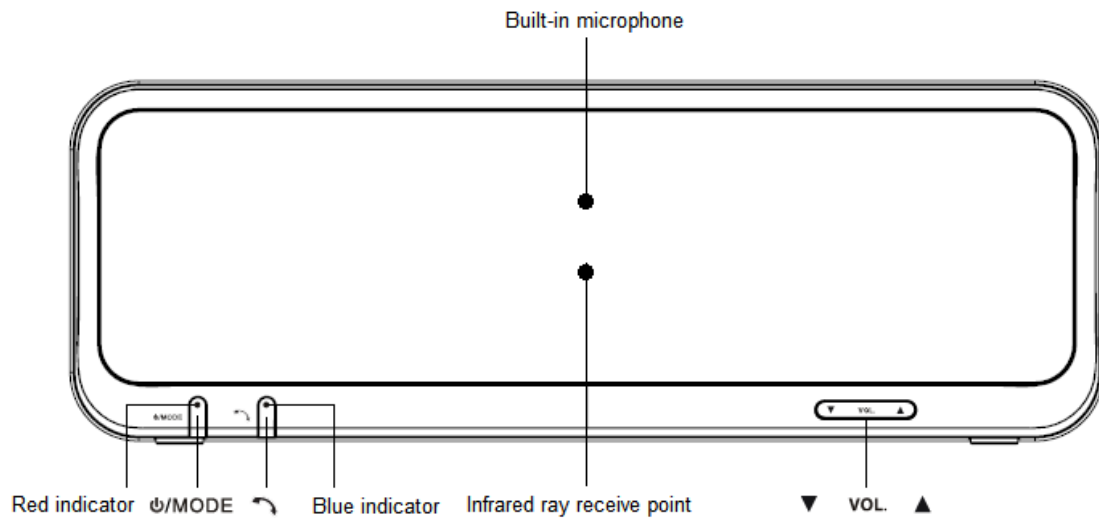

Control	All mode
⏻ / MODE	<ul style="list-style-type: none"> a. Press to turn on speaker. b. While speaker is turned on, press to convert between Bluetooth and Aux in mode. c. Long press to turn off speaker.
📞	When receive a call, press to answer the call, press again to end the call.
▼ VOL. ▲	Press to adjust volume level.
Red indicator	Illuminates while speaker is turned on.
Blue indicator	<ul style="list-style-type: none"> a. Blinks slow means speaker is attempting to pair with a new Bluetooth device or connect to a paired Bluetooth device. b. Remains steadily on means speaker is connected to a paired Bluetooth device. c. Indicator off means speaker is in Aux mode.

 Back Overview

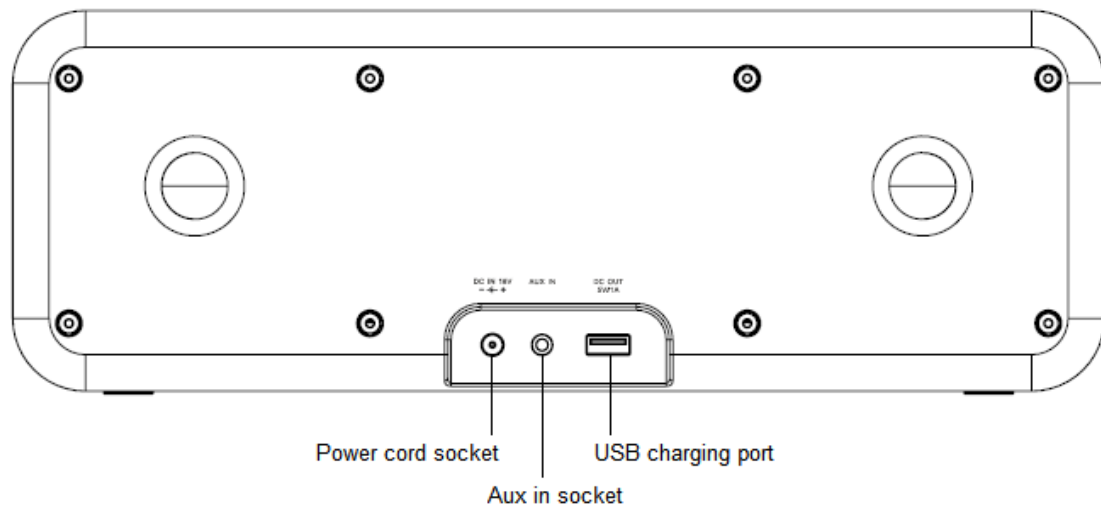


Items	Remark:
Power cord socket:	Connect to DC adaptor.
AUX IN socket:	It is for connecting the audio cable.
USB charging port	Output a 5V voltage for charging your smart phone.

Remote Control Overview

	Remark
	Press to turn on/off speaker.
	Press to mute speaker.
	Press to increase volume, press to decrease volume.
	Press to previous track, press to next track, press to pause/play. Long press to fast forward, long press to fast rewind.
	Press to enter Bluetooth mode.
	Press to enter answer mode.
	Press to enter Aux in mode.

Bluetooth Mode

Turning on

1. Before using your new Music Link Wireless Speaker the first time, you should connect it to adapter.
2. Press  / **MODE** to switch on. The Blue indicator blinks slow and waiting for pairing with a new Bluetooth device or connecting to a paired Bluetooth device.

Pairing with Bluetooth devices


Pairing occurs when two Bluetooth devices communicate with each other and establish a connection. A record of information about this connection is then stored in the memory of each device. Once you pair a device with the Music Link Wireless Speaker, you should not have to pair it again.

To begin pairing with a Bluetooth device

1. Turn on your Bluetooth device.
2. Set your Bluetooth device to “discover” the Music Link Wireless Speaker, then locate the Bluetooth device list.
3. From the Bluetooth device list, select the device named “Music Link Wireless Speaker”.
4. If your device asks for a passkey, enter digits 0000 (four zeros) and press OK. Some devices also ask you to accept the connection.

Your Bluetooth device indicates when pairing is complete. The Music Link Wireless Speaker indicates pairing is complete when the Blue indicator remains steadily on.

To pair additional devices

 **Note:** when you have paired Music Link Wireless Speaker with a Bluetooth device and want to use another device instead, please set your first Bluetooth device to “undiscover”.

To pair with another device, please follow “**To begin pairing with a Bluetooth device**” steps 1-4.


Calling and Answering

You can make or receive a call via Music Link Wireless Speaker.

Making a call


1. Make sure that your smart phone has connected to Music Link Wireless Speaker.
2. Dial a phone number, confirm to call. You can select an audio source from selections: **Music Link Wireless Speaker**, **your smart phone name** and **Speaker** on your smart phone.
3. Choose **Music Link Wireless Speaker** then you can start calling through Music Link Wireless Speaker.

Answering a call

1. Make sure that your smart phone has connected to Music Link Wireless Speaker speaker.
2. When you receive a call, press  to answer. You can select an audio source from selections: **Music Link Wireless Speaker**, **your smart phone name** and **Speaker** on your smart phone.
3. Choose the **Music Link Wireless Speaker** and then can begin to talk through Music Link Wireless Speaker.

Aux in Mode

You can use another audio device with your Music Link Wireless Speaker. This requires using an audio cable with a 3.5mm plug on one end to connect with the Aux input on the Music Link Wireless Speaker system.

4. Press  / MODE to shift from BT. mode to Aux in mode.
5. Plug the cable from the audio device into the Aux connector on the back of the Music Link Wireless Speaker.
6. To gain optimal volume levels, adjusting the output volume level on both the source device and the Music Link Wireless Speaker itself are recommended.

Troubleshooting

Problem	What to do
Speaker will not turn on	<ul style="list-style-type: none"> ● Make sure your system is connected to a working mains outlet.
Paired Bluetooth device will not connect	<ul style="list-style-type: none"> ● If your device requires a passkey, make sure the one you entered was correct. ● Turn the Music Link Wireless Speaker off and back on. ● Remove the Music Link Wireless Speaker from the pairing list on your Bluetooth device pairing list. Then pair the device and the Music Link Wireless Speaker again.
Music Link Wireless Speaker indicates a connection, but is not playing music	<ul style="list-style-type: none"> ● Turn off or disable Bluetooth on all other paired devices nearby and reconnect the device you want to hear. ● Turn the Music Link Wireless Speaker off and back on.
Cannot pair the Music Link Wireless Speaker with my Bluetooth device	<ul style="list-style-type: none"> ● Make sure your Bluetooth device is discoverable. ● Your Bluetooth device may be out of range – try moving it closer to the Music Link Wireless Speaker. ● Make sure your Bluetooth device supports the transfer of audio. ● Move your Bluetooth device and/or Music Link Wireless Speaker away from other devices that generate electromagnetic interference. ● If possible, turn off all other nearby Bluetooth devices or disable their Bluetooth functionality. ● Turn the Music Link Wireless Speaker off and back on.
No audio from a Bluetooth device	<ul style="list-style-type: none"> ● Make sure your Music Link Wireless Speaker is not muted, and the volume is up. ● Make sure your Bluetooth device is playing audio, and the volume is up. ● Your Bluetooth device may be out of range – try moving it closer to the Music Link Wireless Speaker. ● Turn the Music Link Wireless Speaker off and back on.
No audio from the AUX source	<ul style="list-style-type: none"> ● Make sure your connected device is on and playing. ● Make sure your Music Link Wireless Speaker is in Aux in mode. ● Make sure the 3.5mm plug is fully inserted into the Music Link Wireless Speaker.

Technical information

Power supply rating

Input: 100-240VAC, 50/60Hz

Output: 18VDC, 2A Max

Dimensions

H x W x D: 330mm x 135mm x115mm

Statements

Note: The manufacturer is not responsible for any RADIO or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.