10HT Manual

- 1) VCO adjustment
 - 1) Set the channel at 20 by the frequency setting switch.
 - 2) Connect the DC volt meter to TP1
 - 3) Adjust VC101 to get 0.9V through DC volt meter.
 - 4) Set the channel at 08 and make sure DC meter shows 2.0V
- 2) Output power adjustment (Power voltage 3V±0.1V)
 - 1) Set the channel at 55
 - 2) Connect the spectrum analyzer to CN2 (SW1 should turn to CN2)
 - 3) Adjust VC2 to minimize the spurious (1/2F and 3/2F)
 - 4) Connect the power meter and adjust VR3 to get a power at 10mW.
- 3) Transmitter frequency setting
 - 1) Set the channel at 55
 - 2) Connect the frequency counter to JK2
 - 3) Adjust VC1 until the frequency counter shows its frequency at 800.000MHz+1.5KHz.
- 4) AF modulation adjustment
 - 1) Connect the liner detector to CN2
 - 2) Set the channel at 55
 - 3) Connect the audio oscillator output to CN1 (Mic terminal)
 - 4) Generate the audio oscillator output at '60dBm (at 1kHz)
 - 5) Adjust VR101 to get ·31dBm at TP1
 - 6) Adjust VR1 so that the deviation will be 5.0kHz±0.5kHz