ljusted date Y M D	ssue	Y M D	Azden Adjustment Standard	Category
1. Adjustment of VCO 1) Set frequency CH01(566.125MHz) 2) Connect DC voltage meter to TP1 3) Confirm DC meter indicates 1.2V 4) Set the frequency to CH92(589.875MHz) and confirm the voltage is 2.4V or less on DC voltage meter 2. Transmitting power adjustment 1) Set the frequency to CH47 not using antenna(SW202 set to CN 203side) 2) Connect power meter to CN203 4) Adjust VR202 so that power meter indicates 20mW on CN203 5) Adjust two pes of core on T200 to indicate 20mW (allowance range 1mW) by adjusting volume 202. 6) Verify power on the CH47 to be 20mW or more. 3. Adjustment of transmitting frequency 1) Set the frequency counter to CH203 while setting to CH 47. 2) Adjust VC1 so that the frequency counter shows 578.125MHz plus-minus 1kHz 4. Adjustment of AF modulation 1) Connect oscillator output to JK 1. 2) Adjust the ocilator out level to be minus 60 dBm. 3) Adjust VR1 so that TP101 AF level is set to -31dBm 4) Adjust VR3 os that TP101 AF level is set to -31dBm 4) Adjust VR500 so that the modulation depth to be 5.0kHz plus-minus 0.5kHz 5) Adjust ment of Tone modulation 1) Set SW2 to OFF side. 2) Adjust VR4 so that modulation depth to become within 3.2kHz plus-minus 0.2kHz 3) Confirm tone frequency is 32.768kHz 4) If the AF modulation degree changes through above 5-2) adjustment, again conduct the above clause 4-5) 5) After that, turn SW2 to antenna side 6. Other check point 1) Check whether any abnomal sound hear from mic out side on receiver. 3) Check whether any gutter appear by moving the main body side. 4) Check weither the frequency range is from 566.250MHz to 589.750 MHz in 250KHz step			99 F9F 01 (1FDF) A.I	NT.
 Adjustment of VCO Set frequency CH01(566.125MHz) Connect DC voltage meter to TP1 Confirm DC meter indicates 1.2V Set the frequency to CH92(589.875MHz) and confirm the voltage is 2.4V or less on DC voltage meter Transmitting power adjustment Set the frequency to CH47 not using antenna(SW202 set to CN 203side) Connect power meter to CN203 Adjust VR202 so that power meter indicates 20mW on CN203 Adjust two pcs of core on T200 to indicate 20mW (allowance range 1mW) by adjusting volume 202. Verify power on the CH47 to be 20mW or more. Adjustment of transmitting frequency Set the frequency counter to CH203 while setting to CH 47. Adjust VC1 so that the frequency counter shows 578.125MHz plus minus 1kHz Adjustment of AF modulation Connect oscillator output to JK 1. Adjust VR1 so that TP101 AF level is set to -31dBm Adjust VR500 so that the modulation depth to be 5.0kHz plus minus 0.5kHz Adjust modulation level 5.0kHz plus minus 0.5kHz by adjusting VR201. Adjust was that modulation 1)Set SW2 to OFF side. Adjust VR4 so that modulation depth to become within 3.2kHz plus minus 0.2kHz Confirm tone frequency is 32.768kHz If the AF modulation degree changes through above 5-2) adjustment, again conduct the above clause 4-5) After that, turn SW2 to antenna side Other check point Check whether any abnomal sound hear from mic out side on receiver. Check whether any gutter appear by moving the main body side. Check whether the frequency range is from 566.250MHz to 589.750 MHz in 250KHz step 	aate	YMD	33-525-01 (15B1) Adjustment Level	
1) Set frequency CH01(566.125MHz) 2) Connect DC voltage meter to TP1 3) Confirm DC meter indicates 1.2V 4) Set the frequency to CH92(589.875MHz) and confirm the voltage is 2.4V or less on DC voltage meter 2. Transmitting power adjustment 1) Set the frequency to CH47 not using antenna(SW202 set to CN 203side) 2) Connect power meter to CN203 4) Adjust VR202 so that power meter indicates 20mW on CN203 5) Adjust two pcs of core on T200 to indicate 20mW (allowance range 1mW) by adjusting volume 202. 6) Verify power on the CH47 to be 20mW or more. 3. Adjustment of transmitting frequency 1) Set the frequency counter to CH203 while setting to CH 47. 2) Adjust VC1 so that the frequency counter shows 578.125MHz plus-minus 1kHz 4. Adjustment of AF modulation 1) Connect oscillator out level to be minus 60 dBm. 3) Adjust VR1 so that TP101 AF level is set to '31dBm 4) Adjust VR500 so that the modulation depth to be 5.0kHz plus-minus 0.5kHz 5) Adjust modulation level 5.0KHz plus minus 0.5kHz by adjusting VR201. 5. Adjustment of Tone modulation 1)Set SW2 to OFF side. 2) Adjust VR4 so that modulation depth to become within 3.2kHz plus-minus 0.2kHz 3) Confirm tone frequency is 32.768kHz 4) If the AF modulation degree changes through above 5-2) adjustment, again conduct the above clause 4-5) 5) After that, turn SW2 to antenna side 6. Other check point 1) Check whether any abnomal sound hear from mic out side on receiver. 3) Check whether any gutter appear by moving the main body side. 4) Check whether the frequency range is from 566.250MHz to 589,750 MHz in 250KHz step	1.	Adjustment	of VCO	1 age 1/ 1
 3) Confirm DC meter indicates 1.2V 4) Set the frequency to CH92(589.875MHz) and confirm the voltage is 2.4V or less on DC voltage meter 2. Transmitting power adjustment 1) Set the frequency to CH47 not using antenna(SW202 set to CN 203side) 2) Connect power meter to CN203 4) Adjust VR202 so that power meter indicates 20mW on CN203 5) Adjust two pcs of core on T200 to indicate 20mW (allowance range 1mW) by adjusting volume 202. 6) Verify power on the CH47 to be 20mW or more. 3. Adjustment of transmitting frequency 1) Set the frequency counter to CH203 while setting to CH 47. 2) Adjust VC1 so that the frequency counter shows 578.125MHz plus-minus 1kHz 4. Adjustment of AF modulation 1) Connect oscillator output to JK 1. 2) Adjust VR1s ot that TP101 AF level is set to -31dBm 4) Adjust VR500 so that the modulation depth to be 5.0kHz plus-minus 0.5kHz 5) Adjust modulation level 5.0kHz plus minus 0.5kHz by adjusting VR201. 5. Adjustment of Tone modulation 1)Set SW2 to OFF side. 2) Adjust VR4 so that modulation depth to become within 3.2kHz plus-minus 0.2kHz 3) Confirm tone frequency is 32.768kHz 4) If the AF modulation degree changes through above 5-2) adjustment, again conduct the above clause 4-5) 5) After that, turn SW2 to antenna side 6. Other check point 1) Check whether the receiver can receive the singal 2) Check whether any abnomal sound hear from mic out side on receiver. 3) Check whether any gutter appear by moving the main body side. 4) Check weither the frequency range is from 566.250MHz to 589.750 MHz in 250KHz step 		-		
 4) Set the frequency to CH92(589.875MHz) and confirm the voltage is 2.4V or less on DC voltage meter 2. Transmitting power adjustment 1) Set the frequency to CH47 not using antenna(SW202 set to CN 203side) 2) Connect power meter to CN203 4) Adjust VR202 so that power meter indicates 20mW on CN203 5) Adjust two pes of core on T200 to indicate 20mW (allowance range 1mW) by adjusting volume 202. 6) Verify power on the CH47 to be 20mW or more. 3. Adjustment of transmitting frequency 1) Set the frequency counter to CH203 while setting to CH 47. 2) Adjust VC1 so that the frequency counter shows 578.125MHz plus-minus 1kHz 4. Adjustment of AF modulation 1) Connect oscillator output to JK 1. 2) Adjust the ocilator out level to be minus 60 dBm. 3) Adjust VR3 so that TP101 AF level is set to -31dBm 4) Adjust VR500 so that the modulation depth to be 5.0kHz plus-minus 0.5kHz 5) Adjust modulation level 5.0KHz plus minus 0.5kHz by adjusting VR201. 5. Adjustment of Tone modulation 1)Set SW2 to OFF side. 2) Adjust VR4 so that modulation depth to become within 3.2kHz plus-minus 0.2kHz 3) Confirm tone frequency is 32.768kHz 4) If the AF modulation degree changes through above 5-2) adjustment, again conduct the above clause 4-5) 5) After that, turn SW2 to antenna side 6. Other check point 1) Check whether any abnomal sound hear from mic out side on receiver. 3) Check whether any gutter appear by moving the main body side. 4) Check wehther the frequency range is from 566.250MHz to 589.750 MHz in 250KHz step 				
on DC voltage meter 2. Transmitting power adjustment 1) Set the frequency to CH47 not using antenna (SW202 set to CN 203side) 2) Connect power meter to CN203 4) Adjust VR202 so that power meter indicates 20mW on CN203 5) Adjust two pcs of core on T200 to indicate 20mW (allowance range 1mW) by adjusting volume 202. 6) Verify power on the CH47 to be 20mW or more. 3. Adjustment of transmitting frequency 1) Set the frequency counter to CH203 while setting to CH 47. 2) Adjust VC1 so that the frequency counter shows 578.125MHz plus minus 1kHz 4. Adjustment of AF modulation 1) Connect oscillator output to JK 1. 2) Adjust the ocilator out level to be minus 60 dBm. 3) Adjust VR1 so that TP101 AF level is set to -31dBm 4) Adjust VR500 so that the modulation depth to be 5.0kHz plus minus 0.5kHz 5) Adjust modulation level 5.0KHz plus minus 0.5kHz by adjusting VR201. 5. Adjustment of Tone modulation 1)Set SW2 to OFF side. 2) Adjust VR4 so that modulation depth to become within 3.2kHz plus minus 0.2kHz 3) Confirm tone frequency is 32.768kHz 4) If the AF modulation degree changes through above 5-2) adjustment, again conduct the above clause 4-5) 5) After that, turn SW2 to antenna side 6. Other check point 1) Check whether any abnomal sound hear from mic out side on receiver. 3) Check whether any gutter appear by moving the main body side. 4) Check wehther the frequency range is from 566.250MHz to 589.750 MHz in 250KHz step				
 Transmitting power adjustment Set the frequency to CH47 not using antenna(SW202 set to CN 203side) Connect power meter to CN203 Adjust VR202 so that power meter indicates 20mW on CN203 Adjust VR202 so that power meter indicates 20mW (allowance range 1mW) by adjusting volume 202. Verify power on the CH47 to be 20mW or more. Adjustment of transmitting frequency Set the frequency counter to CH203 while setting to CH 47. Adjust VC1 so that the frequency counter shows 578.125MHz plus-minus 1kHz Adjust WC1 so that the frequency counter shows 578.125MHz plus-minus 1kHz Adjust the ocilator out level to be minus 60 dBm. Adjust VR500 so that TP101 AF level is set to -31dBm Adjust VR500 so that the modulation depth to be 5.0kHz plus-minus 0.5kHz Adjust modulation level 5.0kHz plus minus 0.5kHz by adjusting VR201. Adjustment of Tone modulation Set SW2 to OFF side. Adjust VR4 so that modulation depth to become within 3.2kHz plus-minus 0.2kHz Confirm tone frequency is 32.768kHz If the AF modulation degree changes through above 5-2) adjustment, again conduct the above clause 4-5) After that, turn SW2 to antenna side Other check point Check whether the receiver can receive the singal Check whether any gutter appear by moving the main body side. Check whether the frequency range is from 566.250MHz to 589.750 MHz in 250KHz step 				e is 2.4V or less
 Set the frequency to CH47 not using antenna (SW202 set to CN 203side) Connect power meter to CN203 Adjust VR202 so that power meter indicates 20mW on CN203 Adjust two pos of core on T200 to indicate 20mW (allowance range 1mW) by adjusting volume 202. Verify power on the CH47 to be 20mW or more. Adjustment of transmitting frequency Set the frequency counter to CH203 while setting to CH 47. Adjust VC1 so that the frequency counter shows 578.125MHz plus-minus 1kHz Adjust VC1 so that the frequency counter shows 578.125MHz plus-minus 1kHz Adjust the ocilator out level to be minus 60 dBm. Adjust VR1 so that TP101 AF level is set to '31dBm Adjust VR500 so that the modulation depth to be 5.0kHz plus-minus 0.5kHz Adjust modulation level 5.0kHz plus minus 0.5kHz by adjusting VR201. Adjustment of Tone modulation Set SW2 to OFF side. Adjust VR4 so that modulation depth to become within 3.2kHz plus-minus 0.2kHz Confirm tone frequency is 32.768kHz If the AF modulation degree changes through above 5·2) adjustment, again conduct the above clause 4·5) After that, turn SW2 to antenna side Other check point Check whether the receiver can receive the singal Check whether any abnomal sound hear from mic out side on receiver. Check whether the frequency range is from 566.250MHz to 589.750 MHz in 250KHz stell 	2.		-	
 Adjust VR202 so that power meter indicates 20mW on CN203 Adjust two pes of core on T200 to indicate 20mW (allowance range 1mW) by adjusting volume 202. Verify power on the CH47 to be 20mW or more. Adjustment of transmitting frequency Set the frequency counter to CH203 while setting to CH 47. Adjust VC1 so that the frequency counter shows 578.125MHz plus-minus 1kHz Adjustment of AF modulation Connect oscillator output to JK 1. Adjust the ocilator out level to be minus 60 dBm. Adjust VR1 so that TP101 AF level is set to -31dBm Adjust VR500 so that the modulation depth to be 5.0kHz plus-minus 0.5kHz Adjust modulation level 5.0kHz plus minus 0.5kHz by adjusting VR201. Adjustment of Tone modulation Set SW2 to OFF side. Adjust VR4 so that modulation depth to become within 3.2kHz plus-minus 0.2kHz Confirm tone frequency is 32.768kHz If the AF modulation degree changes through above 5-2) adjustment, again conduct the above clause 4-5) After that, turn SW2 to antenna side Other check point Check whether any abnomal sound hear from mic out side on receiver. Check whether any abnomal sound hear from mic out side on receiver. Check whether the frequency range is from 566.250MHz to 589.750 MHz in 250KHz stejence. 				CN 203side)
 5) Adjust two pcs of core on T200 to indicate 20mW (allowance range 1mW) by adjusting volume 202. 6) Verify power on the CH47 to be 20mW or more. 3. Adjustment of transmitting frequency 1) Set the frequency counter to CH203 while setting to CH 47. 2) Adjust VC1 so that the frequency counter shows 578.125MHz plus-minus 1kHz 4. Adjustment of AF modulation 1) Connect oscillator output to JK 1. 2) Adjust the ocilator out level to be minus 60 dBm. 3) Adjust VR1 so that TP101 AF level is set to -31dBm 4) Adjust VR500 so that the modulation depth to be 5.0kHz plus-minus 0.5kHz 5) Adjust modulation level 5.0kHz plus minus 0.5kHz by adjusting VR201. 5. Adjustment of Tone modulation 1) Set SW2 to OFF side. 2) Adjust VR4 so that modulation depth to become within 3.2kHz plus-minus 0.2kHz 3) Confirm tone frequency is 32.768kHz 4) If the AF modulation degree changes through above 5-2) adjustment, again conduct the above clause 4-5) 5) After that, turn SW2 to antenna side 6. Other check point 1) Check whether the receiver can receive the singal 2) Check whether any abnomal sound hear from mic out side on receiver. 3) Check whether any gutter appear by moving the main body side. 4) Check wehther the frequency range is from 566.250MHz to 589.750 MHz in 250KHz stej 				
volume 202. (a) Verify power on the CH47 to be 20mW or more. 3. Adjustment of transmitting frequency 1) Set the frequency counter to CH203 while setting to CH 47. 2) Adjust VC1 so that the frequency counter shows 578.125MHz plus-minus 1kHz 4. Adjustment of AF modulation 1) Connect oscillator output to JK 1. 2) Adjust the ocilator out level to be minus 60 dBm. 3) Adjust VR1 so that TP101 AF level is set to -31dBm 4) Adjust VR500 so that the modulation depth to be 5.0kHz plus-minus 0.5kHz 5) Adjust modulation level 5.0KHz plus minus 0.5kHz by adjusting VR201. 5. Adjustment of Tone modulation 1)Set SW2 to OFF side. 2) Adjust VR4 so that modulation depth to become within 3.2kHz plus-minus 0.2kHz 3) Confirm tone frequency is 32.768kHz 4) If the AF modulation degree changes through above 5-2) adjustment, again conduct the above clause 4-5) 5) After that, turn SW2 to antenna side 6. Other check point 1) Check whether the receiver can receive the singal 2) Check whether any abnomal sound hear from mic out side on receiver. 3) Check whether any gutter appear by moving the main body side. 4) Check wehther the frequency range is from 566.250MHz to 589.750 MHz in 250KHz stel		•	•	
 6) Verify power on the CH47 to be 20mW or more. 3. Adjustment of transmitting frequency 1) Set the frequency counter to CH203 while setting to CH 47. 2) Adjust VC1 so that the frequency counter shows 578.125MHz plus-minus 1kHz 4. Adjustment of AF modulation 1) Connect oscillator output to JK 1. 2) Adjust the ocilator out level to be minus 60 dBm. 3) Adjust VR1 so that TP101 AF level is set to -31dBm 4) Adjust VR500 so that the modulation depth to be 5.0kHz plus-minus 0.5kHz 5) Adjust modulation level 5.0KHz plus minus 0.5kHz by adjusting VR201. 5. Adjustment of Tone modulation 1)Set SW2 to OFF side. 2) Adjust VR4 so that modulation depth to become within 3.2kHz plus-minus 0.2kHz 3) Confirm tone frequency is 32.768kHz 4) If the AF modulation degree changes through above 5-2) adjustment, again conduct the above clause 4-5) 5) After that, turn SW2 to antenna side 6. Other check point 1) Check whether the receiver can receive the singal 2) Check whether any abnomal sound hear from mic out side on receiver. 3) Check wether the frequency range is from 566.250MHz to 589.750 MHz in 250KHz stej 		•	•	ge 1mW) by adjusting
 3. Adjustment of transmitting frequency Set the frequency counter to CH203 while setting to CH 47. Adjust VC1 so that the frequency counter shows 578.125MHz plus-minus 1kHz 4. Adjustment of AF modulation Connect oscillator output to JK 1. Adjust the ocilator out level to be minus 60 dBm. Adjust VR1 so that TP101 AF level is set to -31dBm Adjust VR500 so that the modulation depth to be 5.0kHz plus-minus 0.5kHz Adjust modulation level 5.0KHz plus minus 0.5kHz by adjusting VR201. 5. Adjustment of Tone modulation Set SW2 to OFF side. Adjust VR4 so that modulation depth to become within 3.2kHz plus-minus 0.2kHz Confirm tone frequency is 32.768kHz If the AF modulation degree changes through above 5-2) adjustment, again conduct the above clause 4-5) After that, turn SW2 to antenna side 6. Other check point Check whether any abnomal sound hear from mic out side on receiver. Check whether any gutter appear by moving the main body side. Check wehther the frequency range is from 566.250MHz to 589.750 MHz in 250KHz stej 				
 Adjust VC1 so that the frequency counter shows 578.125MHz plus-minus 1kHz Adjustment of AF modulation Connect oscillator output to JK 1. Adjust the ocilator out level to be minus 60 dBm. Adjust VR1 so that TP101 AF level is set to -31dBm Adjust VR500 so that the modulation depth to be 5.0kHz plus-minus 0.5kHz Adjust modulation level 5.0KHz plus minus 0.5kHz by adjusting VR201. Adjustment of Tone modulation Set SW2 to OFF side. Adjust VR4 so that modulation depth to become within 3.2kHz plus-minus 0.2kHz Confirm tone frequency is 32.768kHz If the AF modulation degree changes through above 5-2) adjustment, again conduct the above clause 4-5) After that, turn SW2 to antenna side Other check point Check whether the receiver can receive the singal Check whether any abnomal sound hear from mic out side on receiver. Check whether any gutter appear by moving the main body side. Check weither the frequency range is from 566.250MHz to 589.750 MHz in 250KHz stel 	3.			
 Adjustment of AF modulation Connect oscillator output to JK 1. Adjust the ocilator out level to be minus 60 dBm. Adjust VR1 so that TP101 AF level is set to -31dBm Adjust VR500 so that the modulation depth to be 5.0kHz plus-minus 0.5kHz Adjust modulation level 5.0KHz plus minus 0.5kHz by adjusting VR201. Adjustment of Tone modulation Set SW2 to OFF side. Adjust VR4 so that modulation depth to become within 3.2kHz plus-minus 0.2kHz Confirm tone frequency is 32.768kHz If the AF modulation degree changes through above 5-2) adjustment, again conduct the above clause 4-5) After that, turn SW2 to antenna side Other check point Check whether the receiver can receive the singal Check whether any abnomal sound hear from mic out side on receiver. Check whether any gutter appear by moving the main body side. Check weither the frequency range is from 566.250MHz to 589.750 MHz in 250KHz step 				
 Connect oscillator output to JK 1. Adjust the ocilator out level to be minus 60 dBm. Adjust VR1 so that TP101 AF level is set to -31dBm Adjust VR500 so that the modulation depth to be 5.0kHz plus minus 0.5kHz Adjust modulation level 5.0KHz plus minus 0.5kHz by adjusting VR201. Adjustment of Tone modulation Set SW2 to OFF side. Adjust VR4 so that modulation depth to become within 3.2kHz plus-minus 0.2kHz Confirm tone frequency is 32.768kHz If the AF modulation degree changes through above 5-2) adjustment, again conduct the above clause 4-5) After that, turn SW2 to antenna side Other check point Check whether the receiver can receive the singal Check whether any abnomal sound hear from mic out side on receiver. Check whether any gutter appear by moving the main body side. Check wehther the frequency range is from 566.250MHz to 589.750 MHz in 250KHz stel 		2) Adjust V	C1 so that the frequency counter shows 578.125MH	z plus-minus 1kHz
 Connect oscillator output to JK 1. Adjust the ocilator out level to be minus 60 dBm. Adjust VR1 so that TP101 AF level is set to -31dBm Adjust VR500 so that the modulation depth to be 5.0kHz plus minus 0.5kHz Adjust modulation level 5.0KHz plus minus 0.5kHz by adjusting VR201. Adjustment of Tone modulation Set SW2 to OFF side. Adjust VR4 so that modulation depth to become within 3.2kHz plus-minus 0.2kHz Confirm tone frequency is 32.768kHz If the AF modulation degree changes through above 5-2) adjustment, again conduct the above clause 4-5) After that, turn SW2 to antenna side Other check point Check whether the receiver can receive the singal Check whether any abnomal sound hear from mic out side on receiver. Check whether any gutter appear by moving the main body side. Check wehther the frequency range is from 566.250MHz to 589.750 MHz in 250KHz stel 	4.	Adjustment	of AF modulation	
 3) Adjust VR1 so that TP101 AF level is set to -31dBm 4) Adjust VR500 so that the modulation depth to be 5.0kHz plus-minus 0.5kHz 5) Adjust modulation level 5.0KHz plus minus 0.5kHz by adjusting VR201. 5. Adjustment of Tone modulation 1)Set SW2 to OFF side. 2) Adjust VR4 so that modulation depth to become within 3.2kHz plus-minus 0.2kHz 3) Confirm tone frequency is 32.768kHz 4) If the AF modulation degree changes through above 5-2) adjustment, again conduct the above clause 4-5) 5) After that, turn SW2 to antenna side 6. Other check point 1) Check whether the receiver can receive the singal 2) Check whether any abnomal sound hear from mic out side on receiver. 3) Check whether any gutter appear by moving the main body side. 4) Check weither the frequency range is from 566.250MHz to 589.750 MHz in 250KHz step 		•		
 3) Adjust VR1 so that TP101 AF level is set to -31dBm 4) Adjust VR500 so that the modulation depth to be 5.0kHz plus-minus 0.5kHz 5) Adjust modulation level 5.0KHz plus minus 0.5kHz by adjusting VR201. 5. Adjustment of Tone modulation 1)Set SW2 to OFF side. 2) Adjust VR4 so that modulation depth to become within 3.2kHz plus-minus 0.2kHz 3) Confirm tone frequency is 32.768kHz 4) If the AF modulation degree changes through above 5-2) adjustment, again conduct the above clause 4-5) 5) After that, turn SW2 to antenna side 6. Other check point 1) Check whether the receiver can receive the singal 2) Check whether any abnomal sound hear from mic out side on receiver. 3) Check whether any gutter appear by moving the main body side. 4) Check wehther the frequency range is from 566.250MHz to 589.750 MHz in 250KHz step 		0) 4 354 41-		
 4) Adjust VR500 so that the modulation depth to be 5.0kHz plus-minus 0.5kHz 5) Adjust modulation level 5.0KHz plus minus 0.5kHz by adjusting VR201. 5. Adjustment of Tone modulation 1)Set SW2 to OFF side. 2) Adjust VR4 so that modulation depth to become within 3.2kHz plus-minus 0.2kHz 3) Confirm tone frequency is 32.768kHz 4) If the AF modulation degree changes through above 5-2) adjustment, again conduct the above clause 4-5) 5) After that, turn SW2 to antenna side 6. Other check point 1) Check whether the receiver can receive the singal 2) Check whether any abnomal sound hear from mic out side on receiver. 3) Check whether any gutter appear by moving the main body side. 4) Check weither the frequency range is from 566.250MHz to 589.750 MHz in 250KHz step 				
 5) Adjust modulation level 5.0KHz plus minus 0.5kHz by adjusting VR201. 5. Adjustment of Tone modulation Set SW2 to OFF side. Adjust VR4 so that modulation depth to become within 3.2kHz plus-minus 0.2kHz Confirm tone frequency is 32.768kHz If the AF modulation degree changes through above 5-2) adjustment, again conduct the above clause 4-5) After that, turn SW2 to antenna side 6. Other check point Check whether the receiver can receive the singal Check whether any abnomal sound hear from mic out side on receiver. Check whether any gutter appear by moving the main body side. Check wehther the frequency range is from 566.250MHz to 589.750 MHz in 250KHz step 		•		ıs-minus 0.5kHz
 Set SW2 to OFF side. Adjust VR4 so that modulation depth to become within 3.2kHz plus-minus 0.2kHz Confirm tone frequency is 32.768kHz If the AF modulation degree changes through above 5-2) adjustment, again conduct the above clause 4-5) After that, turn SW2 to antenna side Other check point Check whether the receiver can receive the singal Check whether any abnomal sound hear from mic out side on receiver. Check whether any gutter appear by moving the main body side. Check wehther the frequency range is from 566.250MHz to 589.750 MHz in 250KHz step 		-		
 Set SW2 to OFF side. Adjust VR4 so that modulation depth to become within 3.2kHz plus-minus 0.2kHz Confirm tone frequency is 32.768kHz If the AF modulation degree changes through above 5-2) adjustment, again conduct the above clause 4-5) After that, turn SW2 to antenna side Other check point Check whether the receiver can receive the singal Check whether any abnomal sound hear from mic out side on receiver. Check whether any gutter appear by moving the main body side. Check wehther the frequency range is from 566.250MHz to 589.750 MHz in 250KHz step 	5.	Adjustment	of Tone modulation	
 3) Confirm tone frequency is 32.768kHz 4) If the AF modulation degree changes through above 5-2) adjustment, again conduct the above clause 4-5) 5) After that, turn SW2 to antenna side 6. Other check point 1) Check whether the receiver can receive the singal 2) Check whether any abnomal sound hear from mic out side on receiver. 3) Check whether any gutter appear by moving the main body side. 4) Check wehther the frequency range is from 566.250MHz to 589.750 MHz in 250KHz step 				
 4) If the AF modulation degree changes through above 5-2) adjustment, again conduct the above clause 4-5) 5) After that, turn SW2 to antenna side 6. Other check point 1) Check whether the receiver can receive the singal 2) Check whether any abnomal sound hear from mic out side on receiver. 3) Check whether any gutter appear by moving the main body side. 4) Check wehther the frequency range is from 566.250MHz to 589.750 MHz in 250KHz step 				Hz plus-minus 0.2kHz
conduct the above clause 4-5) 5) After that,turn SW2 to antenna side 6. Other check point 1) Check whether the receiver can receive the singal 2) Check whether any abnomal sound hear from mic out side on receiver. 3) Check whether any gutter appear by moving the main body side. 4) Check wehther the frequency range is from 566.250MHz to 589.750 MHz in 250KHz step				
 5) After that,turn SW2 to antenna side 6. Other check point Check whether the receiver can receive the singal Check whether any abnomal sound hear from mic out side on receiver. Check whether any gutter appear by moving the main body side. Check wehther the frequency range is from 566.250MHz to 589.750 MHz in 250KHz step 				nent,again
 Check whether the receiver can receive the singal Check whether any abnomal sound hear from mic out side on receiver. Check whether any gutter appear by moving the main body side. Check wehther the frequency range is from 566.250MHz to 589.750 MHz in 250KHz step 				
 Check whether the receiver can receive the singal Check whether any abnomal sound hear from mic out side on receiver. Check whether any gutter appear by moving the main body side. Check wehther the frequency range is from 566.250MHz to 589.750 MHz in 250KHz step 				
2) Check whether any abnomal sound hear from mic out side on receiver.3) Check whether any gutter appear by moving the main body side.4) Check wehther the frequency range is from 566.250MHz to 589.750 MHz in 250KHz step	6.		_	
3) Check whether any gutter appear by moving the main body side.4) Check wehther the frequency range is from 566.250MHz to 589.750 MHz in 250KHz step				coiver
4) Check wehther the frequency range is from 566.250MHz to 589.750 MHz in 250KHz step			•	
$92\mathrm{CH}$				
5) Factory default condition - Power : off, Audio OFF, Channel :01			lefault condition - Power : off, Audio OFF, Channel	:01