



147 New Hyde Park Road ~ PO Box 10 ~ Franklin Square, NY 11010
Phone 516-328-7500 ~ Fax 516-328-7506 ~ Website: www.azdencorp.com ~ E-mail: walonso@azdencorp.com

30XT Transmitter Instructions

(1) Open the battery compartment lid by sliding it down and lifting it up.

(2) Insert one 9 volt battery into the compartment. Make sure the battery polarity is correct as marked inside the battery compartment.

(3) Power
Switches the transmitter "On" or "Off".

(4) Audio
Prior to first turning the 30XT ON it is best to set the AUDIO switch to OFF. When you are ready to begin transmitting, switch to ON. The OFF position acts as a "mute" that maintains the RF signal but turns off the audio.

(5) Mic Connector/Locking Ring
This 3-pin XLR connector is the microphone input. Any low impedance microphone with a corresponding connector can be attached here.

Once the microphone is plugged into the 30XT the locking ring should be rotated clockwise until snug. To remove the microphone, first rotate the locking ring counterclockwise and then, while pressing the XLR release, pull the microphone away from the 30XT.

(6) Mic Input Level Control
The mic input level control enables you to adjust the input level of the connected microphone. Using the supplied tool, turn the dial clockwise to increase, or counterclockwise to decrease the input level.

(7) LCD Display:
The display will light up when the power is turned "On". The LCD displays show the following information.

Channels numbered 1 to 240.

Battery Condition: Using a 3 step indicator. (1 Low to 3 High)

To change the channel number, use the tip of the tool provided and press the UP or Down button to the desired channel, numbered from 1 to 240. Once the desired channel number has been selected on the transmitter, set the receiver to the same channel number.