

TyreWiz™



TyreWiz
User Manual

TyreWiz
User Manual

TyreWiz
User Manual

TyreWiz
User Manual


TyreWiz
User Manual

TyreWiz
User Manual

TyreWiz
User Manual

TyreWiz
User Manual

TyreWiz
User Manual

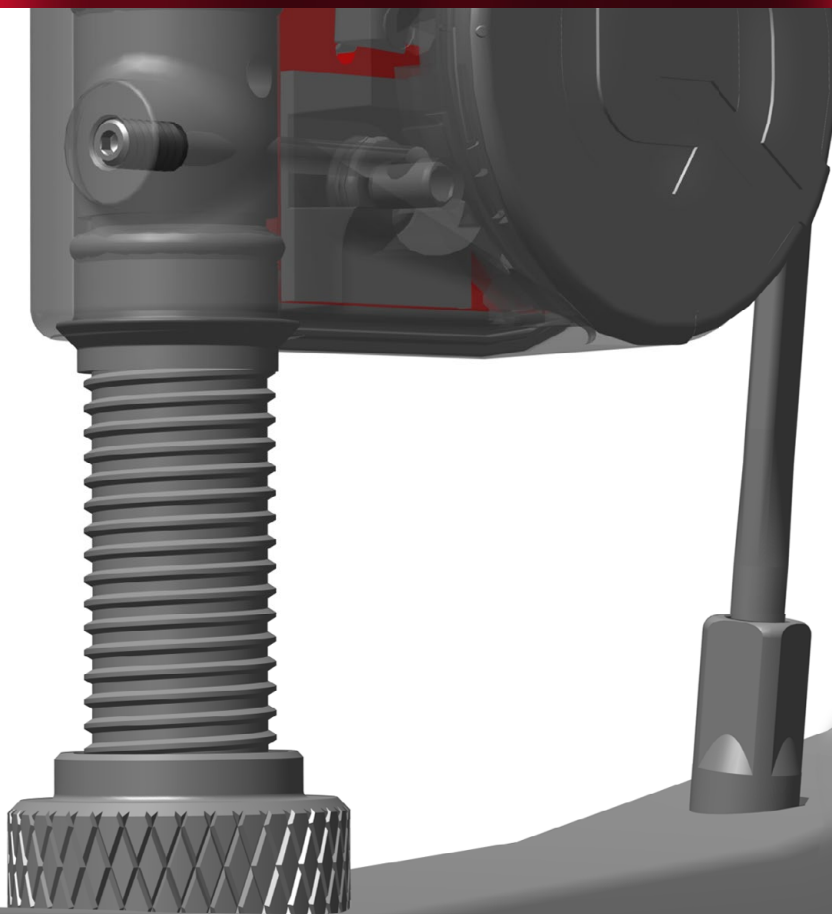

Tools and Supplies **5**

Werkzeuge und Material Herramientas y accesorios	Herramientas y accesorios Strumenti e forniture Gereedschap en benodigdheden	Ferramentas e Produtos a Usar ツールおよび付属品 工具和用品
---	--	---

Battery **6**

Batterie Pila	Pile Batteria Batterij	Bateria 電池 電池
------------------	------------------------------	---------------------

Parts Preparation **7**

Parts Preparation Parts Preparation	Parts Preparation Parts Preparation Parts Preparation	Parts Preparation Parts Preparation Parts Preparation
--	---	---

Installation **9**

Installation Installation	Installation Installation Installation	Installation Installation Installation
------------------------------	--	--

Tubeless Sealant Installation **12**

Tubeless Sealant Installation Tubeless Sealant Installation	Tubeless Sealant Installation Tubeless Sealant Installation Tubeless Sealant Installation	Tubeless Sealant Installation Tubeless Sealant Installation Tubeless Sealant Installation
--	---	---

TyreWiz™ Smart Device Apps **13**

TyreWiz Smart Device Apps TyreWiz Smart Device Apps	TyreWiz Smart Device Apps TyreWiz Smart Device Apps TyreWiz Smart Device Apps	TyreWiz Smart Device Apps TyreWiz Smart Device Apps TyreWiz Smart Device Apps
--	---	---

Garmin® Head Unit Display **13**

Garmin Head Unit Display Garmin Head Unit Display	Garmin Head Unit Display Garmin Head Unit Display Garmin Head Unit Display	Garmin Head Unit Display Garmin Head Unit Display Garmin Head Unit Display
--	--	--

Wahoo Fitness® Head Unit Display **14**

Wahoo Fitness Head Unit Display Wahoo Fitness Head Unit Display	Wahoo Fitness Head Unit Display Wahoo Fitness Head Unit Display Wahoo Fitness Head Unit Display	Wahoo Fitness Head Unit Display Wahoo Fitness Head Unit Display Wahoo Fitness Head Unit Display
--	---	---

TyreWiz™ Usage **15**

TyreWiz Usage TyreWiz Usage	TyreWiz Usage TyreWiz Usage TyreWiz Usage	TyreWiz Usage TyreWiz Usage TyreWiz Usage
--------------------------------	---	---

TyreWiz™ Light**16**TyreWiz Light
TyreWiz LightTyreWiz Light
TyreWiz Light
TyreWiz LightTyreWiz Light
TyreWiz Light
TyreWiz Light**Battery Replacement****17**Battery Replacement
Battery ReplacementBattery Replacement
Battery Replacement
Battery ReplacementBattery Replacement
Battery Replacement
Battery Replacement**Maintenance****18**Maintenance
MantenimientoEntretien
Manutenzione
OnderhoudManutenção
メンテナンス
保养

SAFETY INSTRUCTIONS

You must read and understand the Safety Instructions document included with your product before proceeding with installation. Improperly installed components are extremely dangerous and could result in severe and/or fatal injuries. If you have any questions about the installation of these components, consult a qualified bicycle mechanic. This document is also available on www.sram.com.

SICHERHEITSHINWEISE

Bevor Sie mit der Installation beginnen, müssen Sie die Ihrem Produkt beiliegenden Sicherheitshinweise gelesen und verstanden haben. Falsch montierte Komponenten stellen eine erhebliche Gefahr dar und könnten zu schweren und/oder tödlichen Verletzungen führen. Wenn Sie Fragen zur Montage dieser Komponenten haben, wenden Sie sich an einen qualifizierten Fahrradmechaniker. Dieses Dokument steht auch unter www.sram.com zur Verfügung.

INSTRUCCIONES DE SEGURIDAD

Antes de proceder a la instalación de este producto, es necesario que lea y entienda perfectamente el documento de instrucciones de seguridad que lo acompaña. Unos componentes mal instalados suponen un enorme peligro y pueden ocasionar lesiones graves o incluso mortales. Si tiene alguna pregunta acerca de la instalación de estos componentes, consulte con un mecánico de bicicletas cualificado. Este documento está disponible también en la dirección www.sram.com.

CONSIGNES DE SÉCURITÉ

Vous devez lire et comprendre le document consacré aux instructions de sécurité livré avec votre produit avant de procéder à son installation. Des composants installés de manière inappropriée sont extrêmement dangereux et peuvent provoquer des blessures graves, voire mortelles. Pour toute question concernant l'installation de ces composants, consultez un mécanicien vélo professionnel. Ce document est également disponible sur www.sram.com.

ISTRUZIONI DI SICUREZZA

L'utente deve leggere e comprendere il documento di Istruzioni di sicurezza accluso al prodotto, prima di procedere all'installazione. I componenti, se installati in modo improprio, sono estremamente pericolosi e potrebbero essere all'origine di ferite gravi e/o mortali. In caso di domande sull'installazione di questi componenti, consultare un meccanico per biciclette qualificato. Il presente documento è disponibile anche sul sito www.sram.com.

VEILIGHEIDSINSTRUCTIES

Lees en begrijp het document met veiligheidsinstructies dat met uw product is meegeleverd voordat u met de installatie begint. Verkeerd geïnstalleerde componenten kunnen buitengewoon gevaarlijk zijn en kunnen leiden tot ernstige en/of fatale verwondingen. Als u vragen hebt over de installatie van deze componenten, raadpleeg een vakbekwame fietsenmaker. Dit document is tevens beschikbaar op www.sram.com.

INSTRUÇÕES DE SEGURANÇA

Tem que ler e compreender o documento de Instruções de Segurança, incluído com o seu produto, antes de proceder com a instalação. Os componentes instalados de forma incorrecta são extremamente perigosos e poderão resultar em lesões graves e/ou fatais. Se tiver quaisquer perguntas sobre a instalação destes componentes, consulte um mecânico de bicicletas qualificado. Este documento também está disponível em www.sram.com.

安全にお使いいただくために

取り付けを開始する前に、製品に付属している安全に関する記述を必ず読み、内容を理解してください。コンポーネントを間違えて取り付けると、非常に危険な状態になり、その結果、重度または致命的な障害を引き起こすことがあります。これらのコンポーネントの取り付けに関して質問がある場合は、正規の自転車整備士にご相談ください。このマニュアルは www.sram.com にも掲載されています。

安全说明

进行安装之前，您必须阅读并理解产品随附的安全说明书。部件安装不当是极为危险的，可能导致严重甚至致命的人身伤害。如果您对部件安装有任何疑问，请咨询专业自行车技工。本文件也发布在 www.sram.com 上。

Tools and Supplies

Werkzeuge und Material
Herramientas y accesorios

Herramientas y accesorios
Strumenti e forniture
Gereedschap en benodigdheden

Ferramentas e Produtos a Usar
ツールおよび付属品
工具和用品

Highly specialized tools and supplies are required for the installation of your SRAM® components. We recommend that you have a qualified bicycle mechanic install your SRAM components.

Des outils et accessoires hautement spécialisés sont nécessaires pour l'installation de vos composants SRAM. Nous vous recommandons de faire installer vos composants SRAM par un mécanicien vélo qualifié.

São necessárias ferramentas altamente especializadas e produtos específicos para a instalação dos seus componentes SRAM. Recomendamos que mande um mecânico de bicicletas qualificado instalar os seus componentes SRAM.

Für den Einbau Ihrer SRAM-Komponenten werden Spezialwerkzeuge und spezielles Material benötigt. Es wird empfohlen, den Einbau Ihrer SRAM-Komponenten von einem qualifizierten Fahrradmechaniker durchführen zu lassen.


Sono necessari strumenti e forniture altamente specializzati per l'installazione dei componenti SRAM. Consigliamo di far installare i componenti SRAM da un meccanico per biciclette qualificato.

SRAM コンポーネントの取り付けには、非常に特殊なツールおよび付属品が必要です。当社では、SRAM コンポーネントの取り付けは、専門の自転車整備士に依頼することを推奨しています。

Para instalar los componentes SRAM se necesitan herramientas y accesorios muy especializados. Recomendamos que confíe la instalación de sus componentes SRAM a un mecánico de bicicletas cualificado.

Hooggespecialiseerd gereedschap en benodigdheden zijn nodig voor de installatie van uw SRAM-componenten. We bevelen aan om uw SRAM-componenten door een vakbekwame fietsenmaker te laten installeren.

安装 SRAM 组件需要非常专业的工具和用品。我们建议您让专业的自行车技工安装 SRAM 组件。

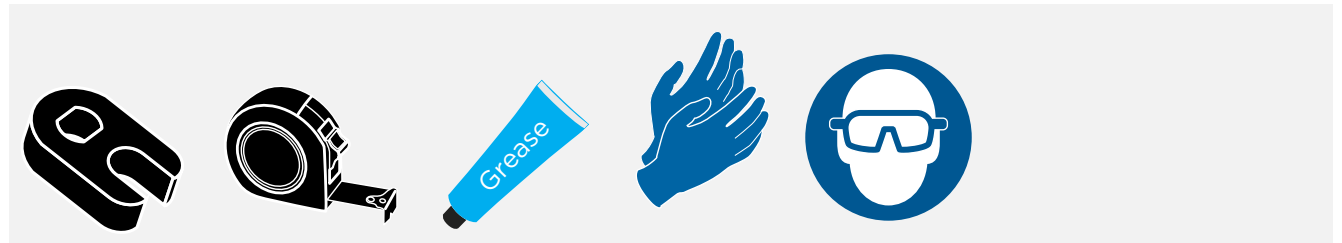

Battery

Batterie

Pila

Pile


Batteria

Batterij

Bateria

電池

電池

 For recycling and environmental compliance, please visit www.sram.com/company/environment.

⚠️WARNING

Never dispose of batteries in a fire.

Do not use sharp or conductive objects to remove the battery.

Keep the battery out of reach of children.

Do not put the battery in your mouth. If ingested, seek medical attention immediately.

Do not disassemble, damage, or puncture the battery.

Consult the battery manufacturer for safe handling instructions.

 Hinweise zum Recycling und Umweltschutz finden Sie auf www.sram.com/company/environment.

⚠️WARNUNG

Batterien dürfen keinesfalls verbrannt werden.


Verwenden Sie keine spitzen oder leitfähigen Gegenstände, um die Batterie herauszuhebeln.

Bewahren Sie die Batterie außerhalb der Reichweite von Kindern auf.

Nehmen Sie die Batterie nicht in den Mund. Falls Sie die Batterie verschlucken, suchen Sie sofort einen Arzt auf.

Die Batterie darf nicht zerlegt, beschädigt oder durchstochen werden.

Falls Sie Fragen zur sicheren Handhabung von Batterien haben, wenden Sie sich an den Batteriehersteller.

 Puede encontrar información sobre reciclaje y cumplimiento de la normativa medioambiental en la página www.sram.com/company/environment

⚠️ATENCIÓN

No tire nunca una batería al fuego.


No utilice objetos punzantes ni conductores para retirar la pila.

Mantenga la pila fuera del alcance de los niños.

No se introduzca la pila en la boca. En caso de ingestión, consiga atención médica de inmediato.

No desmonte, deteriore ni perforo la pila.

Consulte las instrucciones de seguridad sobre el manejo de la pila indicadas por su fabricante.

 Pour obtenir des informations sur le recyclage et le respect de l'environnement, veuillez consulter le site www.sram.com/company/environment.

⚠️AVERTISSEMENT

Ne jetez jamais les piles dans les flammes.


N'utilisez pas d'objet pointu ou électro-conducteur pour retirer la pile.

Maintenez la pile hors de la portée des enfants.

Ne mettez jamais la pile dans votre bouche. En cas d'ingestion, consultez immédiatement un médecin.

Ne démontez, n'endommagez et ne percez jamais la pile.

Pour une utilisation en toute sécurité, consultez les instructions du fabricant de la pile.

 Per il riciclaggio e la conformità ai requisiti ambientali, visitare il sito www.sram.com/company/environment.

⚠️AVVERTENZA

Non gettare le batterie nel fuoco.

Non utilizzare alcun oggetto appuntito o conduttivo per rimuovere la batteria.

Tenere la batteria al di fuori della portata dei bambini.

Non mettere in bocca la batteria. In caso di ingestione consultare immediatamente un medico.

Non smontare, danneggiare o perforare la batteria.

Consultare il produttore della batteria per istruzioni per una manipolazione sicura.

 Voor meer informatie over recycling en bescherming van het milieu, ga naar www.sram.com/company/environment.

⚠️WAARSCHUWING

Gooi batterijen nooit in vuur.


Gebruik geen scherpe of geleidende voorwerpen om de batterij te verwijderen.

Houd de batterij uit de buurt van kinderen.

Steek de batterij niet in uw mond. Indien ingeslikt, raadpleeg onmiddellijk een arts.

De batterij niet uit elkaar halen, beschadigen of doorboren.

Neem contact op met de fabrikant van de batterij hoe deze op een veilige manier te gebruiken.

 Para reciclagem e conformidade ambiental, visite www.sram.com/company/environment.

⚠️AVISO

Nunca descarte baterias/pilhas atirando-as para um fogo.

Não use quaisquer objectos aguçados nem objectos condutores para retirar a bateria.

Mantenha a bateria fora do alcance das crianças.

Não meta a bateria na sua boca. Se a ingerir, busque imediatamente cuidados médicos.

Não desmonte, danifique nem perfure a bateria.

Consulte o fabricante da bateria para obter instruções de manejo seguro.

 リサイクルと環境に関する順守事項については、www.sram.com/company/environment を参照してください。

⚠️警告

電池は、決して焼却処分しないでください。

電池を取り外す際は、尖った物や導電性の物を使用しないでください。

電池は子供の手の届かない場所に保管してください。

電池は口の中に入れてください。電池を飲み込んだ場合は、直ちに医師の指導を仰いでください。

電池の分解、破壊、穿孔は行わないでください。

安全な取り扱い方法について、電池メーカーにお問い合わせください。

 有关回收利用和环保合规信息，请访问 www.sram.com/company/environment。

⚠️警告

请勿把电池丢入火中。

请勿使用尖锐物体或导电物体卸除电池。

将电池放在儿童接触不到的地方。

请勿将电池放入口中。如不慎吞咽，请立即就医。

请勿对电池进行分解、破坏或穿孔。

参阅电池厂商说明书了解安全操作说明。

Parts Preparation

Parts Preparation
Parts Preparation

Make sure there is at least 6 mm of valve stem extending above the rim, not including the valve core, for adequate clearance.

Make sure there is at least 6 mm of valve stem extending above the rim, not including the valve core, for adequate clearance.

Make sure there is at least 6 mm of valve stem extending above the rim, not including the valve core, for adequate clearance.

Parts Preparation

Parts Preparation
Parts Preparation

Make sure there is at least 6 mm of valve stem extending above the rim, not including the valve core, for adequate clearance.

Make sure there is at least 6 mm of valve stem extending above the rim, not including the valve core, for adequate clearance.

Make sure there is at least 6 mm of valve stem extending above the rim, not including the valve core, for adequate clearance.



Parts Preparation

Parts Preparation
Parts Preparation

Make sure there is at least 6 mm of valve stem extending above the rim, not including the valve core, for adequate clearance.

Make sure there is at least 6 mm of valve stem extending above the rim, not including the valve core, for adequate clearance.


Make sure there is at least 6 mm of valve stem extending above the rim, not including the valve core, for adequate clearance.

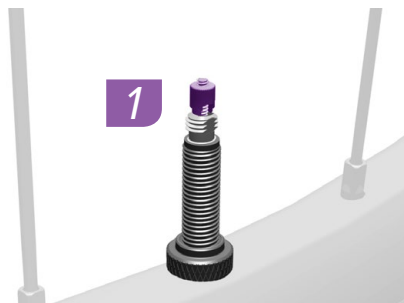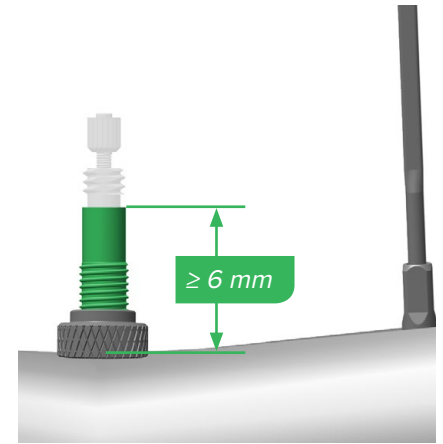

Unthread then depress the Presta valve to release the air pressure. Hold the valve stem and use the Presta valve tool to remove the valve core.

Unthread then depress the Presta valve to release the air pressure. Hold the valve stem and use the Presta valve tool to remove the valve core.

Unthread then depress the Presta valve to release the air pressure. Hold the valve stem and use the Presta valve tool to remove the valve core.

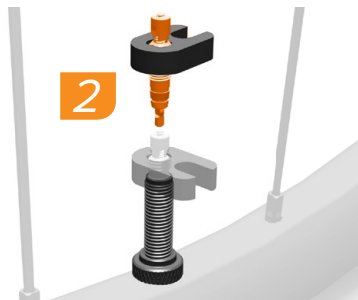

Unthread then depress the Presta valve to release the air pressure. Hold the valve stem and use the Presta valve tool to remove the valve core.

Unthread then depress the Presta valve to release the air pressure. Hold the valve stem and use the Presta valve tool to remove the valve core.

Unthread then depress the Presta valve to release the air pressure. Hold the valve stem and use the Presta valve tool to remove the valve core.

Unthread then depress the Presta valve to release the air pressure. Hold the valve stem and use the Presta valve tool to remove the valve core.

Unthread then depress the Presta valve to release the air pressure. Hold the valve stem and use the Presta valve tool to remove the valve core.

Unthread then depress the Presta valve to release the air pressure. Hold the valve stem and use the Presta valve tool to remove the valve core.



Measure
Messen
Medir

Mesurer
Misurare
Meten

Medir
計測
測量



Adjust
Einstellen
Ajustar

Régler
Regolare
Afstellen

Ajustar
調節



Remove/Loosen
Entfernen/Lösen
Quitar/Afajar

Retirer/Desserrer
Rimuovere/Allentare
Verwijderen/Losmaken

Retirar/Desapertar
取り外し/緩める
拆卸/旋松

Unthread the keeper nut and o-ring from the TyreWiz™ valve extender, and pull the extender from the TyreWiz body.

Unthread the keeper nut and o-ring from the TyreWiz valve extender, and pull the extender from the TyreWiz body.

Unthread the keeper nut and o-ring from the TyreWiz valve extender, and pull the extender from the TyreWiz body.

Unthread the keeper nut and o-ring from the TyreWiz valve extender, and pull the extender from the TyreWiz body.

Unthread the keeper nut and o-ring from the TyreWiz valve extender, and pull the extender from the TyreWiz body.

Unthread the keeper nut and o-ring from the TyreWiz valve extender, and pull the extender from the TyreWiz body.

Unthread the keeper nut and o-ring from the TyreWiz valve extender, and pull the extender from the TyreWiz body.

Unthread the keeper nut and o-ring from the TyreWiz valve extender, and pull the extender from the TyreWiz body.

Unthread the keeper nut and o-ring from the TyreWiz valve extender, and pull the extender from the TyreWiz body.



Installation

Installation
Installation
Installation

Installation
Installation
Installation

Installation
Installation
Installation

Apply grease to the lower threads of the TyreWiz™ extender.

Hold the valve stem with one hand and use the Presta valve tool to tighten the extender until it is finger-tight.

Apply grease to the lower threads of the TyreWiz extender.

Hold the valve stem with one hand and use the Presta valve tool to tighten the extender until it is finger-tight.

Apply grease to the lower threads of the TyreWiz extender.

Hold the valve stem with one hand and use the Presta valve tool to tighten the extender until it is finger-tight.

Apply grease to the lower threads of the TyreWiz extender.

Hold the valve stem with one hand and use the Presta valve tool to tighten the extender until it is finger-tight.

Apply grease to the lower threads of the TyreWiz extender.

Hold the valve stem with one hand and use the Presta valve tool to tighten the extender until it is finger-tight.

Apply grease to the lower threads of the TyreWiz extender.

Hold the valve stem with one hand and use the Presta valve tool to tighten the extender until it is finger-tight.

Apply grease to the lower threads of the TyreWiz extender.


Hold the valve stem with one hand and use the Presta valve tool to tighten the extender until it is finger-tight.

Apply grease to the lower threads of the TyreWiz extender.

Hold the valve stem with one hand and use the Presta valve tool to tighten the extender until it is finger-tight.

Apply grease to the lower threads of the TyreWiz extender.

Hold the valve stem with one hand and use the Presta valve tool to tighten the extender until it is finger-tight.

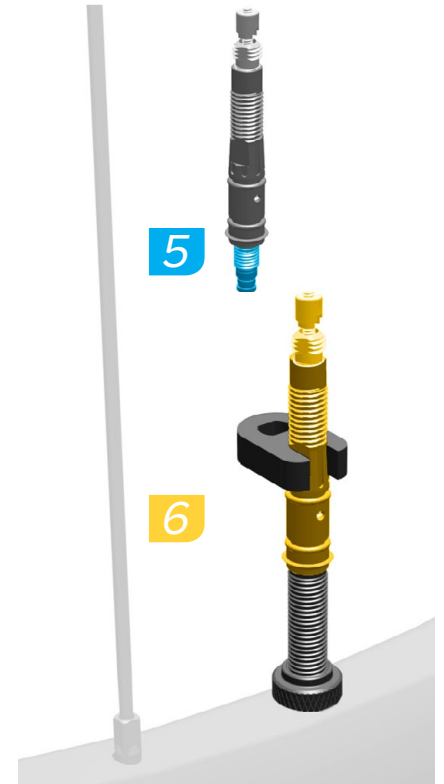

Install the TyreWiz body onto the TyreWiz extender so that the splines are aligned.

Install the TyreWiz body onto the TyreWiz extender so that the splines are aligned.

Install the TyreWiz body onto the TyreWiz extender so that the splines are aligned.

Install the TyreWiz body onto the TyreWiz extender so that the splines are aligned.

Install the TyreWiz body onto the TyreWiz extender so that the splines are aligned.

Install the TyreWiz body onto the TyreWiz extender so that the splines are aligned.

Install the TyreWiz body onto the TyreWiz extender so that the splines are aligned.

Install the TyreWiz body onto the TyreWiz extender so that the splines are aligned.

Install the TyreWiz body onto the TyreWiz extender so that the splines are aligned.



Grease
Schmierfett
Engrasar

Lubrifier
Ingrassare
Smeren


Massa lubrificante
グリス
潤滑



Install
Einbauen
Instalar

Instalar
Installare
Monteren

Instalar
取り付け
安装

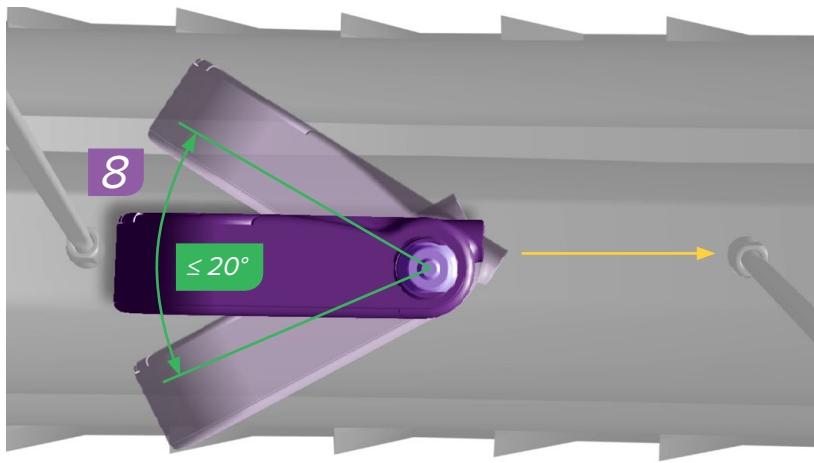

Direction of wheel rotation	Direction of wheel rotation	Direction of wheel rotation
Direction of wheel rotation	Direction of wheel rotation	Direction of wheel rotation
Direction of wheel rotation	Direction of wheel rotation	Direction of wheel rotation

TyreWiz™ should be installed as close to inline with the spokes as possible and opposite the direction of wheel rotation. The installed TyreWiz assembly and valve can be rotated up to 20 degrees to the desired position.

⚠CAUTION

Damage to the TyreWiz, the rim, or frame may result if TyreWiz is not properly aligned with the spokes. On higher spoke count wheels it is acceptable for TyreWiz to slightly overlap with the spoke.

TyreWiz should be installed as close to inline with the spokes as possible and opposite the direction of wheel rotation. The installed TyreWiz assembly and valve can be rotated up to 20 degrees to the desired position.

⚠CAUTION

Damage to the TyreWiz, the rim, or frame may result if TyreWiz is not properly aligned with the spokes. On higher spoke count wheels it is acceptable for TyreWiz to slightly overlap with the spoke.

The installed TyreWiz assembly and valve can be rotated up to 20 degrees to the desired position. TyreWiz should be as close to inline with the spokes as possible.

⚠CAUTION

Damage to the TyreWiz, the rim, or frame may result if TyreWiz is not properly aligned with the spokes. On higher spoke count wheels it is acceptable for TyreWiz to slightly overlap with the spoke.

TyreWiz should be installed as close to inline with the spokes as possible and opposite the direction of wheel rotation. The installed TyreWiz assembly and valve can be rotated up to 20 degrees to the desired position.

⚠CAUTION

Damage to the TyreWiz, the rim, or frame may result if TyreWiz is not properly aligned with the spokes. On higher spoke count wheels it is acceptable for TyreWiz to slightly overlap with the spoke.

TyreWiz should be installed as close to inline with the spokes as possible and opposite the direction of wheel rotation. The installed TyreWiz assembly and valve can be rotated up to 20 degrees to the desired position.

⚠CAUTION

Damage to the TyreWiz, the rim, or frame may result if TyreWiz is not properly aligned with the spokes. On higher spoke count wheels it is acceptable for TyreWiz to slightly overlap with the spoke.

The installed TyreWiz assembly and valve can be rotated up to 20 degrees to the desired position. TyreWiz should be as close to inline with the spokes as possible.

⚠CAUTION

Damage to the TyreWiz, the rim, or frame may result if TyreWiz is not properly aligned with the spokes. On higher spoke count wheels it is acceptable for TyreWiz to slightly overlap with the spoke.

TyreWiz should be installed as close to inline with the spokes as possible and opposite the direction of wheel rotation. The installed TyreWiz assembly and valve can be rotated up to 20 degrees to the desired position.

⚠CAUTION

Damage to the TyreWiz, the rim, or frame may result if TyreWiz is not properly aligned with the spokes. On higher spoke count wheels it is acceptable for TyreWiz to slightly overlap with the spoke.

TyreWiz should be installed as close to inline with the spokes as possible and opposite the direction of wheel rotation. The installed TyreWiz assembly and valve can be rotated up to 20 degrees to the desired position.

⚠CAUTION

Damage to the TyreWiz, the rim, or frame may result if TyreWiz is not properly aligned with the spokes. On higher spoke count wheels it is acceptable for TyreWiz to slightly overlap with the spoke.

The installed TyreWiz assembly and valve can be rotated up to 20 degrees to the desired position. TyreWiz should be as close to inline with the spokes as possible.

⚠CAUTION

Damage to the TyreWiz, the rim, or frame may result if TyreWiz is not properly aligned with the spokes. On higher spoke count wheels it is acceptable for TyreWiz to slightly overlap with the spoke.

Install the o-ring and the keeper nut onto the TyreWiz™ valve extender until it is finger-tight. Do not overtighten.

NOTICE

Never use any tool to tighten the keeper nut onto the extender.

Install the o-ring and the keeper nut onto the TyreWiz valve extender until it is finger-tight. Do not overtighten.

NOTICE

Never use any tool to tighten the keeper nut onto the extender.

Install the o-ring and the keeper nut onto the TyreWiz valve extender until it is finger-tight. Do not overtighten.

NOTICE

Never use any tool to tighten the keeper nut onto the extender.

Install the o-ring and the keeper nut onto the TyreWiz valve extender until it is finger-tight. Do not overtighten.

NOTICE

Never use any tool to tighten the keeper nut onto the extender.

Install the o-ring and the keeper nut onto the TyreWiz valve extender until it is finger-tight. Do not overtighten.

NOTICE

Never use any tool to tighten the keeper nut onto the extender.

Install the o-ring and the keeper nut onto the TyreWiz valve extender until it is finger-tight. Do not overtighten.

NOTICE

Never use any tool to tighten the keeper nut onto the extender.

Install the o-ring and the keeper nut onto the TyreWiz valve extender until it is finger-tight. Do not overtighten.

NOTICE

Never use any tool to tighten the keeper nut onto the extender.

Install the o-ring and the keeper nut onto the TyreWiz valve extender until it is finger-tight. Do not overtighten.

NOTICE

Never use any tool to tighten the keeper nut onto the extender.

Install the o-ring and the keeper nut onto the TyreWiz valve extender until it is finger-tight. Do not overtighten.

NOTICE

Never use any tool to tighten the keeper nut onto the extender.



Inflate the tire to the desired air pressure and tighten the Presta valve.

Inflate the tire to the desired air pressure and tighten the Presta valve.

Inflate the tire to the desired air pressure and tighten the Presta valve.

Inflate the tire to the desired air pressure and tighten the Presta valve.

Inflate the tire to the desired air pressure and tighten the Presta valve.

Inflate the tire to the desired air pressure and tighten the Presta valve.

Inflate the tire to the desired air pressure and tighten the Presta valve.

Inflate the tire to the desired air pressure and tighten the Presta valve.

Inflate the tire to the desired air pressure and tighten the Presta valve.



Install
Einbauen
Instalar

Installer
Installare
Monteren

Instalar
取り付け
安裝



Torque
Drehmoment
Par de apriete

Serrage
Coppia
Aandraaimoment

Momento de torção
締め付け
扭緊

Tubeless Sealant Installation

Tubeless Sealant Installation
Tubeless Sealant Installation

Tubeless Sealant Installation
Tubeless Sealant Installation
Tubeless Sealant Installation

Tubeless Sealant Installation
Tubeless Sealant Installation
Tubeless Sealant Installation



NOTICE

The TyreWiz™ assembly must be removed from the Presta valve stem prior to installing or adding tubeless sealant to the tire through the valve stem.

NOTICE

The TyreWiz assembly must be removed from the Presta valve stem prior to installing or adding tubeless sealant to the tire through the valve stem.

NOTICE

The TyreWiz assembly must be removed from the Presta valve stem prior to installing or adding tubeless sealant to the tire through the valve stem.

NOTICE

The TyreWiz assembly must be removed from the Presta valve stem prior to installing or adding tubeless sealant to the tire through the valve stem.

NOTICE

The TyreWiz assembly must be removed from the Presta valve stem prior to installing or adding tubeless sealant to the tire through the valve stem.

NOTICE

The TyreWiz assembly must be removed from the Presta valve stem prior to installing or adding tubeless sealant to the tire through the valve stem.

NOTICE

The TyreWiz assembly must be removed from the Presta valve stem prior to installing or adding tubeless sealant to the tire through the valve stem.

NOTICE

The TyreWiz assembly must be removed from the Presta valve stem prior to installing or adding tubeless sealant to the tire through the valve stem.

NOTICE

The TyreWiz assembly must be removed from the Presta valve stem prior to installing or adding tubeless sealant to the tire through the valve stem.

Wahoo Fitness® Head Unit Display

Wahoo Fitness Head Unit Display
Wahoo Fitness Head Unit Display

The TyreWiz air pressure reading can be added to a compatible Wahoo Fitness head unit through the Wahoo Companion App™.

Visit www.wahoofitness.com for a list of compatible devices.

The TyreWiz air pressure reading can be added to a compatible Wahoo Fitness head unit through the Wahoo Companion App™.

Visit www.wahoofitness.com for a list of compatible devices.

The TyreWiz air pressure reading can be added to a compatible Wahoo Fitness head unit through the Wahoo Companion App™.

Visit www.wahoofitness.com for a list of compatible devices.

Wahoo Fitness Head Unit Display

Wahoo Fitness Head Unit Display
Wahoo Fitness Head Unit Display

The TyreWiz air pressure reading can be added to a compatible Wahoo Fitness head unit through the Wahoo Companion App™.

Visit www.wahoofitness.com for a list of compatible devices.

The TyreWiz air pressure reading can be added to a compatible Wahoo Fitness head unit through the Wahoo Companion App™.

Visit www.wahoofitness.com for a list of compatible devices.

The TyreWiz air pressure reading can be added to a compatible Wahoo Fitness head unit through the Wahoo Companion App™.

Visit www.wahoofitness.com for a list of compatible devices.

Wahoo Fitness Head Unit Display

Wahoo Fitness Head Unit Display
Wahoo Fitness Head Unit Display

The TyreWiz air pressure reading can be added to a compatible Wahoo Fitness head unit through the Wahoo Companion App™.

Visit www.wahoofitness.com for a list of compatible devices.

The TyreWiz air pressure reading can be added to a compatible Wahoo Fitness head unit through the Wahoo Companion App™.

Visit www.wahoofitness.com for a list of compatible devices.

The TyreWiz air pressure reading can be added to a compatible Wahoo Fitness head unit through the Wahoo Companion App™.

Visit www.wahoofitness.com for a list of compatible devices.

Basic TyreWiz usage:

TyreWiz™ must be on to connect to the app.
Turn the wheel one rotation to turn TyreWiz on.

TyreWiz will turn off automatically when idle for 10 minutes.

TyreWiz™ does not have to be connected to the TyreWiz App while riding.

Tire pressure data is not saved by the TyreWiz app.

Basic TyreWiz usage:

TyreWiz™ must be on to connect to the app.
Turn the wheel one rotation to turn TyreWiz on.

TyreWiz will turn off automatically when idle for 10 minutes.

TyreWiz™ does not have to be connected to the TyreWiz App while riding.

Tire pressure data is not saved by the TyreWiz app.

Basic TyreWiz usage:

TyreWiz™ must be on to connect to the app.
Turn the wheel one rotation to turn TyreWiz on.

TyreWiz will turn off automatically when idle for 10 minutes.

TyreWiz™ does not have to be connected to the TyreWiz App while riding.

Tire pressure data is not saved by the TyreWiz app.

Basic TyreWiz usage:

TyreWiz™ must be on to connect to the app.
Turn the wheel one rotation to turn TyreWiz on.

TyreWiz will turn off automatically when idle for 10 minutes.

TyreWiz™ does not have to be connected to the TyreWiz App while riding.

Tire pressure data is not saved by the TyreWiz app.

Basic TyreWiz usage:

TyreWiz™ must be on to connect to the app.
Turn the wheel one rotation to turn TyreWiz on.

TyreWiz will turn off automatically when idle for 10 minutes.

TyreWiz™ does not have to be connected to the TyreWiz App while riding.

Tire pressure data is not saved by the TyreWiz app.

Basic TyreWiz usage:

TyreWiz™ must be on to connect to the app.
Turn the wheel one rotation to turn TyreWiz on.

TyreWiz will turn off automatically when idle for 10 minutes.

TyreWiz™ does not have to be connected to the TyreWiz App while riding.

Tire pressure data is not saved by the TyreWiz app.

Basic TyreWiz usage:

TyreWiz™ must be on to connect to the app.
Turn the wheel one rotation to turn TyreWiz on.

TyreWiz will turn off automatically when idle for 10 minutes.

TyreWiz™ does not have to be connected to the TyreWiz App while riding.

Tire pressure data is not saved by the TyreWiz app.

Basic TyreWiz usage:

TyreWiz™ must be on to connect to the app.
Turn the wheel one rotation to turn TyreWiz on.

TyreWiz will turn off automatically when idle for 10 minutes.

TyreWiz™ does not have to be connected to the TyreWiz App while riding.

Tire pressure data is not saved by the TyreWiz app.

Basic TyreWiz usage:

TyreWiz™ must be on to connect to the app.
Turn the wheel one rotation to turn TyreWiz on.

TyreWiz will turn off automatically when idle for 10 minutes.

TyreWiz™ does not have to be connected to the TyreWiz App while riding.

Tire pressure data is not saved by the TyreWiz app.

Battery Replacement

Battery Replacement
Battery Replacement



Rotate the battery cover 20 degrees counter-clockwise and remove the cover and battery.

Do not use any tools to remove or install the battery cover.

Remove the battery from the cover. It may be necessary to tap the cover on a hard surface to dislodge the battery.

Install a new CR1632 battery into the cover with the + (plus) sign facing the cover.

Install the cover into the TyreWiz™ and rotate it 20 degrees clockwise to secure.

Rotate the battery cover 20 degrees counter-clockwise and remove the cover and battery.

Do not use any tools to remove or install the battery cover.

Remove the battery from the cover. It may be necessary to tap the cover on a hard surface to dislodge the battery.

Install a new CR1632 battery into the cover with the + (plus) sign facing the cover.

Install the cover into the TyreWiz and rotate it 20 degrees clockwise to secure.

Rotate the battery cover 20 degrees counter-clockwise and remove the cover and battery.


Do not use any tools to remove or install the battery cover.

Remove the battery from the cover. It may be necessary to tap the cover on a hard surface to dislodge the battery.

Install a new CR1632 battery into the cover with the + (plus) sign facing the cover.

Install the cover into the TyreWiz and rotate it 20 degrees clockwise to secure.

Battery Replacement
Battery Replacement
Battery Replacement

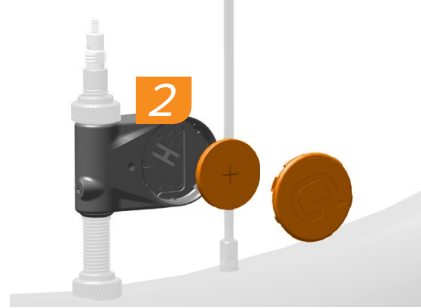

Rotate the battery cover 20 degrees counter-clockwise and remove the cover and battery.

Do not use any tools to remove or install the battery cover.

Remove the battery from the cover. It may be necessary to tap the cover on a hard surface to dislodge the battery.

Install a new CR1632 battery into the cover with the + (plus) sign facing the cover.

Install the cover into the TyreWiz and rotate it 20 degrees clockwise to secure.

Rotate the battery cover 20 degrees counter-clockwise and remove the cover and battery.

Do not use any tools to remove or install the battery cover.

Remove the battery from the cover. It may be necessary to tap the cover on a hard surface to dislodge the battery.

Install a new CR1632 battery into the cover with the + (plus) sign facing the cover.

Install the cover into the TyreWiz and rotate it 20 degrees clockwise to secure.

Rotate the battery cover 20 degrees counter-clockwise and remove the cover and battery.


Do not use any tools to remove or install the battery cover.

Remove the battery from the cover. It may be necessary to tap the cover on a hard surface to dislodge the battery.

Install a new CR1632 battery into the cover with the + (plus) sign facing the cover.

Install the cover into the TyreWiz and rotate it 20 degrees clockwise to secure.

Battery Replacement
Battery Replacement
Battery Replacement

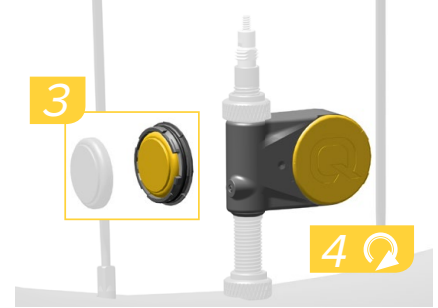

Rotate the battery cover 20 degrees counter-clockwise and remove the cover and battery.

Do not use any tools to remove or install the battery cover.

Remove the battery from the cover. It may be necessary to tap the cover on a hard surface to dislodge the battery.

Install a new CR1632 battery into the cover with the + (plus) sign facing the cover.

Install the cover into the TyreWiz and rotate it 20 degrees clockwise to secure.

Rotate the battery cover 20 degrees counter-clockwise and remove the cover and battery.

Do not use any tools to remove or install the battery cover.

Remove the battery from the cover. It may be necessary to tap the cover on a hard surface to dislodge the battery.

Install a new CR1632 battery into the cover with the + (plus) sign facing the cover.

Install the cover into the TyreWiz and rotate it 20 degrees clockwise to secure.

Rotate the battery cover 20 degrees counter-clockwise and remove the cover and battery.

Do not use any tools to remove or install the battery cover.

Remove the battery from the cover. It may be necessary to tap the cover on a hard surface to dislodge the battery.

Install a new CR1632 battery into the cover with the + (plus) sign facing the cover.

Install the cover into the TyreWiz and rotate it 20 degrees clockwise to secure.



Adjust
Einstellen
Ajustar

Régler
Regolare
Ajustar

Ajustar
調節



Remove/Loosen
Entfernen/Lösen
Quitar/Aflorar

Retirer/Desserrer
Rimuovere/Allentare
Verwijderen/Losmaken

Retirar/Desapertar
取り外し/緩める
拆卸/旋松



Install
Einbauen
Instalar

Installar
Installare
Monteren

Instalar
取り付け
安裝

Clean TyreWiz™ with a damp cloth to wipe off dirt and debris.

NOTICE

Do not use a pressure washer to clean.
Do not use acidic or grease dissolving agents. Chemical cleaners and solvents can cause permanent damage to the electronics.

Clean TyreWiz™ with a damp cloth to wipe off dirt and debris.

HINWEIS

Verwenden Sie zur Reinigung keinen Hochdruckreiniger.
Verwenden Sie keine sauren oder fettlösenden Mittel. Chemische Reinigungsmittel und Lösungsmittel können Kunststoffkomponenten dauerhaft beschädigen.

Clean TyreWiz™ with a damp cloth to wipe off dirt and debris.

AVISO

No utilice máquinas de lavado a presión para su limpieza.
No utilice disolventes grasos o acídicos. Los disolventes o limpiadores químicos pueden provocar daños irreparables a los componentes electrónicos.

Clean TyreWiz™ with a damp cloth to wipe off dirt and debris.

AVIS

N'utilisez jamais de nettoyeur haute-pression.
N'utilisez jamais de détergents acides ou dissolvant la graisse. Les détergents chimiques et les solvants peuvent endommager irréversiblement les composants électroniques de l'appareil.

Clean TyreWiz™ with a damp cloth to wipe off dirt and debris.

AVVISO

Non utilizzare un pulitore a pressione.
Non utilizzare agenti acidi o in grado di sciogliere il grasso. L'uso di detergenti chimici e solventi può causare danni permanenti ai componenti elettronici.

Clean TyreWiz™ with a damp cloth to wipe off dirt and debris.

MEDEDELING

Gebruik geen hogedrukreiniger om schoon te maken.
Gebruik geen vetoplossende of zuurreinigers. Chemische reinigingsmiddelen en oplosmiddelen kunnen de elektronica onherstelbaar beschadigen.

Clean TyreWiz™ with a damp cloth to wipe off dirt and debris.

NOTIFICAÇÃO

Não utilize uma lavadora de água sob pressão para a limpeza.
Não use produtos ácidos nem os que dissolvem massa lubrificante. Os produtos de limpeza e solventes químicos podem causar danos permanentes à electrónica.

Clean TyreWiz™ with a damp cloth to wipe off dirt and debris.

注意事項

清浄時には勢いよく水をかけないでください。
酸性剤またはグリス溶解剤を使用しないでください。化学クリーナーと溶剤は、電子機器に恒久的な損傷を与える可能性があります。

Clean TyreWiz™ with a damp cloth to wipe off dirt and debris.

注意

切勿使用高压清洗器。
请勿使用酸或油脂溶解剂进行清洗。化学清洁剂和溶剂可能永久损坏电子设备。

iOS® is a registered trademark of Cisco Technology, Inc.

Android® is a registered trademark of Google Inc.

Garmin® is a registered trademark of Garmin International, Inc.

Wahoo Fitness® is a registered trademark of Wahoo Fitness, LLC.

The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by SRAM® is under license.

Other trademarks and trade names are those of their respective owners.

iOS ist eine eingetragene Marke von Cisco Technology, Inc.

Android ist eine eingetragene Marke von Google Inc.

Garmin® is a registered trademark of Garmin International, Inc. Garmin Connect™, and Connect IQ™, are trademarks of Garmin International, Inc.

Die Wortmarke Bluetooth und entsprechende Logos sind eingetragene Marken von Bluetooth SIG, Inc. und die Nutzung dieser Marken durch SRAM erfolgt unter Lizenz. Andere Marken und Handelsnamen sind das Eigentum der jeweiligen Inhaber.

iOS es marca registrada de Cisco Technology, Inc.

Android es marca registrada de Google Inc.

Garmin® is a registered trademark of Garmin International, Inc. Garmin Connect™, and Connect IQ™, are trademarks of Garmin International, Inc.

Los logotipos y la palabra de marca Bluetooth son marcas registradas propiedad de Bluetooth SIG, Inc. Todo uso de dichas marcas por parte de SRAM está sujeto a licencia. Otras marcas comerciales y marcas registradas son propiedad de sus respectivos titulares.

iOS est une marque commerciale déposée de Cisco Technology, Inc.

Android est une marque commerciale déposée de Google Inc.

Garmin® is a registered trademark of Garmin International, Inc. Garmin Connect™, and Connect IQ™, are trademarks of Garmin International, Inc.

Le nom Bluetooth et ses logos sont des marques commerciales déposées détenues par the Bluetooth SIG, Inc. et toute utilisation de ces marques par SRAM se fait sous licence. Les autres marques commerciales déposées et noms de marque appartiennent à leurs propriétaires respectifs.

iOS è un marchio registrato di Cisco Technology, Inc.

Android è un marchio registrato di Google Inc.

Garmin® is a registered trademark of Garmin International, Inc. Garmin Connect™, and Connect IQ™, are trademarks of Garmin International, Inc.

Il marchio e i loghi Bluetooth sono marchi registrati di proprietà di Bluetooth SIG, Inc. e qualsiasi utilizzo di tali marchi da parte di SRAM è sotto licenza. Altri marchi e nomi commerciali sono di proprietà dei rispettivi titolari.

iOS is een geregistreerd handelsmerk van Cisco Technology, Inc.

Android is een geregistreerd handelsmerk van Google Inc.

Garmin® is a registered trademark of Garmin International, Inc. Garmin Connect™, and Connect IQ™, are trademarks of Garmin International, Inc.

Het Bluetooth woordmerk en logo's zijn geregistreerde handelsmerken die eigendom zijn van Bluetooth SIG, Inc. en elk gebruik van deze merken door SRAM is onder licentie. Andere handelsmerken en handelsnamen zijn eigendom van hun respectieve eigenaars.

iOS é uma marca comercial registrada de Cisco Technology, Inc.

Android é uma marca comercial registrada de Google Inc.

Garmin® is a registered trademark of Garmin International, Inc. Garmin Connect™, and Connect IQ™, are trademarks of Garmin International, Inc.

A palavra da marca Bluetooth e os logótipos são marcas comerciais registradas que são propriedade da Bluetooth SIG, Inc. e qualquer uso de tais marcas por SRAM é feito sob licença. Outras marcas comerciais e nomes comerciais são os dos seus respectivos proprietários.

iOS はCisco Technology, Inc.の登録商標です。

AndroidはGoogle Inc.の登録商標です。

Garmin® is a registered trademark of Garmin International, Inc. Garmin Connect™, and Connect IQ™, are trademarks of Garmin International, Inc.

Bluetoothのワードマークおよびロゴは Bluetooth SIG, Inc.が所有する登録商標であり、SRAMによるかかるマークの使用はすべて許可を受けています。その他の商標および商品名は、それぞれの所有者に属しています。

iOS 是 Cisco Technology, Inc. 的注册商标。

Android 是 Google Inc. 的注册商标。

Garmin® is a registered trademark of Garmin International, Inc. Garmin Connect™, and Connect IQ™, are trademarks of Garmin International, Inc.

Bluetooth 字标和徽标是 Bluetooth SIG, Inc. 拥有的注册商标。SRAM 在使用这些标志前已取得许可。其它商标和商号均分别归属于其各自的所有者。

SRAM[®]

www.sram.com



ASIAN HEADQUARTERS
SRAM Taiwan
No. 1598-8 Chung Shan Road
Shen Kang Hsiang, Taichung City
Taiwan R.O.C.

WORLD HEADQUARTERS
SRAM LLC
1000 W. Fulton Market, 4th Floor
Chicago, Illinois 60607
USA

EUROPEAN HEADQUARTERS
SRAM Europe
Paasbosweg 14-16
3862ZS Nijkerk
The Netherlands