


# T2040 | User's Guide

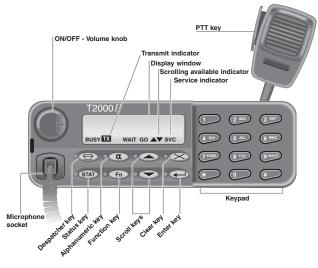

T2040||

### Getting Started

### Introduction Your T2040II is controlled by a microprocessor which allows it to be configured to suit the needs of your particular fleet.

This User's guide provides a brief description of the basic features of your radio. For information about the advanced features, a comprehensive operators' manual is available from your Tait dealer.

Switching on Turn the ON/OFF-Volume knob clockwise about one-third of a turn. You may need to finally adjust the volume when you receive your first call.

### Checking System Availability

Check to see that the SVC (service) indicator appears in the display within a few seconds, showing that your radio has logged on to the network

There are three possible indications:

SVC Indicator	Meaning
Continuous	Your radio has access to a network and is ready to make or accept calls.
Blinking	Your radio does not currently have access to a network. It is attempting to find a site it is authorised to use, or it may be out of range of a network signal.
Absent	Your radio is in Conventional mode.

### Transmit Timer

The radio is fitted with a preprogrammed timer to limit the maximum length of transmissions. When this time limit is reached, a three tone warning is sounded and transmission stops. You must release the PTT key before proceeding.

Call

### **Sending a** There are four ways to make a call using your T2040II:

Making a Call

- 1 Enter the full number of the required party using the numeric keypad and then press the **Hash** ( key to send the call.
- 2 Enter a two-digit short dial preset number using the numeric keypad and then press the **Hash** ( key to send the call.
- 3 Use the **Despatcher** ( ) and **Function** ( ) keys which may each be preprogrammed to send a call directly, when you apply a long press. The **Despatcher** ( ) key is usually preprogrammed to call your base despatcher.
- 4 Use an alphanumeric label to select a call identity (see "Alphanumeric Entry mode").

You may hear call setup tones followed by a ringing tone similar to that of a telephone, and the WAIT indicator may be displayed. When the called party answers, the WAIT indicator is replaced by the GO indicator and you may proceed with your conversation.

Using the The PTT key on the side of the microphone Microphone switches the radio between transmit and receive and PTT key modes. Each time the radio transmits, the TX indicator appears in the display.

> To speak, press the PTT key. Hold the microphone about 5cm from your mouth and pause briefly to ensure your first word is not cut off, then speak clearly. Release it to listen to the reply.





## Receiving a Call When you receive a call your radio will alert you

with a ringing tone like a telephone and the identity of the caller will be displayed as explained below.

Responding You may accept a call by lifting the microphone from its clip, pressing the PTT key and identifying yourself (for example "Mobile-9 Receiving"). If you do not want to accept the call, press the

Clear (S) key and the call will be cancelled. If the call is a group call, you will hear a single ring

and then the caller will broadcast a message to all members of your group. It is not normally necessary to reply.

The source of an incoming call or the

itification callers identity is snown in the display as follows:				
	Display	Example	Explanation	
	Label	VEHICLE7	The calling party is one of your preset numbers with a label preprogrammed into your radio.	
	Preset Number	8	The calling party is one of your network stored preset numbers without a label preprogrammed into your radio.	
	Call Number	23	The calling party is in the same fleet as your radio but is not preprogrammed.	
	System Message	OFLT	The calling party is not in the same fleet as your radio and is not preprogrammed.	
	System Message	PHONE	A call from the PSTN (Public Switched Telephone Network).	
	System Message	PABX	A call from the PABX (Private Automatic Branch Exchange).	

### Safety Training Information Call Queuing Status Calls Alphanumeric Entry Mode FCC RF This product generates radio If you need to leave your T2040II unattended, you Status calls permit the rapid exchange of simple To perform repetitive operations which require frequency energy during may have it save incoming calls as call-back messages without voice conversation. Your radio several keystrokes, your T2040II may be **Exposure** transmissions. This device must preprogrammed with alphanumeric labels. These Limits messages for you to return later. can have messages such as "En route", "At lunch" be restricted to work-related use labels, when recalled, can perform a series of and so on preprogrammed. To set call queuing on and have all calls except Settina in an occupational/controlled operations such as sending a call. Queuing On "group, PABX and PSTN" calls queued: Sending a To select and send a status message: exposure environment. The radio Selecting a To use preset sequences, select them by their • Press the **Despatcher** ( ) key until the Status operator must have control of the 1 Press the Status (STAT) key and use the ( ) label as follows: indicator beside it illuminates. exposure conditions and duration of all persons scroll keys to select an appropriate message; 1 Press the Alphanumeric ( ) key to enter the Handling When you return to your radio it displays the exposed to the antenna of this transmitter to Alphanumeric Entry mode. Saved Calls number of calls received and the identity of the 2 To send the message to your despatcher, press satisfy FCC RF exposure compliance. This device the **Hash** ( kev: first caller. You may: 2 Locate the desired label by using the cursor is not approved for general population use. keys ( and ) to scroll through the list until 1 Return the displayed call by pressing the PTT **3** To send the message to any other party, press · It must only be used with authorized accessothe label is displayed, or enter the label for the the **Star** () key, and then: key; ries and antennas. required party, using the keypad. 2 Discard the call by pressing the Clear (S) key; • Dial the identity number using the keypad, or; • The operator must ensure that the minimum safe 3 Press the **Hash** ( ) or the **PTT** key to initiate distance of 0.35m (14 inches) between persons • Select an alphanumeric label for the call. 3 Scroll to another message using the Up and the labelled action as it is preprogrammed. and the antenna is not exceeded during **Down** ( ) keys and handle it as above; 4 Press the Hash ( key to make the call. Example You want to call your base despatcher who has transmissions. 4 Make a new outgoing call as normal. Receiving a When you receive a status call, your T2040II been assigned the label, BASE. The keystroke Do not exceed a duty cycle ratio of 50% transmit automatically enters the Call Queuing mode. **Cancelling** You may restore the radio to normal operation Status sequence and display might appear as follows: mode to stand-by or receive modes. The radio is Message The status message value shows on the left of the Call Queuing by pressing the Despatcher ( ) key again until Press Display Explanation in transmit mode when the PTT key on the the indicator beside it extinguishes. display and the caller's identity on the right. microphone is pressed and the TX indicator Key Reads If the status message corresponds to a label The radio will now alert you normally when a call is shows in the display window. Most recent selection which is preprogrammed into your radio, the $\alpha$ VEHICLET received. If you still have calls saved in the queue, indicator beside the Alphanumeric ( ) key displayed Additional • DANGER: SWITCH THE RADIO OFF they are preserved and you may recover them at Safety AT PETROL FILLING STATIONS flashes. To view the label: any time by turning call queuing back on. Label not yet identified Warnings • DANGER: SWITCH THE RADIO OFF • Press the Alphanumeric ( ) key. You may set your T2040II to reject all incoming Do Not IN THE VICINITY OF EXPLOSIVE Disturb calls whilst allowing you to make calls out DEVICES (such as in a quarry that Label not yet identified normally. The radio will display QUIET and callers uses blasting techniques) will be given the "unavailable" response. • Use of a handheld microphone or a BRSE • To set 'Do Not Disturb', dial \*49#. New label identified radio while driving could contravene • To cancel, dial #49# or press the Clear (>>>) the legislation that applies in your BASE is called and the key, and the QUIET message is removed from country or state. Please check the BASE number is displayed the display. vehicle regulations of your own

459-20400-02

country.