


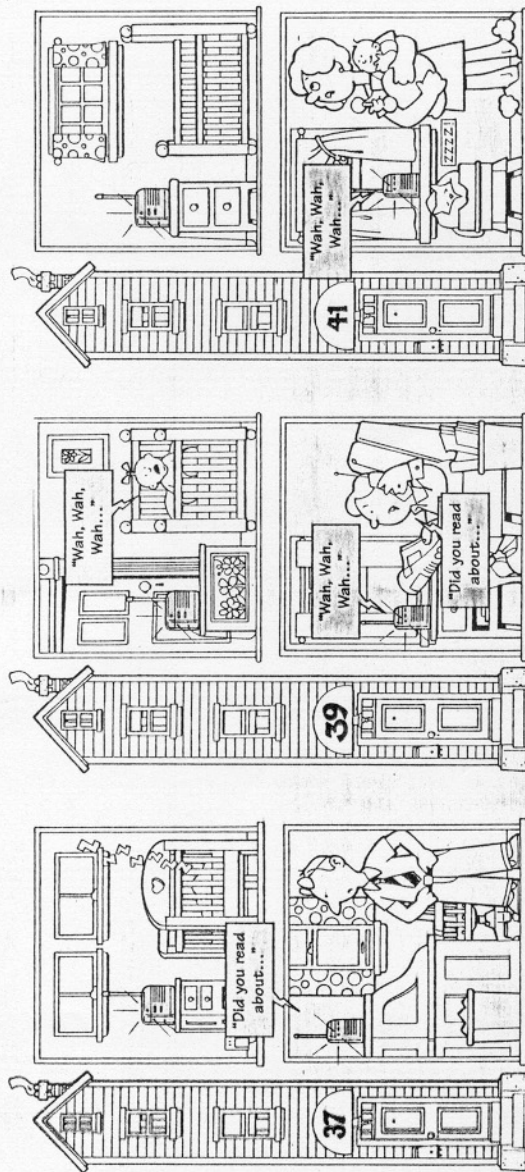

PROBLEM

You can hear conversations or sounds from other homes. There is signal interference due to other nursery monitors on same channel or cordless telephones.

SOLUTION

Change channel switches on both transmitter and receiver to eliminate source of interference.

Helpful Hints:

- Do not use more than one transmitter and one receiver at same time in same household.
- Always remember that you are using public airwaves when using your monitor. Conversations, even from rooms near transmitter, may broadcast to other nursery monitors, radios, cordless telephones, or scanners outside your home. To protect privacy of your home, always turn transmitter off when not in use.

PROBLEM

You hear static or buzzing because receiver is out of range of transmitter.

Note: Range varies depending on surrounding conditions such as noise levels, physical obstructions and signal interference.

SOLUTIONS

- Move receiver closer to transmitter.
- Make sure antennas are pointed upward.

Helpful Hint:

- If you cannot hear your child, your receiver battery is weak. Replace the receiver battery with a fresh, 9V alkaline battery or use AC adaptor for power source.

