

FUNCTIONAL DESCRIPTION

The 5878 is a wall plate type transmitter, used to send arm, disarm, and panic messages to Ademco alarm systems in the same manor as a key-fob. It may also be used to perform auxiliary control of lighting or garage doors, through the system.