

INSTALLATION GUIDE: FLEXDESK



BEYOND THE BOOK

Installation Guide

Version 1.1 | 12 May 2011

[Installation Guide]

TECHNICAL SUPPORT

EMAIL ADDRESS

info@nedaplibrix.com

VISITORS ADDRESS

Nedap Librix
Parallelweg 2d
Groenlo
The Netherlands

POSTAL ADDRESS

Nedap Librix
P.O. box 102
7140 AC Groenlo
The Netherlands

TEL & FAX

Tel: +31(0)544 47 15 09
Fax: +31(0)544 46 58 14

©Nedap Librix
Netherlands
Parallelweg 2d, 7141 DC Groenlo

The software / hardware described in this document / file is furnished under a license agreement and may be used only in accordance with the terms of agreement.

Documentation Installation Guide Flexdesk Copyright Notice

Any technical documentation that is made available by Nedap Librix is the copyrighted work of Nedap Librix and is owned by Nedap Librix.

NO WARRANTY. The technical documentation is being delivered to you and Nedap Librix makes no warranty as to its accuracy or use. Any use of the technical documentation or the information contained herein is at the risk of the user. Documentation may include technical or other inaccuracies or typographical errors. Nedap Librix has the right to make changes without prior notice. No part of this publication may be copied without the express written permission of Nedap Librix, Parallelweg 2d, 7141 DC Groenlo, The Netherlands.

Trademarks

Nedap and the Nedap logo are registered trademarks of N.V. Nederlandsche Apparatenfabriek “Nedap”, Parallelweg 2, 7141 DC Groenlo, The Netherlands. Other product names mentioned in this manual may be trademarks or registered trademarks of their respective companies and are hereby acknowledged. Printed in the Netherlands.

CHANGE HISTORY

Date	Version	Description
21-04-2011	1.0	First version
12-05-2011	1.1	Added text to FCC section

CONTENTS

CHAPTER 1: INTRODUCTION		07
CHAPTER 2: CONTENTS		07
CHAPTER 3: HARDWARE INSTRUCTIONS		09
CHAPTER 4: SOFTWARE INSTRUCTIONS		11
CHAPTER 5. FCC AND IC DECLARATIONS		12
CHAPTER 6. TECHNICAL SPECIFICATIONS		13
CHAPTER 7. DISCLAIMER		14

SAFETY INSTRUCTIONS & PRECAUTIONS

The following safety instructions and precautions should be observed during normal use, service and repair.



- Do not change anything regarding the prox reader or the installation procedure.



- Always switch off the power (by disconnecting the power plug) before you remove the cover.


CHAPTER 1. INTRODUCTION

The flexdesk can be used for checking out and/or in books and cd's. A prox 13.56MHz reader is pre-installed inside the desk. The prox is connected to a pc inside a flexdesk. The pre-installed software Bibliocheck4Selfservice can be configured to operate in checkin, checkout or combi mode. The software can connect to the library management system (LMS) over the SIP2 or NCIP protocol. An integrated ticket printer can be used to issue tickets to a patron.

This document describes the hardware and software installation for a flexdesk.

CHAPTER 2. CONTENTS

The following items are included:

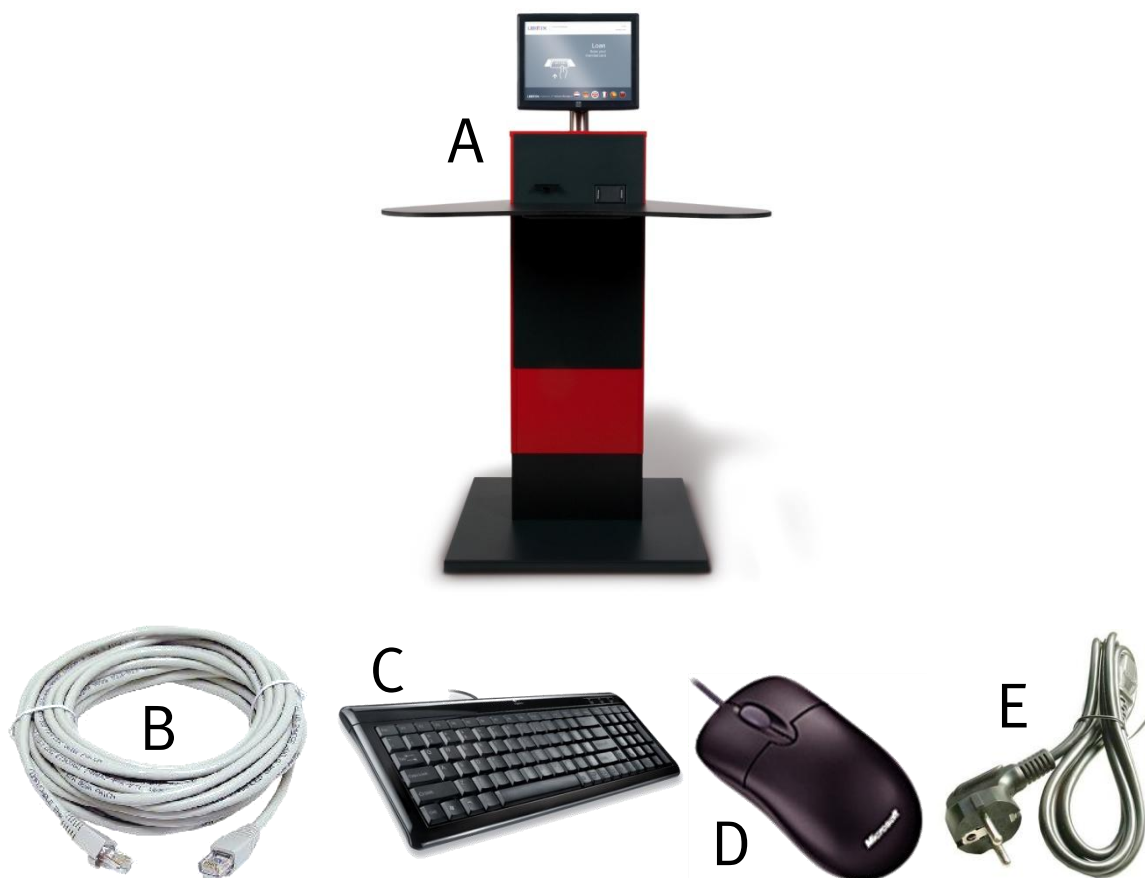

- 1x [A] flexdesk with pre-installed embedded pc, touchscreen, PROX 13.56MHz transceiver
- 1x [B] 2M UTP network cable
- 1x [C] USB keyboard
- 1x [D] USB mouse
- 1x [E] Power cable with European connector

CHAPTER 3: HARDWARE INSTRUCTIONS

The flexdesk is pre-installed with all required hardware and software. The hardware only needs to be connected to a power source, and to the network over a UTP cable.

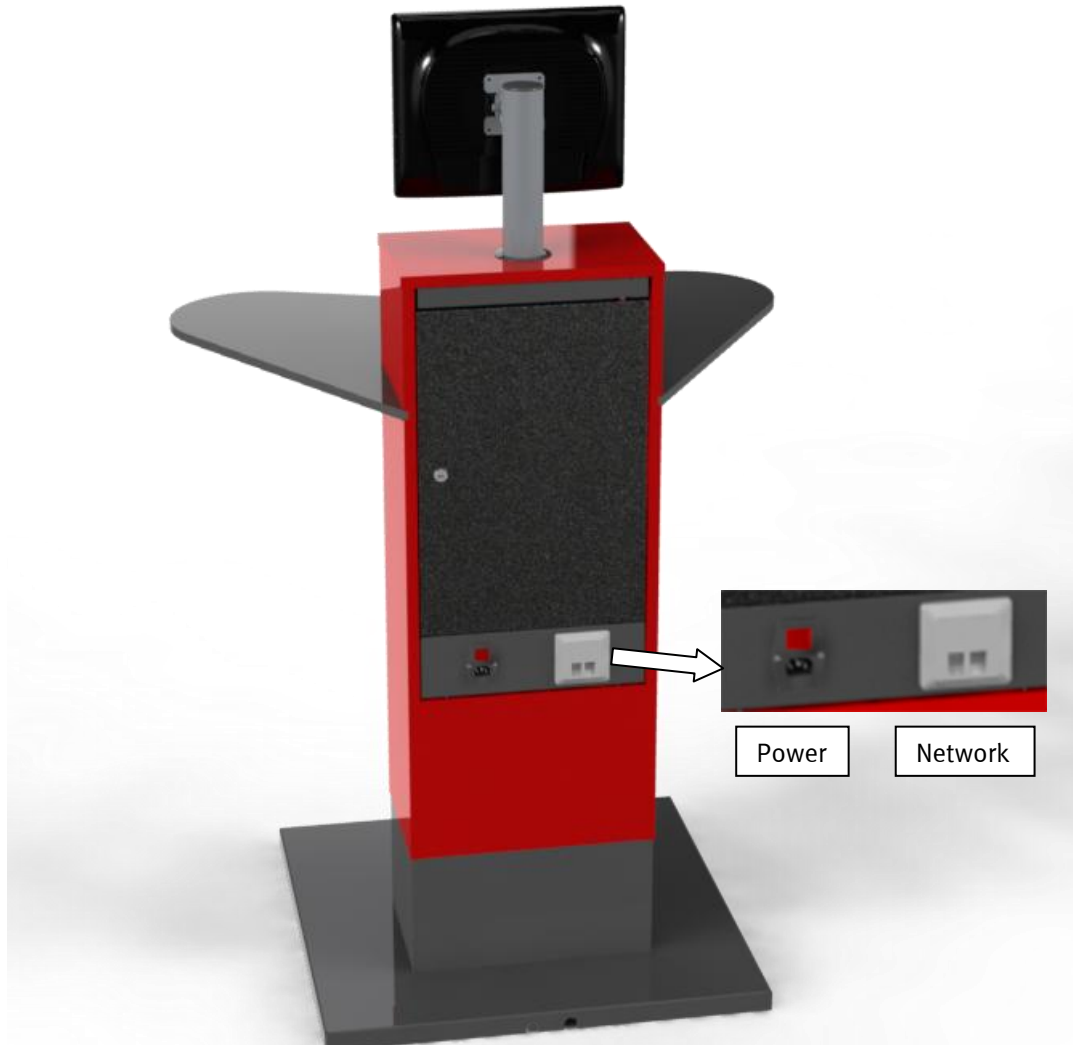


Figure 1 - power and network connector

1. Connect the power cable [E] to the power connector on the back of the flexdesk.
2. Connect the UTP network cable [A] to the UTP connector on the back of the flexdesk that is labeled ' PC' .
3. Switch on the power of the flexdesk by pushing the red power switch.
4. The PC inside the flexdesk will automatically start when power is applied to it.
5. If the screen stays black, only the screen must be turned on manually. This can be done by pressing the power button on the right side of the screen (🔌)

CHAPTER 4: SOFTWARE INSTRUCTIONS

The software running on the flexdesk is Bibliocheck4Selfservice. Refer to the manual for this software package for more information about the installation and configuration of this program.

CHAPTER 5. FCC AND IC CERTIFICATIONS

This device contains PROX1356 with FCC-ID: CGDPROX1356 and IC: 1444A-PROX1356

Part 15.19(3) and RSS_Gen Labelling

This device complies with part 15 of the FCC Rules and to RSS210 of Industry Canada.

Operating is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Cet appareil se conforme aux normes RSS 210 exemptés de license du Industry Canada.

L'opération est soumis aux deux conditions suivantes :

- (1) cet appareil ne doit causer aucune interférence, et
- (2) cet appareil doit accepter n'importe quelle interférence, y inclus interférence qui peut causer une opération non pas voulu de cet appareil.

Warning (part15.21)

Changes or modifications not expressly approved by party responsible for compliance could void the user's authority to operate the equipment.

CHAPTER 6. TECHNICAL SPECIFICATIONS

PHYSICAL SPECIFICATIONS

Article number:		9927786 / 9930400
Dimensions (cm):	Standard furniture:	ca. 100 x 83 x 130 (l x w x h)
	Height desk:	ca. 75
	Height ring (optional):	10 or 20
Material:		Metal, MDF, vulkanit
Standard color:		Wood Red U-225 Metal Ral 7016
Optional color:		Any color at extra costs
Weight:		ca. 70 kg
Function:		Check-in, -out, combi
Check in of CDs/DVDs:		Yes

ELECTRICAL SPECIFICATIONS

Supply voltage:		110_230 V, 50-60Hz
Working voltage:	Reader:	24 V - 12 V - 9 V
Power consumption:		Max. 100 Watt
Length power cable:		1.8 m

HARDWARE SPECIFICATIONS

User interface:		Touchscreen 15 inch
PC:	Type:	Industrial PC or Touch PC
	Operating system:	XP Embedded SP3
	Connections:	USB, Lan, VGA, Serial, Audio
Communication cable:		Standard UTP
Printer:		Thermal, paper 80 mm
Compatibility:	Software:	Bibliocheck4 Selfservice
	Reader:	Nedap Prox. Reader, art. nr. 9934634
	Antenna power:	Max. 1 Watt
	Technology:	RFID
	Frequency:	13.56 MHz
	Identifies:	ISO 15693 / ISO 18000-3.1
	EAS function:	Yes, EAS-bits and/or AFI
Patron card reader:	Standard :	Barcode card reader or RFID/Mifare card reader
	Optional:	Magnetic card

ENVIRONMENTAL SPECIFICATIONS

Operational temperature:	+10 / +45 °C
Storage temperature:	0 / +55 °C

WARRANTY / CERTIFICATES

Certificate:	CE / EMC / FCC
Warranty:	1 year

CHAPTER 7. DISCLAIMER

This information is furnished for guidance, and with no guarantee as to its accuracy or completeness; its publication conveys no license under any patent or other right, nor does the publisher assume liability for any consequence of its use; specifications and availability of goods mentioned in it are subject to change without notice; it is not to be reproduced in any way, in whole or in part, without the written consent of the publisher.

Nedap Librix
P.O. Box 102
NL-7140 AC Groenlo
The Netherlands