


030-300419 Rev. A

Draft 8 – 11/30/04

Draft 7 Changed power to AC 12V

Draft 8 Updates section 3.1 Telephone Safety Instructions per Joe Gage

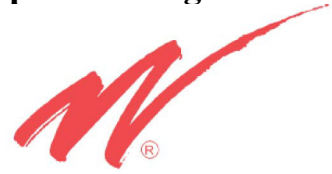

**WESTELL**

**VERIZON ONE TELEPHONE SUBSYSTEM  
5.8 GHZ DIGITAL CORDLESS SPEAKERPHONE**

---

**USER GUIDE**



## TABLE OF CONTENTS

1.	PRODUCT DESCRIPTION.....	4
2.	CONVENTIONS USED IN THIS DOCUMENT.....	4
3.	SAFETY INSTRUCTIONS.....	5
3.1	Telephone Safety Instructions.....	5
3.2	Battery Safety Instructions.....	5
4.	REGULATORY INFORMATION.....	6
	FCC Compliance Note.....	6
5.	GETTING TO KNOW YOUR VERIZON ONE SYSTEM.....	7
5.1	Caring for Your Verizon One.....	7
5.2	Base Unit Telephone Features.....	7
5.3	Cordless Handset Telephone Features.....	8
6.	TELEPHONE SUBSYSTEM QUICK STARTUP.....	9
7.	INSTALLING THE VERIZON ONE BASE UNIT.....	10
7.1	Choosing a Location to Install Verizon One.....	10
7.2	Installing the Base Unit on a Desktop or Flat Surface.....	10
7.3	Wall Mounting on a Hollow Drywall Surface (Optional).....	10
8.	INSTALLING THE VERIZON ONE HANDSET.....	12
8.1	Installing the Handset Battery.....	12
8.2	Charging the Handset (Battery).....	13
8.3	Battery Charge Indication.....	14
8.4	Turning On the Handset.....	15
8.5	Parking the Handset on the Base.....	16
8.6	Using the Handset Belt Clip.....	16
9.	REGISTERING THE HANDSET TO THE Verizon One BASE.....	17
10.	VERIZON ONE HANDSET CONTROLS.....	18
10.1	Handset Control Buttons.....	18
10.2	Handset Activity LED.....	19
10.3	Backlighting.....	19
11.	Verizon One HANDSET SCREENS.....	20
11.1	Standby.....	20
11.2	No New Calls.....	20
11.3	Twelve New Calls.....	21
11.4	Ringer Off.....	21
11.5	Fifteen New Calls, No Messages Waiting, Line In use.....	21
11.6	Fifteen New Calls, Messages Waiting, Line In use.....	21
12.	USING THE Verizon One MAIN MENU.....	22
12.1	Accessing Handset Main Menu.....	22
12.2	Registration Menu.....	23
12.3	Date and Time Menu.....	24



12.4	Handset Name Menu .....	25
12.5	Ringer Setup Menu .....	25
12.6	Incoming Calls Menu .....	27
13.	USING THE PHONEBOOK MENU .....	33
13.1	Accessing the Phonebook .....	33
13.2	Adding a New Name .....	34
13.3	Phonebook Listing .....	36
13.4	Phonebook View Entry .....	36
13.5	Phonebook Options .....	37
13.6	Edit a Phone Entry .....	37
13.7	Deleting Existing Phone Numbers .....	39
14.	USING INTERCOM AND CALL TRANSFER FUNCTIONS .....	40
14.1	Intercom Functions .....	40
14.2	Call Transfer Functions .....	44
14.3	Handset Locator .....	46
15.	USING DIALING FUNCTIONS .....	47
15.1	Dialing Screen .....	47
15.2	Redial Screen .....	51
15.3	Incoming Call Screen .....	51
15.4	Talk Screen .....	52
15.5	Call Waiting Screen .....	52
15.6	Unregistered Handset Screen .....	52
15.7	Out of Range Detection .....	53
16.	HEADSET SUPPORT .....	54
17.	VERIZON ONE BASE UNIT CONTROLS .....	55
17.1	Base Unit Speakerphone Control Buttons .....	55
17.2	Base Unit Activity LED .....	56
17.3	Backlighting .....	57
18.	VERIZON ONE BASE UNIT OPERATIONS .....	57
18.1	Base Unit, Stylus and LCD .....	57
18.2	Making and Ending Calls .....	57
18.3	Answering Incoming Calls .....	57
18.4	Transferring Calls from the Base to the Handset .....	58
18.5	Transferring Calls from the Handset to the Base .....	58
18.6	Paging from the Base .....	58
18.7	Adjusting the Volume .....	58
18.8	Using the Mute Button .....	58
18.9	Using the Hold Button .....	58
18.10	Using the Menu and Address Book Buttons .....	58
19.	TECHNICAL SUPPORT INFORMATION .....	59
20.	PUBLICATION INFORMATION .....	59



## 1. PRODUCT DESCRIPTION

The Verizon One is an integrated communications platform that combines your telephone, data networking and Internet services into one simple device.

This User's Guide explains how to use the telephone features of your new Verizon One when operating the telephone in what is called "Stand Alone" mode. Your Verizon One has been designed to operate in two different modes: Stand Alone and iobi.

The default mode of operation is iobi. When iobi services are not available because either your DSL Line has not been provisioned or for other network reasons, your Verizon One will revert to Stand Alone mode. In Stand Alone mode, your Verizon One telephone system will work as a standard cordless telephone as explained in this document.

For details on operating your Verizon One in iobi mode, please refer to Verizon's iobi user manual. The remainder of this document will only address using your Verizon One telephone system in Stand Alone mode.

Hereafter, the Verizon One Telephone Subsystem will be referred to as "Verizon One," "Base Unit," or "Handset."

## 2. CONVENTIONS USED IN THIS DOCUMENT

- LCD screens – The screens displayed in this document are meant to provide a visual representation of Verizon One's Handset and Base functionality. The actual data displayed in your LCD screens may differ slightly from the data displayed in the screens of this document.
- Lucy – Refers to the name assigned to an additional Handset registered to the Verizon One Base Unit. This name was used to explain the Intercom and Call Transfer Functions discussed in section 14 of this document.
- Note – Refers to outlined information that provides additional details about a feature or function.
- On-hook – Refers to the condition when either the Base Unit or a Handset is not active in requesting a dial tone or placing a call.
- Off-hook – Refers to the condition when either the Base Unit or Handset is active in requesting dial tone or is engaged in a call.
- Pointer – Refers to the pointer symbol ► used to select items in the LCD screens.
- Screen – Refers to either the Handset's or the Base Unit's Liquid Crystal Display (LCD).
- Words enclosed in symbols < > represent physical buttons that you can press with your finger. These are located on the face of the Handset and the Base Unit.
- Words enclosed in brackets [ ] represent soft key functions accessible/selectable through the Handset's and Base Unit's LCD screens.

## 3. SAFETY INSTRUCTIONS

### 3.1 Telephone Safety Instructions

Please save these important safety instructions.

- Always disconnect all telecommunications network conductors prior to servicing the unit.
- Do not use a telephone to report a gas leak in the vicinity of the leak. (Move away from the gas leak before using a telephone.)
- Never install any telephone wiring during a lightning storm.
- Never install telephone jacks in wet locations unless the jack is specifically designed for wet locations.
- Never touch non-insulated telephone wires or terminals unless the telephone line has been disconnected at the network interface.
- Use caution when installing or modifying telephone lines.

**IMPORTANT:** In the event of a loss of electricity to your home/office, your Verizon One telephone system will not operate. For this reason, it is recommended that you have at least one standard telephone in your home/office for use in case of an emergency.



#### **WARNING**

**Risk of electric shock. Voltages up to 140 Vdc (with reference to ground) may be present on telecommunications circuits.**

### 3.2 Battery Safety Instructions

- Use only the battery that was provided with your Verizon One kit, or an authorized replacement recommended by the manufacturer.
- Do not puncture the battery. The battery contains toxic materials that could be released if mishandled, resulting in injury.
- Keep batteries and other potentially hazardous devices out of the reach of children.
- Never dispose of batteries in fire, which could result in explosion.

## 4. REGULATORY INFORMATION

### FCC Compliance Note

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the Federal Communication Commission (FCC) Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment OFF and ON, the user is encouraged to try to correct the interference by one or more of the following measures:

- Turn off the equipment that is interfering or is being interfered with.
- Move the equipment away from each other until the interference stops.
- Refer to equipment owner's manual for instruction on how to properly configure the device to avoid interference.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- Because the output power for this device is so low, it meets RF exposure requirement.

## 5. GETTING TO KNOW YOUR VERIZON ONE SYSTEM

The Verizon One Telephone Subsystem can function in two modes: Standalone mode and iobi mode. In Standalone mode, Verizon One functions as a standard cordless telephone/speaker device that can be used in your home or office. In iobi mode, Verizon One provides a variety of voice and data network services that can be delivered through your broadband connection to Verizon's network.

If you are using Verizon One in iobi mode, you will perform most of your interactions through the Base Unit's LCD touch screen. A stylus pen is provided with the Base and, by using the stylus, you can gently tap the components in the LCD screen and navigate to various Iobi features. The Stylus, which is included with your Verizon One kit, is stored in the stylus holder located on the right side of the Verizon One base.

The default mode of operation is iobi. When iobi services are not available because either your DSL Line has not been provisioned or for other network reasons, your Verizon One will revert to Stand Alone mode. In Stand Alone mode, your Verizon One telephone system will work as a standard cordless telephone as explained in this document.

For details on operating your Verizon One in iobi mode, please refer to Verizon's iobi user manual. The remainder of this document will only address using your Verizon One telephone system in Stand Alone mode.

### 5.1 Caring for Your Verizon One

Please follow these guidelines to ensure the best use of your Verizon One.

- When using Stylus pen (Verizon One in iobi mode), please be sure to gently tap the components in the LCD screen to navigate to various Iobi features.
- **DO NOT** use a pen, pencil or other pointed object on the LCD screen as these items may cause damage to the screen. Always use the point of the Stylus for tapping on the LCD screen and making selections.
- Warning: **DO NOT** use an abrasive cleaner on the LCD screen as this will damage the screen. **If the LCD becomes soiled, use a damp, clean cloth moistened with a window-cleaning solution to gently wipe the screen.**

### 5.2 Base Unit Telephone Features

The following features are provided in the Verizon One Base Unit. An in-depth discussion of functions will be discussed later in this document.

- Symmetrical 5.8 GHz DSS cordless telephone technology with built-in 5.8 GHz Antennae
- 75 Hopping Channels for enhanced operation under interference
- 12-key Keypad allows alphanumeric data entry to the Base Unit.
- Telephone Control buttons allow phone setup, navigation, menu selection, and call control (such as hold, mute, intercom, volume control) from the Base Unit.
- Full Duplex, Handsfree Speaker/Microphone for placing / receiving calls from the Base Unit

- Internally filtered convenience/Fax jack – enables the connection of other telephony equipment such as fax machines directly to Verizon One
- Integrated Handset Cradle with battery charger
- Illuminated, Color LCD Touch Screen – Primary iobi user interface that enables access to Verizon One's advanced services
- LED Indicators display the operational status of Verizon One's telephony and data networking functions
- Message Waiting/Ringing LED indicator – provides indication of incoming calls and/or message waiting
- Selective intercom page to either Base or the Handset.
- Stylus Pen functions as a detachable, pen-like, plastic tool for selecting items on the Base Unit's LCD screen (primarily used with iobi services)

### **5.3 Cordless Handset Telephone Features**



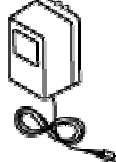





The following features are provided in the Verizon One Cordless Telephone Handset. An in-depth discussion of functions will be discussed later in this document.

- Symmetrical 5.8 GHz DSS cordless telephone technology with built-in 5.8GHz Antennae
- 75 Hopping Channels for enhanced operation under interference
- Illuminated 12-key Keypad allows alphanumeric data entry
- Telephone Control buttons allow phone setup, navigation, menu selection, and call control (such as hold, mute, intercom, manual volume control) from the Handset
- Illuminated Liquid Crystal Display (LCD) screen with graphics-based operation
- Message Waiting/Ringing LED indicator– provides indication of incoming calls and/or message waiting
- Type I and Type II Caller ID, Call Waiting and Call Waiting with Caller Line ID (user must subscribe to services from telephone company)
- Incoming Calls with last 40 Caller ID records
- Support for Off hook dialing, pre-dialing and redial
- One touch conference and Selective intercom page between Base Unit and Handset(s)
- Phonebook dialing; 50 Phonebook
- Redial from list of last 5 numbers dialed
- Saving selective Caller ID records into Phonebook directory
- Digital Volume Control
- Rechargeable Battery
- Ear plug adapter for headset (optional headset not included)
- Belt Clip for hands-free operation when using a headset (optional headset not included)

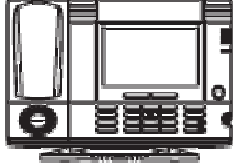

## 6. TELEPHONE SUBSYSTEM QUICK STARTUP

### Checking Package Contents

Item	Quantity	
Verizon One Base Unit	1	
Stylus	1	
Power Supply	1	
RJ-45 Ethernet cable (straight-through) (yellow)	1	
RJ-11 Phone cable	1	
Verizon One Cordless Handset with Battery and Headset	1	
Handset Belt Clip	1	
Base Unit Swivel Support Stand	1	

## 7. INSTALLING THE VERIZON ONE BASE UNIT

To install the Verizon One Base Unit, please follow the instructions provided in this section.

### 7.1 Choosing a Location to Install Verizon One

For optimal performance of Verizon One, please find a location that is:

- Away from electrical and interferences such as televisions, radios, microwave ovens
- Away from water or moisture, excessive dust, or extreme cold
- In a central location that has no obstructions – this will optimize cordless performance
- Away from heat sources and sunlight
- In locations where there are multiple cordless telephones, separate the base units as much as possible

### 7.2 Installing the Base Unit on a Desktop or Flat Surface

1. Snap-on the Base Unit swivel support stand onto the back of the Verizon One Base Unit.
2. Locate a sturdy, flat surface, table or desktop that is near an active wall AC power outlet and a provisioned telephone jack, and position the Verizon One Base Unit.
3. Connect the included phone cable from the jack marked **DSL** on the rear panel of the Base Unit to the telephone wall jack provisioned for DSL and phone service. This connection will provide dial tone for voice services in addition to providing DSL to your Verizon One. (Note: The Verizon One has a convenience/Fax jack that can be used to connect additional telephone equipment such as a fax machine).
4. Connect the AC 12V power supply cord to the power connector marked **12V AC** on the rear panel of the Verizon One Base Unit. Plug the other end of the power supply into an AC wall socket, and then turn on the power switch (if it is not already on).
5. Check the Base to see if the **Power** LED is solid green. If the **Power** LED is solid green, the Verizon One Base is powered up.
6. Verify telephone operation by pressing the <Speakerphone> button found on the front of the Base Unit. Once pressed, the **In-Use** LED lights solid blue and dial tone should be heard from the speaker.

### 7.3 Wall Mounting on a Hollow Drywall Surface (Optional)

Follow the steps below to mount Verizon One on a wall:

**NOTE: The hardware needed to wall mount Verizon One is not included with the product.**

1. Obtain two #8 pan-head screws and two #8 wall anchors.
2. Place the Verizon One Base Unit stand against the wall where it is to be mounted. Using a pencil, mark one of the two corresponding screw locations. Mark the other at the appropriate distance vertically.
3. Drill a 3/16" hole for the wall anchors and insert. Screw in the #8 screws until the face of the screws are approximately 1/8" from the wall.



4. Test-fit the Verizon One Base Unit swivel stand on the screws and adjust the screw depth for a sliding fit. Once the stand fits tightly against the wall, remove it from the wall.
5. Connect the included phone cable from the jack marked **DSL** on the rear panel of the Base Unit to the telephone wall jack provisioned for DSL and phone service. This connection will provide dial tone for voice services in addition to providing DSL to your Verizon One. (Note: The Verizon One has a convenience/Fax jack that can be used to connect additional telephone equipment such as a fax machine).
6. Connect the AC 12V power supply cord to the power connector marked **12V AC** on the rear panel of the Verizon One Base Unit. Plug the other end of the power supply into an AC wall socket, and then turn on the power switch (if it is not already on).
7. Check the Base to see if the **Power** LED is solid green. If the **Power** LED is solid green, the Verizon One Base is powered up.
8. Verify telephone operation by pressing the <Speakerphone> button found on the front of the Base Unit. Once pressed, the **In-Use** LED lights solid blue and a dial tone should be emitted from the speaker.
9. Once telephone operation has been verified, snap the Base Unit Swivel stand onto the base. Adjust the stand by pressing the paddle and tilting the base until the top of the Base Unit Touches the edge of the circular stand. The Base Unit must be installed in this position. Prior to placing the Base Unit and Swivel Stand onto the wall, use the cable management grooves within the bottom of the stand to guide the Power, and telephone cables so that the stand can sit flush with the wall. Mount the unit to the wall.
10. Once unit has been mounted to the wall, re-verify telephone operation by pressing the <Speakerphone> button on the front of the Base Unit. Once pressed, the **In-Use** LED lights solid blue and a dial tone should be heard from the speaker.

## 8. INSTALLING THE VERIZON ONE HANDSET


To install the Handset, please follow the instructions provided in this section.

**NOTE:** The Verizon One kit includes a battery that provides power to the Handset when the Handset is not cradled in the Base Unit. When the Handset is cradled in the Base Unit, the Base Unit will automatically begin charging the handset battery. This battery can be found inside the battery compartment of the handset. **Prior to use, you must plug the battery into the handset as described in section 8.1 (Installing the Handset Battery).**


### 8.1 Installing the Handset Battery

**IMPORTANT:** Before you install or handle the battery, please read section 3.2 for Battery Safety Instructions.


1. Remove the battery cover by pressing on the cover and then sliding the cover off the battery compartment.

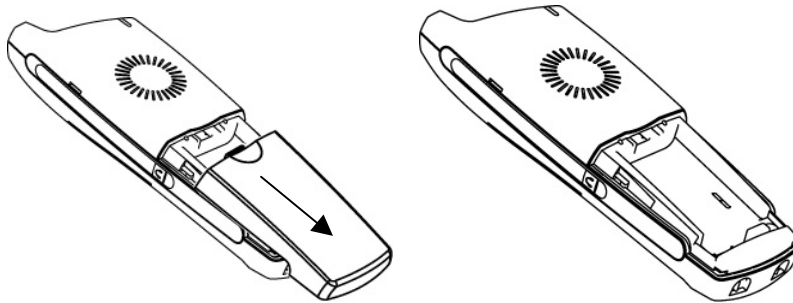

2. Attach the battery cable connector to the connector socket inside the battery compartment, and then slide the battery into the compartment. (Note: Prior to replacing the battery cover, be sure that the battery cables will not obstruct the compartment when the cover is replaced.)

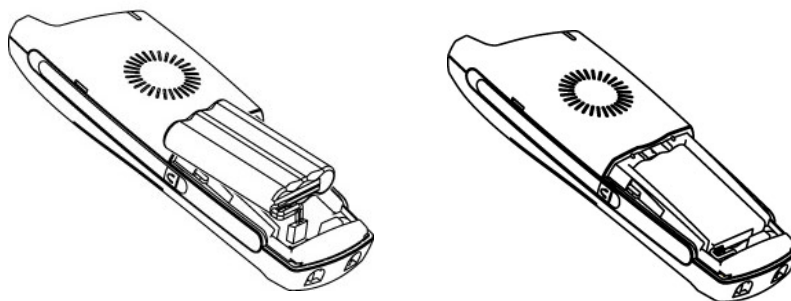


3. Replace the battery cover by sliding the cover upward until it snaps into place on the Handset.

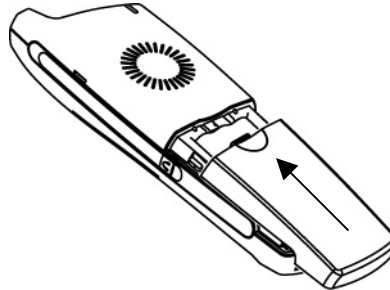

## 8.2 Charging the Handset (Battery)

Prior to using your Verizon One Handset for the first time, the Handset Battery must be fully charged. To charge the Handset, place the Handset into the cradle with the keypad facedown so that the contacts on the Handset touch the contacts on the Base Unit. Allow the battery to charge for approximately 12 hours prior to initial use.

**NOTE:** To charge the Handset initially, allow the Handset and battery to charge for 12 hours. Whenever the Handset battery needs recharging, the battery icon on the handset's LCD will be shown flashing.

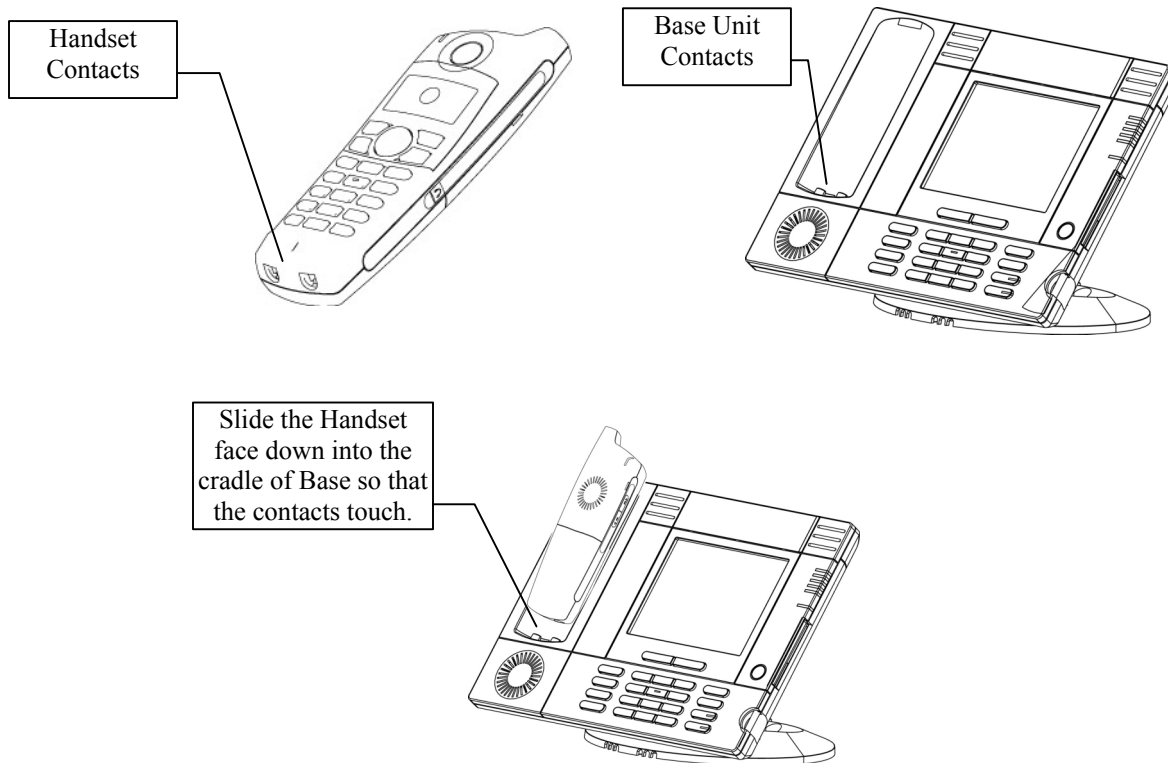


## 8.3 Battery Charge Indication

The Handset provides indication of 4 levels of battery charge state. (Full, High, Medium, Low). It takes approximately 2 seconds for the Handset to detect the battery charge level after it has been removed from the cradle. The Handset LCD design includes a Battery level meter icon.

### 8.3.1 Battery Level (Low Charge)


When the handset reaches low battery level state during a talk state, the “battery low” tone is played once per minute through the speaker and the battery low icon begins to flash indicating approximately 8 minutes of talk time are remaining. If the Handset is not currently on a call and the icon is flashing, when you press any key, the Handset will emit an error tone and all keypad functions will be disabled (in the event that the battery is too low to initiate a telephone call). The battery low icon will continue to flash until the battery is recharged or completely discharged.

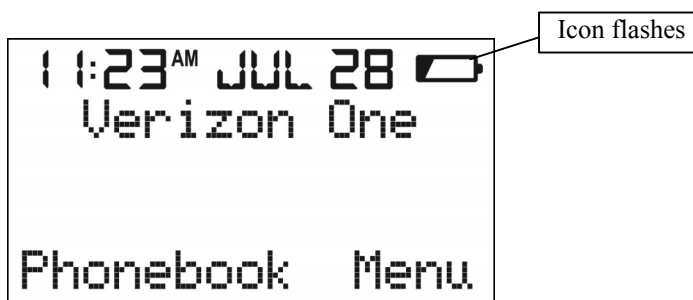

Low battery level indication (battery icon flashes)

### 8.3.2 Battery Level (Medium Charge)


When the Handset reaches Medium battery level, the battery icon is displayed “on” steady and will remain on until either a low charge is reached (icon will be flashing), or until a High charge is reached by re-charging the battery.

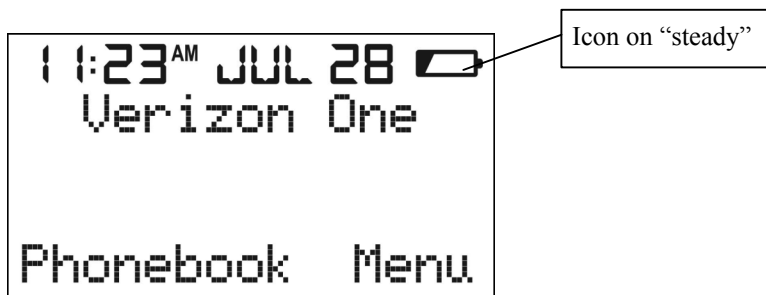

Medium battery level indication (battery icon “on” steady)

### 8.3.3 Battery Level (High Charge)


When the Handset is at High battery level, the battery icon is not displayed.

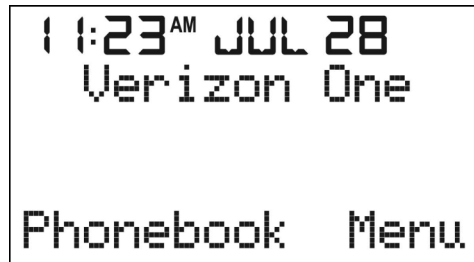

High battery level indication (battery icon is not displayed)

### 8.3.4 Battery Level (Full Charge)

If the handset is fully charged when removed from the base and in an idle state, the screen will display the following message for 3 seconds or until you press any key. After 3 seconds the display will revert to the normal Standby screen.

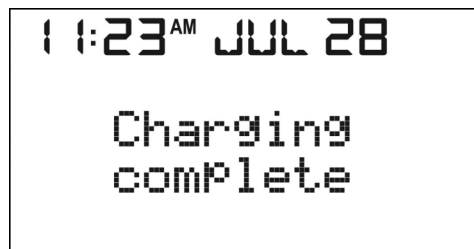


## 8.4 Turning On the Handset

Once the battery has been installed and the Handset has been charged, the handset will be functional. Pressing any key will illuminate the display.

## **8.5 Parking the Handset on the Base**

To park the Handset, slide the Handset (face down) into the cradle of the Base Unit. Be sure the contacts on the Handset touch the contacts on the Base.

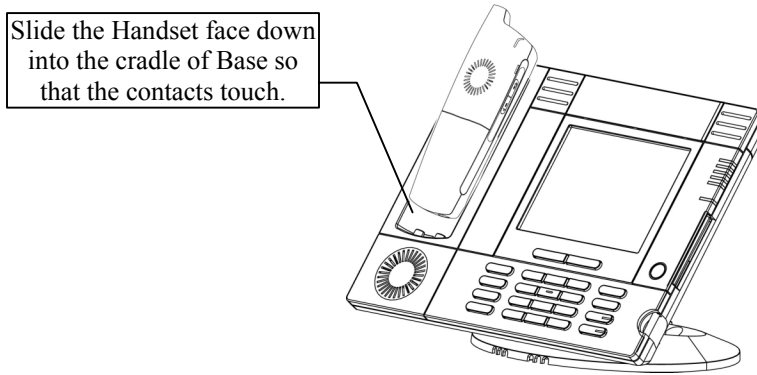

## **8.6 Using the Handset Belt Clip**

If you want to use the belt clip provided with the Handset, snap the belt clip onto the back of the Handset, and then fasten the belt clip and Handset onto your belt. This is an easy and secure way to transport the phone, and is convenient when using the headset jack for hands-free operation.










## 9. REGISTERING THE HANDSET TO THE VERIZON ONE BASE

### Registration Procedure

After successfully charging your Verizon One Handset, you must perform a registration procedure to allow the Handset to communicate with the base. To register the handset to the Base Unit perform the following steps:

NOTE: To select soft key functions displayed on the left side of the LCD screen, press the  key in the top left corner key of the Handset. To select soft key functions displayed on the right side of the screen, press the  key in the top right corner. These buttons are used to select soft key functions only. For example, if you want to select Phonebook, press . To select Menu, press . To scroll up or down, use the round navigation button .

1. While at the Base Unit select the <Menu> function on the Handset.
2. Using the round navigational button, scroll down to find the [Registration] menu. Next, press the top left corner key to select “Registration.”
3. After you have selected “Registration,” the Handset will instruct you to press and hold the <Intercom> key on the Base Unit. Press and hold this key for 3 seconds.
4. After 3 seconds, the Handset will automatically register to the Base Unit.




To verify successful registration, press the <Talk/Flash> button on the Handset; a dial tone will be emitted from the Handset and a call may successfully be placed. If no dial tone is emitted, but the Handset indicated that it successfully registered with the base, verify that the Base Unit is connected to an active telephone line and that this line is plugged into the “DSL” port on the back of the Base Unit.

## 10. VERIZON ONE HANDSET CONTROLS

### 10.1 Handset Control Buttons

The following control buttons are provided on the Verizon One Handset.


NOTE: “Off-hook” refers to the condition when either the Base Unit or Handset is active in requesting a dial tone or is engaged in a call. “On-hook” refers to the condition when either the Base Unit or a Handset is not active in requesting a dial tone or placing a call.

Button	Function
Volume Up/Volume Down (On side of Handset)	Pressing these buttons will raise/lower the volume of the Handset Ringer when handset is on-hook.. The ringer volume can be set to low, medium, high, or off. . The ringer level will be displayed while you are changing the volume. Pressing these buttons when on off-hook mode will adjust the speaker volume of the audio.
Talk/Flash	When pressed initially, this button places the phone in off-hook status, and you may dial the desired phone number. When pressed during an active call, it will simulate a momentary press and release of the phone’s hook switch and will put the active call on hold and accepts the incoming call as with call waiting or 3-way calling.
Off/Clear	Enables you to end any calls by placing the phone on-hook. Clear is used to clear entries and selections made to the soft-menu available on the Handset LCD.
Hold	When pressed once, this button will place the entire call on hold. Press the Hold button again to release the call from hold status.
Intercom	When the Intercom button is pressed on the Handset, it serves as a paging device to locate the Base Unit and/or to establish an intercom call between the Handset and Base Unit. When Intercom is pressed, the Base Unit will receive the signal from the Handset, and will ring until the Base Unit is set to off-hook status or until the Handset presses intercom turning the intercom function off.
Redial	Redial enables you to select one of the last 5 phone numbers entered in the phone. (Note: It will not redial numbers such as passcodes or account numbers that may have been entered after the outgoing call was established.)
12-key Keypad (0-9, *, #)	Enables you to enter the desired characters.
	Pressing this button will allow you to: -Select a menu option from the Main menu screen -Edit/Erase/Save the option settings
	Pressing this button will allow you to: -Access Handset’s Main menu screen -Delete/Backspace characters -View the settings of an option once it is selected
	Pressing this button enables you to: -Scroll up/down to the desired menu option -Toggle between sublevel menu options and settings -Select calls displayed on the Handset’s LCD screen -Access speed dial numbers

## 10.2 Handset Activity LED

The Handset includes an Activity LED, also referred to as the “Voice Message Waiting LED,” which performs the following functions:

- Incoming Ring: Activity LED is flashing at a cadence in accordance to an incoming ring pattern. When ring cadence is ON, the LED blinks.
- Talk Mode: If the Handset is in Talk mode, Intercom, or Voice-Mail mode, the Activity LED lights solid blue.
- Paging: When the Handset is being paged, the Activity LED will flash according to Paging tone cadence.
- Call on HOLD or on MUTE: The Activity LED should blink at 1 Hz rate when Handset has placed a call on MUTE or on HOLD.
- Message Waiting: When there is a voicemail message waiting and none of the above conditions are present, the Activity LED flashes.

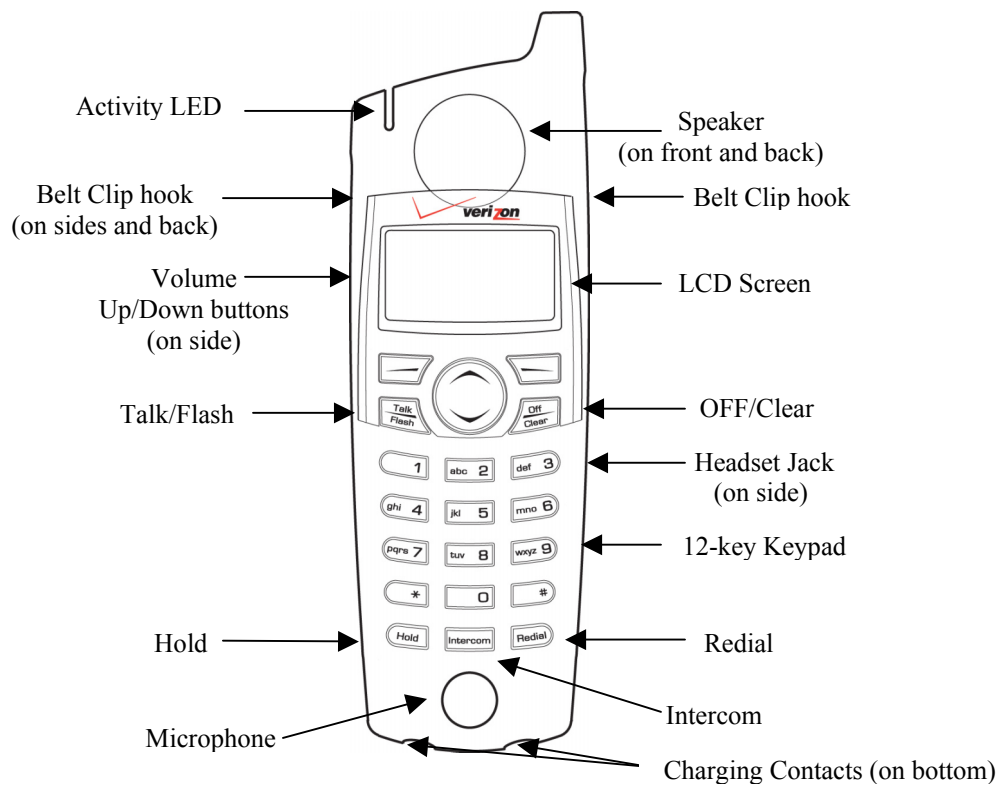

**Verizon One Handset**

## 10.3 Backlighting

Backlighting refers to the condition when the LCD screen or the buttons on the Handset or the Base light to indicate any of the following conditions:

- Incoming Calls
- Pressing Keys
- Paging and/or Intercom functions

## 11. VERIZON ONE HANDSET SCREENS

### 11.1 Standby


After you have charged and registered the Handset to the Base, the Standby screen will be displayed on the Handset's LCD screen. The Standby screen provides information such as:

- Current Time and Date
- Battery Level Meter (Note: Battery level meter will be displayed only if the battery contains a low or medium charge. At a high or full charge, the battery level meter will not be displayed.)
- Handset Name ("Verizon-One" is the Handset's default name)
- Number of New Calls Messages
- Message Waiting Indicator. Note: The activity LED on the Handset will also blink.
- Line Status
- Ringer Muted Indication

While the Standby screen is displayed, you can press the <Up/Down> button to scroll through the list Incoming calls. The following examples illustrate the Handset's response to various call conditions.


### 11.2 No New Calls

When there are no new calls, no messages waiting, and the line is not in use, the Handset will display the following Standby screen.

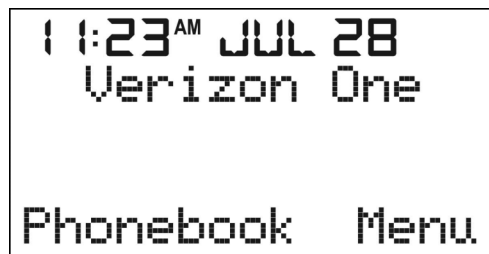

### 11.3 Twelve New Calls


For example, when there are 12 new calls, no messages waiting, and the line is not in use, the Handset will display the following screen.

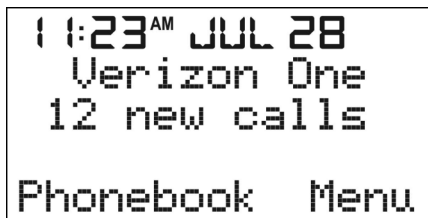

11:23<sup>AM</sup> JUL 28  
Verizon One  
12 new calls  
Phonebook Menu

### 11.4 Ringer Off

When the ringer is off, the Handset will display the Ringer OFF icon on the LCD screen.

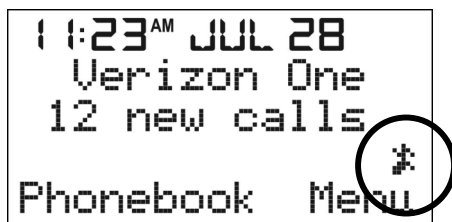


11:23<sup>AM</sup> JUL 28  
Verizon One  
12 new calls  
Phonebook Menu

The Ringer Off icon, a bell with a slash through it, is circled in the original image.

### 11.5 Fifteen New Calls, No Messages Waiting, Line In use


For example, when there are 15 new calls, no messages waiting, and the line is in use, the Handset will display the following screen.

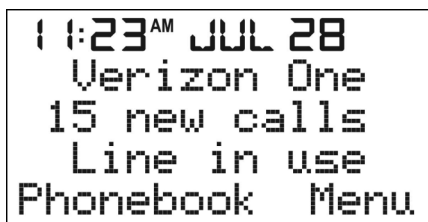


11:23<sup>AM</sup> JUL 28  
Verizon One  
15 new calls  
Line in use  
Phonebook Menu

### 11.6 Fifteen New Calls, Messages Waiting, Line In use

For example, when there are 15 new calls, there are messages waiting, and the line is in use, the Handset will display the following screens, alternately.

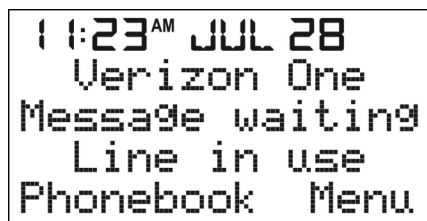



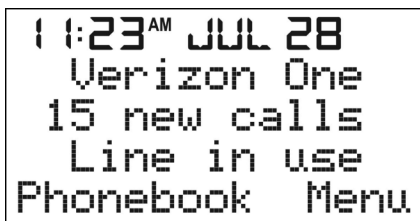


11:23<sup>AM</sup> JUL 28  
Verizon One  
Message waiting  
Line in use  
Phonebook Menu




11:23<sup>AM</sup> JUL 28  
Verizon One  
15 new calls  
Line in use  
Phonebook Menu

## 12. USING THE VERIZON ONE MAIN MENU


### 12.1 Accessing Handset Main Menu

NOTE: To select soft key functions displayed on the left side of the LCD screen, press the  key in the top left corner key of the Handset. To select soft key functions displayed on the right side of the screen, press the  key in the top right corner. These buttons are used to select soft key functions only. For example, if you want to select Phonebook, press . To select Menu, press . To scroll up or down, use the round navigational button .

To access the Handset's main menu, select [Menu] in the Standby screen.

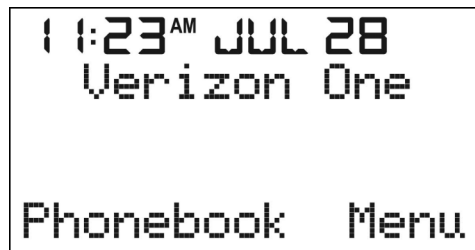

Once selected, the following Main Menu screen will be displayed, and the pointer [▶] should point to the [Incoming Calls] menu.

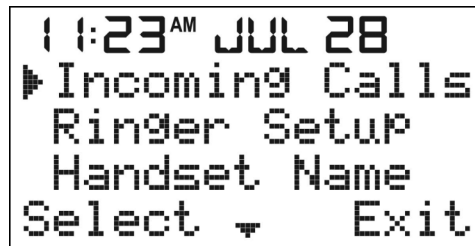

Next, press the <Up/Down> button to scroll down through the Main Menu options. After you have selected a main menu option, select the [Select] soft key on you Handset's LCD screen to confirm your selection and to display the submenu. If you select [Exit], you will return to the Standby screen.


After you have selected a main menu option, the submenu for that option will be displayed. Select the desired submenu option, and then select [Select] to confirm your selection.

The following chart displays Main Menu and Submenu options available to the Handset.

Main Menu Option	Submenu Option(s)
Incoming Calls	Save – Selecting this option enables you to save incoming calls. Erase – This option enables you to erase any saved calls. Erase All – This option enables you to erase all saved calls.
Ringer Setup	Ringer Volume – Selecting this option enables you to set the volume to the level (Off, Low, Medium, High) on your Handset. Ringer Tone – Selecting this menu enables you to select the melody that you want to use for the Ringer. See section 12.5 for available options. Keypad Tones – Selecting this menu enables you to turn On/Off keypad confirmation tones.
Handset Name	Enter a name of your choice for the Handset. Note: The default name for the Handset is “Verizon-One.”
Date and Time	Enter the desired date and time settings on your Handset.
Registration	View the Handset’s registration information.


## 12.2 Registration Menu

When the [Registration] menu is selected from the main menu screen, the following screen will be displayed. By using this menu, you can register a Handset to the Base. Begin by pressing and holding the <Intercom> button on the Base Unit for 3.5 seconds. Select [Exit] if you want to return to the Main Menu screen.

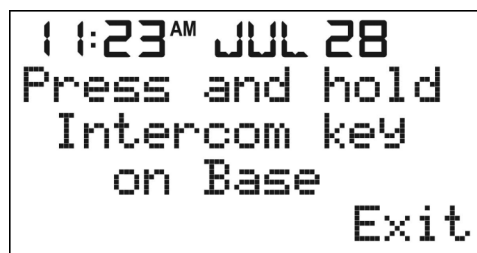


If you press and hold the <Intercom> button on the Base unit for 3.5 seconds, the Handset will display a “Wait Registering” message while it is communicating to the Base.

After a successful registration, the Handset will emit a confirmation tone (long beep), and the screen will display the “Handset x Registered” message for 2 seconds. Then, the Main menu screen will be displayed.

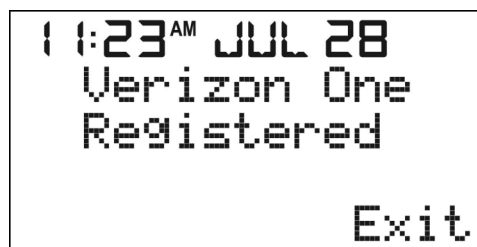

If the registration is unsuccessful, the Handset will emit an “error tone,” and the screen will display a “Registration Failed” message for 2 seconds before returning to the initial Handset registration screen.


NOTE: The maximum number of handsets that can be registered to the Base is eight.

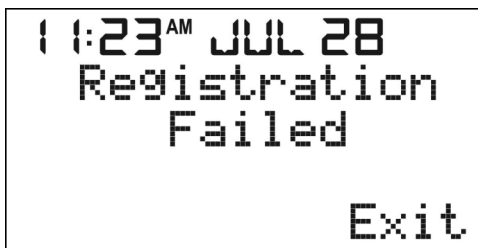


## 12.3 Date and Time Menu

When the [Date and Time] menu is selected from the main menu screen, the following screen will be displayed. The pointer will be positioned at the time setting, and the first digit of time will blink to urge for input. After the first digit has been entered, the second digit will blink. The blinking occurs in the following sequence: 1<sup>st</sup> -> 2<sup>nd</sup> (skip the colon :) -> 3<sup>rd</sup> -> 4<sup>th</sup> -> in endless loop until the <Up/Down> button is pressed. An error tone will be given if invalid digit is entered. After you have entered the desired time, select one of the following options:

- Select [AM/PM] to change the current “AM” setting to “PM” and vice versa.
- Press the <OFF> button to return to the Standby screen.
- Select [Save] to save the setting and to return to the Main Menu screen.

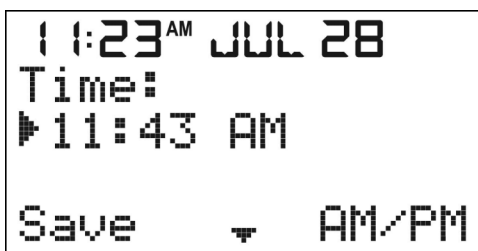

If <Up/Down> button is pressed at this time, the following Date screen will be displayed. The pointer will be positioned at the time setting, and the first digit of time will blink to urge for input. After the first digit has been entered, the second digit will blink. The blinking occurs in the following sequence: 1<sup>st</sup> -> 2<sup>nd</sup> (skip the colon :) -> 3<sup>rd</sup> -> 4<sup>th</sup> -> in endless loop until the <Up/Down> button is pressed. An error tone will be given if invalid digit is entered. After you have entered the desired date, select one of the following options:

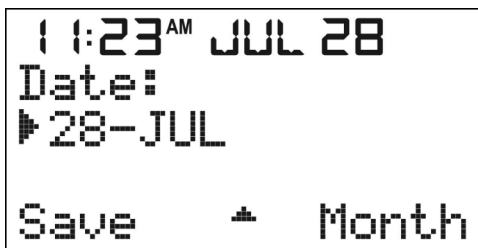



- Select [Month] to change the current month setting.
- Press the <OFF> button to return to the Standby screen without saving changes.
- Select [Save] to save the settings and to return to Main Menu screen. Error checking of valid dates also takes place on [Save]. If the date is not valid, then an error tone is played and you is returned to the Date editing screen which should display the last valid calendar date for the specified month (for example, 30-FEB is substituted with 29-FEB) with the first digit blinking to urge for input.
- If the <Up/Down> button is pressed at this time, the display will show the Time screen.


## 12.4 Handset Name Menu

When the [Handset Name] menu is selected from the main menu screen, the following screen will be displayed. This feature enables you to assign names to the handsets that are registered to Verizon One.

NOTE: “Verizon-One” is the default Handset name.

The Handset extension number N= 1 to 8 reflects the Handset is the Nth Handset, which is registered to the base. When [Handset Name] is selected, the screen will display the current Handset name. Perform one of the following events:

- Enter a name at the blinking underscore using the keys (0-9, \*, #) on the Handset keypad. After you enter a character, the underscore will advance to next space on the right. (Note: The maximum number of characters that can be use for a name is 12.)
- Select [Clear] to clear digit on the left of the blinking underscore.
- Press the <OFF> button to return to the Standby screen without saving setting.
- Select [Save] to save the Handset name and to return to the Main Menu screen (regardless of whether the Handset name has or has not been modified).

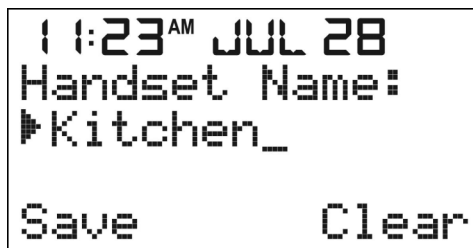

11:23<sup>AM</sup> JUL 28  
Handset Name:  
▶Kitchen\_  
Save Clear

## 12.5 Ringer Setup Menu

When the [Ringer Setup] menu is selected from the main menu screen, the following options will be displayed.


- Ringer Volume
- Ringer Tone
- Keypad Tones

Press the <Up/Down> button to go to the key functionality described below.

- Select [Change] to change settings. (Note: for the Ringer volume, Ringer Tone menus, selecting the [Change] soft key will also play the selected settings.)
- Select [Save] to stop playing the test Melody, save all settings, and to return to the Main Menu screen. The pointer will be at the last selected menu item.
- Press the <Up/Down> button to switch to a different feature and to stop playing the test Melody.
- Press the <OFF> button to return to the Standby screen without saving changes and to stop playing the test Melody.


### **Ringer Volume**

If you select [Ringer Volume] the following screen will be displayed. “Medium” is the default ringer volume. Select the [Change] key to change Ringer Volume to either “Medium,” “High,” “Low,” or “Off”. (Note: The difference between the levels is 6 dB.) Next, select the [Save] key to confirm your settings.

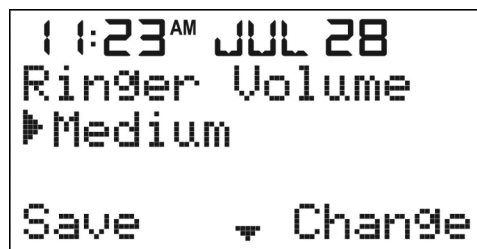


### **Ringer Tone / Melody**

- If you select [Ringer Tone] the following screen will be displayed. “Standard” is the default ringer tone.
- Select [Change] and press the <Up/Down> button to switch to a different Melody. You may scroll through and hear each melody option.
- Once the desired melody is identified, select [Save] to stop playing the test Melody and to save all settings and return to the Main Menu screen. The pointer will be at the last selected menu item.
- Press the <Up/Down> button to switch to a different feature and to stop playing the test Melody.
- Press the <OFF> button to return to the Standby screen without saving changes and to stop playing the test Melody.

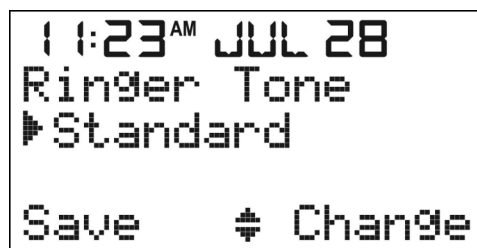

## Keypad Tone

If you select [Keypad Tone] the following screen will be displayed. “On” is the default keypad tone. Select [Change] if you want to change the keypad tone to “Off.” After you have modified this setting, select [Save] to save your settings.

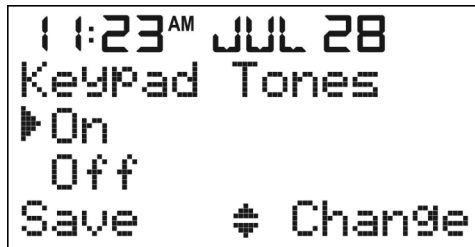


11:23<sup>AM</sup> JUL 28  
Keypad Tones  
▶ On  
Off  
Save    \* Change

## 12.6 Incoming Calls Menu


When the [Incoming Calls] menu is selected from the main menu screen, the most recent Caller ID message will be displayed together with date and time received. To search for the most recent calls, scroll down to the bottom of the list using the <Up/Down> button. To search from the oldest calls, scroll up to the top of the list using the <Up/Down> button. The time and date of the call is displayed at the top of the screen (instead of the current time and date).

To dial a phone number from the list of Incoming Calls, select an entry and then press the <Talk> button. The phone will automatically go off-hook state and dial the selected number.

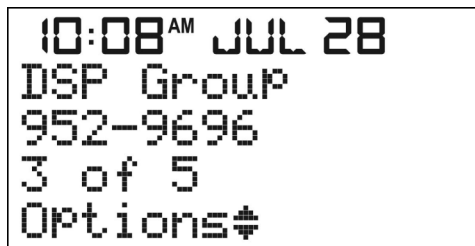

10:08<sup>AM</sup> JUL 28  
DSP Group  
952-9696  
3 of 5  
Options\*


If [Incoming Calls] is selected and there are no Caller ID records available, the Handset will emit an error tone, and the following “No calls” screen will be displayed along with the current time and date.

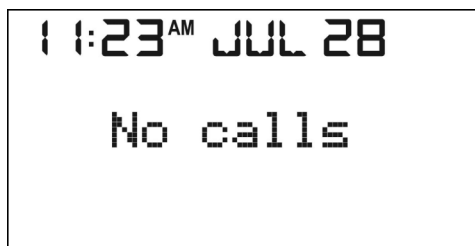

11:23<sup>AM</sup> JUL 28  
  
No calls


### 12.6.1 Saving Incoming Calls to the Phonebook

To save a call from the Incoming Calls log to the phonebook, first select [Incoming Calls] at the main menu screen.

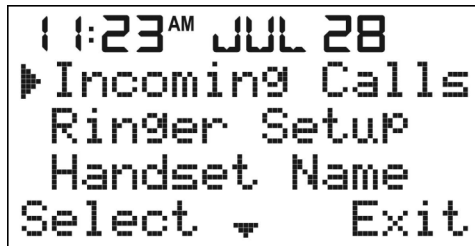

```
11:23AM JUL 28
▶ Incoming Calls
  Ringer Setup
  Handset Name
  Select ▼ Exit
```

View the list of incoming calls and then select the entry that you want to save. Next, select [Options] to display the following “Save/Erase/Erase All” screen. Select [Save].

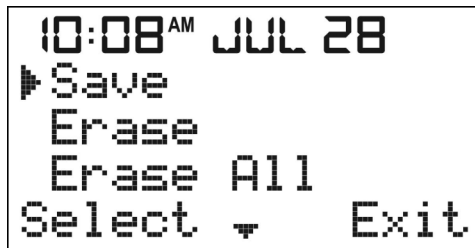


```
10:08AM JUL 28
▶ Save
  Erase
  Erase All
  Select ▼ Exit
```

#### 12.6.1.1 Phonebook is Open - Entries from the Incoming Calls Log are Accepted

After you select [Save] in the preceding “Save/Erase/Erase All” screen, the phonebook will determine if additional entries can be added. If the phonebook is not full, additional entries can be added, and the following “Name” screen will be displayed.

## Name Screen

The caller's name from the entry you selected at the Incoming Calls log will be displayed in the "Name" field. Select from the following options, and then select [Save] to save the entry to the phonebook.

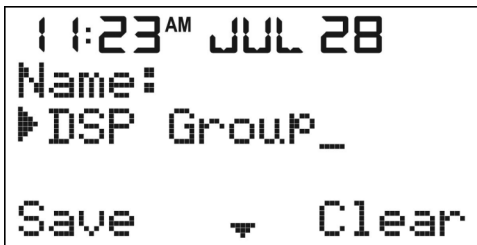


- Enter additional text to the caller's name by pressing the # key, which will display at the blinking underscore at the last character. Use the Handset keypad to input your text. You may also enter numbers ranging from 0 to 9.

NOTE: If you attempt to enter more than 11 characters into this field, the phone will emit an error tone and additional characters will not accepted.

- Press the <Up/Down> button to go to the "Number" screen.
- Press the <OFF> button to return to the Standby screen.
- Select [Clear] to delete (backspace) characters.
- Select [Save] to save the entry to the Phonebook. Note: The phonebook will insert the new entry in alphabetical order and renumber the list.


After you select [Save] in the "Name" screen, the "Name Saved" screen will be displayed for 2 seconds. The LCD will then return to the Incoming Calls log.

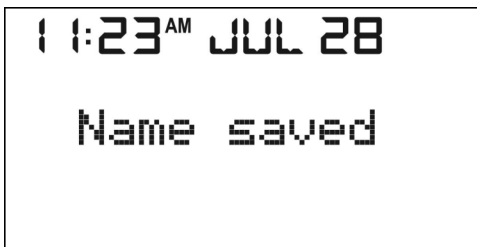

If you select [Save] in the "Name" screen (and the screen does not contain a name), the entry is then entered into the phonebook a "space (empty name)" record and inserted at the beginning of the list regardless of the number field. The screen then returns to same item in the Incoming Calls log.

## Number Screen

If you press the <Up/Down> button in the “Name” screen, the following “Number” screen will be displayed. The caller’s phone number from the entry you selected at the Incoming Calls log will be displayed in the “Number” field. Select from the following options, and then select [Save] to save the entry to the phonebook.

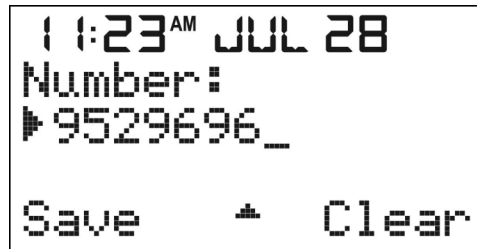


- Enter additional digits (0-9, \*, #) at the blinking underscore by using the Handset keypad.

NOTE: Press the # symbol once to give a # or press the # symbol twice to insert “P,” which is a 3-second pause during dialing. If you attempt to enter more than 24 digits into this field, the phone will emit an error tone and additional digits will not be accepted.

- Select [Clear] to delete (backspace) characters.
- Press the <OFF> button to return to the Standby screen without saving any changes.
- Press the <Up/Down> button to go back to the “Name” screen.
- Select [Save] to save the entry to the Phonebook. Note: The phonebook will display the new entry in alphabetical order and renumber the list.

If you select [Save] in the “Number” screen (and if the screen contains a number), the “Name Saved” screen will be displayed for 2 seconds. The phonebook will display the new entry in alphabetical order and renumber the list.

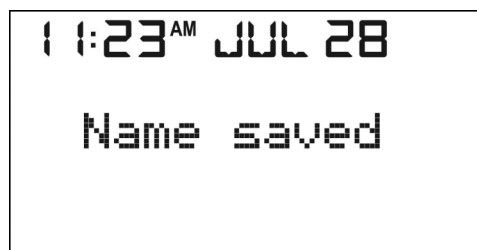

If you select [Save] at the “Number” screen (and if the screen does not contain a number), the following “No number entered” screen will be displayed. The phone will emit an error tone and then return to the “Number” screen to enable you to enter a number. Enter a number into the “Number” screen, and then press save to save the entry to the phonebook.