

# TECHNICAL MANUAL

## DOC33-0008

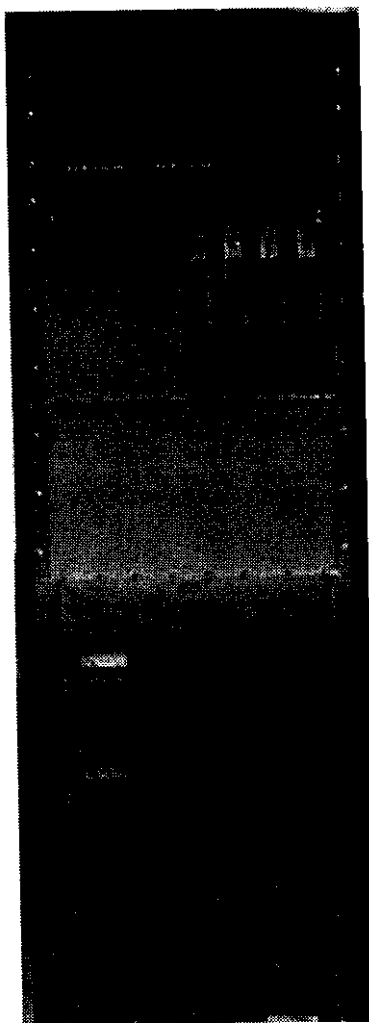 


FIGURE 10-0010-1

*Created by: Kimberly Simeone*  
12/22/98 ECO #: 98-164

*Checked by: Donald Wike*  
12/22/98

*Released by: Paulo Correa*  
12/22/98

**Document #: DOC10-0010**  
**REV: B**

All information contained in this document is confidential and proprietary to COMWAVE and shall not be disclosed without the prior written permission of COMWAVE.

## **COMWAVE TWO YEAR LIMITED WARRANTY**

Comwave warrants each product of its manufacture to be free from any defect in material and workmanship for a period of two years after delivery to, and return by the original purchaser. No returns, however, will be accepted unless accompanied by a written factory return authorization.

The limit of liability under this warranty shall be to repair or replace any product, or part thereof, which proves to be defective after inspection by Comwave with the exception of tubes, semiconductor devices, lamps, fuses or equipment (i.e. modulators) manufactured by others, which are subject to only such loss adjustment as Comwave may obtain for the suppliers thereof.

This warranty shall not apply to any Comwave product which has been modified, physically or electrically damaged, or to modules which seals have been broken, or any product which has been subjected to conditions exceeding the applicable specifications or ratings or improper service techniques.

Comwave will not be liable for any direct or consequential injury, loss or damage incurred through the use, or the inability to use, any Comwave product.

Comwave reserves the right to make design changes to any Comwave product without incurring any obligation to make the same changes to previously purchased units.

This warranty is the full extent of the obligation and liability assumed by Comwave with respect to any and all Comwave products. Comwave neither makes, nor authorizes any person to make, any other guarantee or warranty concerning Comwave products.

*Created by: Kimberly Simeone*  
*4/98*

*Checked by: Jeanette Mulligan*  
*9/4/98*

*Released by: Donald Wike*  
*10/2/98; Paulo Correa 10/12/98*

**Document #: DOC12-0001**  
**REV: A**

All information contained in this document is confidential and proprietary to COMWAVE and shall not be disclosed without the prior written permission of COMWAVE.

# Table of Contents

SYSTEM OVERVIEW

FCC ID

SYSTEM BLOCK DIAGRAM

SYSTEM SPECIFICATIONS

INSTALLATION

TURN-ON GUIDE

TROUBLESHOOTING

FUSING AND PROTECTION

MAINTENANCE

CALIBRATIONS

THEORY OF OPERATION

RACK

DRIVER

FINAL (POWER AMPLIFIER SEGMENT)

SCHEMATICS

CUSTOMER SERVICE

OPTIONS

**3**



# TABLE OF CONTENTS

## For the SBM-250 Transmitter

| TITLE .....                                              | DOCUMENT #       |
|----------------------------------------------------------|------------------|
| SBM-250 Cover Sheet .....                                | DOC10-0010       |
| SBM-250 system.....                                      | Figure 10-0010-1 |
| Warranty .....                                           | DOC12-0001       |
| <b>SECTION 1</b>                                         |                  |
| Section 1 Introduction.....                              | DOC11-0006       |
| SBM-250, SBM-500, SBM-500/250, SBM-500/500               |                  |
| Top Level Description .....                              | DOC13-0025       |
| Rack Assembly .....                                      | DOC22-0009       |
| FCC IDD .....                                            | DOC22-0012       |
| Block Diagram of Rack – Single Transmitter.....          | DOC15-0009       |
| SBM-250 Detailed Block Diagram, Single Output .....      | DOC15-0025       |
| Specifications for the SBM Series .....                  | DOC19-0019       |
| <b>SECTION 2</b>                                         |                  |
| Section 2 Introduction.....                              | DOC11-0007       |
| Installation.....                                        | DOC17-0007       |
| Unpacking                                                |                  |
| Physical Installation                                    |                  |
| Rear door                                                |                  |
| AC power connections to the exhaust fans                 |                  |
| Driver chassis                                           |                  |
| Power amplifier segment                                  |                  |
| Environmental and safety considerations                  |                  |
| AC Loading in an HPB/SBM System.....                     | DOC17-0012       |
| 3-Phase DELTA Connected System.....                      | Figure 17-0012-1 |
| Outlet Strip Configuration .....                         | Figure 17-0012-2 |
| MTS-3 Power Shelf .....                                  | Figure 17-0012-3 |
| AC System .....                                          | Figure 17-0012-4 |
| HPB/SBM Three Phase AC Loading DELTA Configuration ..... | DOC24-0006       |
| Cabling.....                                             | DOC18-0017       |
| Driver                                                   |                  |
| Reference Distribution                                   |                  |

|                                          |                                     |                                       |
|------------------------------------------|-------------------------------------|---------------------------------------|
| Created by: Kimberly Simeone<br>11/20/98 | Checked by: Donald Wike<br>11/20/98 | Released by: Paulo Correa<br>11/20/98 |
|------------------------------------------|-------------------------------------|---------------------------------------|

|                                                                 |                  |
|-----------------------------------------------------------------|------------------|
| IF Distribution                                                 |                  |
| Comview Interconnections                                        |                  |
| VHF/UHF Block Upconverter (driver) Cabling Diagram .....        | DOC23-0045       |
| SBM Series System Interconnection .....                         | DOC15-0026       |
| Turn-On Procedure .....                                         | DOC26-0004       |
| Initial Operation Procedure                                     |                  |
| Normal Operation Procedure                                      |                  |
| <b>SECTION 3</b>                                                |                  |
| Section 3 Introduction .....                                    | DOC11-0008       |
| Troubleshooting .....                                           | DOC18-0018       |
| Driver                                                          |                  |
| Analog metering                                                 |                  |
| Power amplifier segment                                         |                  |
| Troubleshooting Worksheet .....                                 | DOC18-0022       |
| Power Amplifier Segment Node Addresses .....                    | DOC22-0019       |
| Equipment Fusing and Protection .....                           | DOC18-0015       |
| Table of Fuse Locations and Values .....                        | Figure 18-0015-1 |
| Circuit Breaker .....                                           | Figure 18-0015-2 |
| AC Power Interconnections .....                                 | DOC13-0029       |
| AC Power Interconnections Block Diagram .....                   | Figure 13-0029-1 |
| AC Interconnect HPB/SBM Series 1 Phase & 3 Phase AC power ..... | 66-310-01        |
| DC Power Connections .....                                      | DOC13-0030       |
| DC Power Connections Block Diagram .....                        | Figure 13-0030-1 |
| Rack Power Supply (AC to DC front end converter)                |                  |
| for High Power Series .....                                     | Figure 13-0030-2 |
| DC to DC Converter .....                                        | Figure 13-0030-3 |
| Motherboard located in Subrack of the High Power Series .....   | Figure 13-0030-4 |
| Interconnect, DC SD/SDA series (high power) .....               | 66-304-01        |
| RF Power Interconnections .....                                 | DOC13-0054       |
| RF Signal Path for Redundant System .....                       | Figure 13-0054-1 |
| Maintenance .....                                               | DOC18-0005       |
| Inspections                                                     |                  |
| Cleaning                                                        |                  |
| Power Amplifier Segment Picture .....                           | Figure 18-0005-1 |
| Monthly Maintenance Record .....                                | DOC18-0016       |
| Metering Calibration .....                                      | DOC16-0005       |
| Digital Metering                                                |                  |
| Analog Metering                                                 |                  |
| Power Specification Chart .....                                 | Figure 16-0005-1 |
| Reflected Output Power Metering                                 |                  |

|                                                                    |                  |
|--------------------------------------------------------------------|------------------|
| Rear Panel Switch and Control Drawer .....                         | Figure 16-0005-2 |
| +11V Switching Power Supply Metering .....                         |                  |
| Potentiometer Locations .....                                      | Figure 16-0005-3 |
| SBM Series Calibrations .....                                      | DOC23-0042       |
| Power Calibration Test Setup .....                                 | DOC22-0018       |
| <br><b>SECTION 4</b>                                               |                  |
| Section 4 Introduction .....                                       | DOC11-0009       |
| Rack theory of operation .....                                     | DOC14-0005       |
| Photo of Rack .....                                                | Figure 14-0005-1 |
| SBM/HPB rear view .....                                            | DOC23-0046       |
| Sub-rack theory of operation .....                                 | DOC14-0006       |
| Photo of Subrack .....                                             | Figure 14-0006-1 |
| Motherboard to System Interface .....                              |                  |
| Motherboard (35-080) Photo .....                                   | Figure 14-0006-2 |
| Module to Motherboard Interface .....                              |                  |
| VHF to Microwave Drawer Theory of Operation (20-346-2gxx-02) ..... | DOC14-0007       |
| Front Panel Features .....                                         |                  |
| Rear Panel Features .....                                          |                  |
| Driver Block Diagram .....                                         | 66-321-01        |
| Front Panel .....                                                  | DOC23-0038       |
| Rear Panel .....                                                   | DOC23-0039       |
| Internal Interconnect VHF to uW, Comview Ready .....               | 66-323-01        |
| Specifications – SBM Series Driver Specs .....                     | DOC19-0027       |
| Local Oscillator Multiplier (08-013) .....                         | DOC13-0060       |
| Photo .....                                                        | Figure 13-0060-1 |
| Specifications .....                                               | DOC19-0030       |
| VCXO, PLL (09-060) .....                                           | DOC13-0059       |
| Photo .....                                                        | Figure 13-0059-1 |
| Specifications .....                                               | DOC19-0031       |
| Bandpass filter (05-025) .....                                     | DOC13-0063       |
| Photo .....                                                        | Figure 13-0051-1 |
| Bandpass filter specifications .....                               | DOC19-0022       |
| Amplifier with ALC (04-305 & 314-02) .....                         | DOC13-0057       |
| Photo .....                                                        | Figure 13-0057-1 |
| Specifications, RF and DC .....                                    | DOC19-0028       |
| VHF/UHF ALC Module (04-326) .....                                  | DOC13-0066       |
| Photo .....                                                        | Figure 13-0066-1 |
| Specifications .....                                               | DOC19-0032       |
| Mixer – OEM .....                                                  | DOC13-0065       |
| Photo .....                                                        | Figure 13-0065-2 |
| Specifications .....                                               | Figure 13-0065-1 |
| Bandpass filter (OEM) .....                                        | DOC13-0050       |

|                                                                                            |                  |
|--------------------------------------------------------------------------------------------|------------------|
| Photo .....                                                                                | Figure 13-0050-1 |
| Bandpass filter specifications .....                                                       | DOC19-0021       |
| Intermediate power amplifier (04-306 & 313-02) .....                                       | DOC13-0052       |
| Photo .....                                                                                | Figure 13-0052-1 |
| Intermediate power amp specifications (RF and DC specs) .....                              | DOC19-0023       |
| Envelope detector (12-032) .....                                                           | DOC13-0058       |
| Envelope detector picture .....                                                            | Figure 13-0058-1 |
| Broadband RF Precorrector (04-299) .....                                                   | DOC13-0062       |
| Photo, Top View .....                                                                      | Figure 13-0062-1 |
| Photo, Side View .....                                                                     | Figure 13-0062-2 |
| Specifications .....                                                                       | DOC19-0026       |
| Intermediate power amplifier (04-308-02) .....                                             | DOC13-0053       |
| Photo .....                                                                                | Figure 13-0053-1 |
| Intermediate power amp specifications (RF and DC specs) .....                              | DOC19-0024       |
| Motherboard (35-096) .....                                                                 | DOC13-0055       |
| Microcontroller Interface board (34-006) .....                                             | DOC13-0056       |
| Firmware Flowchart VHF/UHF to uW Upconverter .....                                         | DOC21-0003       |
| Chassis Monitoring and Control Functions .....                                             | DOC13-0071       |
| List and Description of Parameters Monitored in<br>VHF/UHF to uW Upconverter Chassis ..... | DOC24-0010       |
| Signal distribution board (33-312) .....                                                   | DOC13-0064       |
| Photo .....                                                                                | Figure 13-0064-1 |
| Input/Output Signals .....                                                                 | Figure 13-0064-2 |
| RS-485 Communications Board (33-284 & 33-304) .....                                        | DOC13-0009       |
| 33-284 Photos .....                                                                        | Figure 13-0009-1 |
| 33-304 Photos .....                                                                        | Figure 13-0009-2 |
| Comview Status Monitoring Interconnections .....                                           | DOC30-0005       |
| Power Amplifier Segment Theory of Operation (04-294-2gxx-02) .....                         | DOC14-0008       |
| Power Amplifier Segment Photo .....                                                        | Figure 14-0008-1 |
| Power Amplifier Segment Specifications .....                                               | DOC19-0014       |
| Power Amplifier Segment Block Diagram .....                                                | DOC15-0013       |
| Internal Interconnect, Power Amplifier Segment .....                                       | 66-306-01        |
| Power Amplifier Board (40-220) .....                                                       | DOC13-0041       |
| Power Amplifier Board Specifications .....                                                 | DOC19-0015       |
| Power Amplifier Board Block Diagram .....                                                  | DOC15-0014       |
| 300 Watt Power Supply Board (32-002) .....                                                 | DOC13-0043       |
| 300 Watt Power Supply Board Specifications .....                                           | DOC19-0017       |
| Power Supply Block Diagram .....                                                           | DOC15-0016       |
| Control Board (34-010) .....                                                               | DOC13-0042       |
| Control Board Specifications .....                                                         | DOC19-0016       |
| Control Board Block Diagram .....                                                          | DOC15-0015       |
| Firmware Flowchart .....                                                                   | DOC21-0005       |
| Amplifier Segment State Flow Diagram .....                                                 | DOC21-0006       |
| RS-232 Communications Board (33-352) .....                                                 | DOC13-0010       |
| Photo .....                                                                                | Figure 13-0010-1 |

**SCHEMATICS**

**Sub-Rack:**

|                                           |           |
|-------------------------------------------|-----------|
| Motherboard, Back Panel for HPSC tx ..... | 35-080-01 |
| Comview/ CPU Controller Interface .....   | 33-430-01 |

**Driver:**

|                                   |           |
|-----------------------------------|-----------|
| VCXO, PLL (09-060) .....          | 09-053-01 |
| Lock indicator/control board..... | 33-301-01 |
| Envelope Detector (12-032).....   | 33-461-01 |
| Motherboard (35-096).....         | 35-096-01 |
| RS-485 Comm. & ctrlr I/F .....    | 33-304-01 |
| Signal Distribution Board .....   | 33-312-01 |
| Display Board SBSA-20C .....      | 33-314-01 |

**Power Amplifier Segment:**

|                                                |           |
|------------------------------------------------|-----------|
| Front Panel Display with Diagnostics Port..... | 33-352-01 |
|------------------------------------------------|-----------|

**SECTION 5**

|                                               |            |
|-----------------------------------------------|------------|
| Section 5 Introduction.....                   | DOC11-0010 |
| Customer service.....                         | DOC20-0001 |
| Contact information                           |            |
| Equipment returns                             |            |
| Packaging for return (driver) .....           | DOC20-0002 |
| Packaging for return (power amp segment)..... | DOC20-0003 |



## SECTION 5

This section will give you the information you need to contact Comwave customer service and return equipment for repair.

|                                                |                                           |                                            |
|------------------------------------------------|-------------------------------------------|--------------------------------------------|
| <i>Created by: Kimberly Simeone</i><br>9/17/98 | <i>Checked by: Donald Wike</i><br>9/18/98 | <i>Released by: Paulo Guéc</i><br>10/19/98 |
|------------------------------------------------|-------------------------------------------|--------------------------------------------|

**Document #: DOC11-0010**  
**REV: A**

All information contained in this document is confidential and proprietary to COMWAVE and shall not be disclosed without the prior written permission of COMWAVE.

## CUSTOMER SERVICE

*Comwave's customer service personnel are available 24 hours a day to assist with any questions or complications that may arise. After regular business hours, 8-5 Monday through Friday, an answering service will answer calls and forward messages to the appropriate person.*

|                                                                                                               |                     |
|---------------------------------------------------------------------------------------------------------------|---------------------|
| <b>Comwave</b><br><b>Crestwood Industrial Park</b><br><b>395 Oakhill Road</b><br><b>Mountaintop, PA 18707</b> |                     |
| 1-800-266-9283                                                                                                | USA & Canada        |
| 1-570-474-6751                                                                                                | International & USA |
| (Please note, as of 12/98, our area code changed from 717 to 570)                                             |                     |
| 1-570-474-5469                                                                                                | FAX                 |
| (Please note, as of 12/98, our area code changed from 717 to 570)                                             |                     |

## EQUIPMENT RETURNS

In the event the equipment requires return for factory service, please follow the guidelines listed. Comwave cannot be held responsible for damaged equipment received due to improper packing. Contact Comwave with any questions or concerns regarding returning or packaging of equipment.

1. **Contact Comwave:** Call Comwave to report the problem and to obtain a "Return Authorization" number (RA). This enables Comwave to accurately track and identify returned equipment for prompt and efficient service. If you do not obtain an RA number prior to sending equipment back Comwave cannot be held responsible for delays in receiving the equipment. These delays will inevitably cause time loss in repairing and returning your product to you.
2. **Obtain packaging materials:** Use original boxes and packing materials when returning any equipment. This will safeguard against most in-transit damages. If original boxes and packing materials are not available, contact Comwave to obtain replacement materials prior to shipping. Replacement materials are provided at a nominal cost.
3. **Pack equipment:** Use original packing materials and directions provided. Most equipment is packed in a box within another box; this varies with each product. Double boxing provides maximum protection.

**Caution:** Do not pack equipment using "PEANUTS." Equipment packed using "PEANUTS" as filler does NOT provide sufficient protection during shipping. Rough handling by the carrier may cause permanent damage to the equipment being returned. COMWAVE cannot be held responsible for damaged equipment received due to improper packing.

Created by: Kimberly Simeone  
12/8/98 ECO #: 98-164

Checked by: Kevin Harding  
12/10/98

Released by: Donald Wike  
12/10/98

## PACKAGING FOR RETURN

1. Start with an empty box, figure 20-0002-1, from Comwave, if you don't have one please inform customer service when you contact them for a return authorization (RA) number, which you **MUST** do prior to returning **ANY** equipment. A box consists of 4 parts, one cardboard box, one cardboard tube, and two polyethylene endcaps, see figure 20-0002-2. If you need to assemble a flattened box, use 2" clear box tape over the bottom seam, using three layers, to assure strength. Then put 4 pieces of fiberglass strapping tape over the edges.
2. Place the cardboard tube in the box as shown in figure 20-0002-3.
3. Place the polyethylene endcaps against the sides of the equipment as shown in figure 20-0002-4. **\*NOTE the front panel fits snugly into a slotted opening in the endcap.**
4. Put the transmitter into the box with the cardboard tube already in it as shown in figure 20-0002-5.
5. Close the box and seal the top seam with 2" clear box tape, using three layers to assure strength. Then put 4 pieces of fiberglass strapping tape over the edges. Clearly mark the RA number on the outside of the box before shipping.

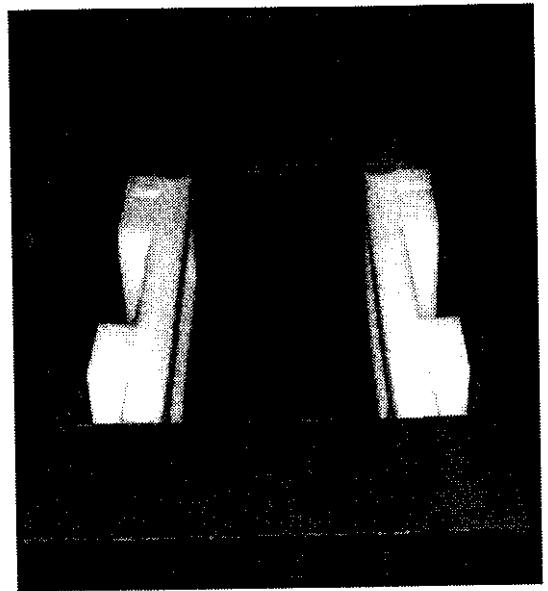 


FIGURE 20-0002-1

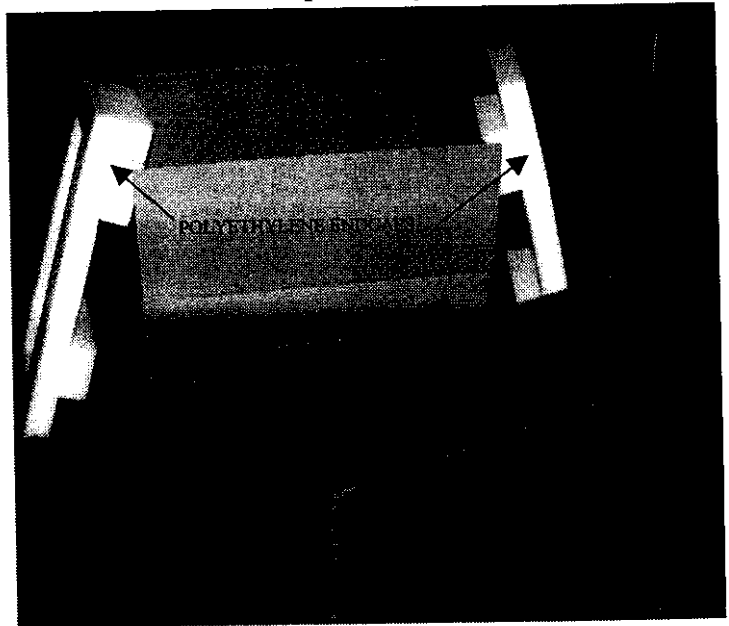 


FIGURE 20-0002-2

|                                                                      |                                                  |                                                     |
|----------------------------------------------------------------------|--------------------------------------------------|-----------------------------------------------------|
| <i>Created by: Kimberly Simeone</i><br><i>10/21/98 ECO #: 98-116</i> | <i>Checked by: Shawn Bohl</i><br><i>10/21/98</i> | <i>Released by: Paulo Correa</i><br><i>10/21/98</i> |
|----------------------------------------------------------------------|--------------------------------------------------|-----------------------------------------------------|

**Document #: DOC20-0002**  
**REV: B**



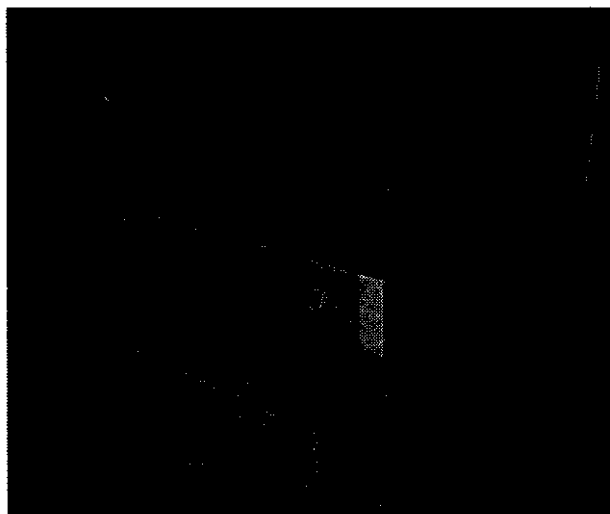 


FIGURE 20-0002-3

SLOTTED OPENING

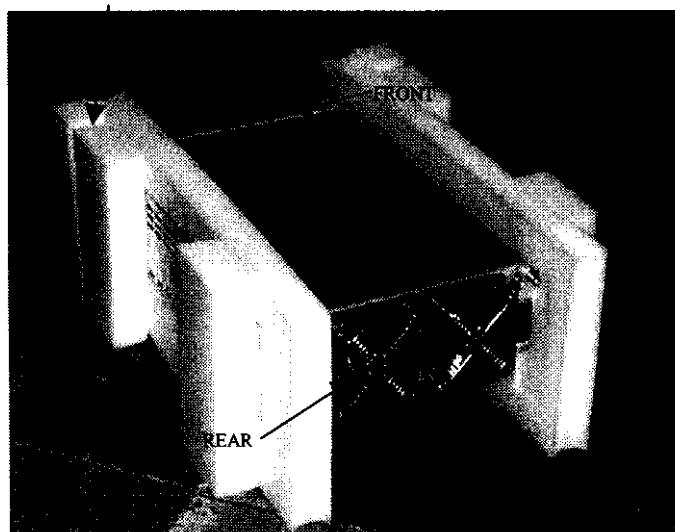 


FIGURE 20-0002-4

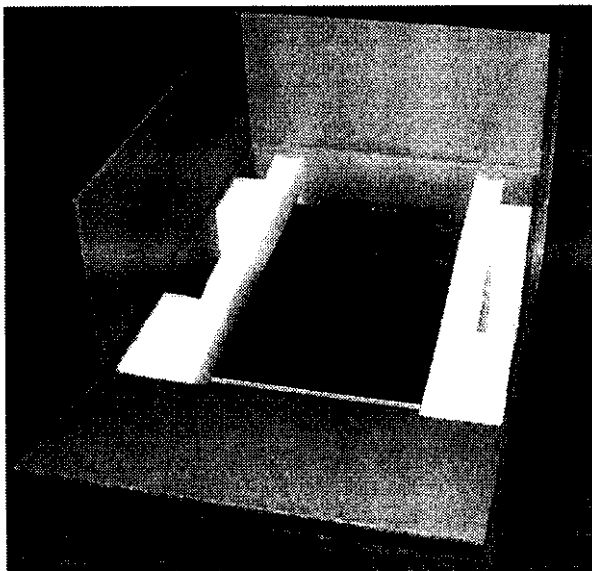 


FIGURE 20-0002-5

## RETURN PACKAGING OF THE POWER AMPLIFIER SEGMENT

1. Start with an empty power amplifier segment box, shown in figure 20-0003-1. If you don't have one please inform Comwave customer service when you contact them for a return authorization (RA) number, which you **MUST** do prior to returning ANY equipment.
2. Place the power amplifier segment into the box, as shown in figure 20-0003-2. The heatsink should always face up and the connectors on the rear of the power amp segment rest against the soft gray foam for protection.

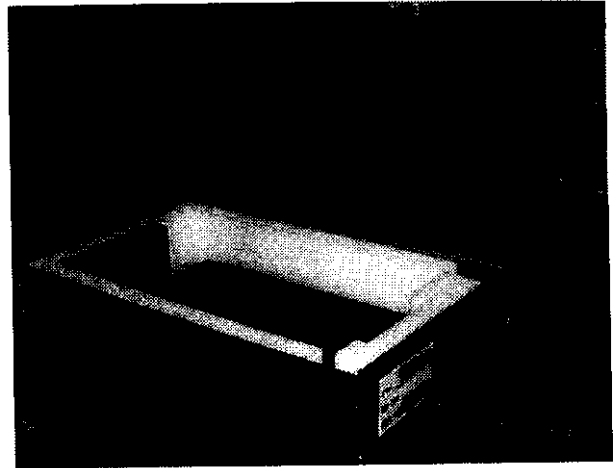 


FIGURE 20-0003-1

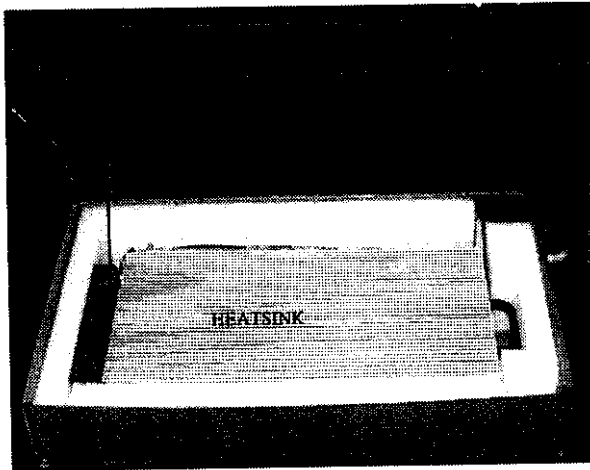 


FIGURE 20-0003-2

3. Fold the edges of the inner box in and close.

4. Place the inner box into the 4-pack master (outer box), being sure to include three empty power amplifier boxes for a secure fit, as shown in figure 20-0003-3. The power amplifier segments are generally packed 4 per master box and shipped.

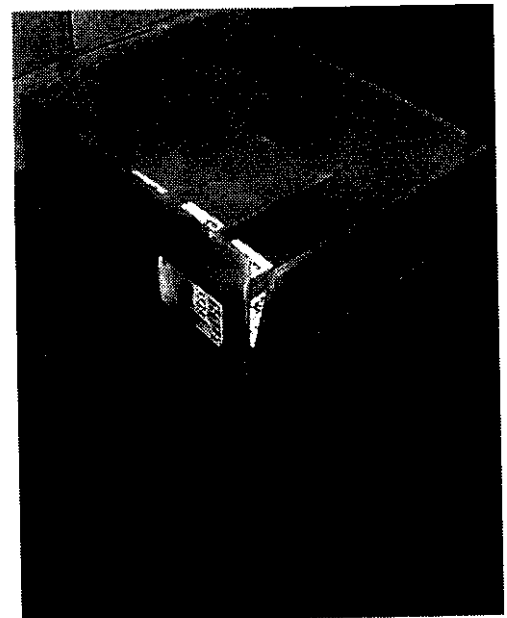 


FIGURE 20-0003-3

- When returning segment(s) please pack them the same way, ALL boxes will be returned to you. If you need to assemble a master box, use 2" clear box tape over the bottom seam, using three layers to assure strength. Then put 4 pieces of fiberglass strapping tape over the edges.
5. Close the 4-pack master box and seal the top seam with 2" clear box tape, using three layers to assure strength. Then put 4 pieces of fiberglass strapping tape over the edges. Clearly mark the RA number on the outside of the box before shipping.

Created by: Kimberly Simeone  
10/21/98 ECO #: 98-116

Checked by: Shawn Bohl  
10/22/98

Released by: Don Wike  
10/22/98