

USER'S GUIDE

47266362.00-108

SDA1250C Frequency Agile, 12.5 Watt Transmitter

THOMCAST COMMUNICATIONS Inc. COMWAVE DIVISION



Figure 1: SDA1250C Transmitting System.

This is an unpublished work protected by United States copyright laws and is proprietary to Thomcast Communications, Inc. Disclosure, copying, reproduction, merger, translation, modification, enhancement or use by anyone other than authorized employees or licensees of Thomcast Communications, Inc. without the prior written consent of Thomcast Communications, Inc. is prohibited.

Copyright (c) 2000 Thomcast Communications, Inc. All rights reserved

This copyright notice should not be construed as evidence of publication.

All information contained in this document is confidential and proprietary to THOMCAST and shall not be disclosed without the prior written permission of THOMCAST.

CREATED: KAS..... 0612/00

CHECKED: DMW06/12/00

RELEASED: PRC.....0612/00

TABLE OF CONTENTS

<i>TITLE</i>	<i>DOCUMENT #</i>
Warranty Information	DOC12-0001
SECTION 1	
Provides information describing the system and how it works	
Top Level Description	DOC13-0178
Specifications	47266362.00-306
SECTION 2	
Provides information to assist in setting up and turning on your system	
Installation Procedure	DOC17-0035
Safety Practices and Guidelines	DOC26-0031
Cabling	DOC17-0036
External Interconnections	DOC30-0043
ComView Status Monitoring Interconnections	DOC30-0005
Turn-On Procedure	DOC26-0050
SECTION 3	
Provides information to help with troubleshooting	
Recommended Test Equipment	DOC25-0007
Troubleshooting	DOC18-0073
Node Addresses	DOC22-0019
Troubleshooting Worksheet	DOC18-0072
Equipment Fusing and Protection	DOC18-0075
Power Supply Plug-In Fusing and Protection	DOC18-0071
Maintenance	DOC18-0074
Inspections and Cleaning	
Calibrations	DOC16-0057
SECTION 4	
Provides information about individual segments of the system.	
We recommend you contact Thomcast ¹ customer service when repairs are necessary; please do not attempt to repair any modules and/or boards by yourself.	
Sub-Chassis Theory of Operation	DOC14-0037
Microcontroller Board Description (hardware)	DOC13-0175
Upconverter Plug-In Module Theory of Operation	DOC14-0039
Front and Rear Panel Descriptions	
Specifications	47266116.00-306
Block Diagram	47266116.00-034
Microwave Precorrector Module	DOC13-0177
Internal Interconnect	47266116.00-050

¹ DOC20-0001 provides detailed contact information. International phone 001-570-474-6751, USA & Canada phone 1-800-266-9283.

All information contained in this document is confidential and proprietary to THOMCAST and shall not be disclosed without the prior written permission of THOMCAST.

CREATED: KAS..... 06/12/00

CHECKED: DMW.....06/12/00

RELEASED: PRC.....06/12/00

U/C Plug-In Module MCU State Machine, Firmware Description	DOC13-0187
U/C Plug-In Module Firmware Description	DOC13-0188
LO Plug-In Module Theory of Operation	DOC14-0038A
Agile Synthesizer Drawer Manual	DOC33-0037
Specifications	47266052.00-306
Block Diagram	47266183.00-034
Internal Interconnect	47266183.00-050
LO Plug-In Firmware Description	DOC13-0184
Power Supply Plug-In Module Theory of Operation	DOC14-0036
Front and Rear Panel Descriptions	
Specifications	47266099.00-306
Block Diagram	47266099.00-034
Internal Interconnect	47266099.00-050
Power Supply Plug-In Embedded Controller	DOC13-0173
System Controller Firmware	DOC13-0185
Power Amplifier Segment Theory of Operation	DOC14-0008
Amplifier Segment State Flow Diagram	DOC21-0006
Firmware Flowchart	DOC21-0005
Internal Interconnect	66-306-01
 SECTION 5	
Provides contact & return information, as well available options.	
Customer Service	DOC20-0001
Power Amp Segment Return Packaging	DOC20-0002

All information contained in this document is confidential and proprietary to THOMCAST and shall not be disclosed without the prior written permission of THOMCAST.

CREATED: KAS..... 06/12/00

CHECKED: DMW.....06/12/00

RELEASED: PRC.....06/12/00