INSTRUCTIONS FOR OPERATION

SETING THE OPERATING CONTROLS

- This unit operates on a 12 volts battery (not included).
 To prevent possible damage if the battery should leak , be sure to remove the battery when the unit is not use .
- 2. Store the controller away from excess heat or humidity .
- 3. This remote control unit is requipped with 16 code combinations. To prevent possible interference from or to other remote units such as garage door openers, car alarm or security system . If you find that your fan and light kit go on and off without using your control, simply change the combination code in your transmitter and receiver.
- 4. Operation buttons on the panel of transmitter .

HIGHkey – For fan High speed .MEDkey – For fan Medium speed .LOWkey – For fan Low speed .OFFkey – For fan speed off .REVkey – For fan speed Reverse .UP LIGHT CONTROLkey – For light brightness and ON/OFF control .DOWNLIGHT CONTROLkey – For light brightness and ON/OFF control .

5.Start the fan :

Press the selected speed button to run the fan at the desired .

- 6.Turn off the fan : Press the OFF button .
- 7.Light control :

Turn the light on or off by only touching the LIGHT CONTROL button . Keep pressing the button in excess of 0.7 second it becomes a dimmer , the light varies cyclically in 0.8 second . One of the important feature of this control is AUTO-RESUME . After power

on, it allows the light return to where it was off.