Model : UC7221T INSTRUCTIONS FOR OPERATION

SETING THE OPERATING CONTROLS

- 1. This unit operates on CR 2032 a 3 volts battery (not included). To prevent possible damage if the battery should leak, be sure to remove the battery when the unit is not use.
- 2. Store the controller away from excess heat or humidity .
- 3. This remote control unit is required with 24bit code combinations. To prevent possible interference from or to other remote units such as garage door openers, car alarm or security system . If you find that your fan and light kit go on and off without using your control, simply change the combination code in your transmitter and receiver.

4. Operation buttons on the panel of transmitter .

5.Start the fan :

- H key For fan High speed .
- M key For fan Medium speed .
- L key For fan Low speed .key.
- **OFF** key For fan speed off.
- key For fan speed Reverse.
- key For upper light brightness andON/OFF control.

6.Start the fan :

Press the fan button to run the fan at the desired .

7.Turn off the fan : Press the OFF button .

8.Light control :

Turn the light on or off by only touching the LIGHT CONTROL button. Keep pressing the button in excess of 0.7 second it becomes a dimmer, the light varies cyclically in 0.8 second. One of the important feature of this control is AUTO-RESUME. After power on, it allows the light return to where it was off.

GENERAL INFORMATION :

This REMOTE controller is designed to separately control your ceiling fan speed and light brightness . The Light ON/OFF button will control the light brightness ON/OFF . The LED indicator on the transmitter will light when the button is pressed .

INSTRUCTIONS FOR INSTALLATION AND OPERATION OF FAN SPEED CONTROLLER

1. Setting the code on your new transmitter .

L	M × OFF	H
C	*)
	Harbor Breeze	•

Within 60 seconds of turning the AC power on, press and hole the OFF/STOP button for 5 seconds. The receiver will then lock in the chosen frequency. If your fan has a light it it will blink twice, for fans without lights check operation using the transmitter

NOTICE :

The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The term "IC:" before the radio certification number only signifies that Industry Canada Technical specifications were met.

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.