

INSTRUCTIONS FOR OPERATION

SETTING THE OPERATING CONTROLS

1. **This unit operates on a 12 volts battery (not included).**
To prevent possible damage if the battery should leak , be sure to remove the battery when the unit is not use .
2. **Store the controller away from excess heat or humidity .**
3. **This remote control unit is required with 32 code combinations. To prevent possible interference from or to other remote units such as garage door openers, car alarm or security system . If you find that your fan and light kit go on and off without using your control , simply change the combination code in your transmitter and receiver .**
4. **Operation buttons on the panel of transmitter .**
 - HIGH key – For fan High speed .**
 - MED key – For fan Medium speed .**
 - LOW key – For fan Low speed .**
 - OFF key – For fan speed off .**
 - LIGHT key – For light brightness and ON/OFF control .**
5. **Start the fan :**
Press the selected speed button to run the fan at the desired .
6. **Turn off the fan :**
Press the OFF button .
7. **Light control :**
Turn the light on or off by only touching the **LIGHT CONTROL** button .
Keep pressing the button in excess of 0.7 second it becomes a dimmer , the light varies cyclically in 0.8 second .
One of the important feature of this control is **AUTO-RESUME** . After power on , it allows the light return to where it was off .

GENERAL INFORMATION :

This REMOTE controller is designed to separately control your ceiling fan speed and light brightness . The Light ON/OFF button will control the light brightness ON/OFF . The red indicator on the transmitter will light when the button is pressed .

INSTRUCTIONS FOR INSTALLATION AND OPERATION OF FAN SPEED CONTROLLER

A. Setting the code on your new transmitter .

- 1. Remove battery cover .
Press firmly below arrow and slide battery cover off .**
- 2. Slide code switches to your choice of UP and DOWN position .
Factory setting is all UP . Do not use this setting .
Use ball point pen or small screwdriver .
Slide firmly up or down .**

B. Setting the code on your new Receiver unit .

- 1. Slide code switches to the same positions as set on your transmitter .
They must be set to same positions to work .**
- 2. Replace battery cover on transmitter .**
- 3. Make sure the code switches are on the left positions .**

NOTICE :

The changes or modifications not expressly approved by the party responsible for compliance could void user's authority to operate the equipment .

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFEERENCE THAT MAY CAUSE UNDESRIED OPERATION.