

Enter the code to signal the system to open, close, stop or move the door In the opposite direction. Working Frequency : 315 MHz, Power Supply : DC 9V Battery□□