

FCC ID: CIXAL-6038

BATTERY REPLACEMENT MOBILE BASE STATION

REMOVE SCREW TO OPEN BATTERY COMPARTMENT COVER THIS UNIT REQUIRES “9V” BATTERY (NOT INCLUDED) (ALWAYS REPLACE ALL BATTERIES AT THE SAME TIME. REPLACE BATTERY COMPARTMENT COVER AND SCREW BATTERY REPLACEMENT.

CAUTION:

1. YOUR TRANSCEIVER SET HAS BEEN FULLY AND ADJUSTED PRIOR TO SHIPMENT FROM THE FACTORY AND BE SURE NOT TOUCH THE INTERNAL COMPONENTS OTHER THAN REPLACING THE BATTERY
2. WHEN THE SOUND BECOMES WEAK, IT IS TIME TO CHANGE THE BATTERY.
3. AFTER USE, ALWAYS RETURN THE ON-OFF SWITCH TO THE OFF POSITION.
4. KEEP YOUR SET IN DRY AND CLEAN PLACE.

WARNING: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATION COULD YOUR THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.