



REQUIRES 2 AA SIZE BATTERIES (NOT INCLUDED)

OPERATING INSTRUCTIONS:

1. Remove the battery cover, Install two new AA size batteries in accordance with the instructions located in the battery compartment. Replace the battery cover.
2. Use any good FM radio. Turn the radio ON and face the radio towards you. Adjust the volume to a normal level.
3. If you find a commercial station is too near the 100MHz, turn your radio to either side of 100MHz.

IMPORTANT NOTES:

- The microphone is for use with FM radios only and will not work on the AM band.
- Hold the Microphone 2 inches from your mouth and speak in a normal voice into the head of the Microphone.
- The tuning range is between 92 to 106 on the FM dial.
- If the Microphone is not to be used for an extended period, remove the batteries from the set.
- For best results, the manufacturer recommends the use of alkaline batteries.

INSTALLATION OF BATTERIES:

- Open the battery compartment cover by using a small screwdriver to remove the screw.
- Insert two LR06/AA (1.5V) batteries with the positive (+) and negative (-) ends facing the directions indicated.
- Replace the cover and screw (see the diagram of battery replacement).

BATTERY PRECAUTIONS:

- Non-rechargeable batteries are not to be recharged.
- Do not use rechargeable batteries.
- Batteries are to be inserted with the correct polarity.
- Dead batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- Different types of batteries or new and used batteries are not to be mixed.
- Use LR06/AA alkaline batteries for best performance and longer life.
- Only batteries of the same or equivalent types as recommended are to be used.
- Installation of batteries should be done by an adult.

NOTE:

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER AUTHORITY TO OPERATE THE EQUIPMENT

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.