


Interconnection Diagram of JMR-9225-6X19X RADAR (2/2)

8.3.5 JMR-9225-6XH Interconnection Diagrams


Stand alone type

CWA-246 26inch Display Unit Mount Kit

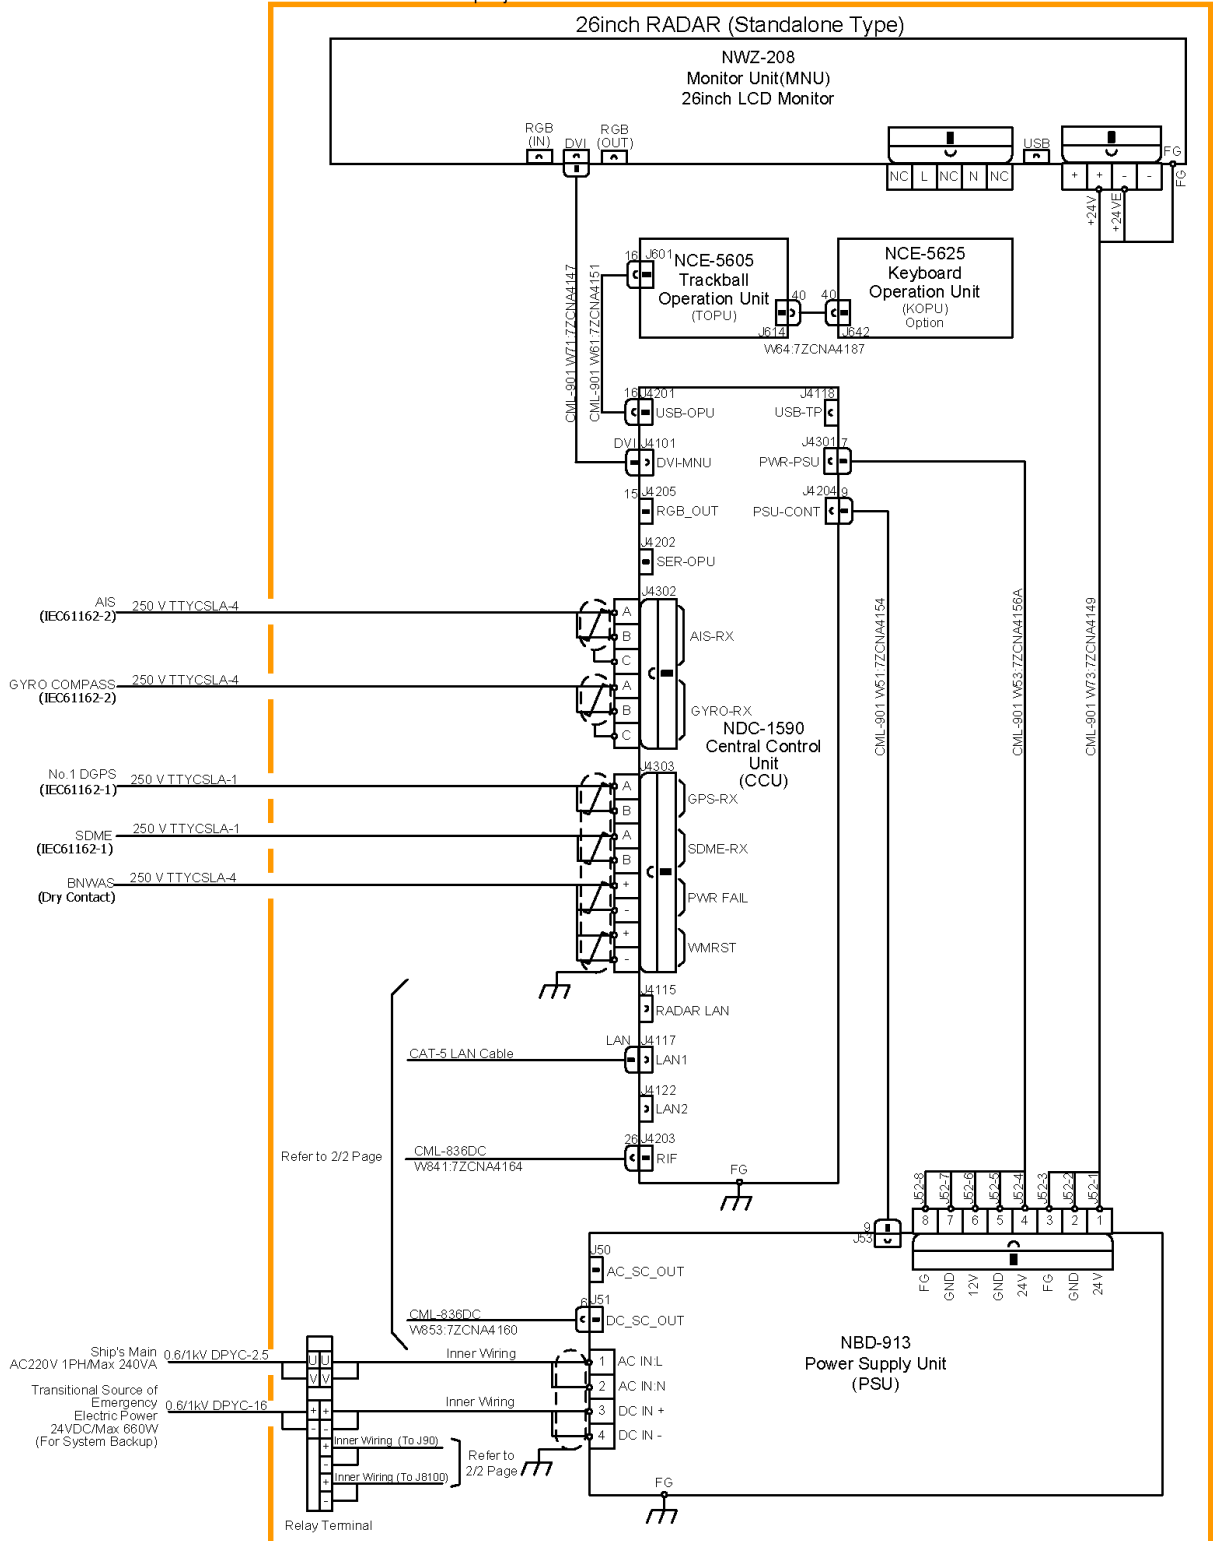


Interconnection Diagram of JMR-9225-6XH RADAR (1/2)

CWA-246 26inch Display Unit Mount Kit

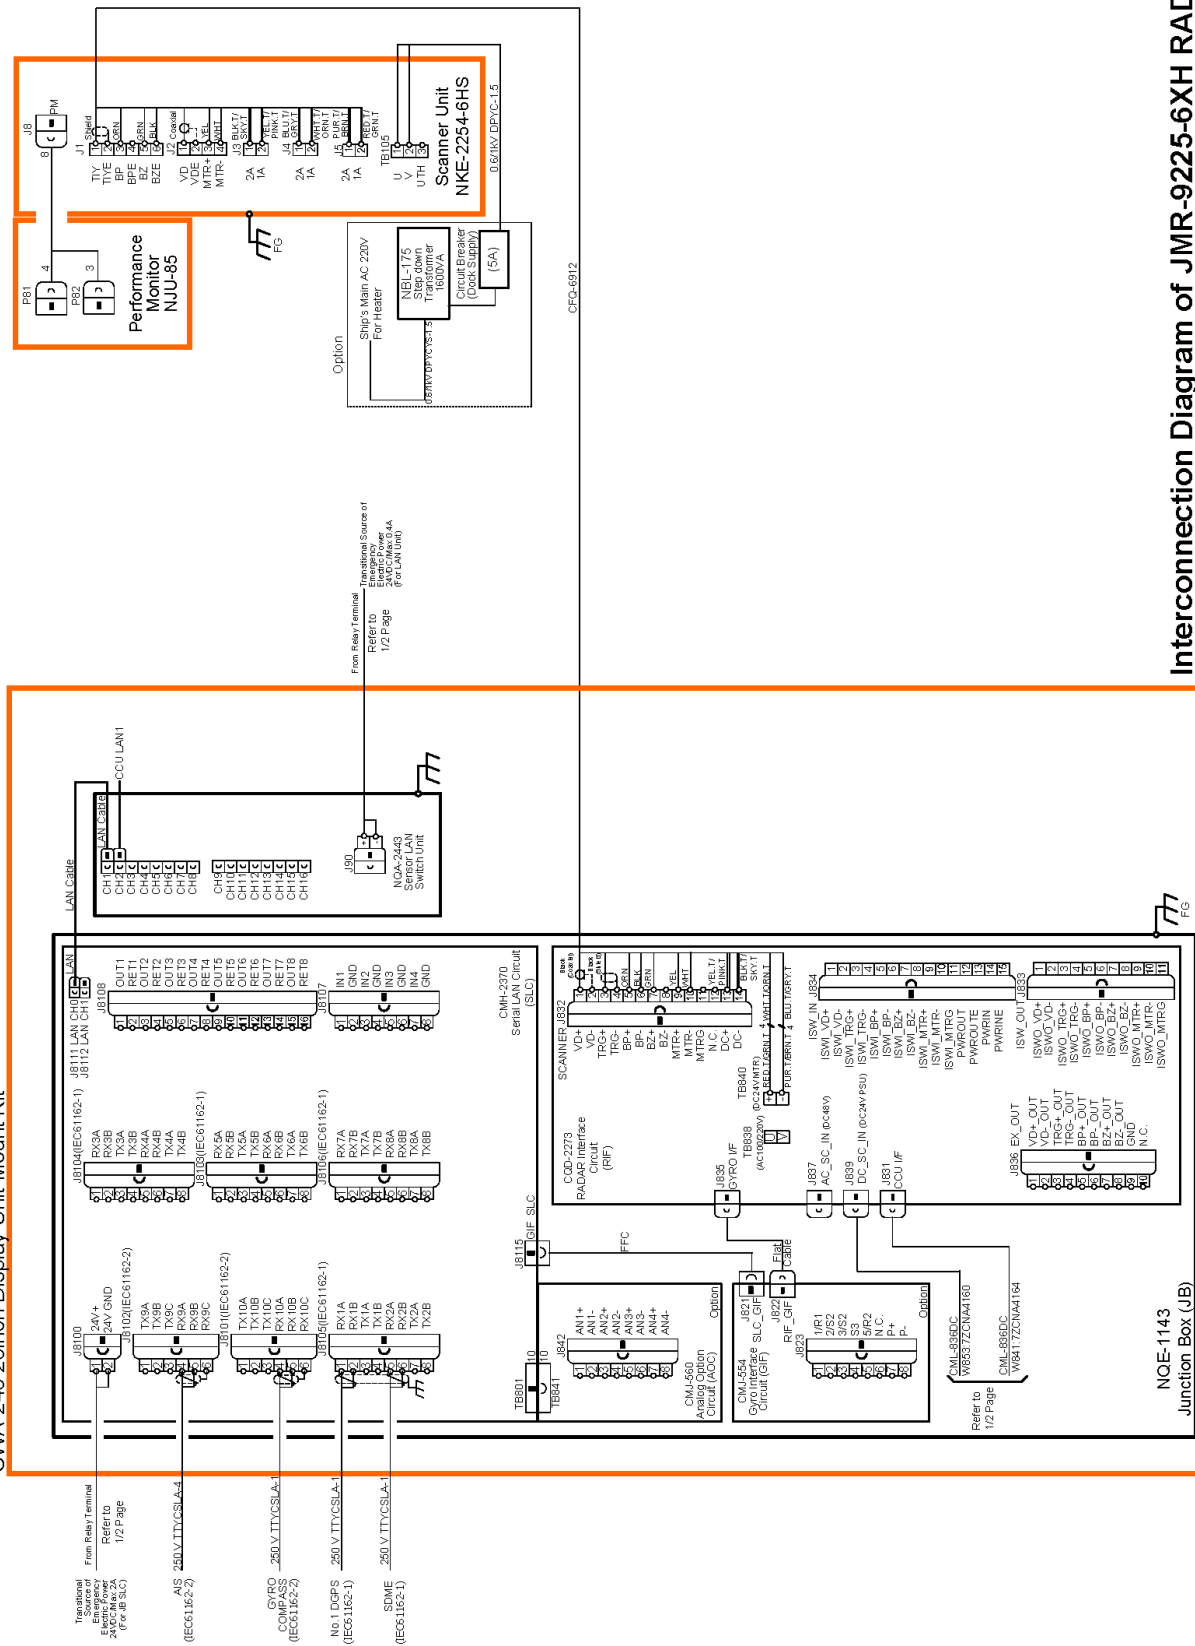

Interconnection Diagram of JMR-9225-6XH RADAR (2/2)

Desktop type

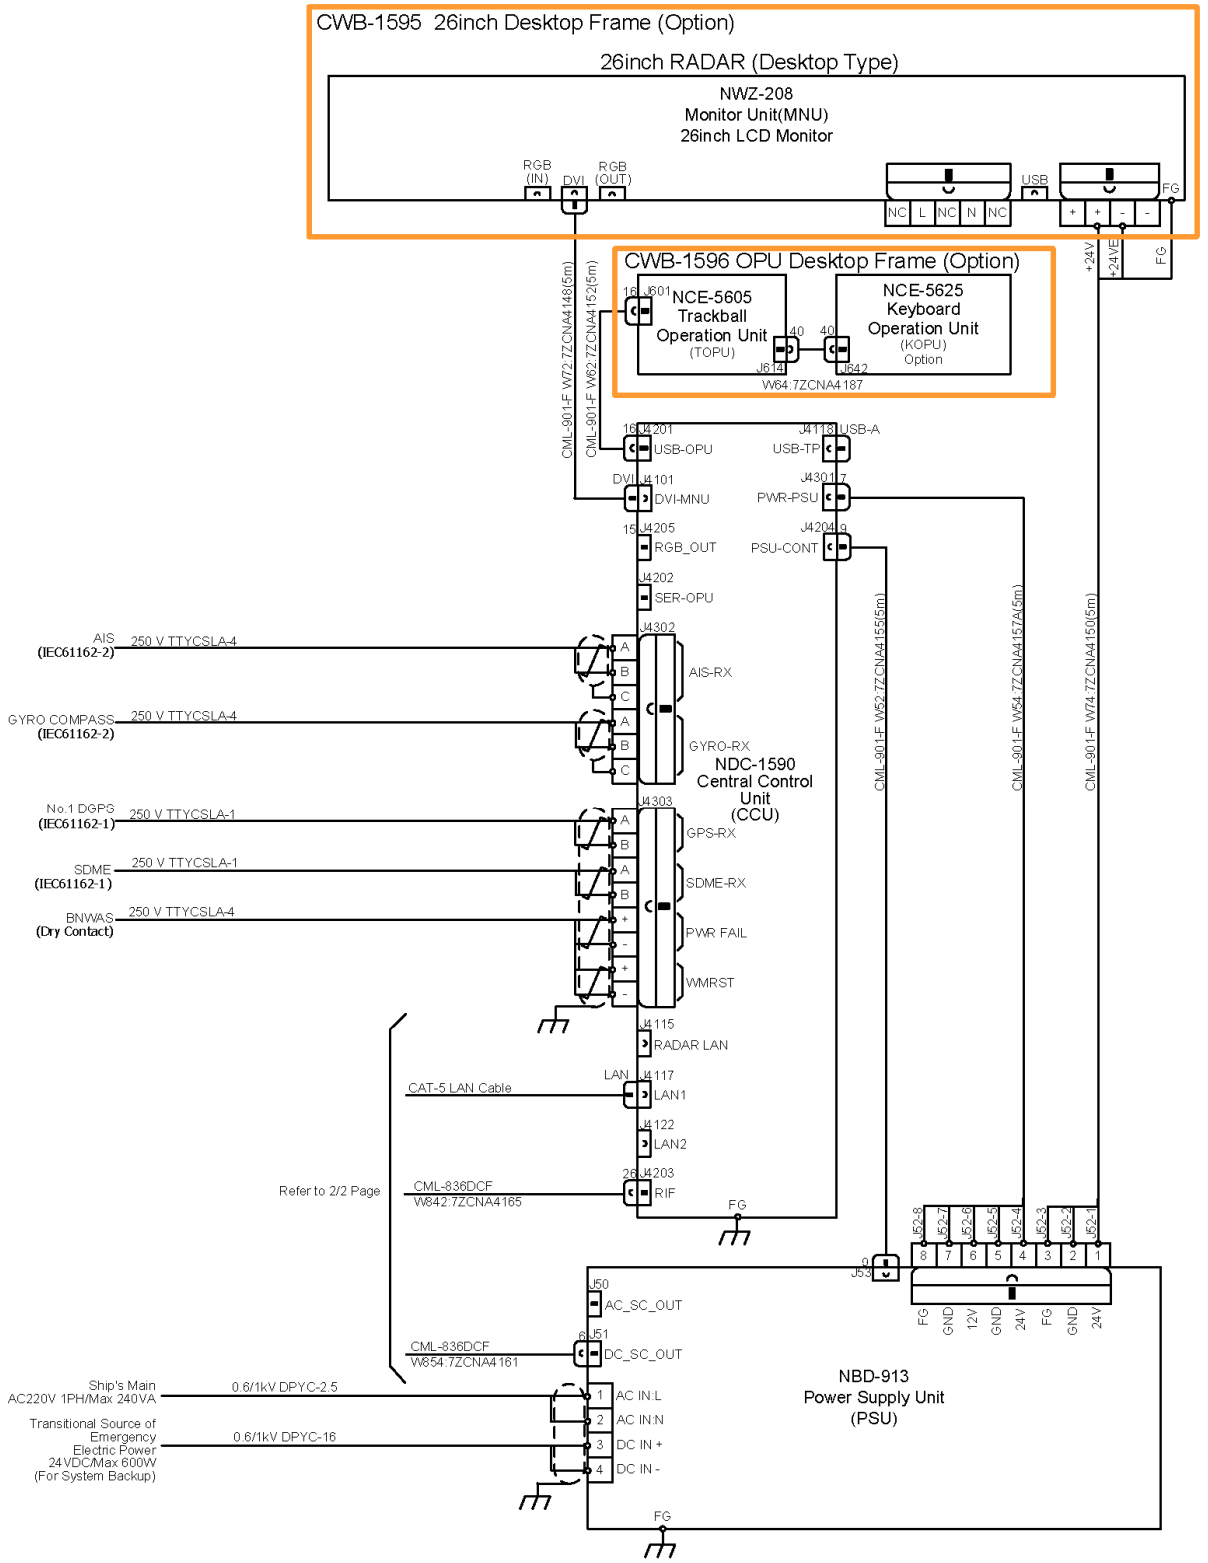


Interconnection Diagram of JMR-9225-6XH RADAR (1/2)

8.3.6 JMR-9210-6X/6XH Interconnection Diagrams


Stand alone type

CWA-246 26inch Display Unit Mount Kit

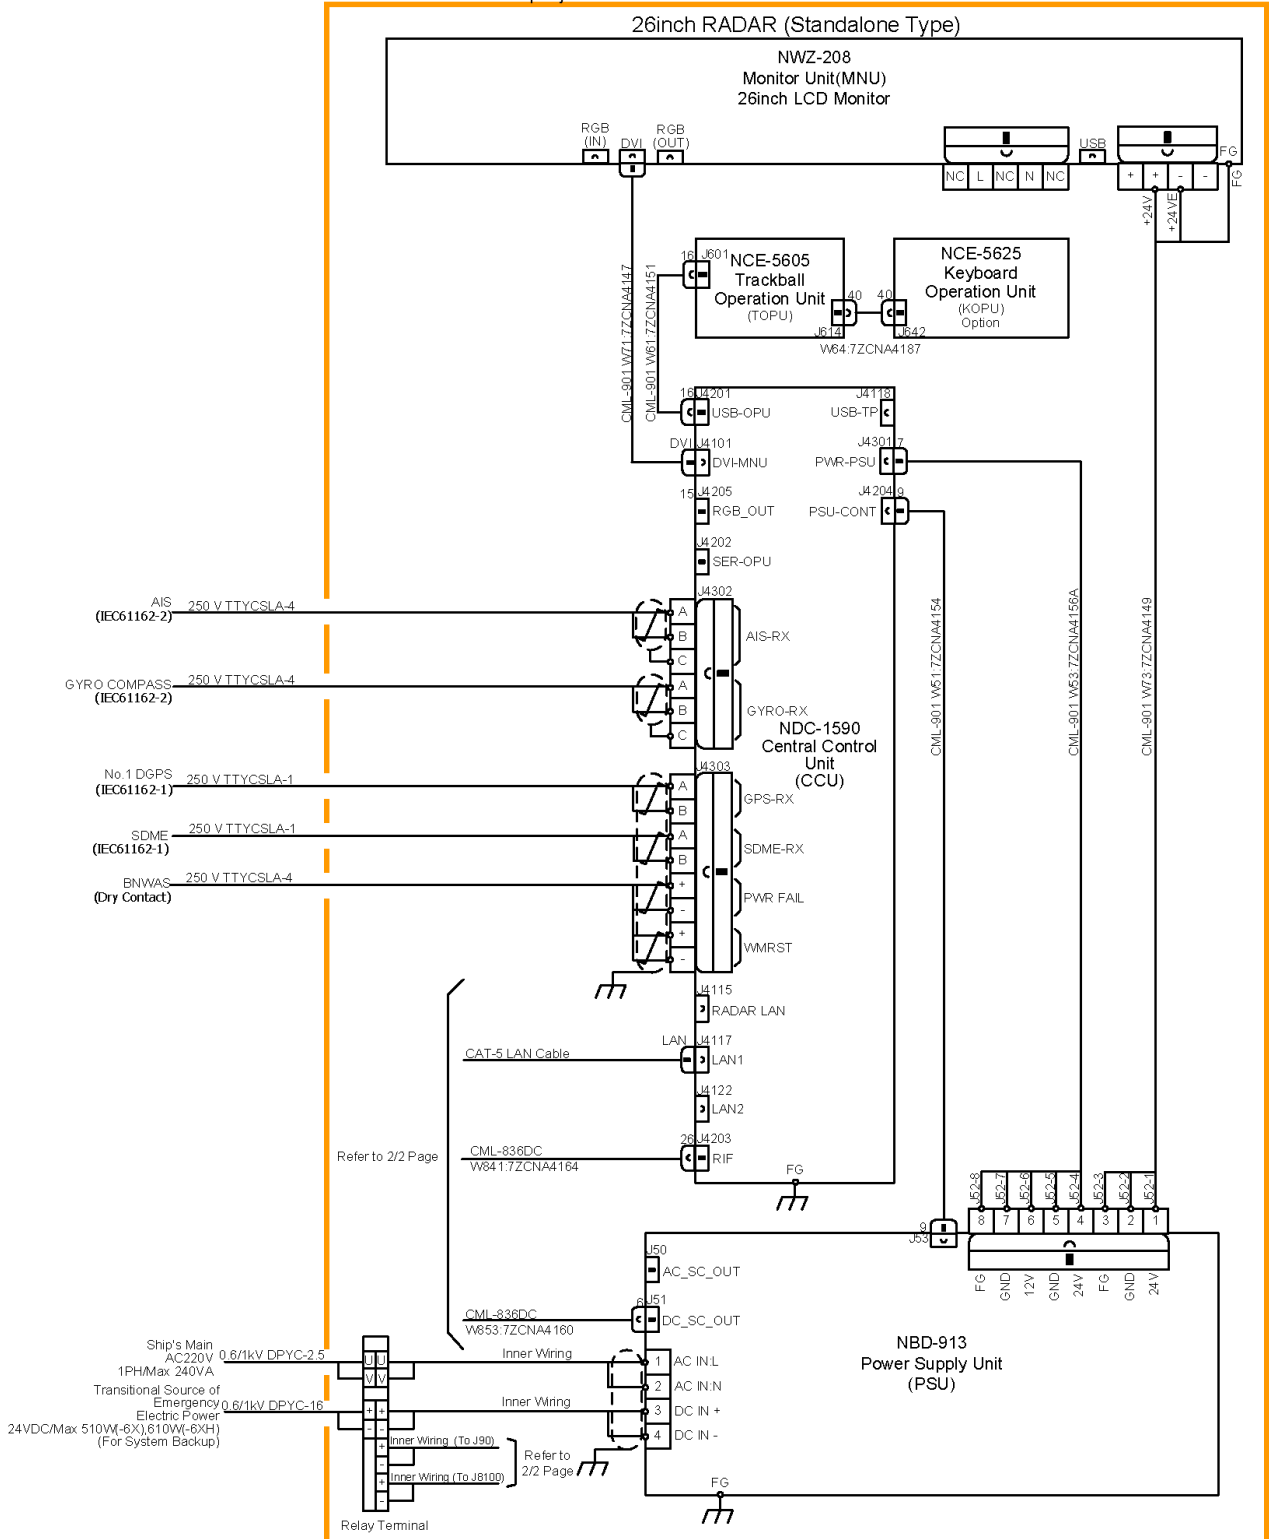


Interconnection Diagram of JMR-9210-6X/6XH RADAR (1/2)


CWA-246 26inch Display Unit Mount Kit

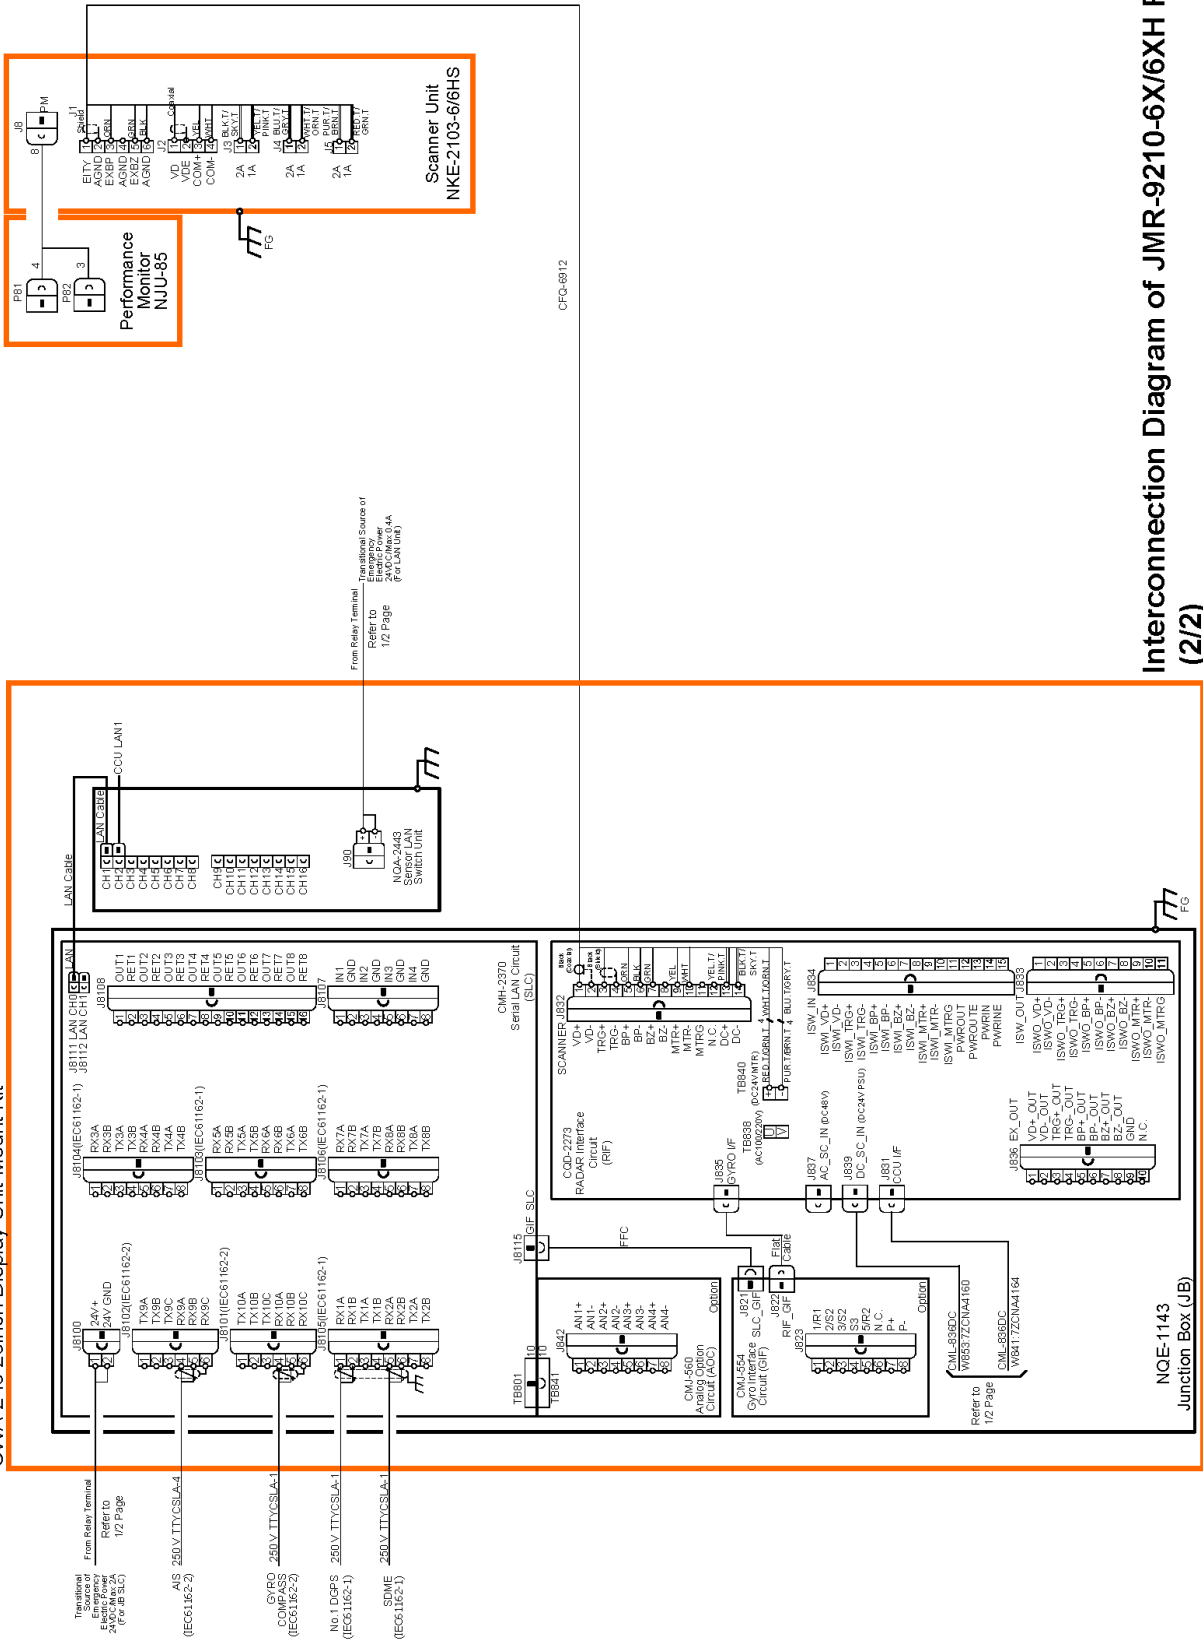

Desktop type

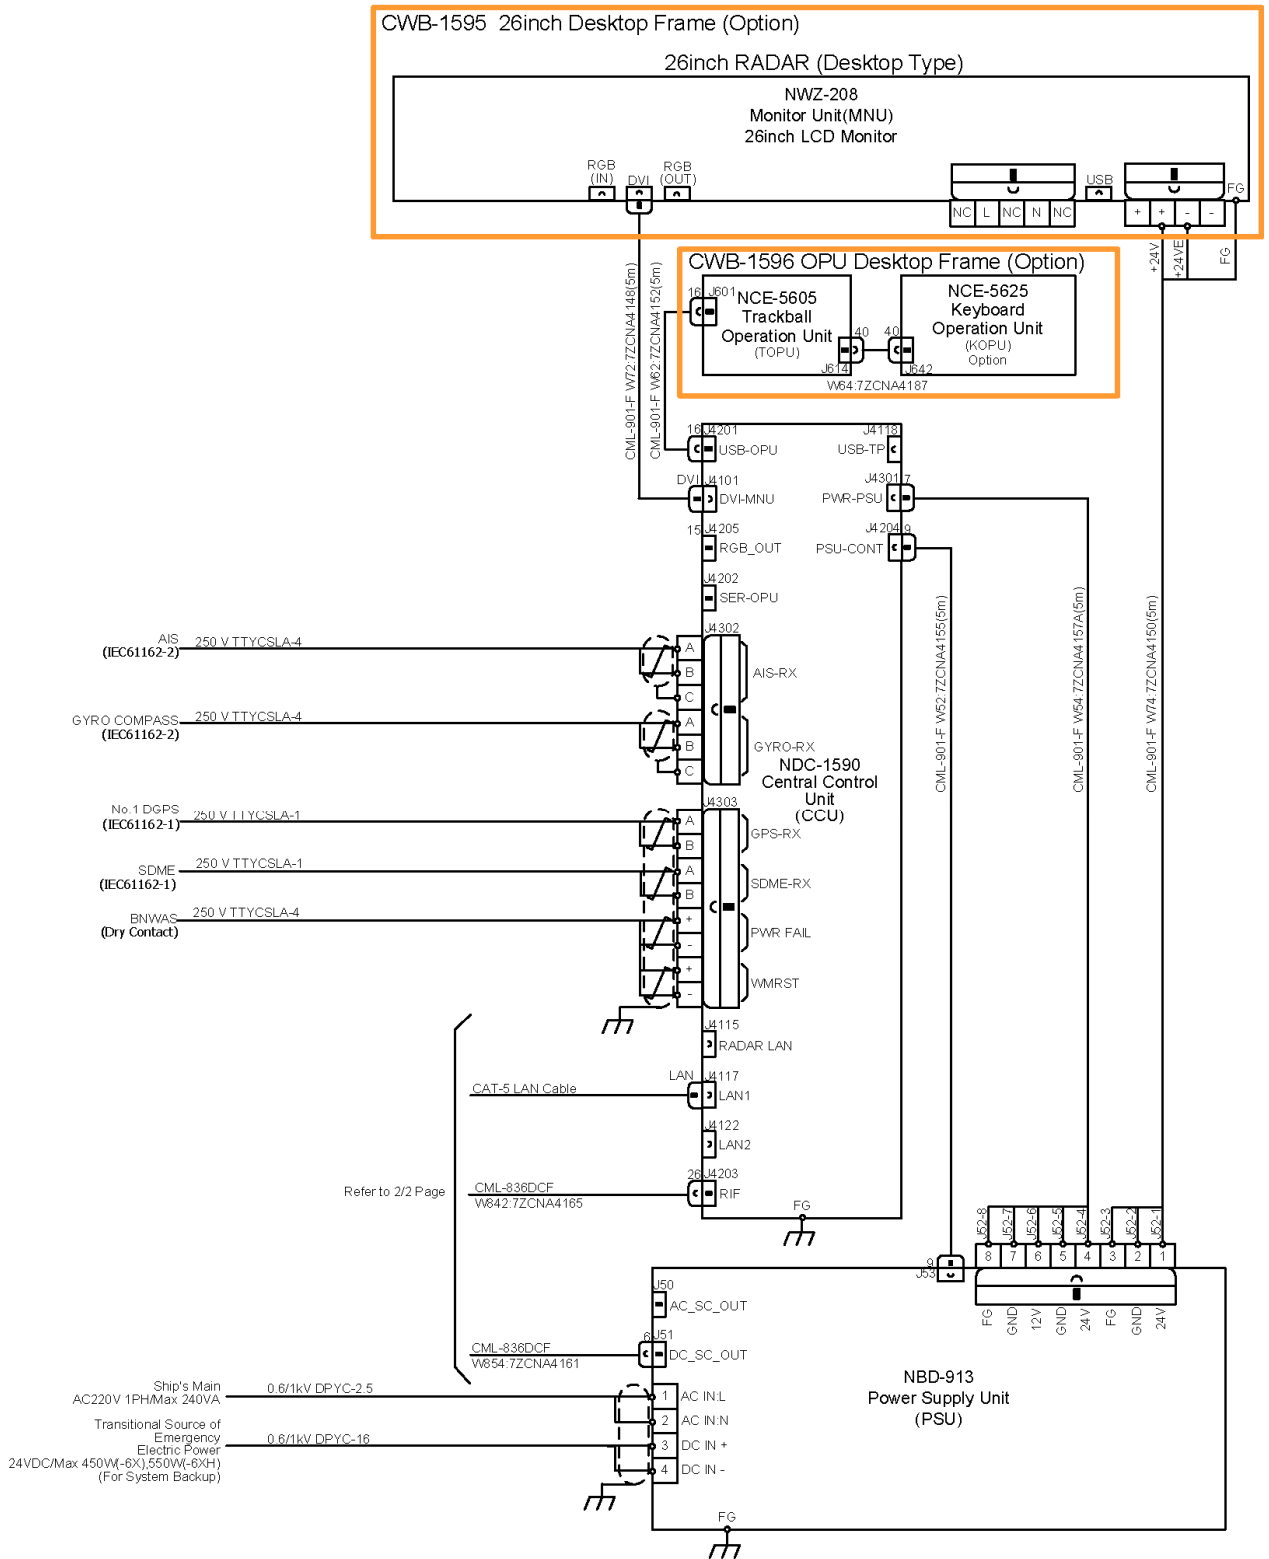


Interconnection Diagram of JMR-9210-6X/6XH RADAR (1/2)

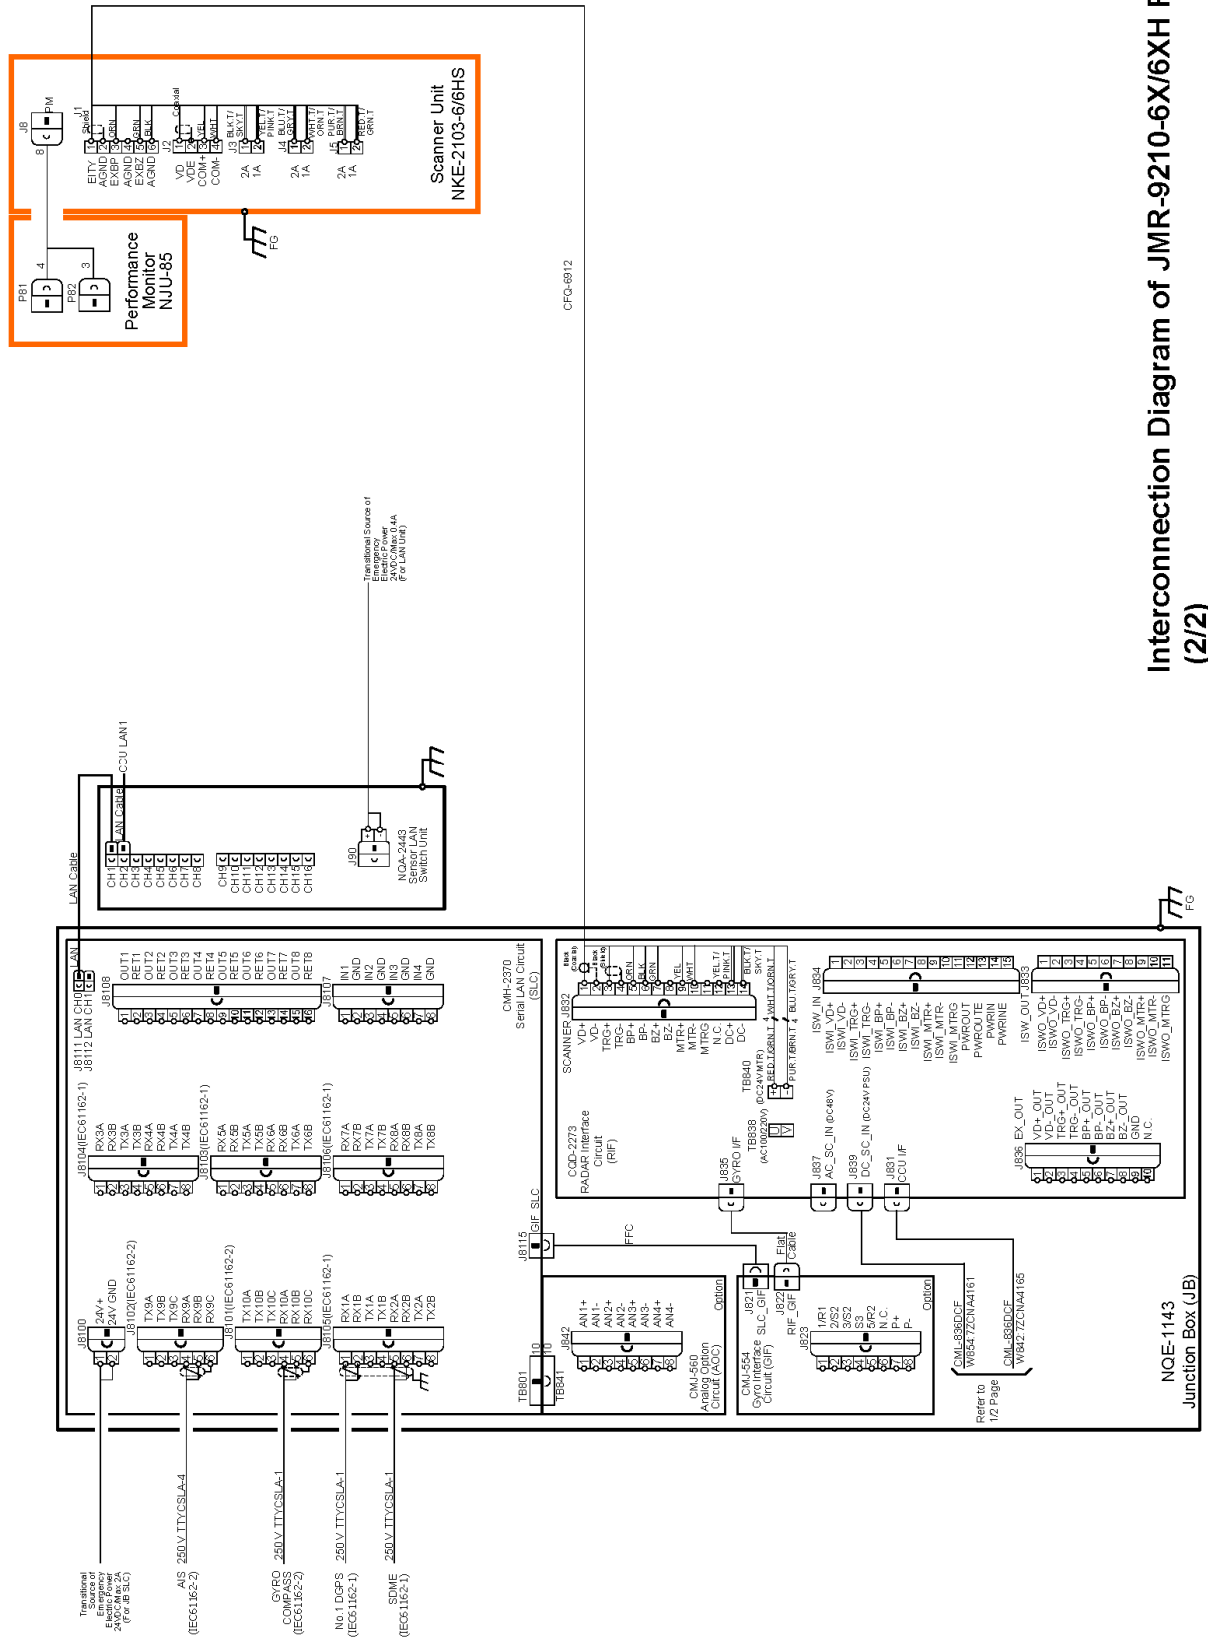

**Interconnection Diagram of JMR-9210-6X/6XH RADAR
(2/2)**


8.3.7 JMR-9272-S Interconnection Diagrams

Stand alone type

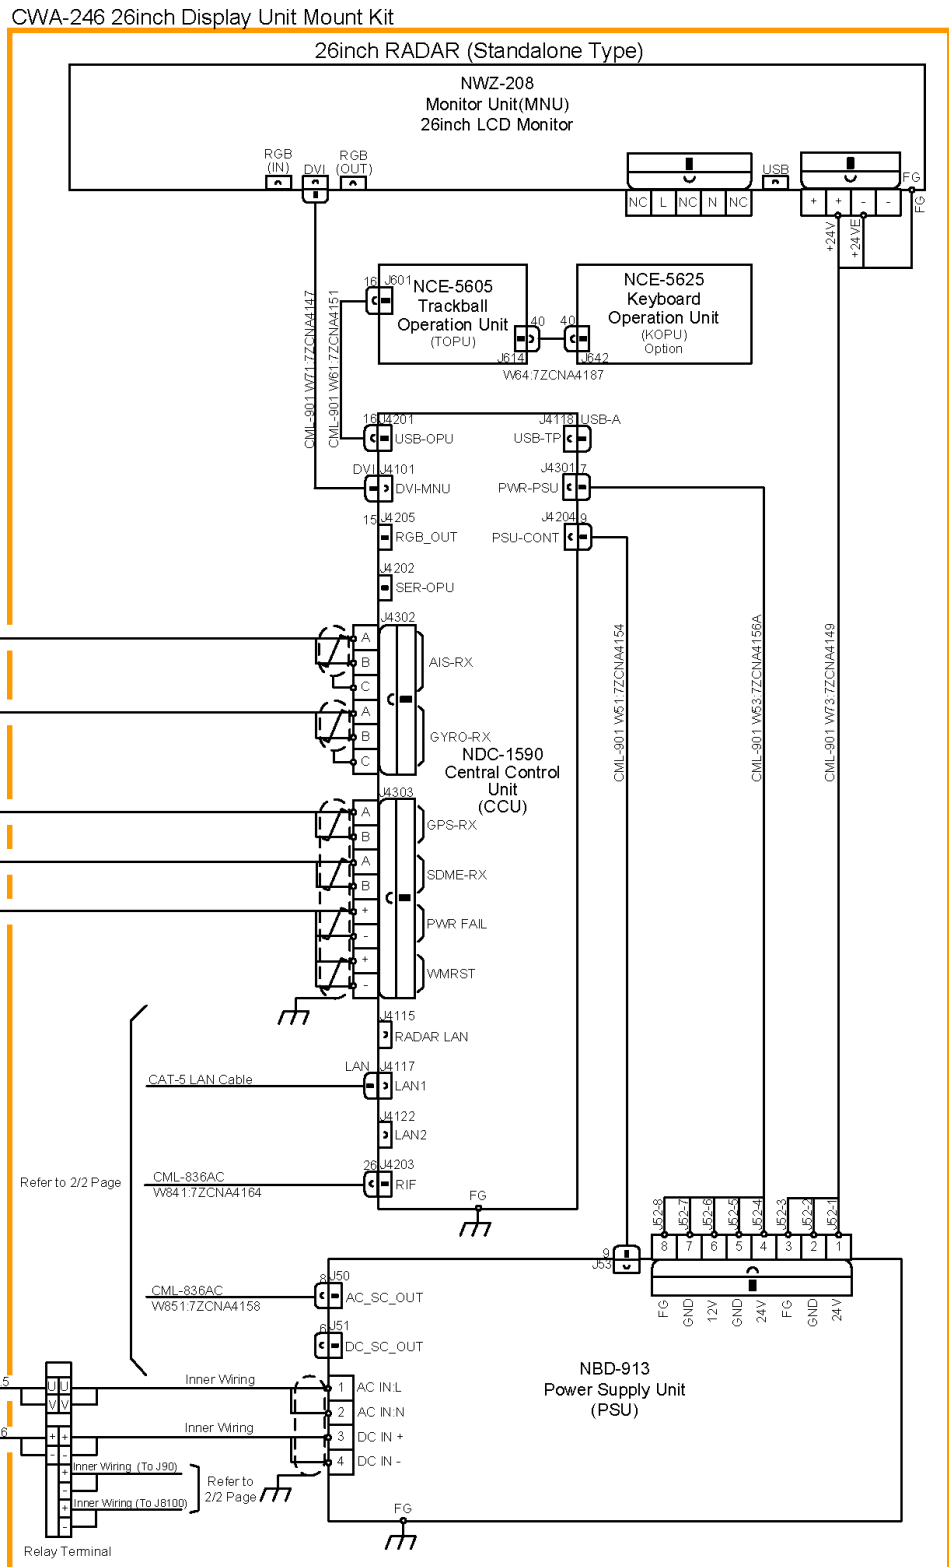

Interconnection Diagram of JMR-9272-S RADAR (1/2)

Desktop type

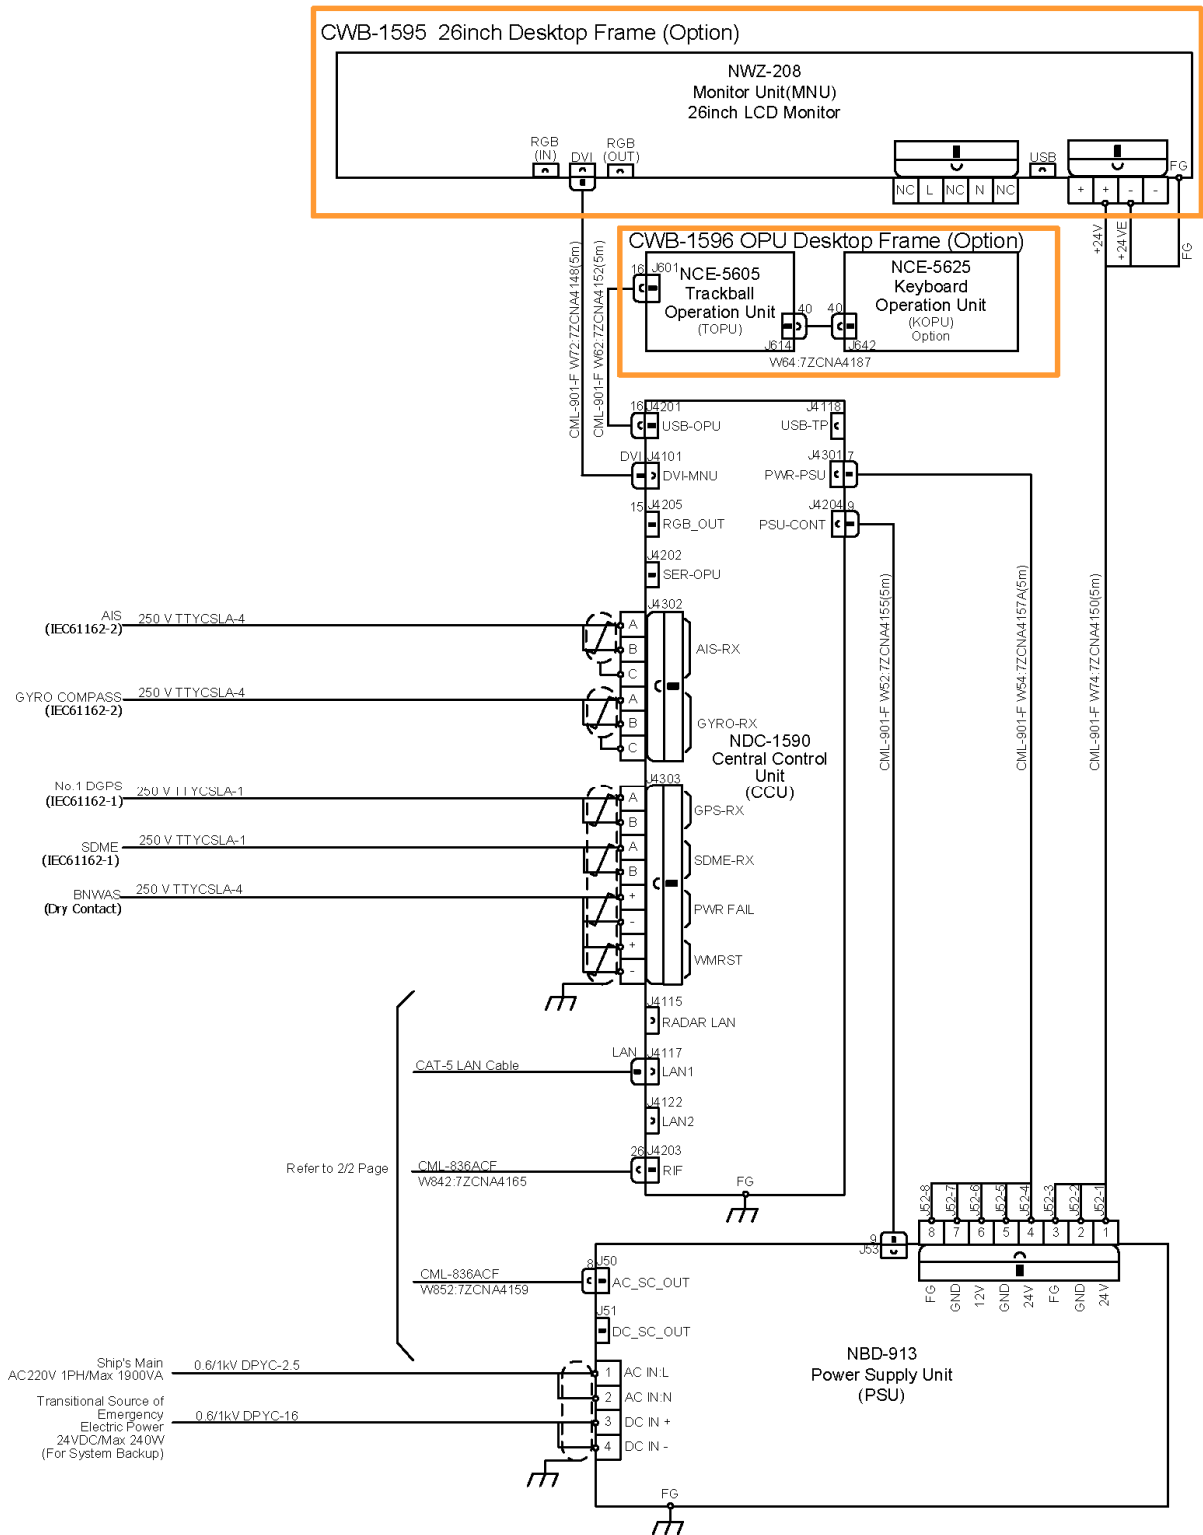


Interconnection Diagram of JMR-9272-S RADAR (1/2)

8.3.8 JMR-9282-S/SH Interconnection Diagrams


Stand alone type

CWA-246 26inch Display Unit Mount Kit

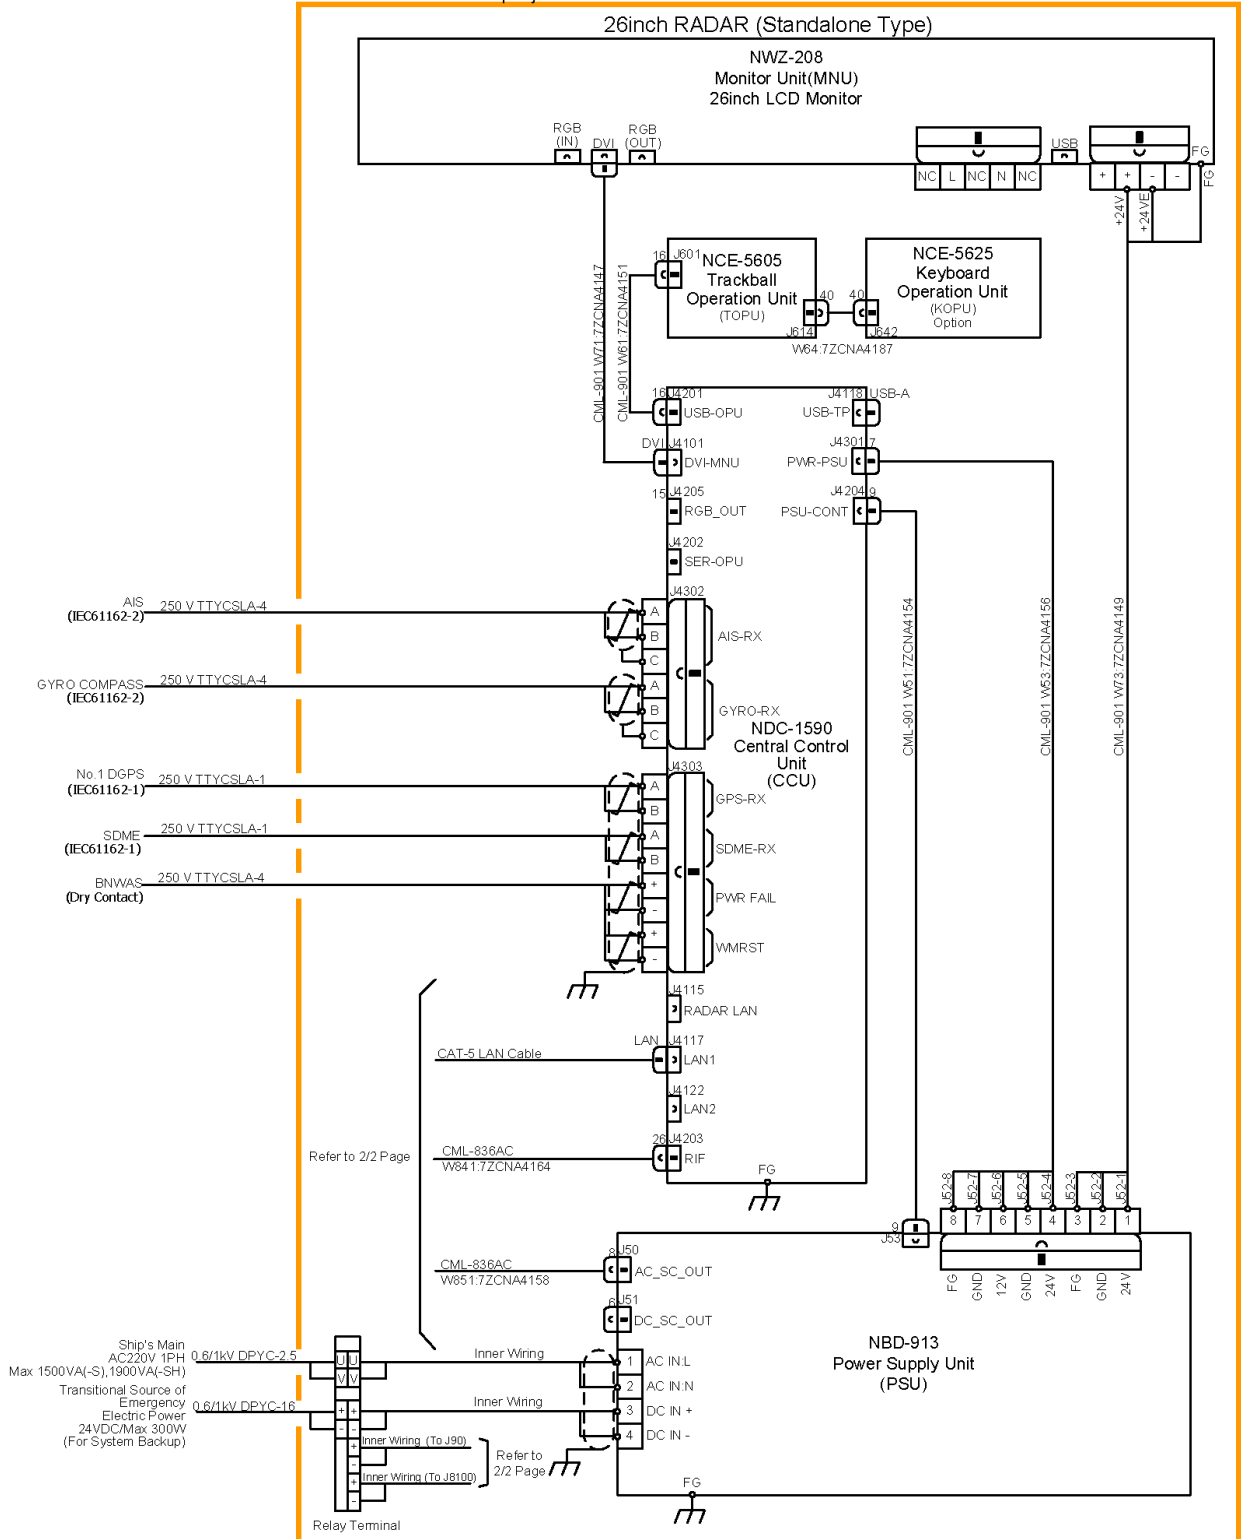


Interconnection Diagram of JMR-9282-S/SH RADAR (1/2)

CWA-246 26inch Display Unit Mount Kit

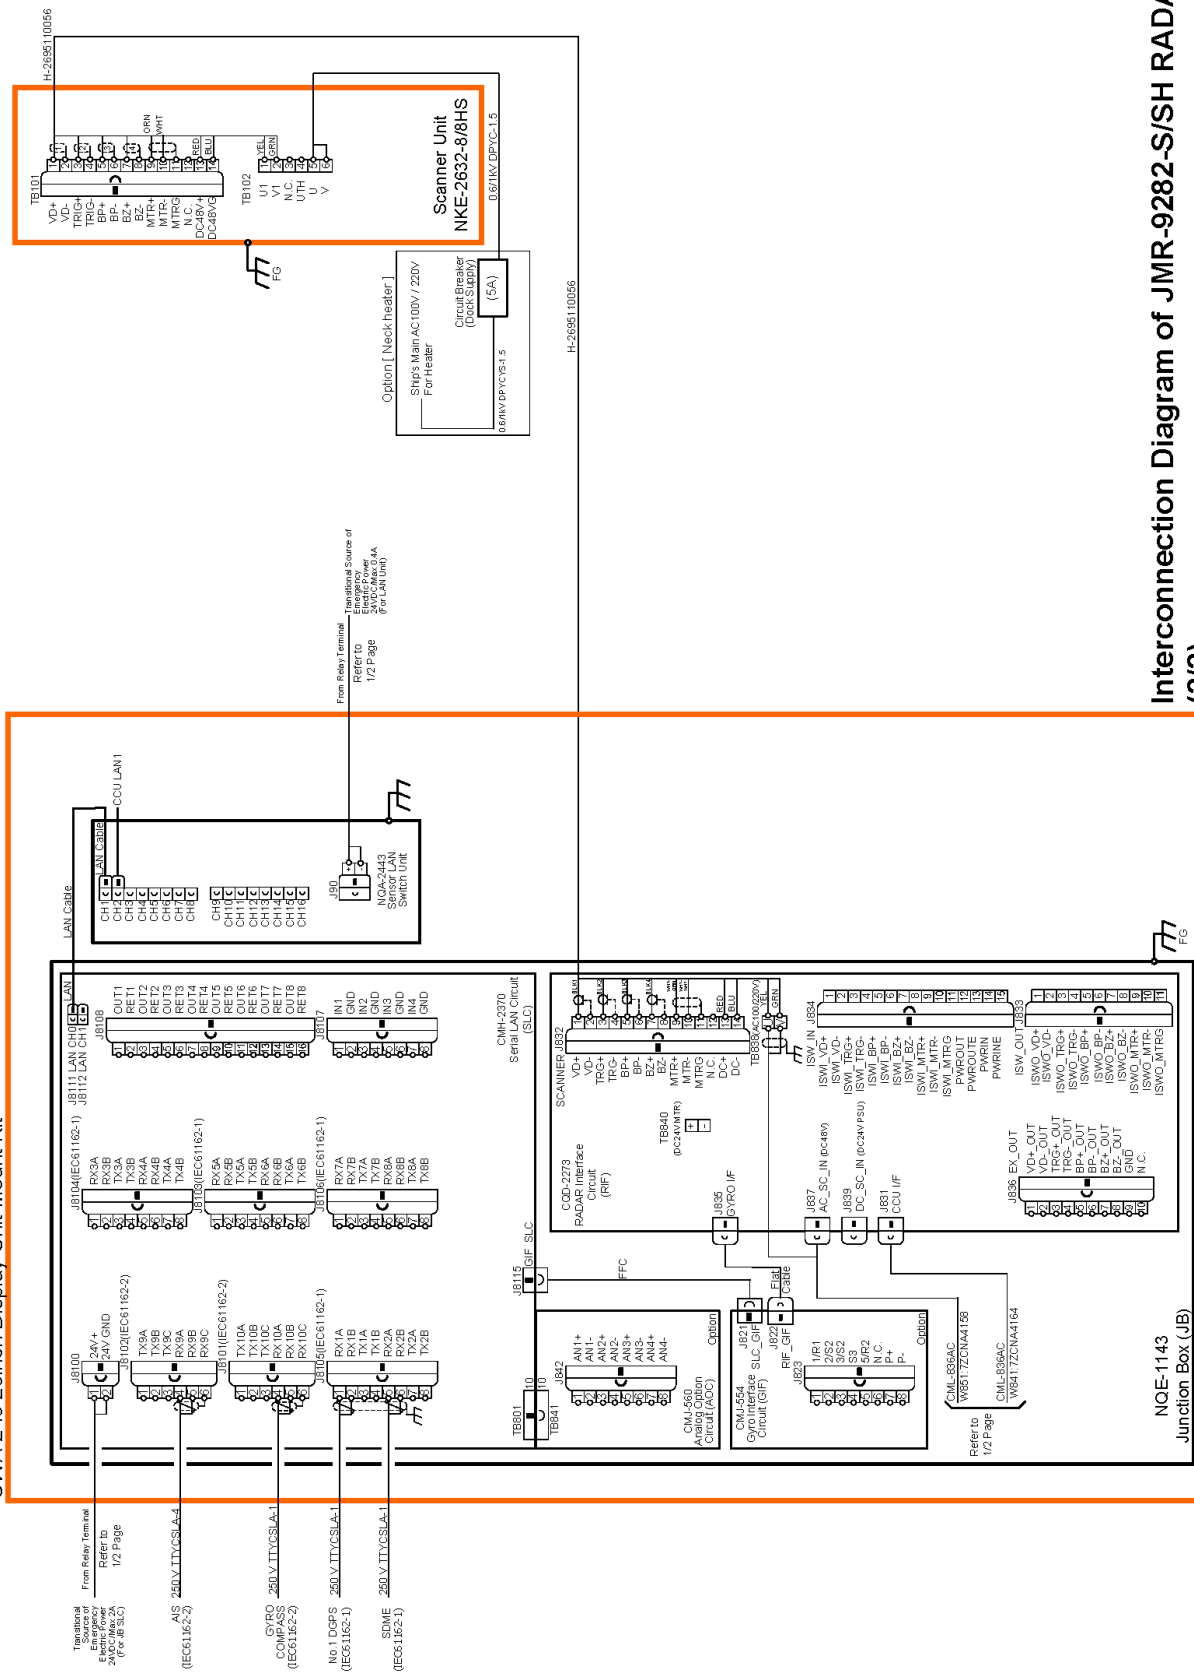


Interconnection Diagram of JMR-9282-S/SH RADAR (2/2)

Desktop type

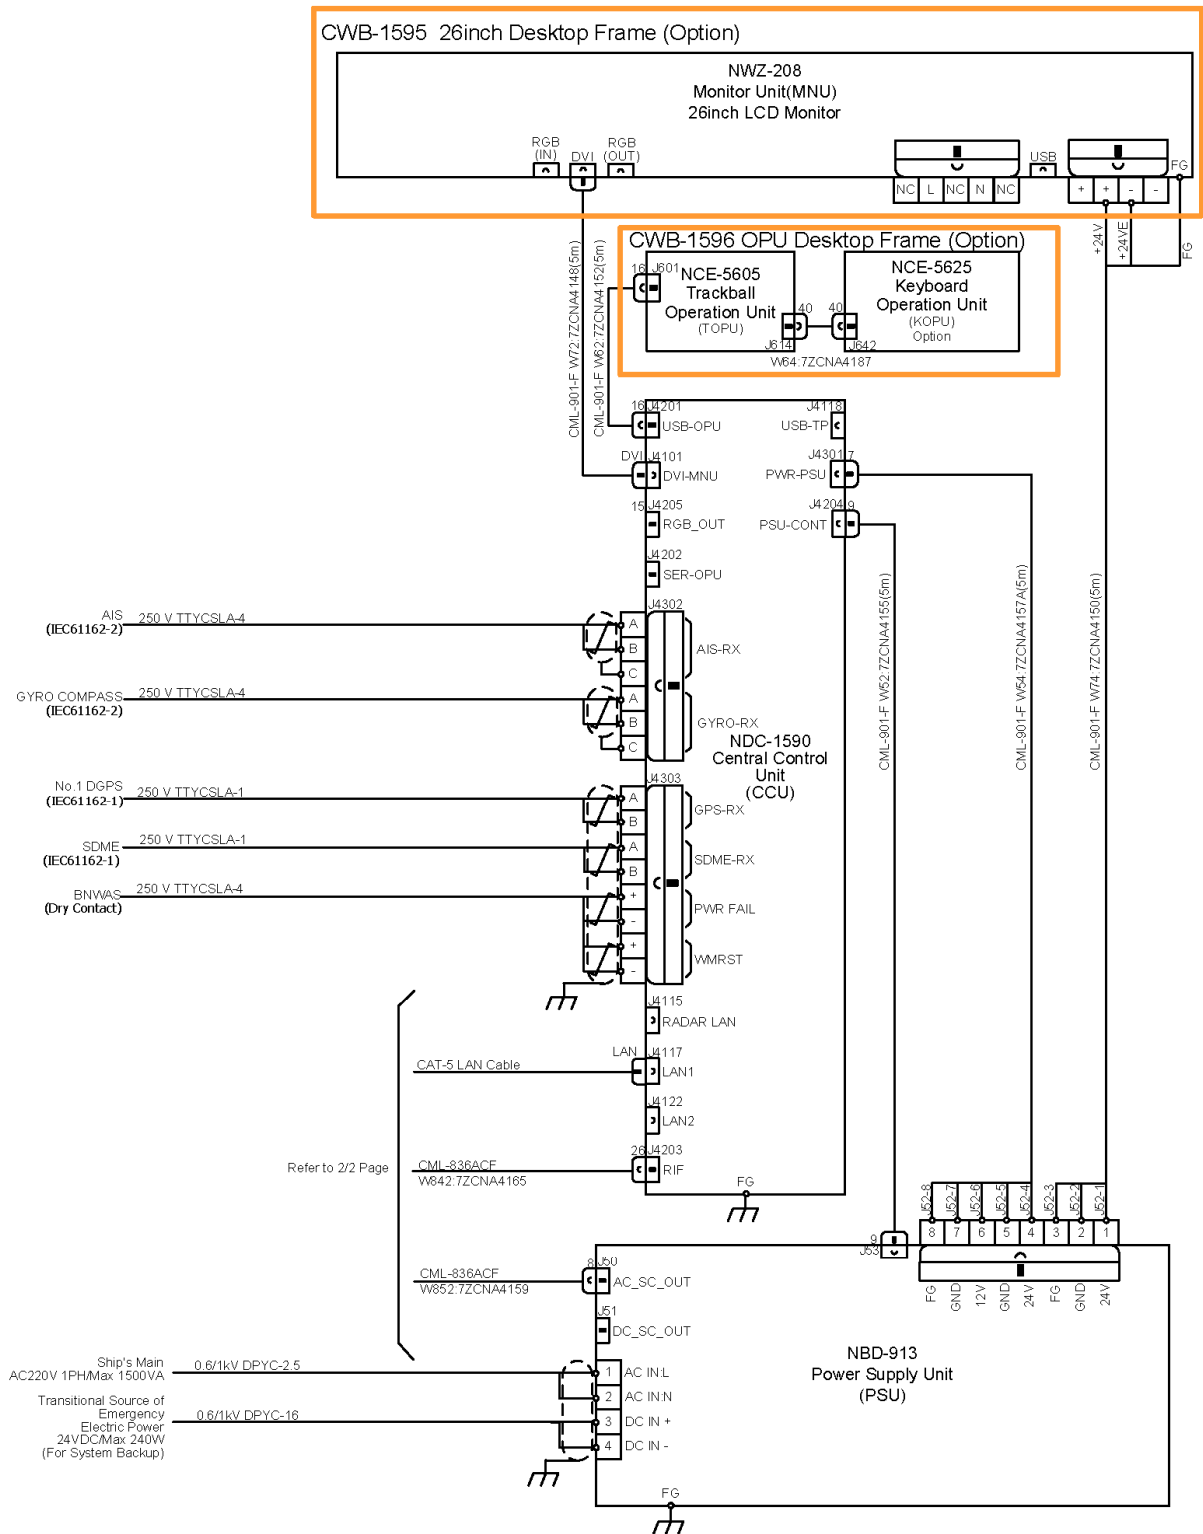

Interconnection Diagram of JMR-9282-S/SH RADAR (1/2)

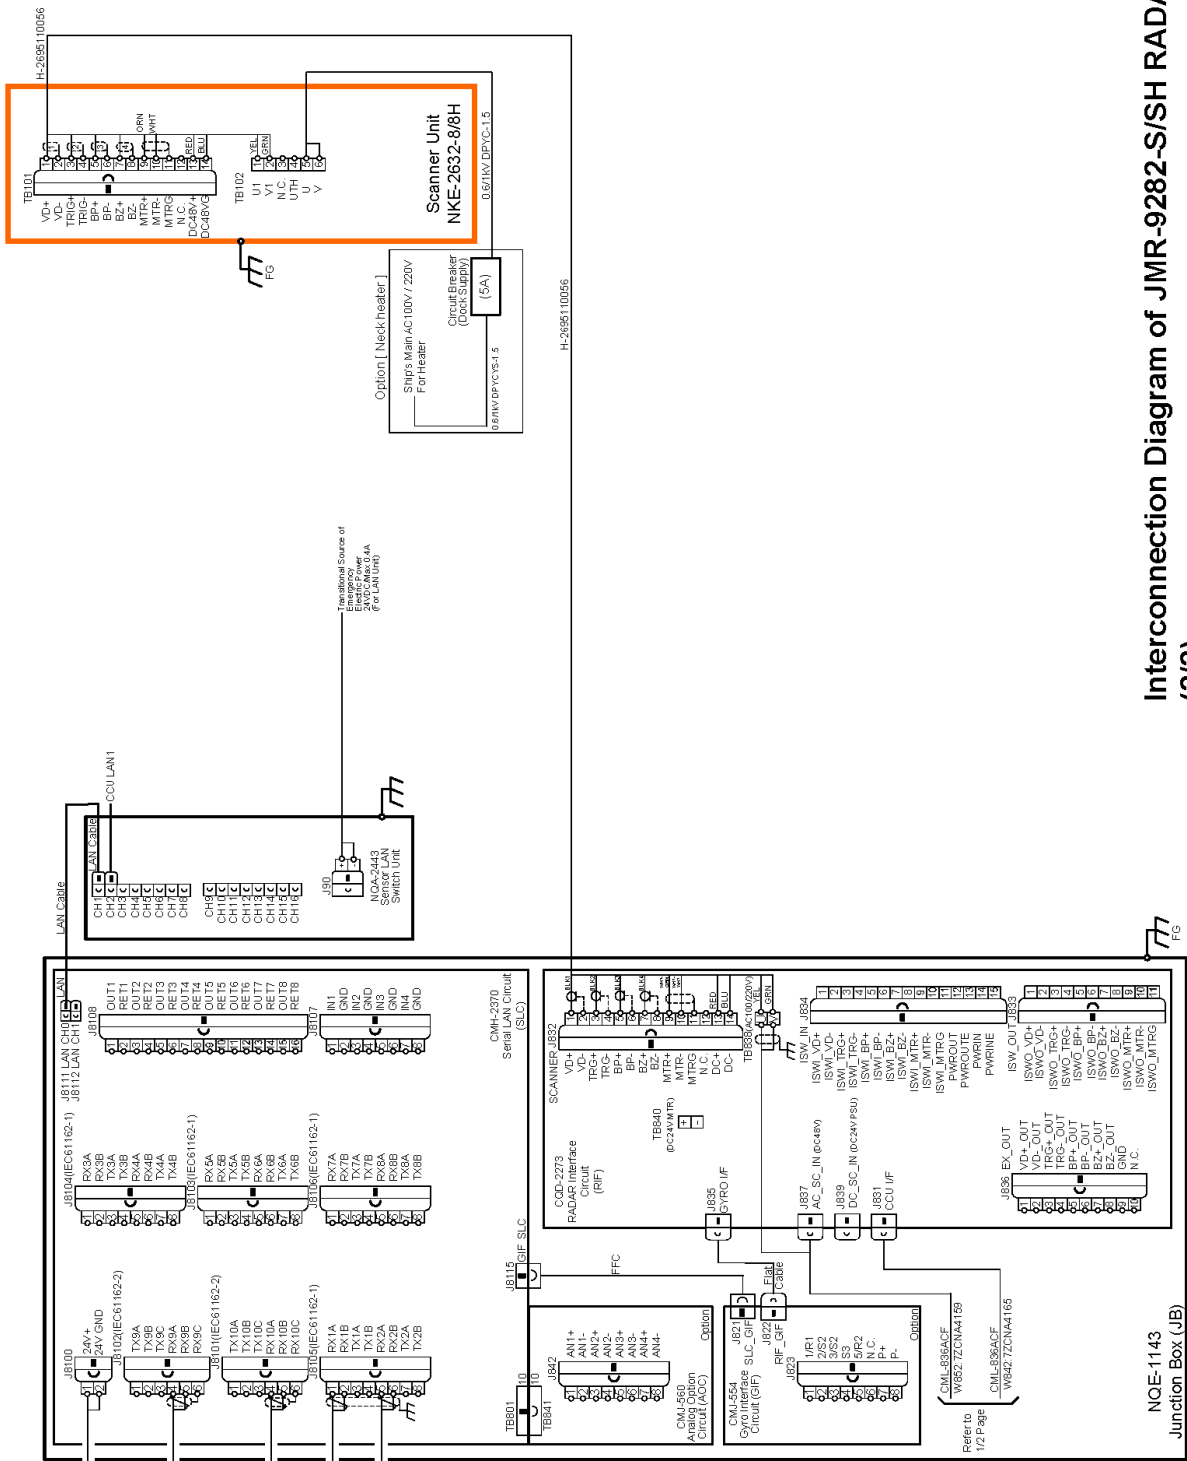


Interconnection Diagram of JMR-9282-S/SH RADAR
(2/2)

8.3.9 JMR-7230-S3 Interconnection Diagrams


Stand alone type

CWA-245 19inch Display Unit Mount Kit

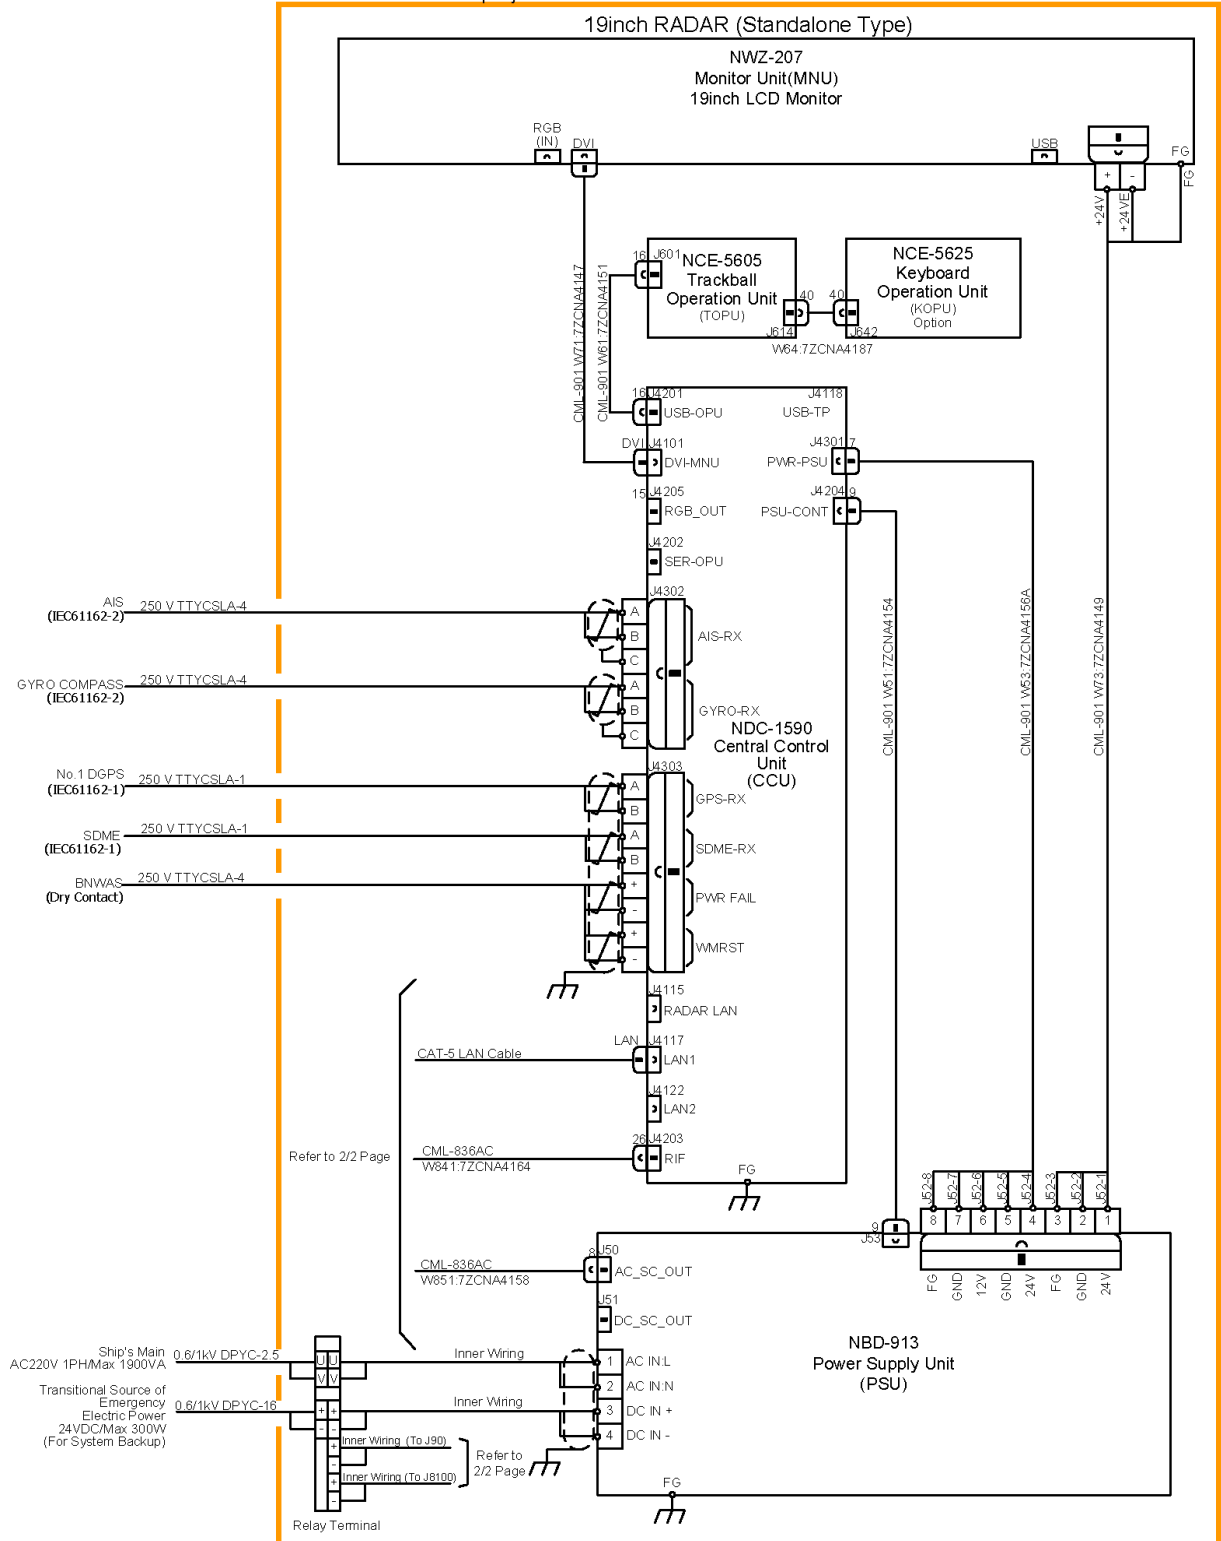


Interconnection Diagram of JMR-7230-S3 RADAR (1/2)

CWA-245 19inch Display Unit Mount Kit

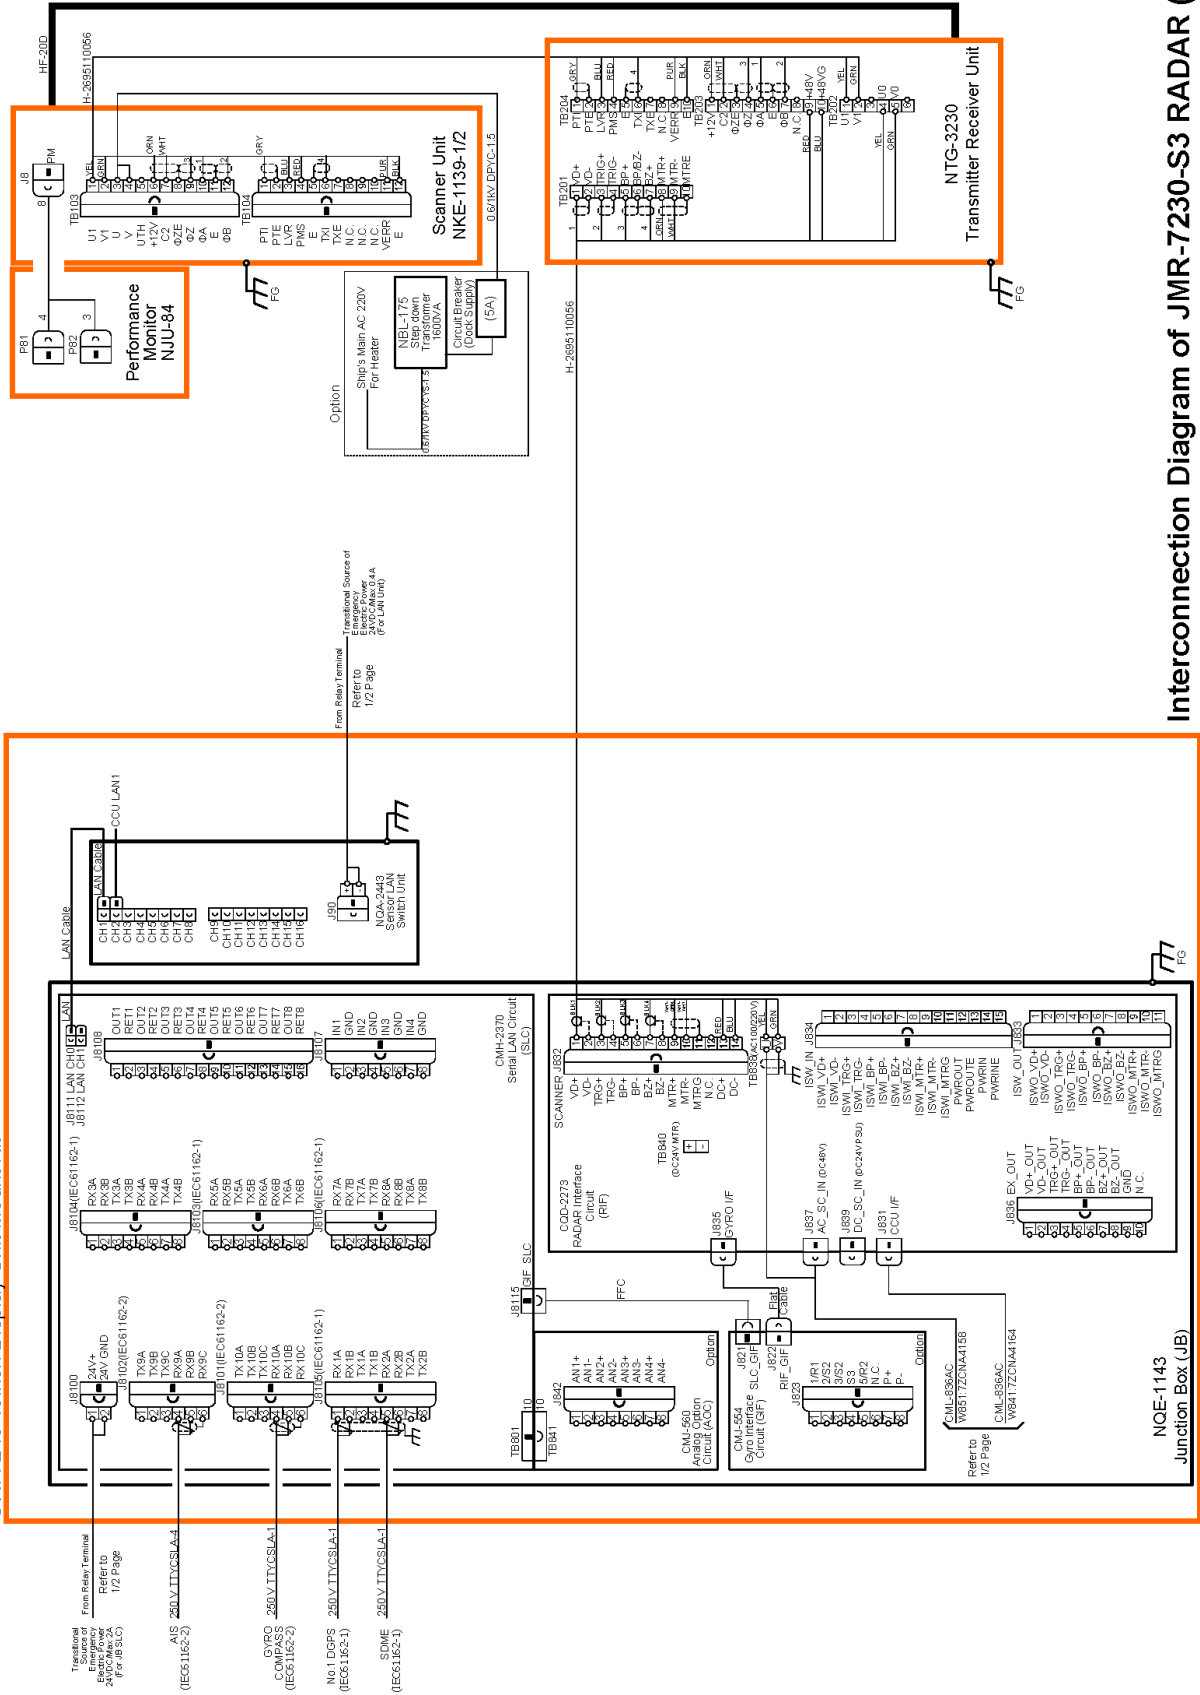


Interconnection Diagram of JMR-7230-S3 RADAR (2/2)

Desktop type

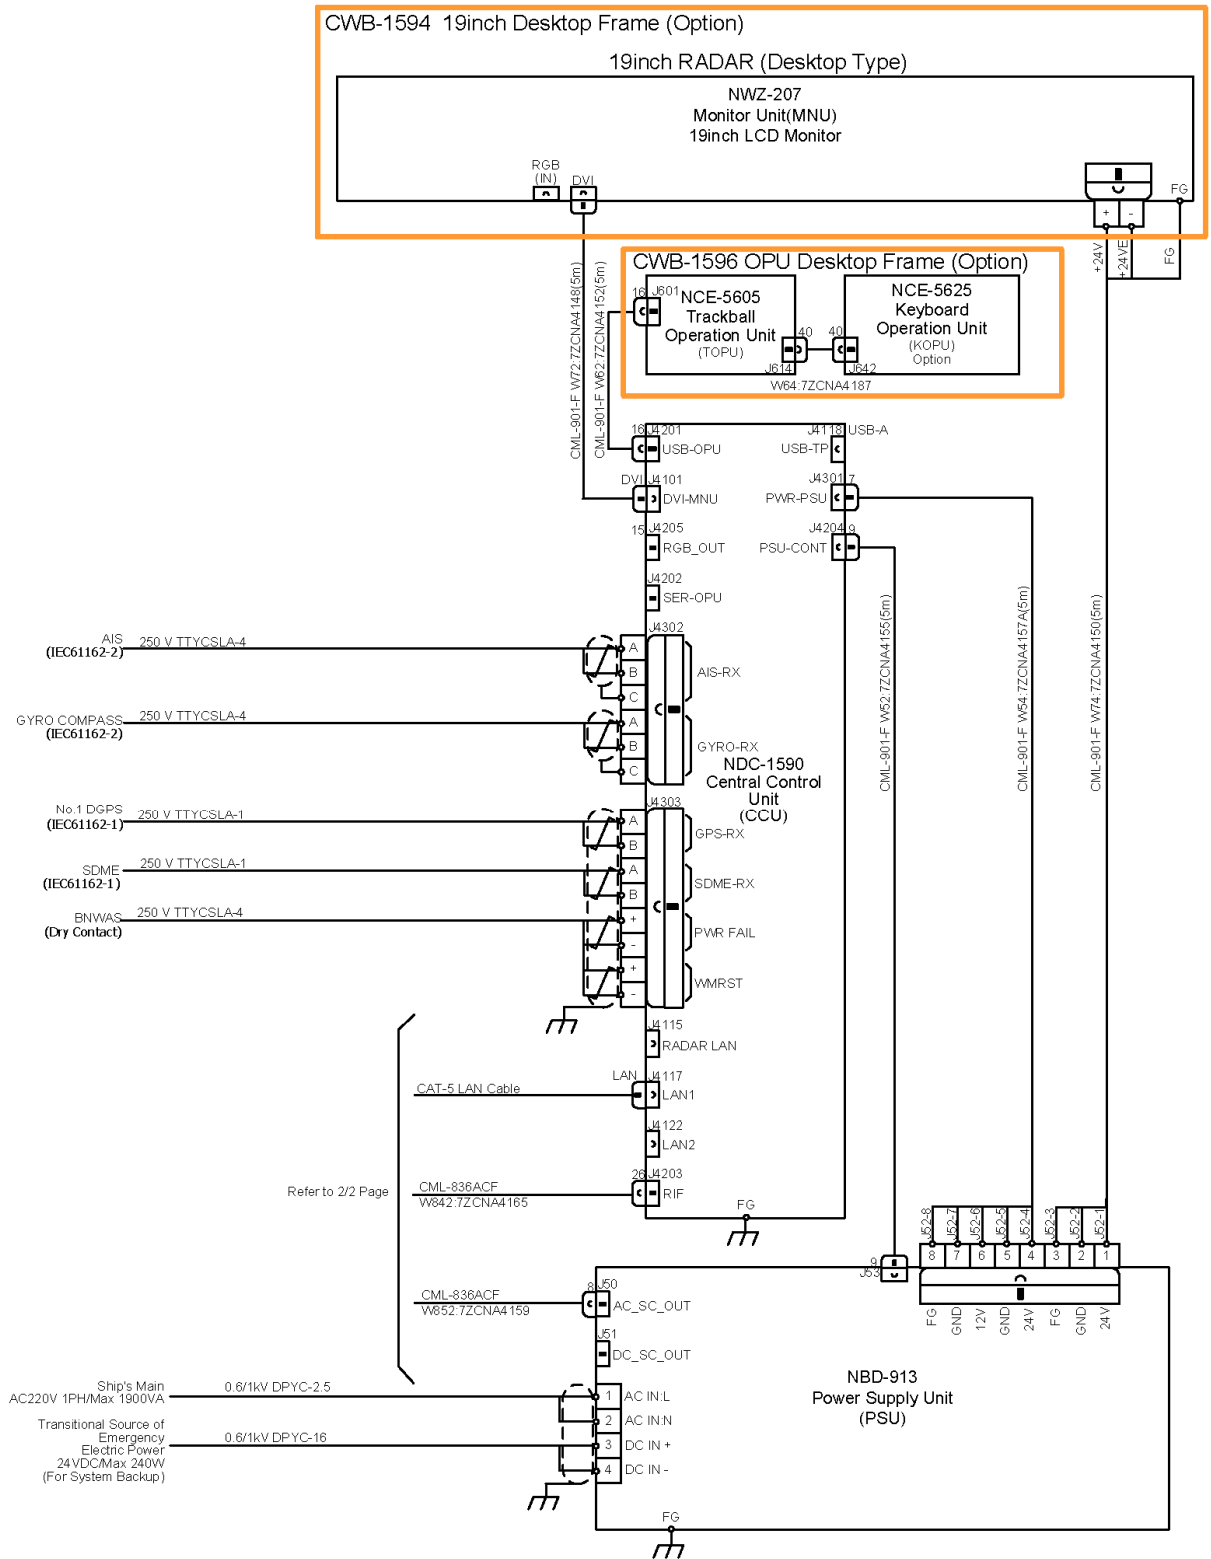

Interconnection Diagram of JMR-7230-S3 RADAR (1/2)

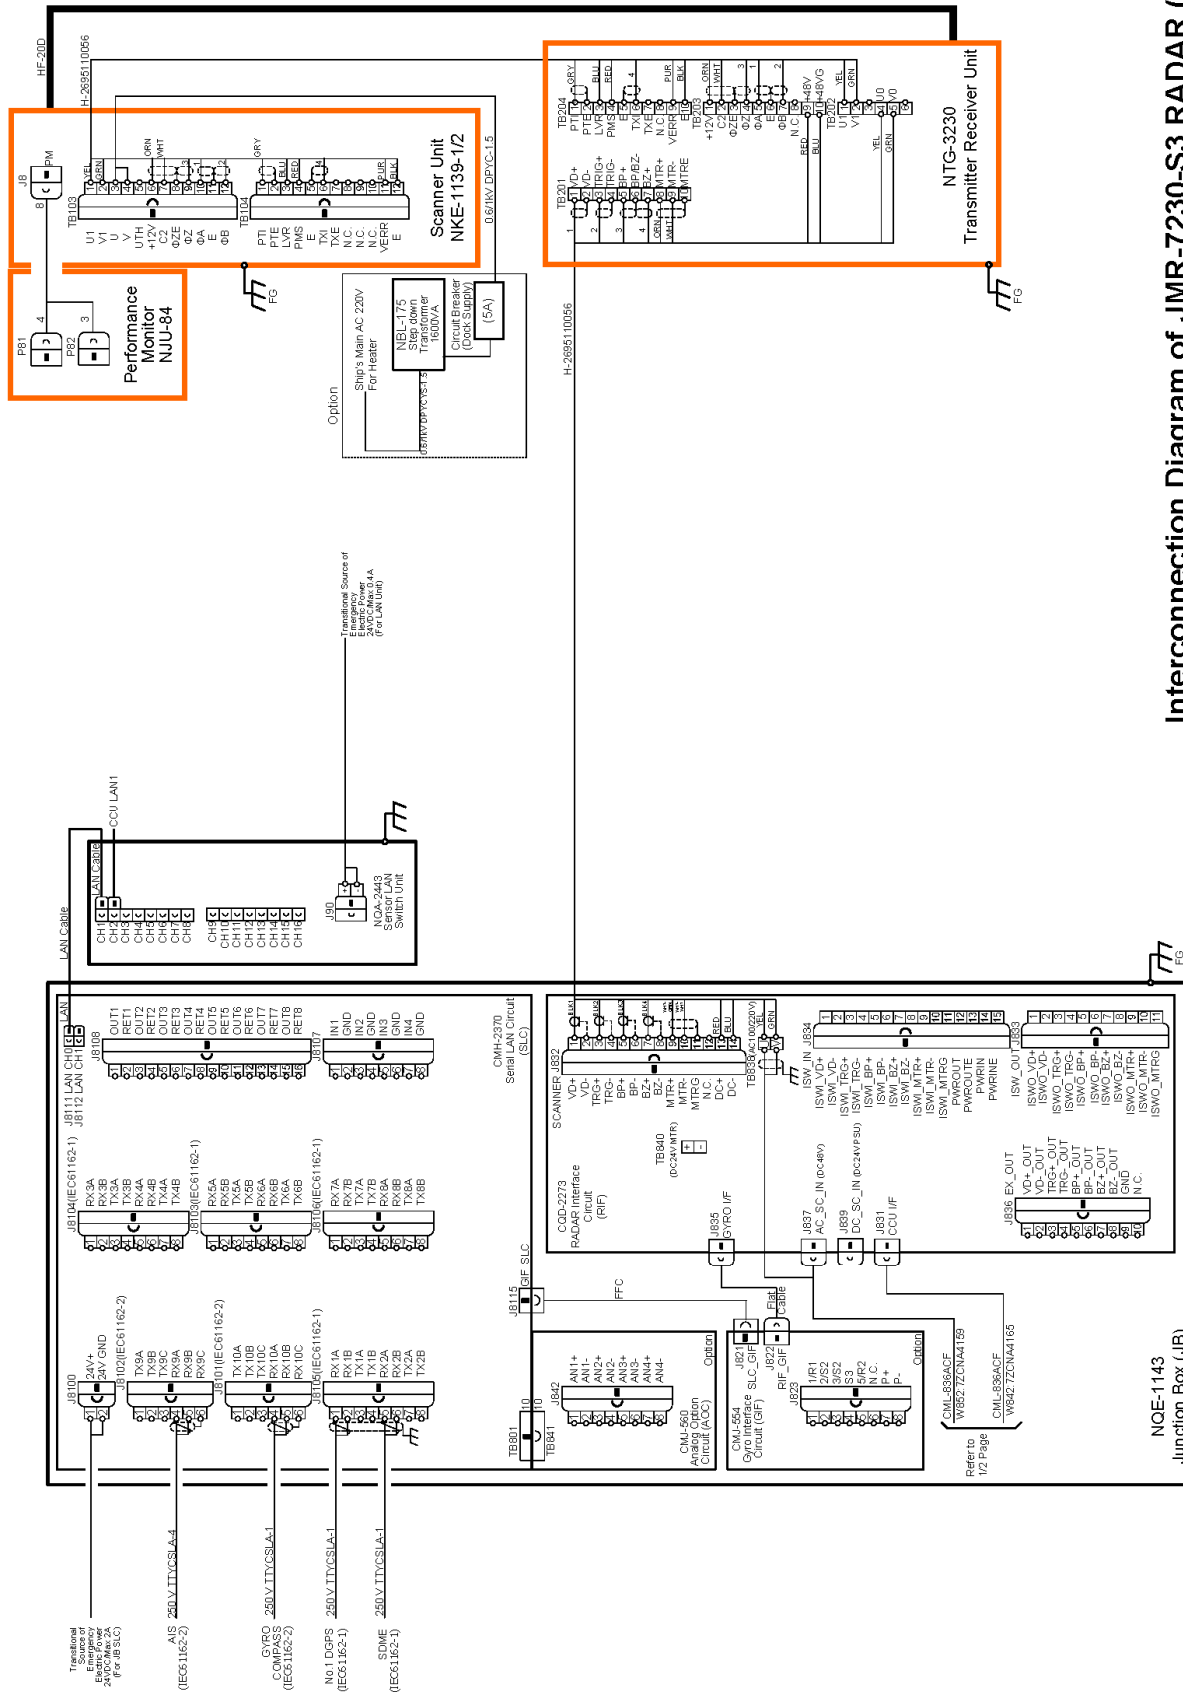


Interconnection Diagram of JMR-7230-S3 RADAR (212)

8.3.10 JMR-7230-S Interconnection Diagrams


Stand alone type

CWA-245 19inch Display Unit Mount Kit

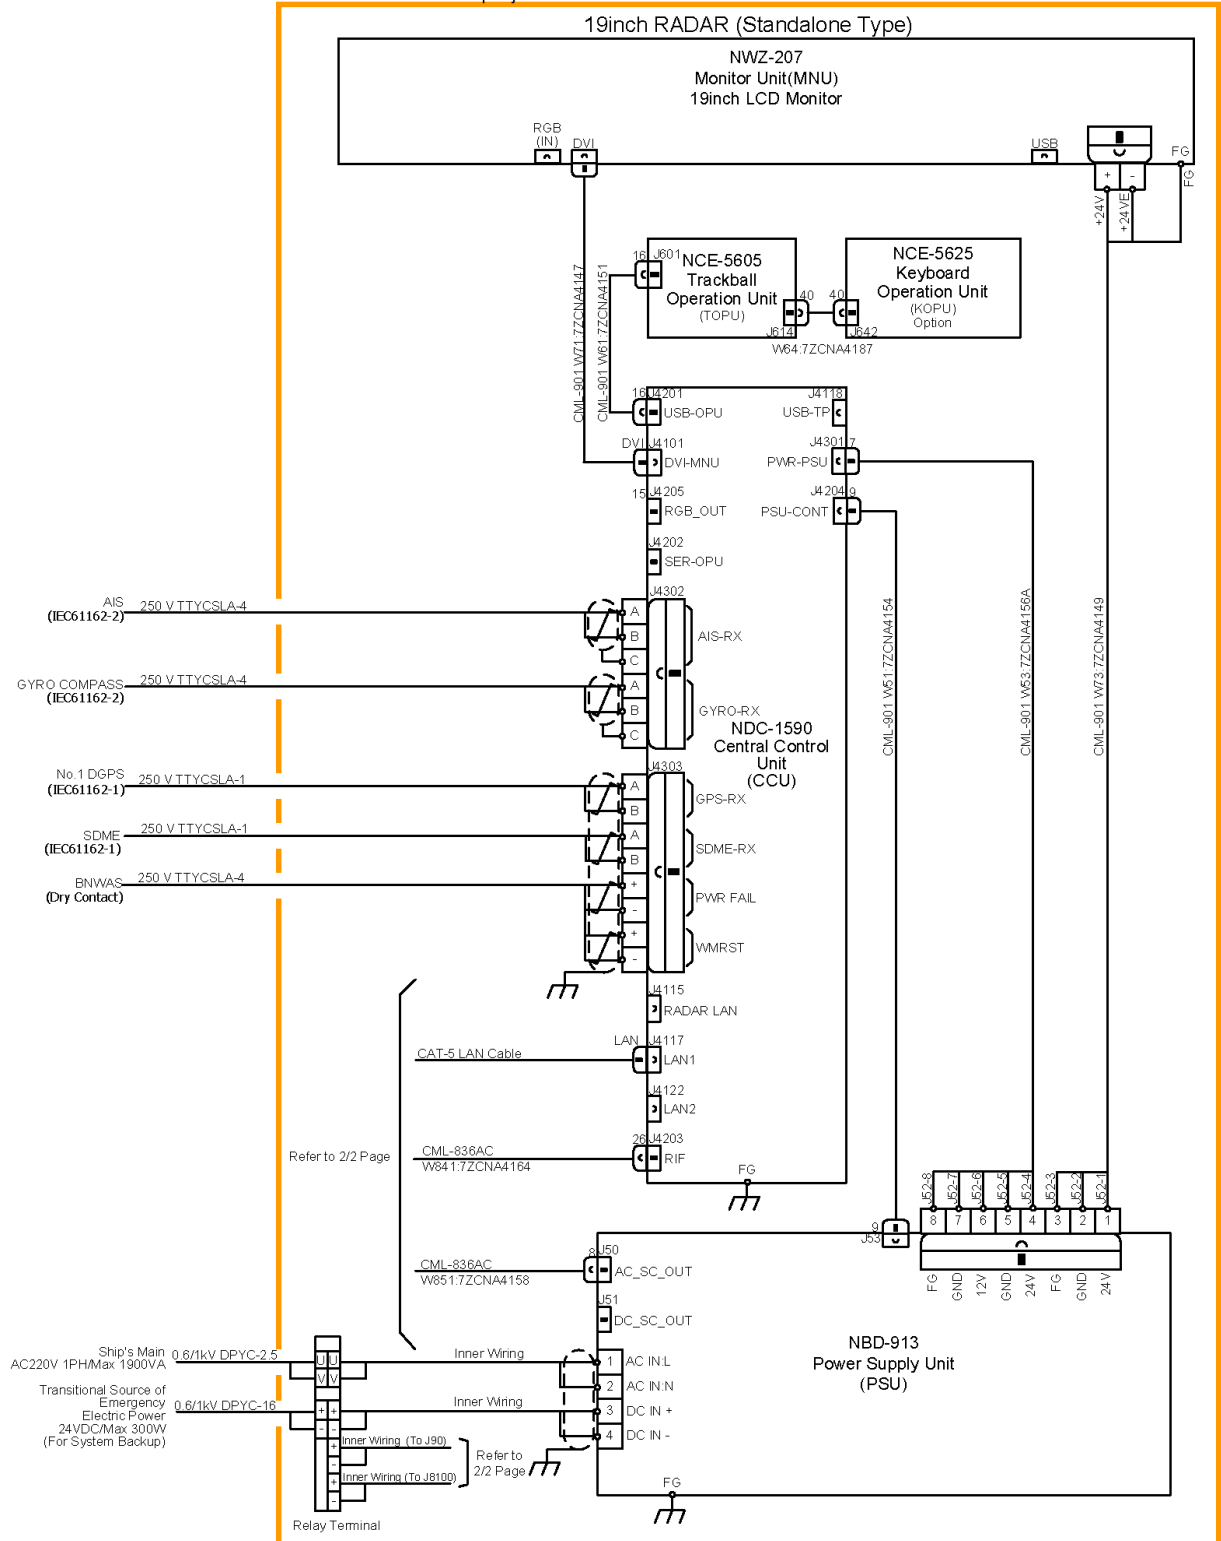


Interconnection Diagram of JMR-7230-S RADAR (1/2)

CWA-245 19inch Display Unit Mount Kit

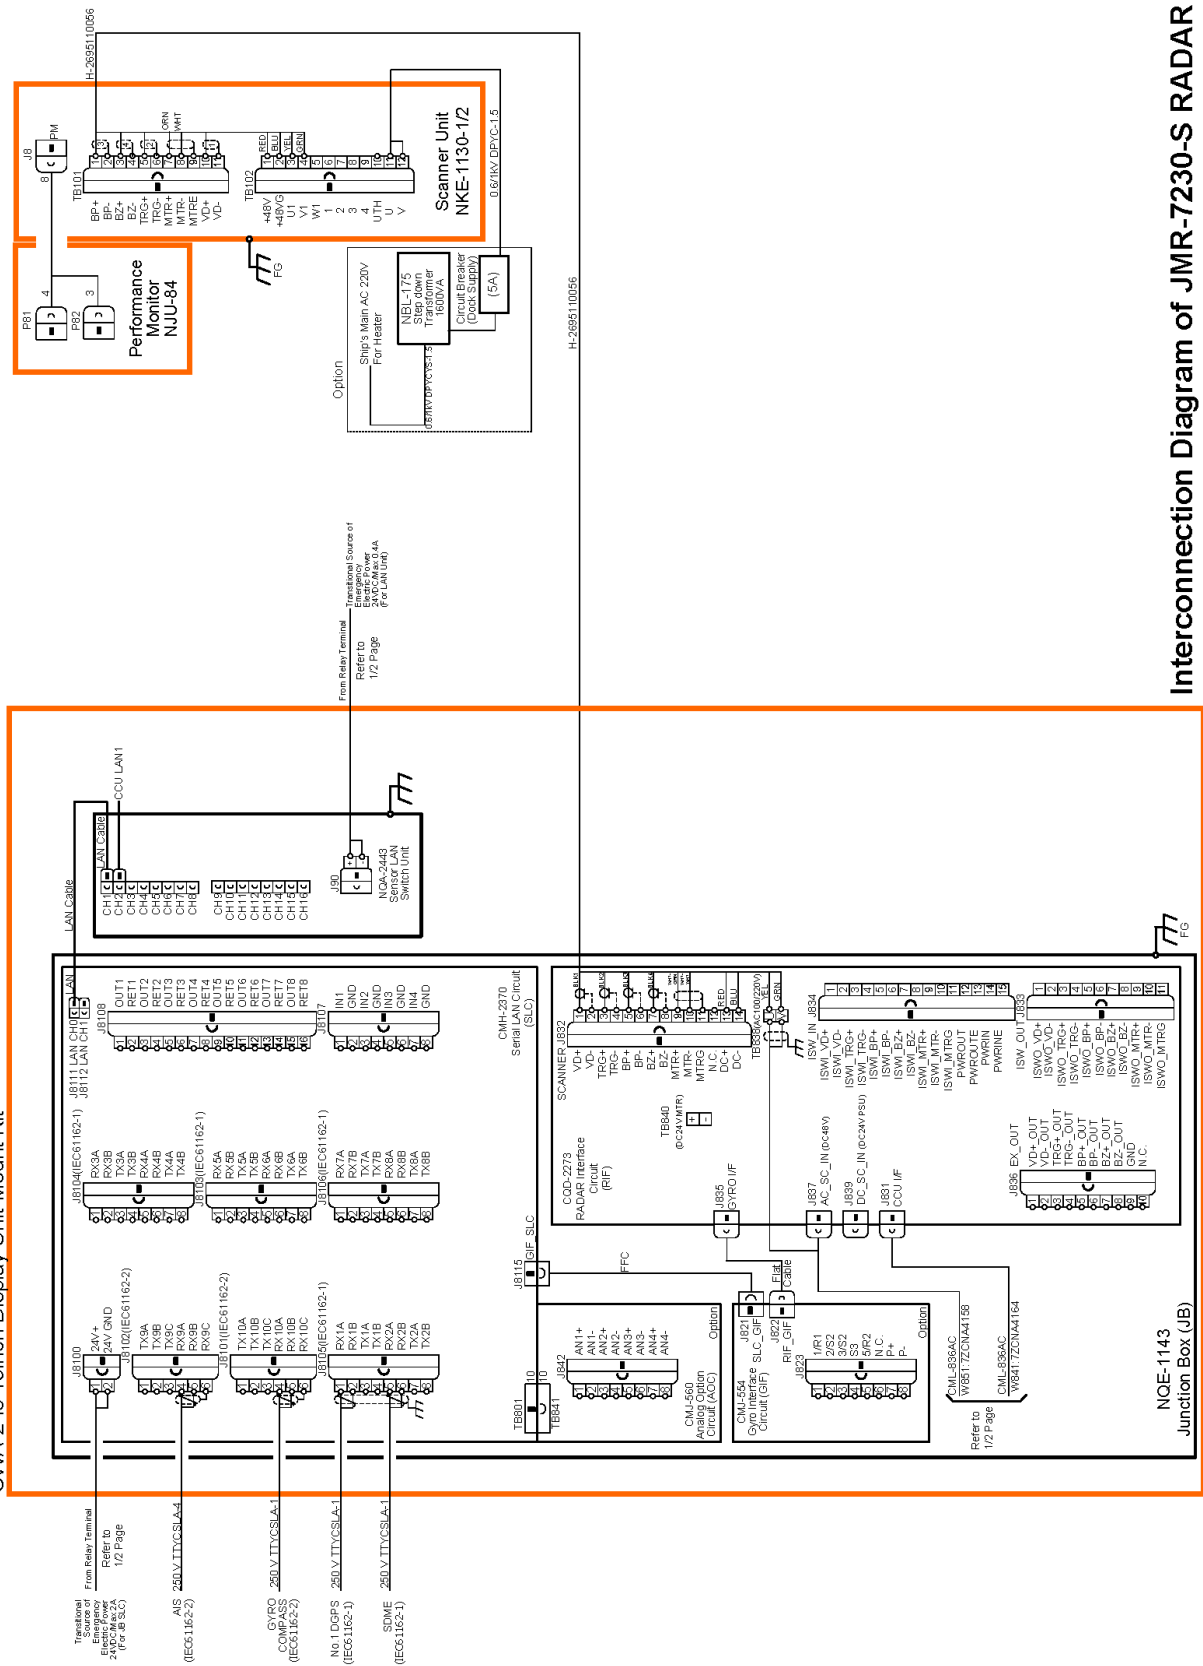

Interconnection Diagram of JMR-7230-S RADAR (2/2)

Desktop type

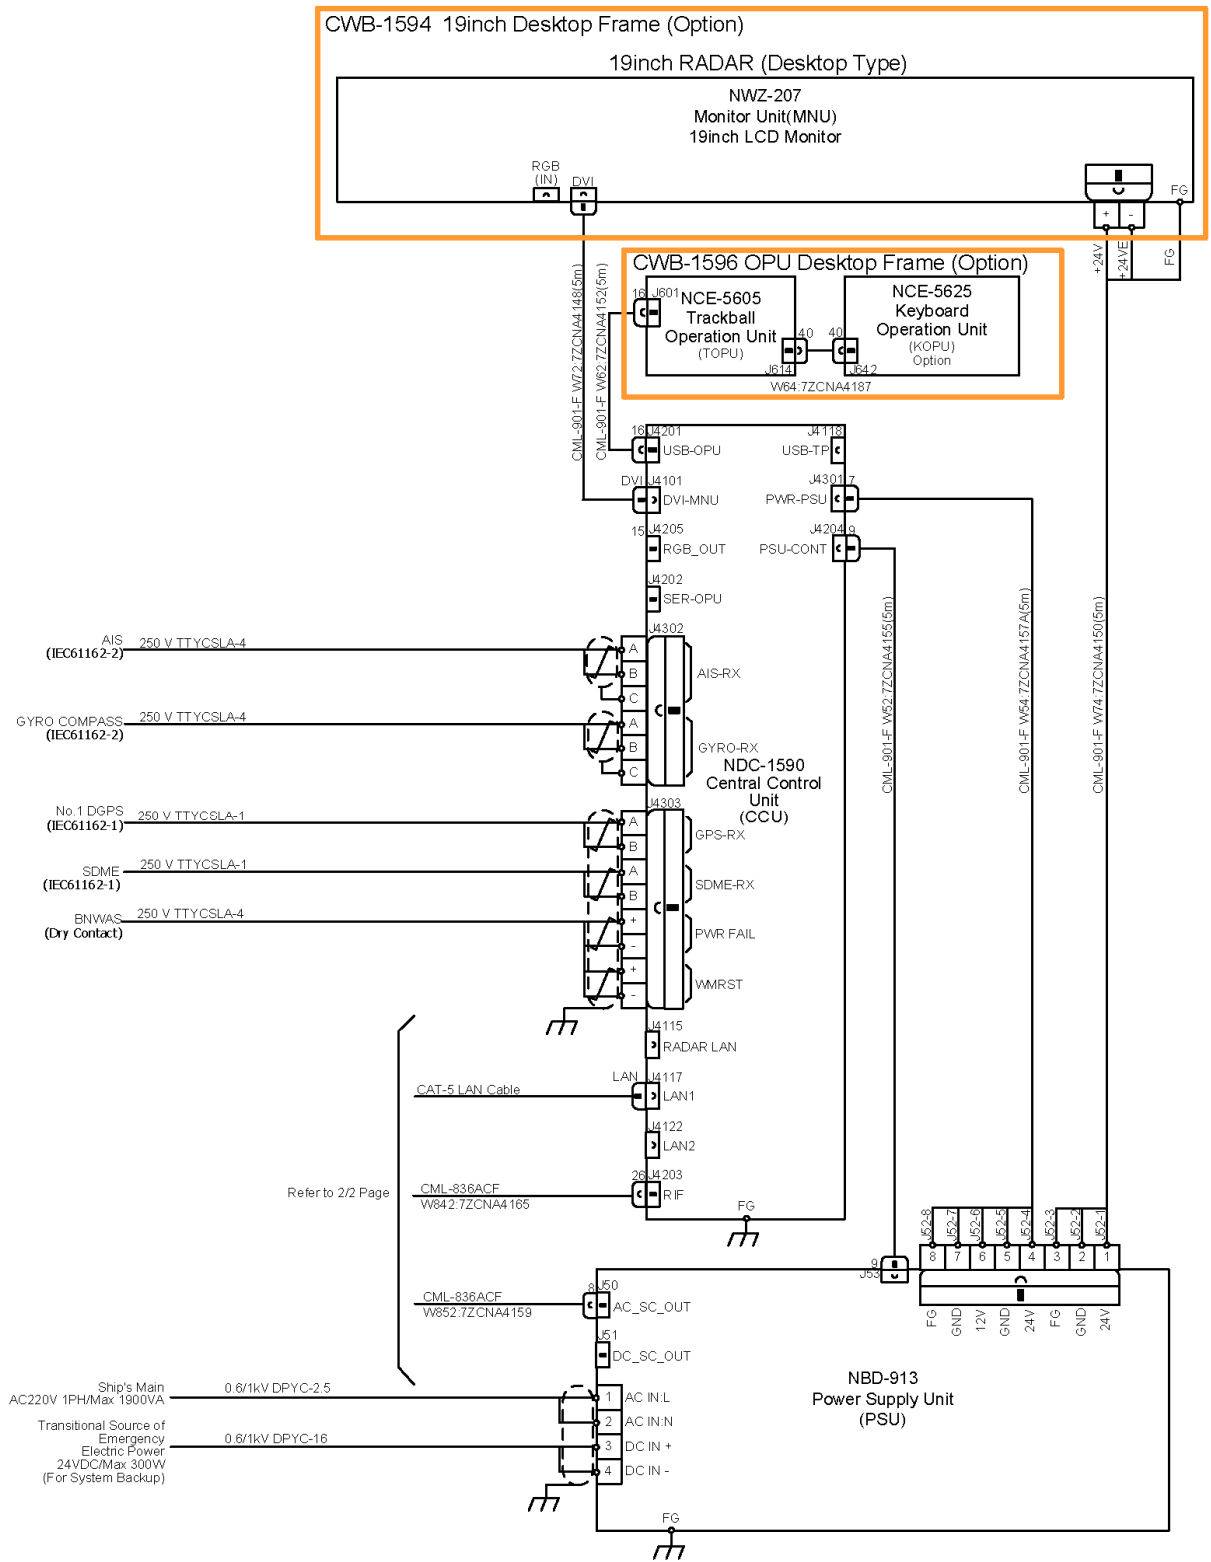


Interconnection Diagram of JMR-7230-S RADAR (1/2)

8.3.11 JMR-7225-7X3/9X3 Interconnection Diagrams


Stand alone type

CWA-245 19inch Display Unit Mount Kit

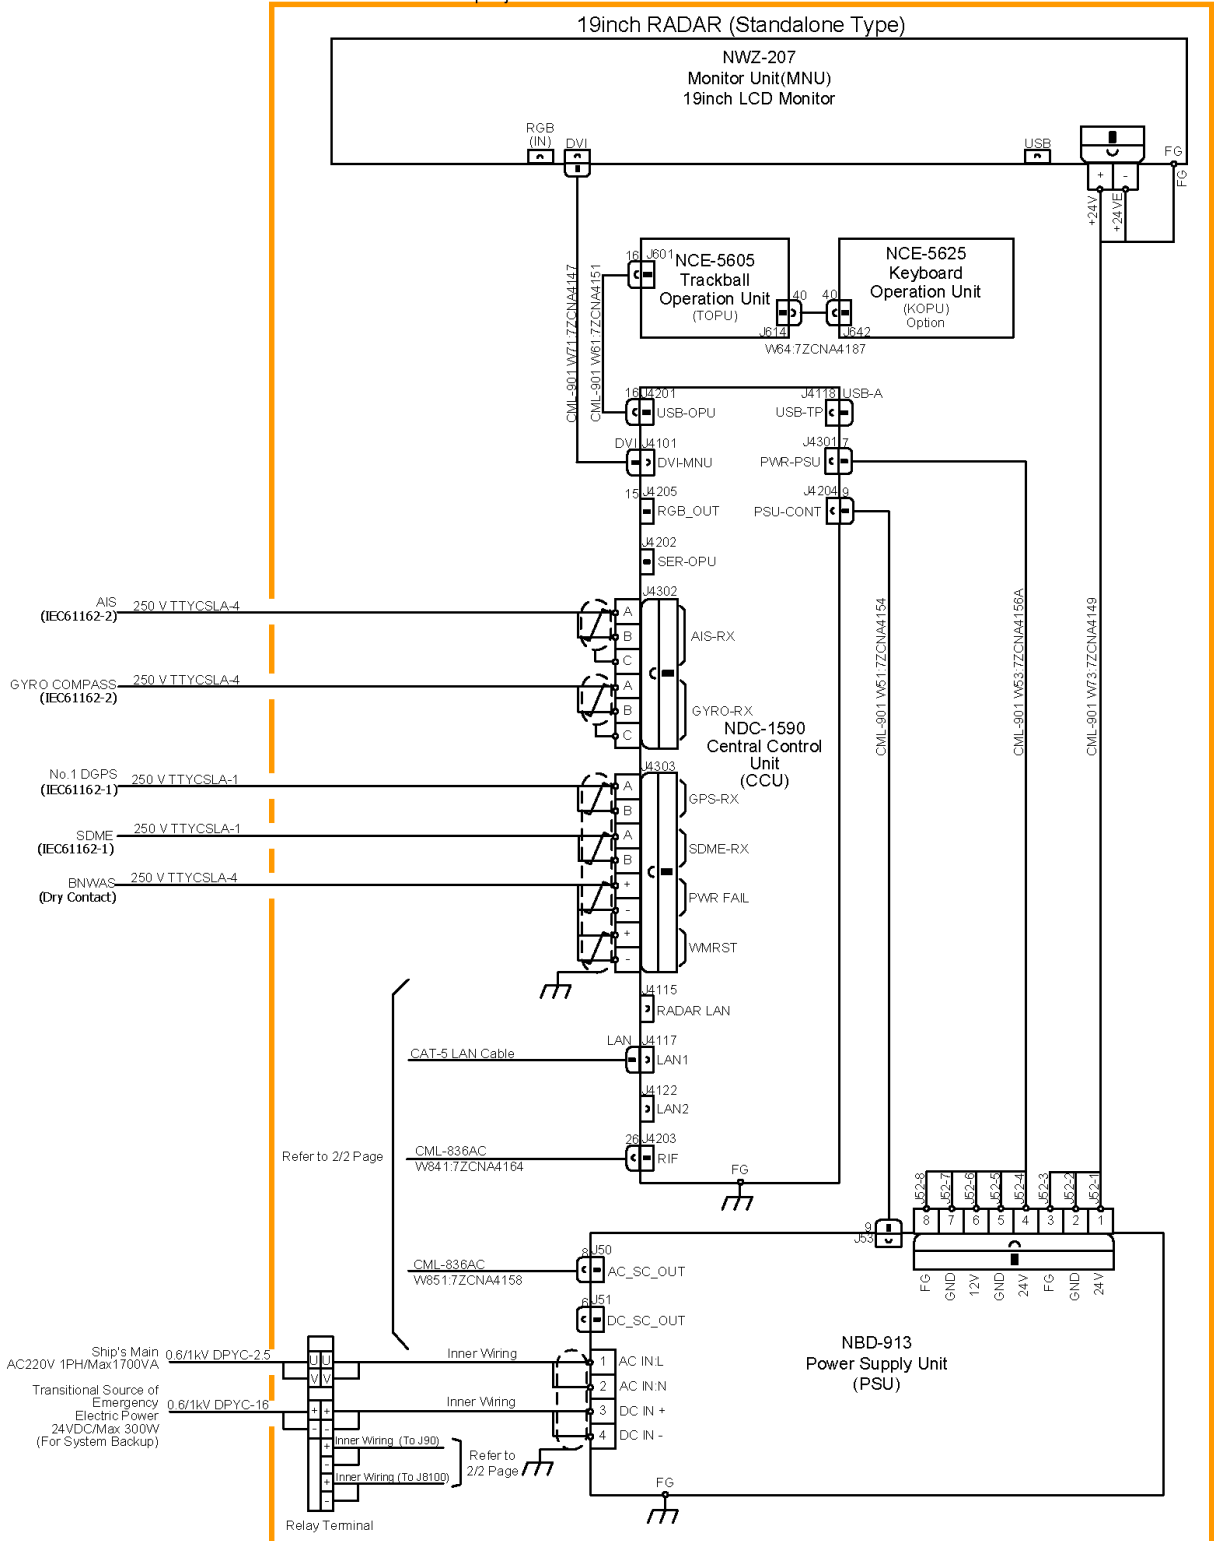


Interconnection Diagram of JMR-7225-7X3/9X3 RADAR (1/2)

CWA-245 19inch Display Unit Mount Kit

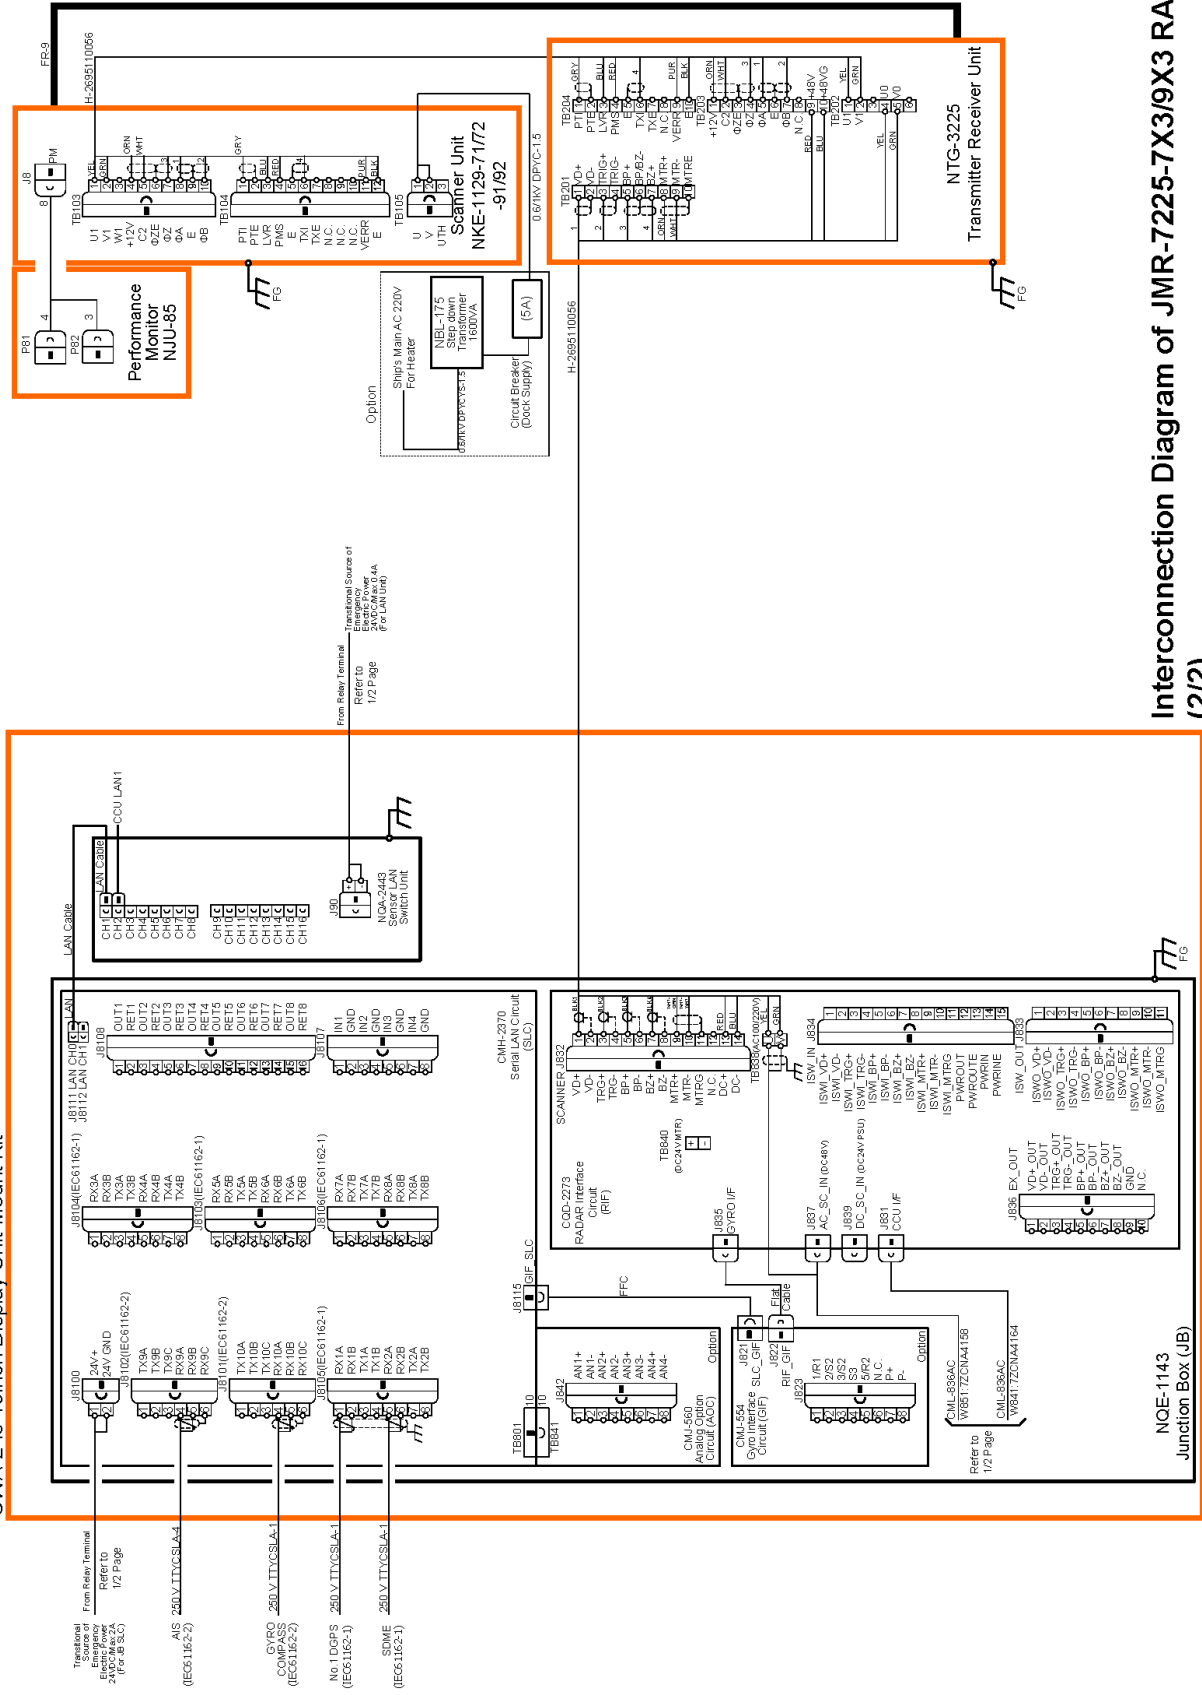


Interconnection Diagram of JMR-7225-7X319X3 RADAR (2/2)

Desktop type

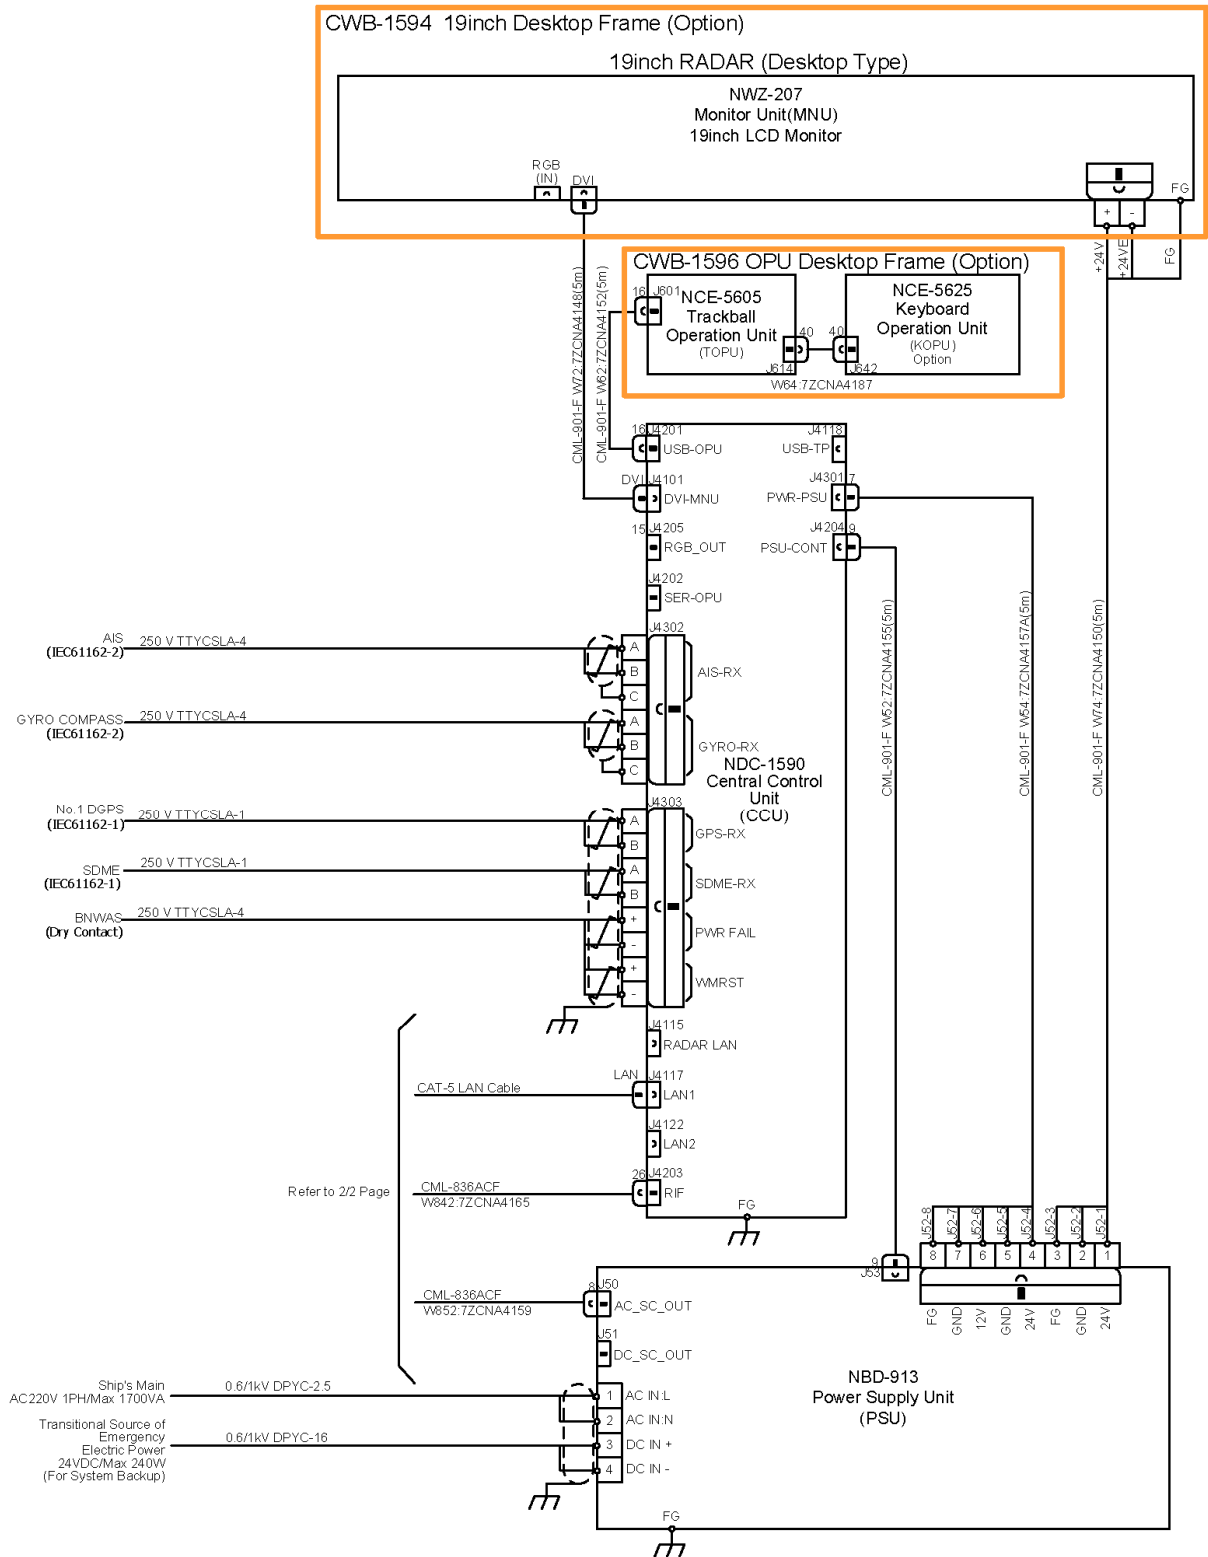


Interconnection Diagram of JMR-7225-7X3/9X3 RADAR (1/2)

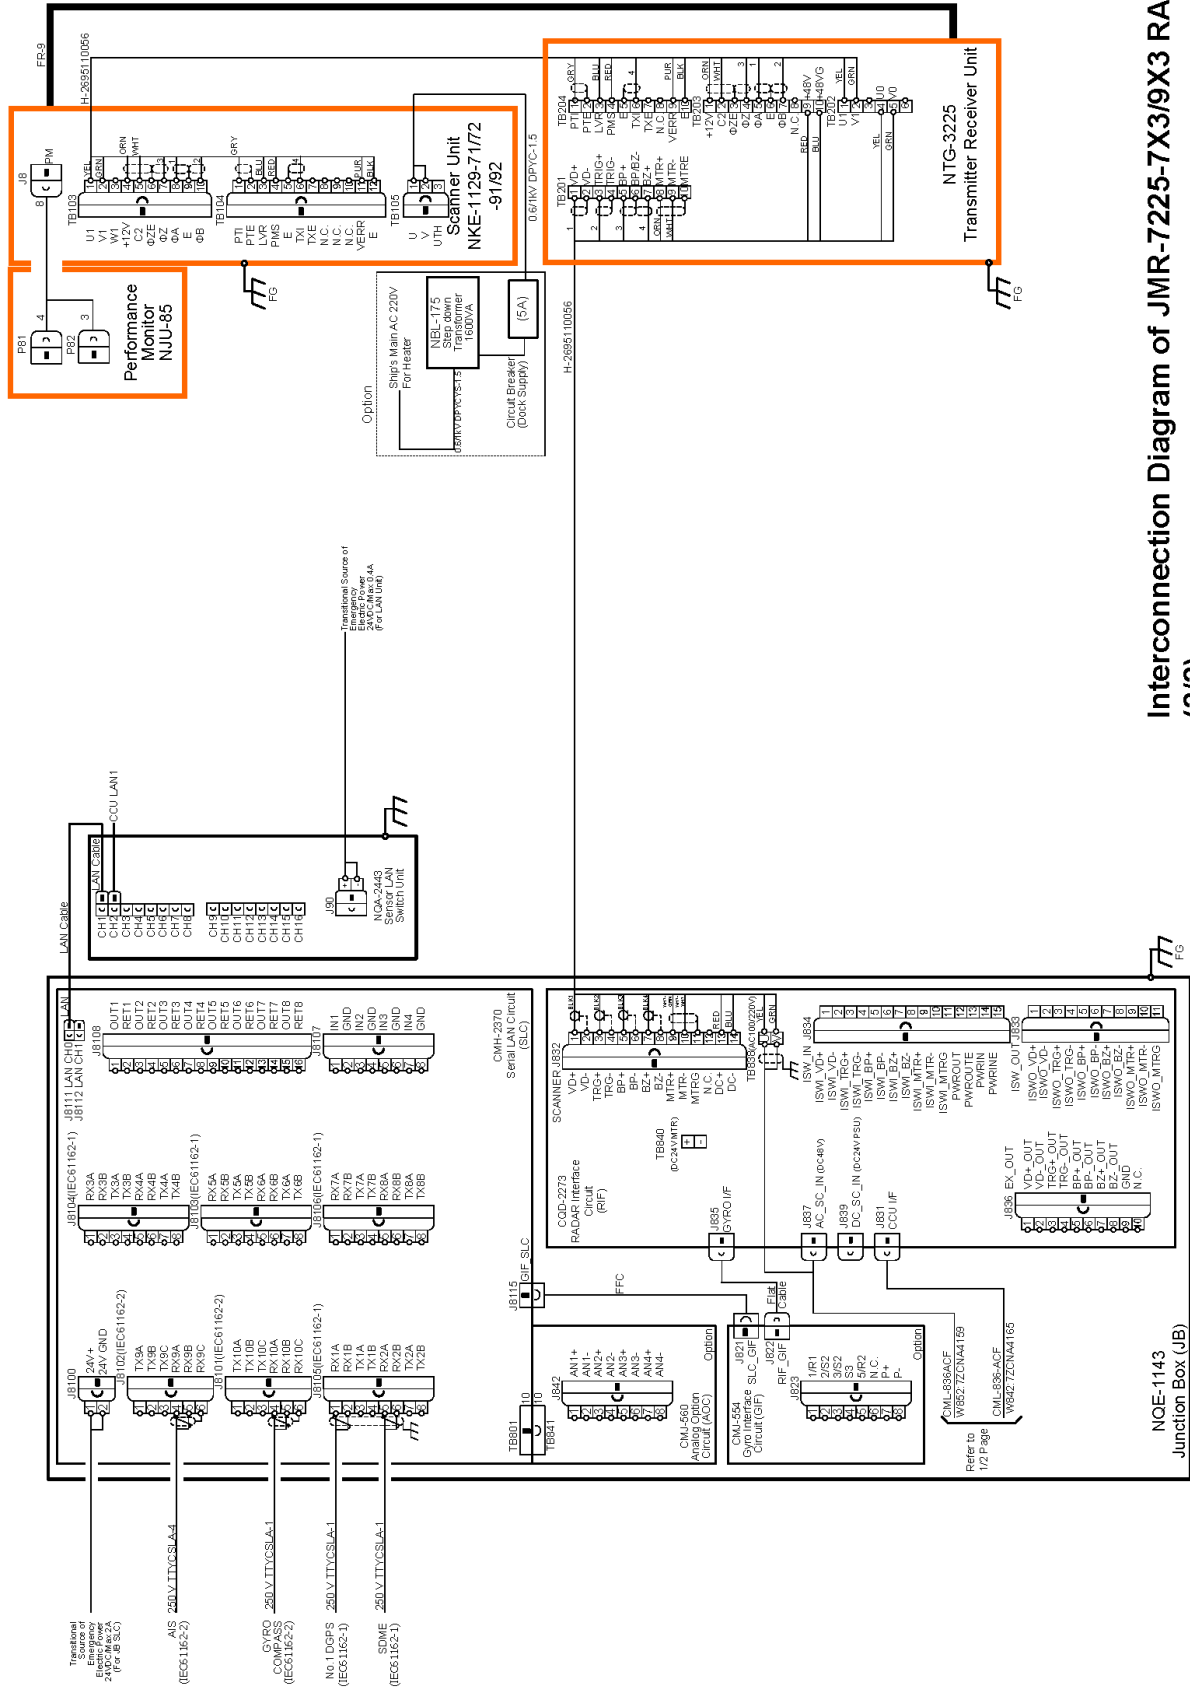

Interconnection Diagram of JMR-7225-7X3/9X3 RADAR (2/2)


8.3.12 JMR-7225-6X/9X Interconnection Diagrams

Stand alone type

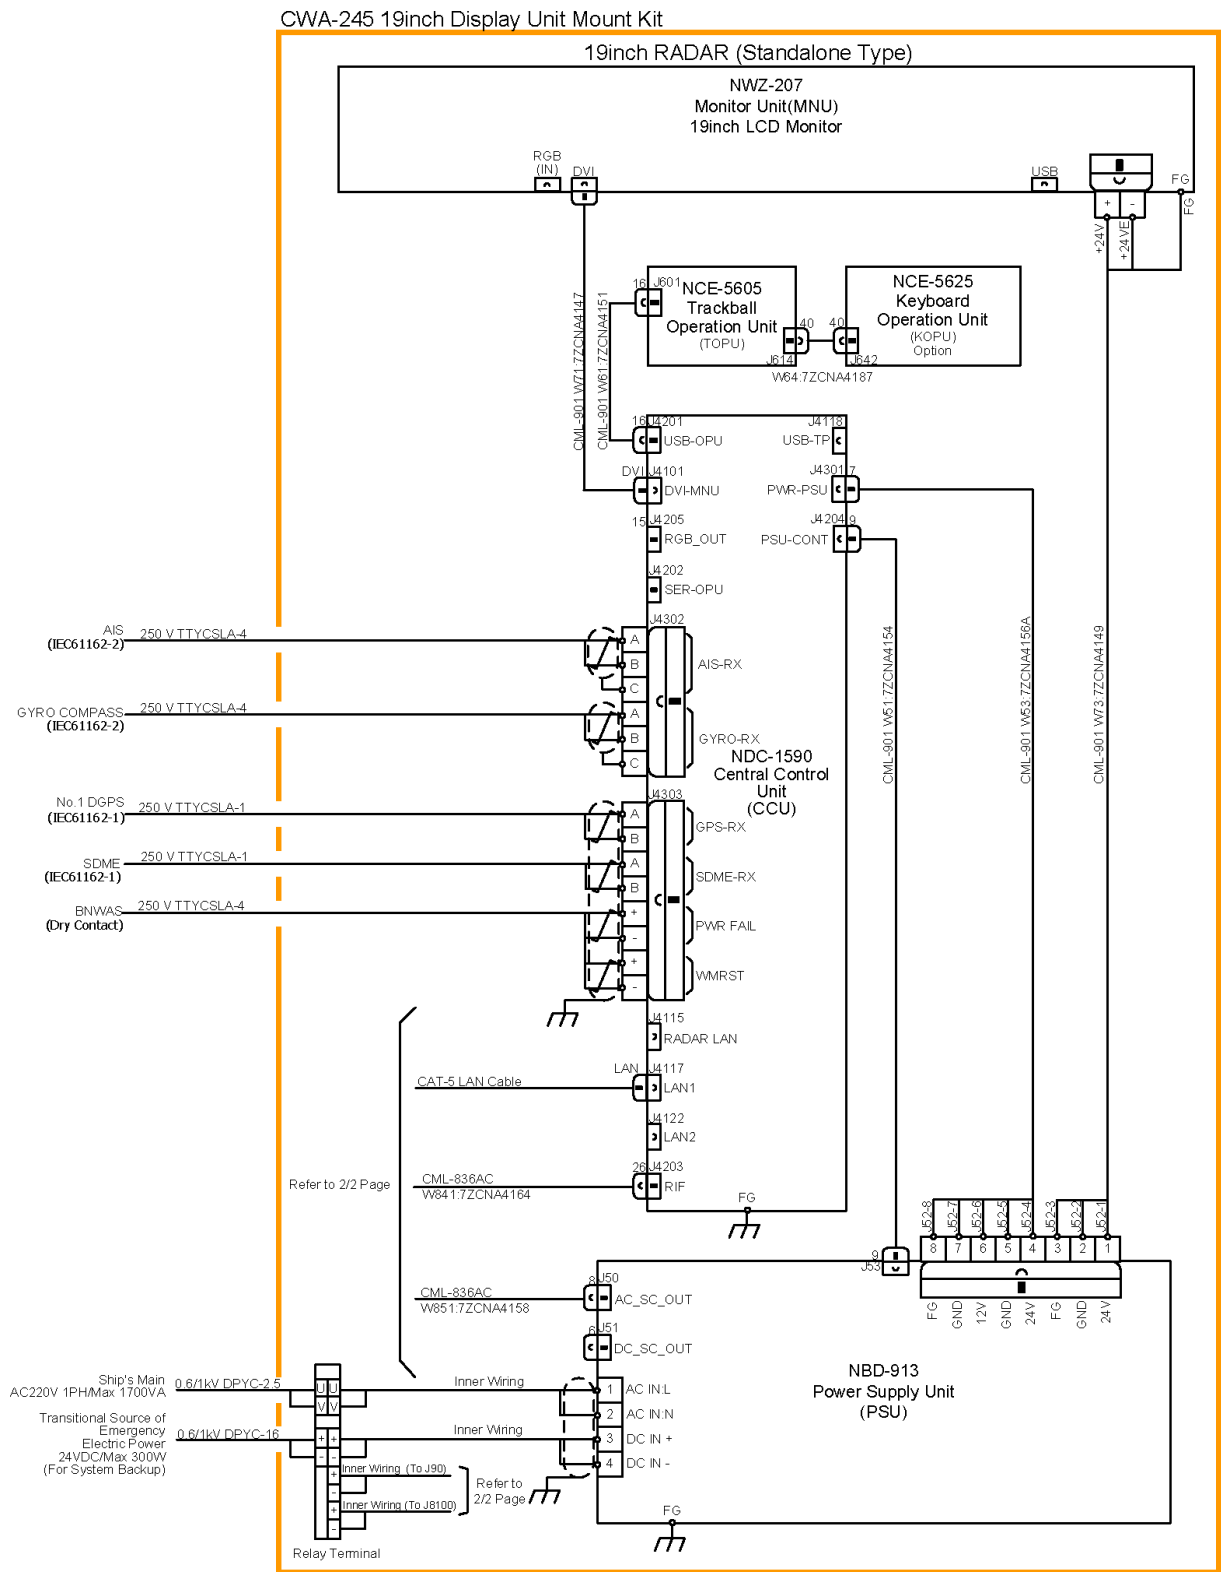


Interconnection Diagram of JMR-7225-6X/9X RADAR (2/2)

CWA-245 19inch Display Unit Mount Kit

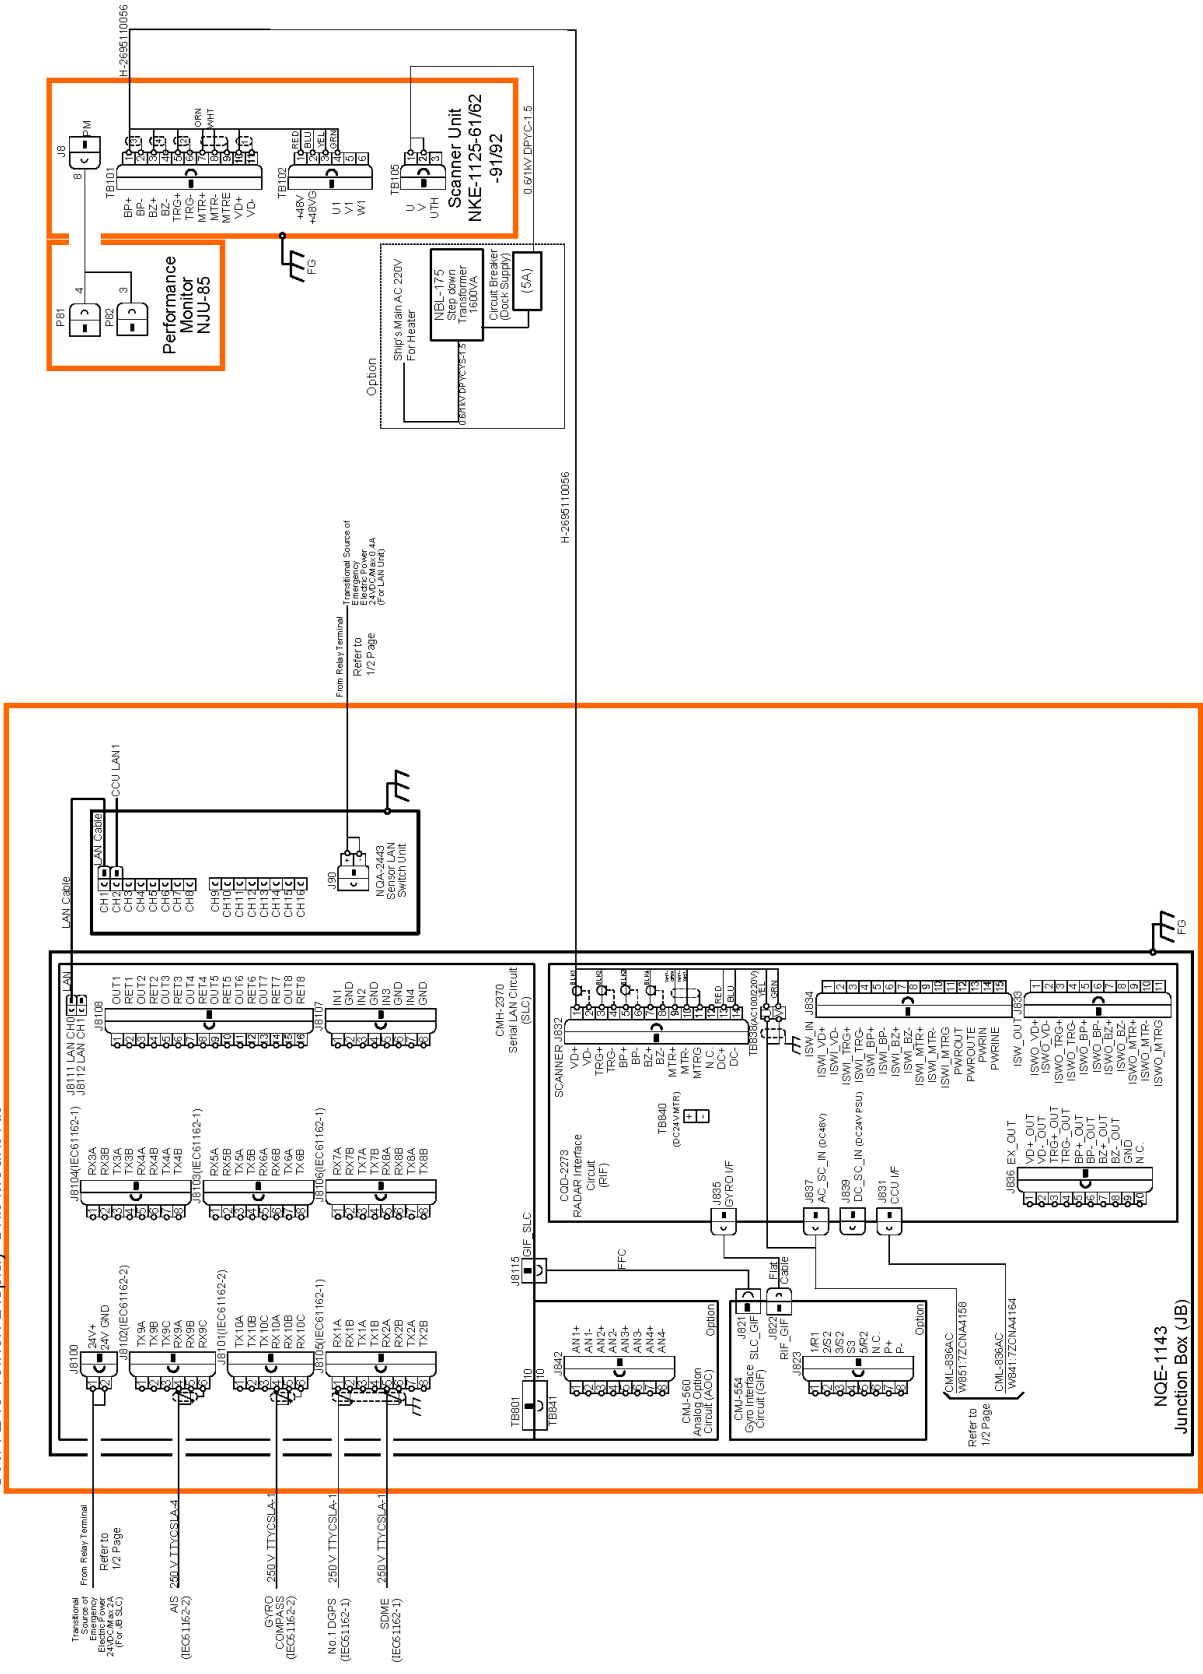

Interconnection Diagram of JMR-7225-6X/9X RADAR (2/2)

Desktop type

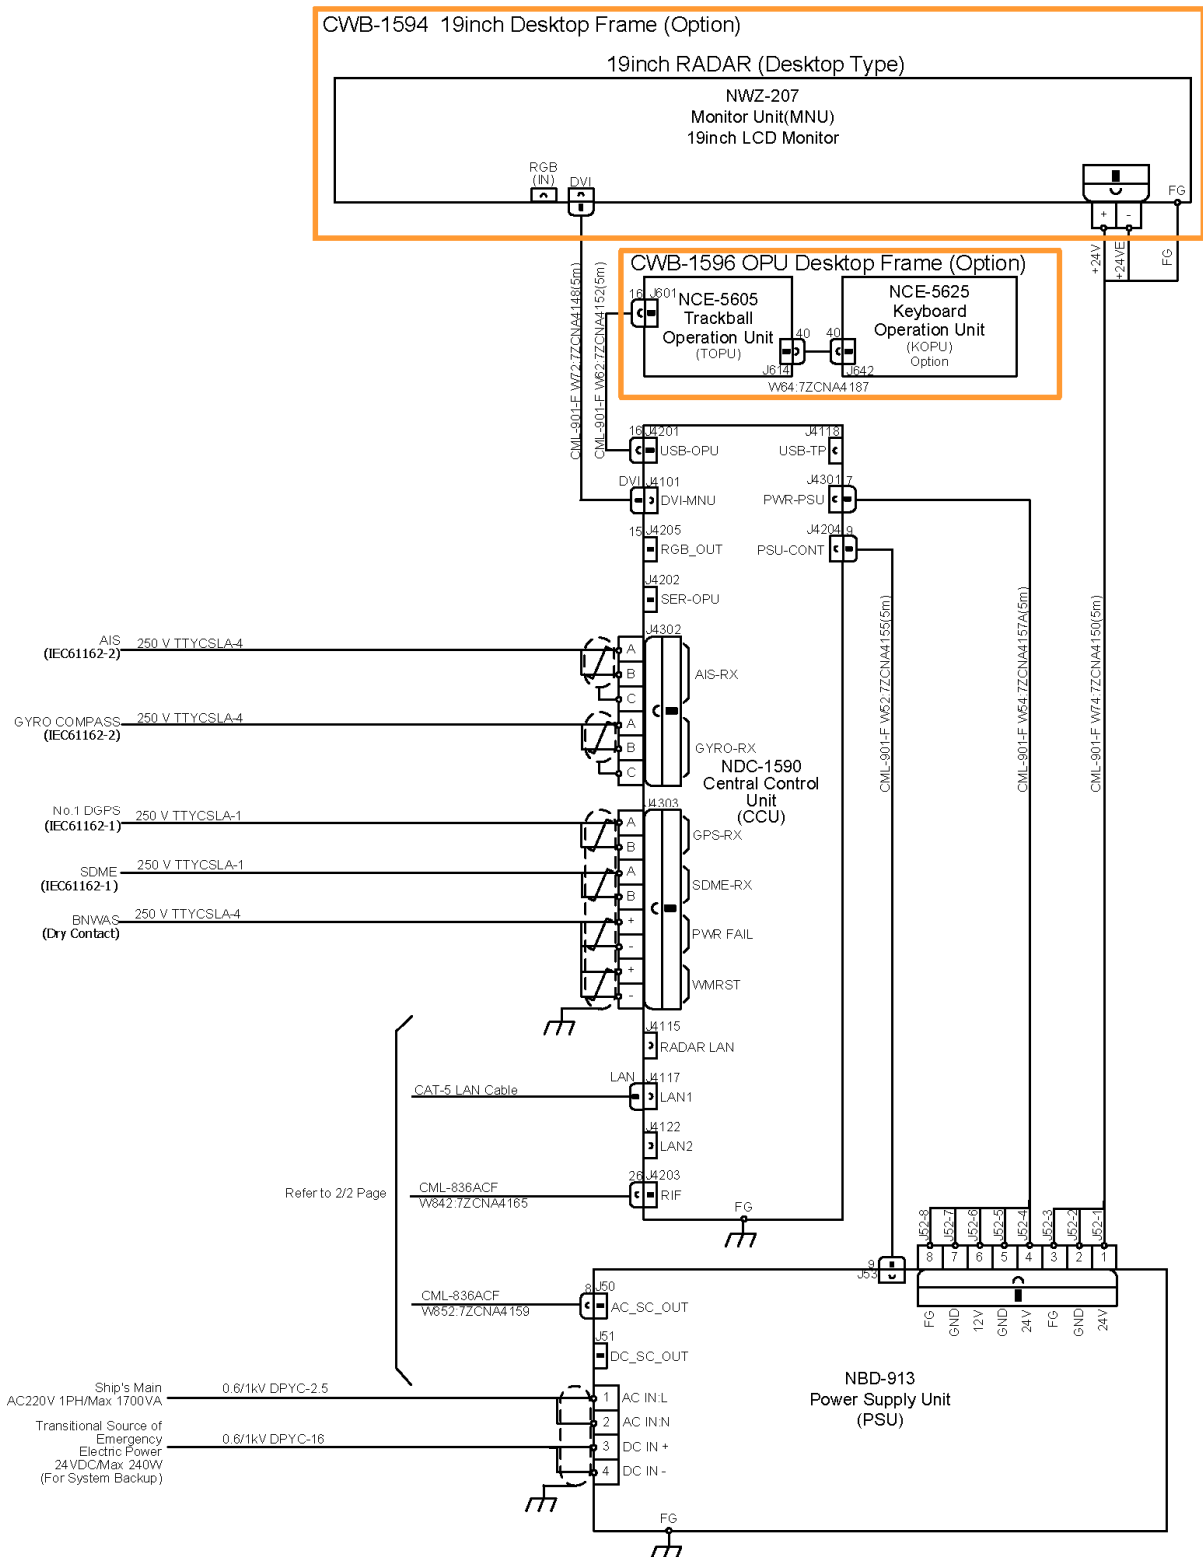


Interconnection Diagram of JMR-7225-6X/9X RADAR (2/2)

8.3.13 JMR-7225-6XH Interconnection Diagrams


Stand alone type

CWA-245 19inch Display Unit Mount Kit

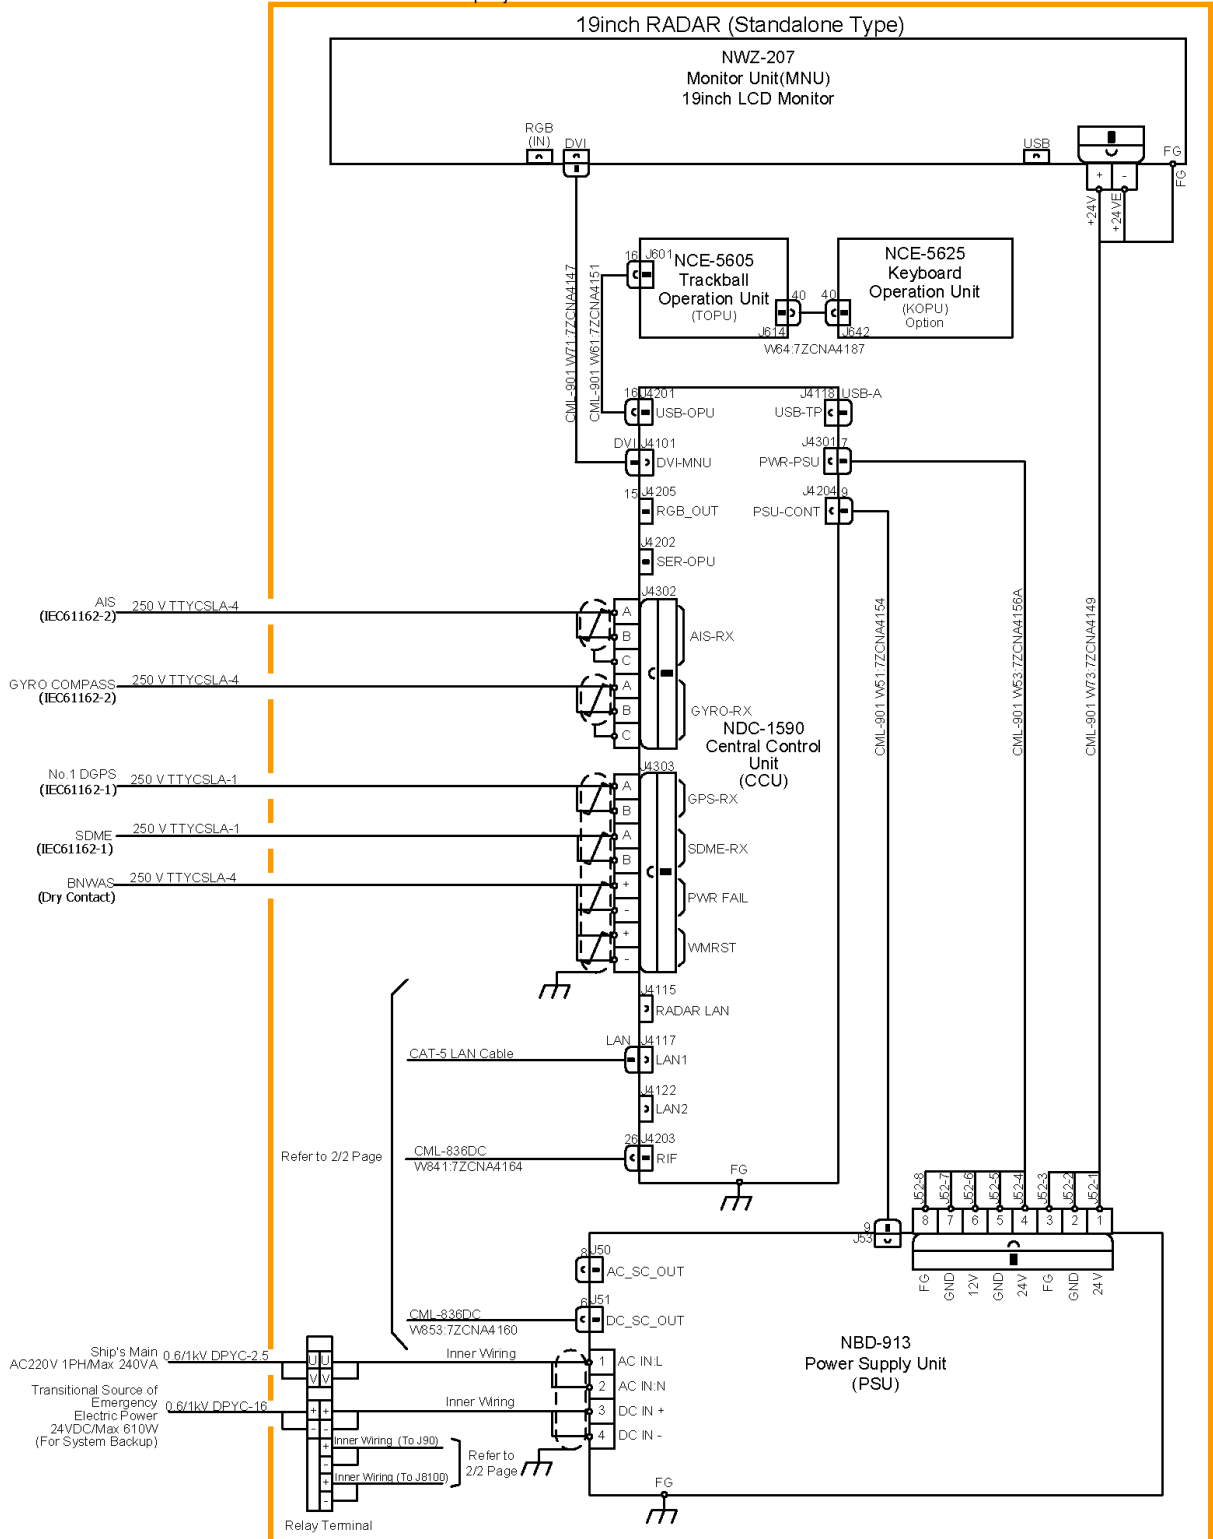


Interconnection Diagram of JMR-7225-6XH RADAR (1/2)

CWA-245 19inch Display Unit Mount Kit

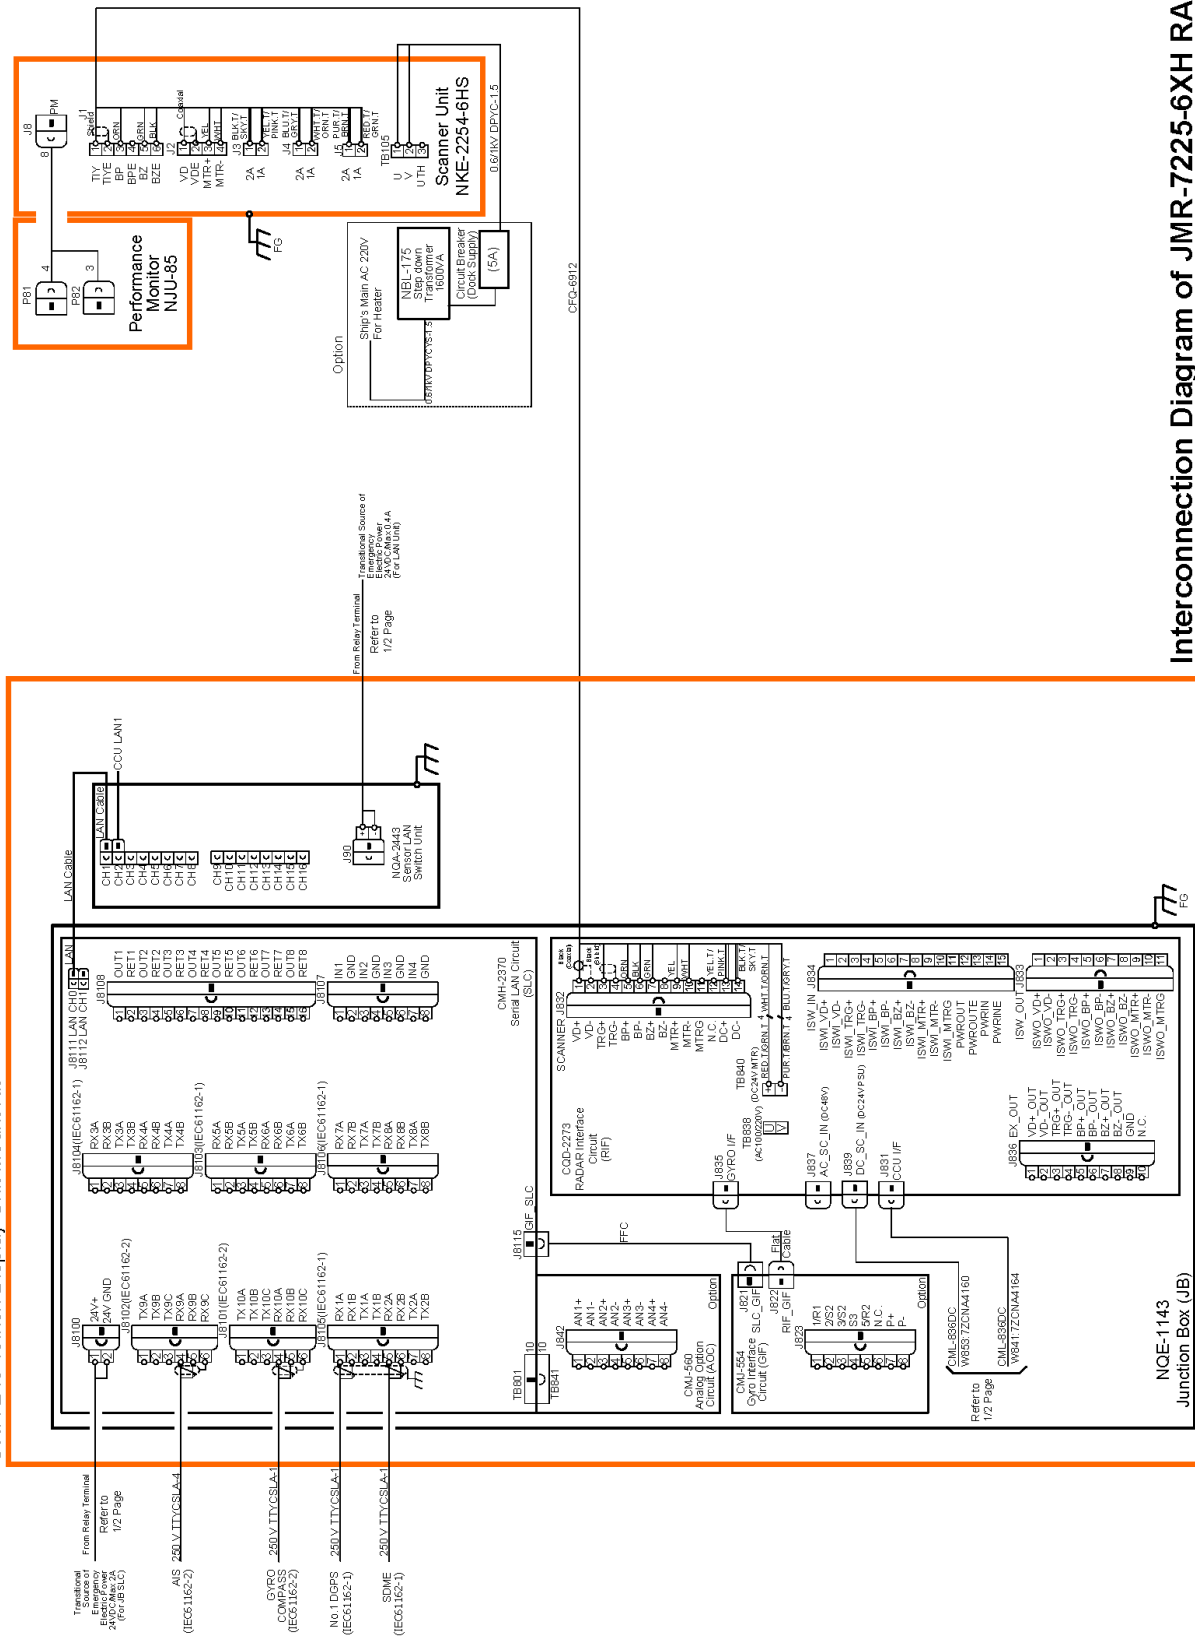


Interconnection Diagram of JMR-7225-6XH RADAR (2/2)

Desktop type

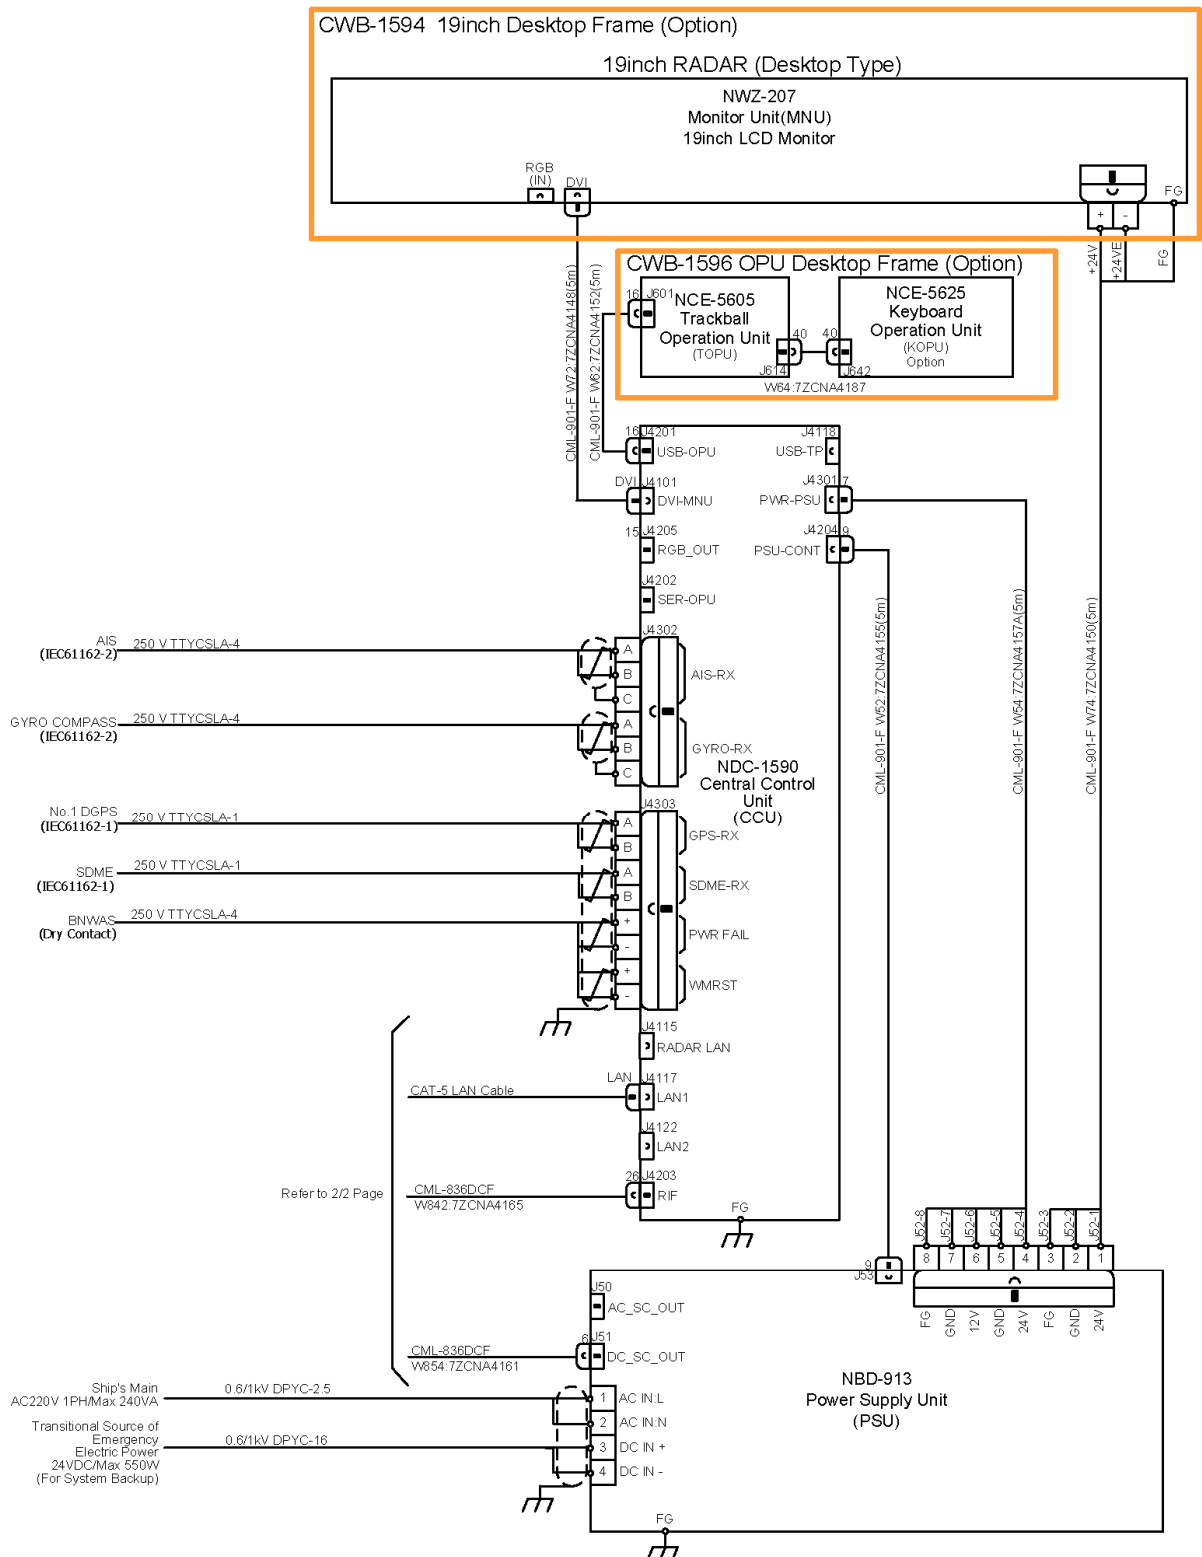

Interconnection Diagram of JMR-7225-6XH RADAR (1/2)

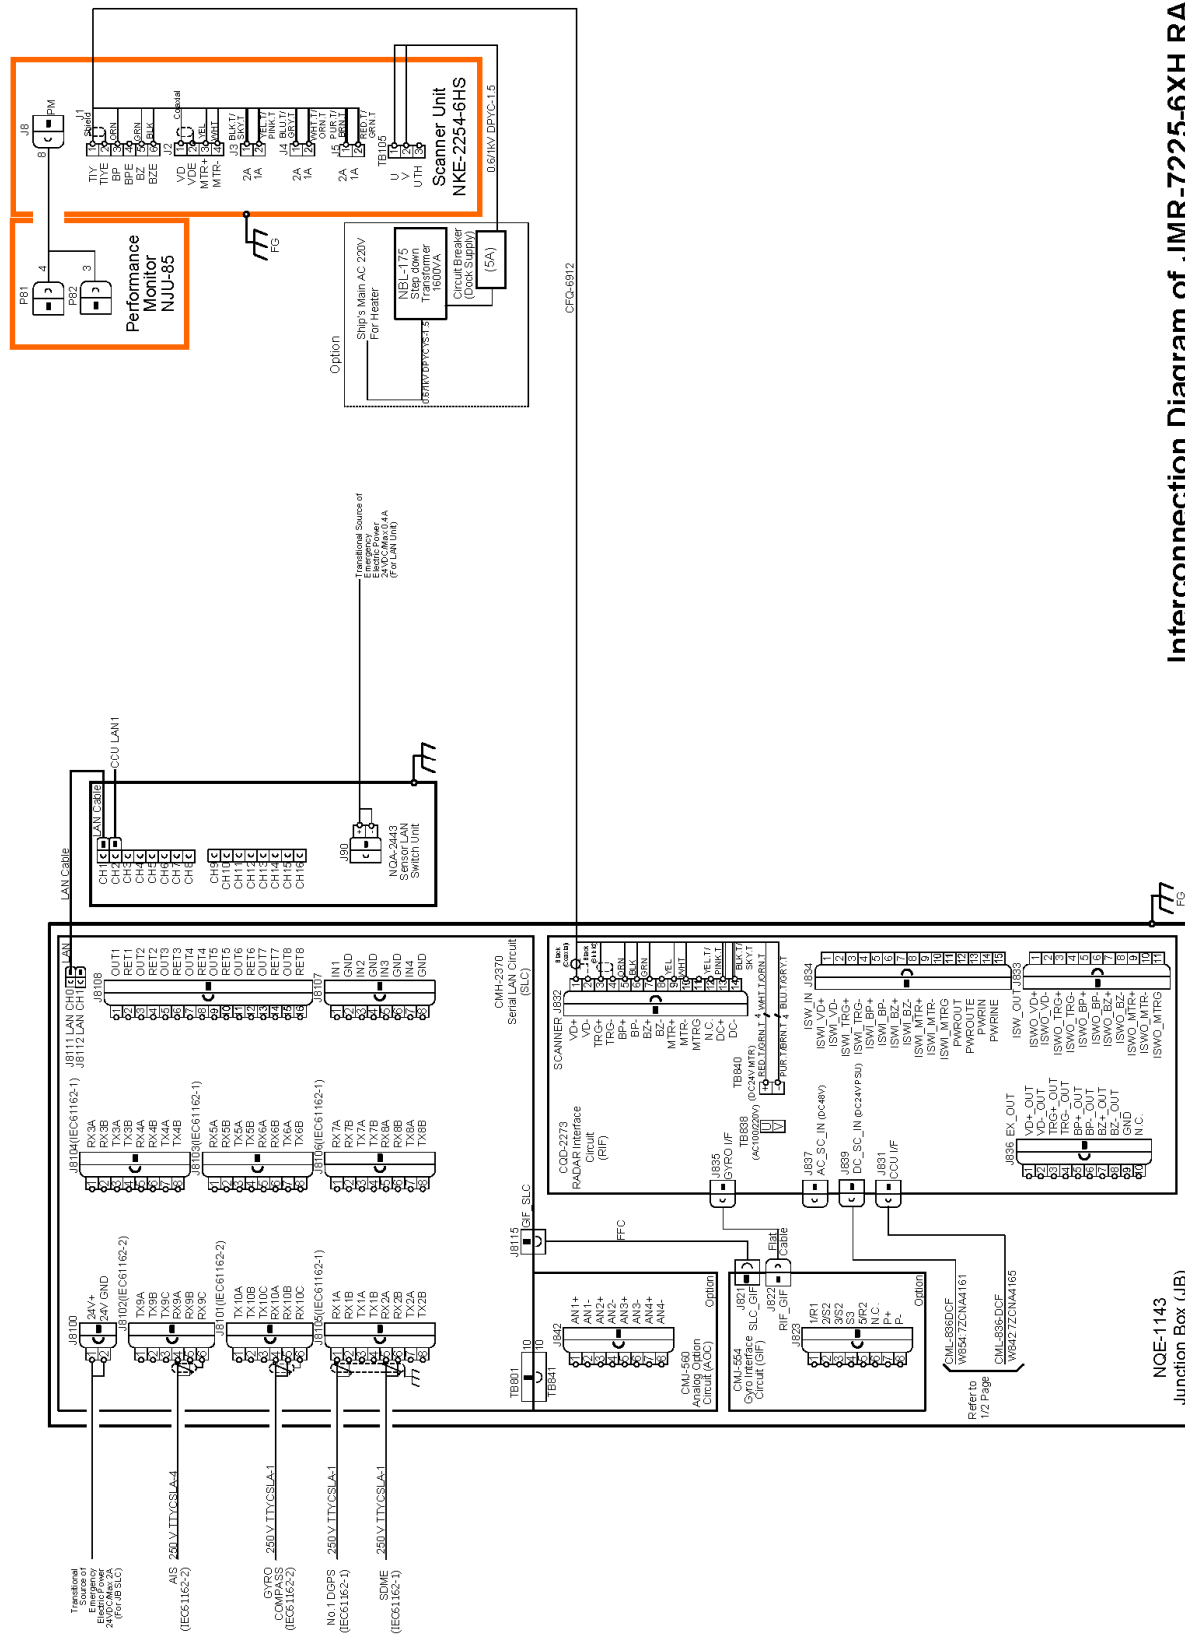


Interconnection Diagram of JMR-7225-6XH RADAR (2/2)

8.3.14 JMR-7210-6X/6XH Interconnection Diagrams


Stand alone type

CWA-245 19inch Display Unit Mount Kit

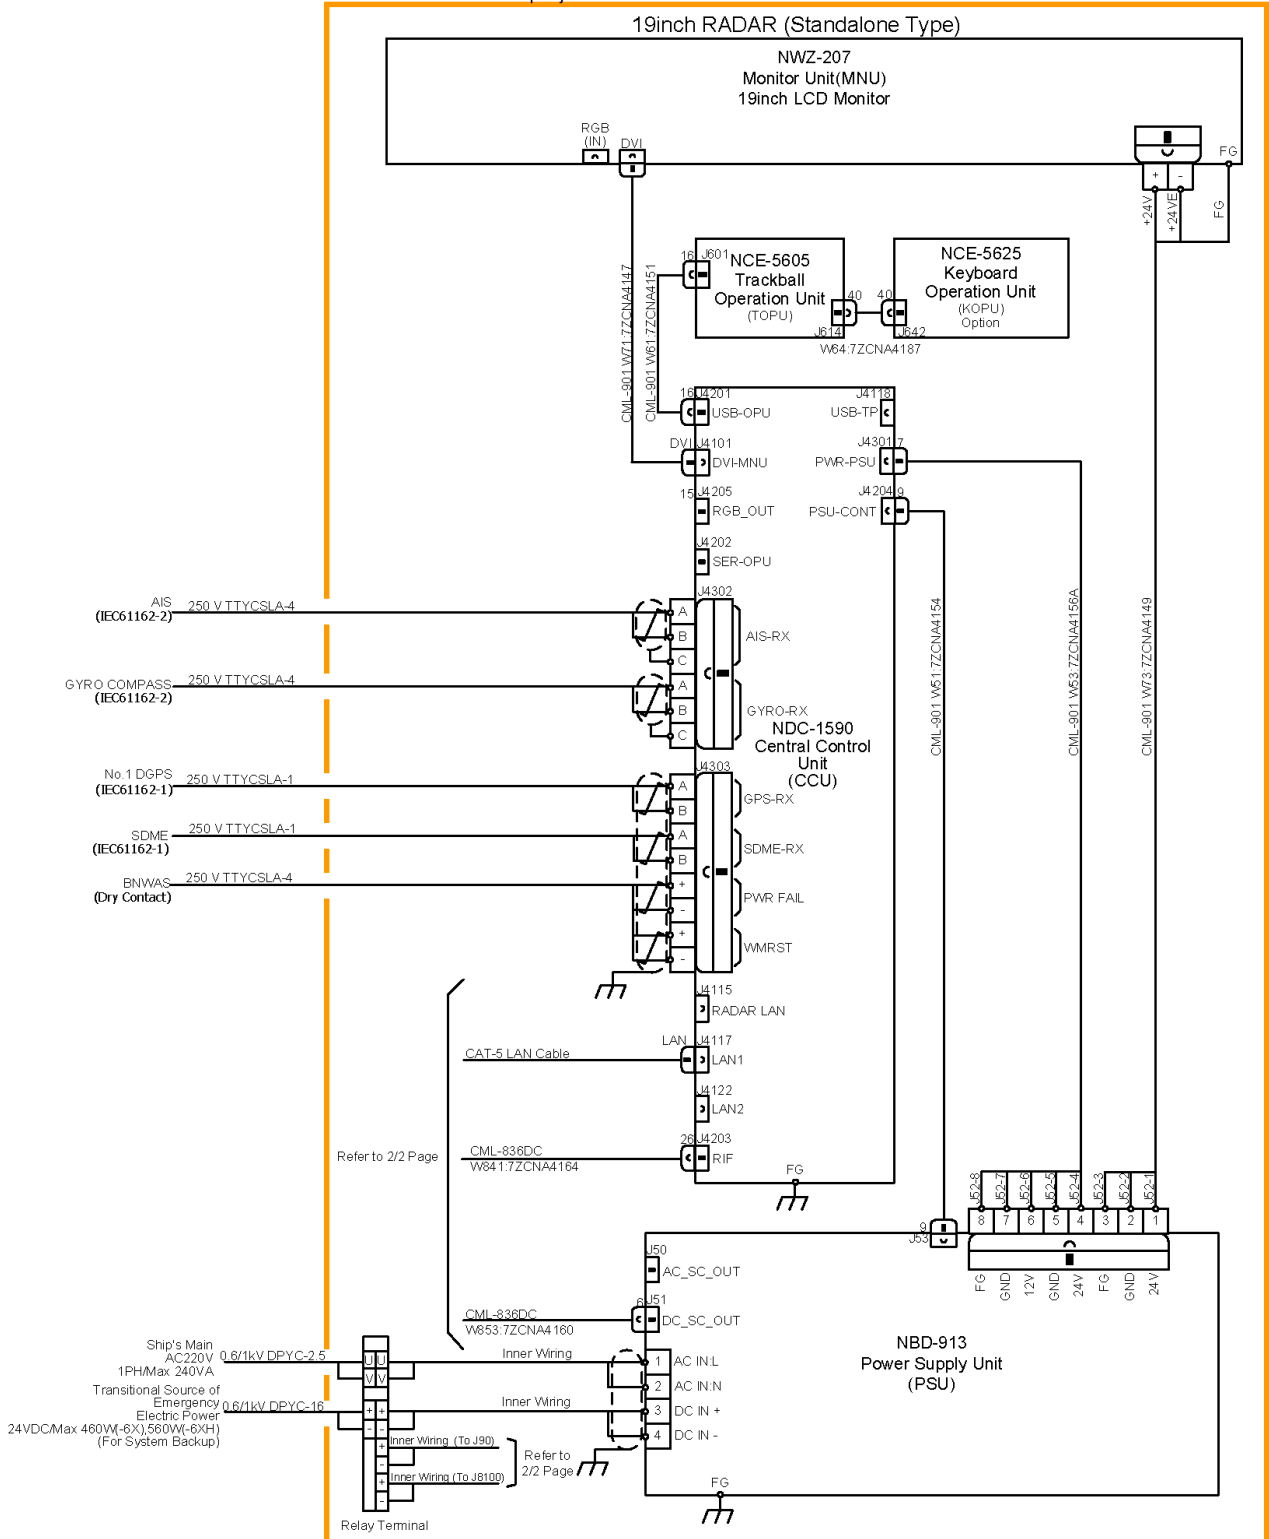


Interconnection Diagram of JMR-7210-6X/6XH RADAR (1/2)

CWA-245 19inch Display Unit Mount Kit

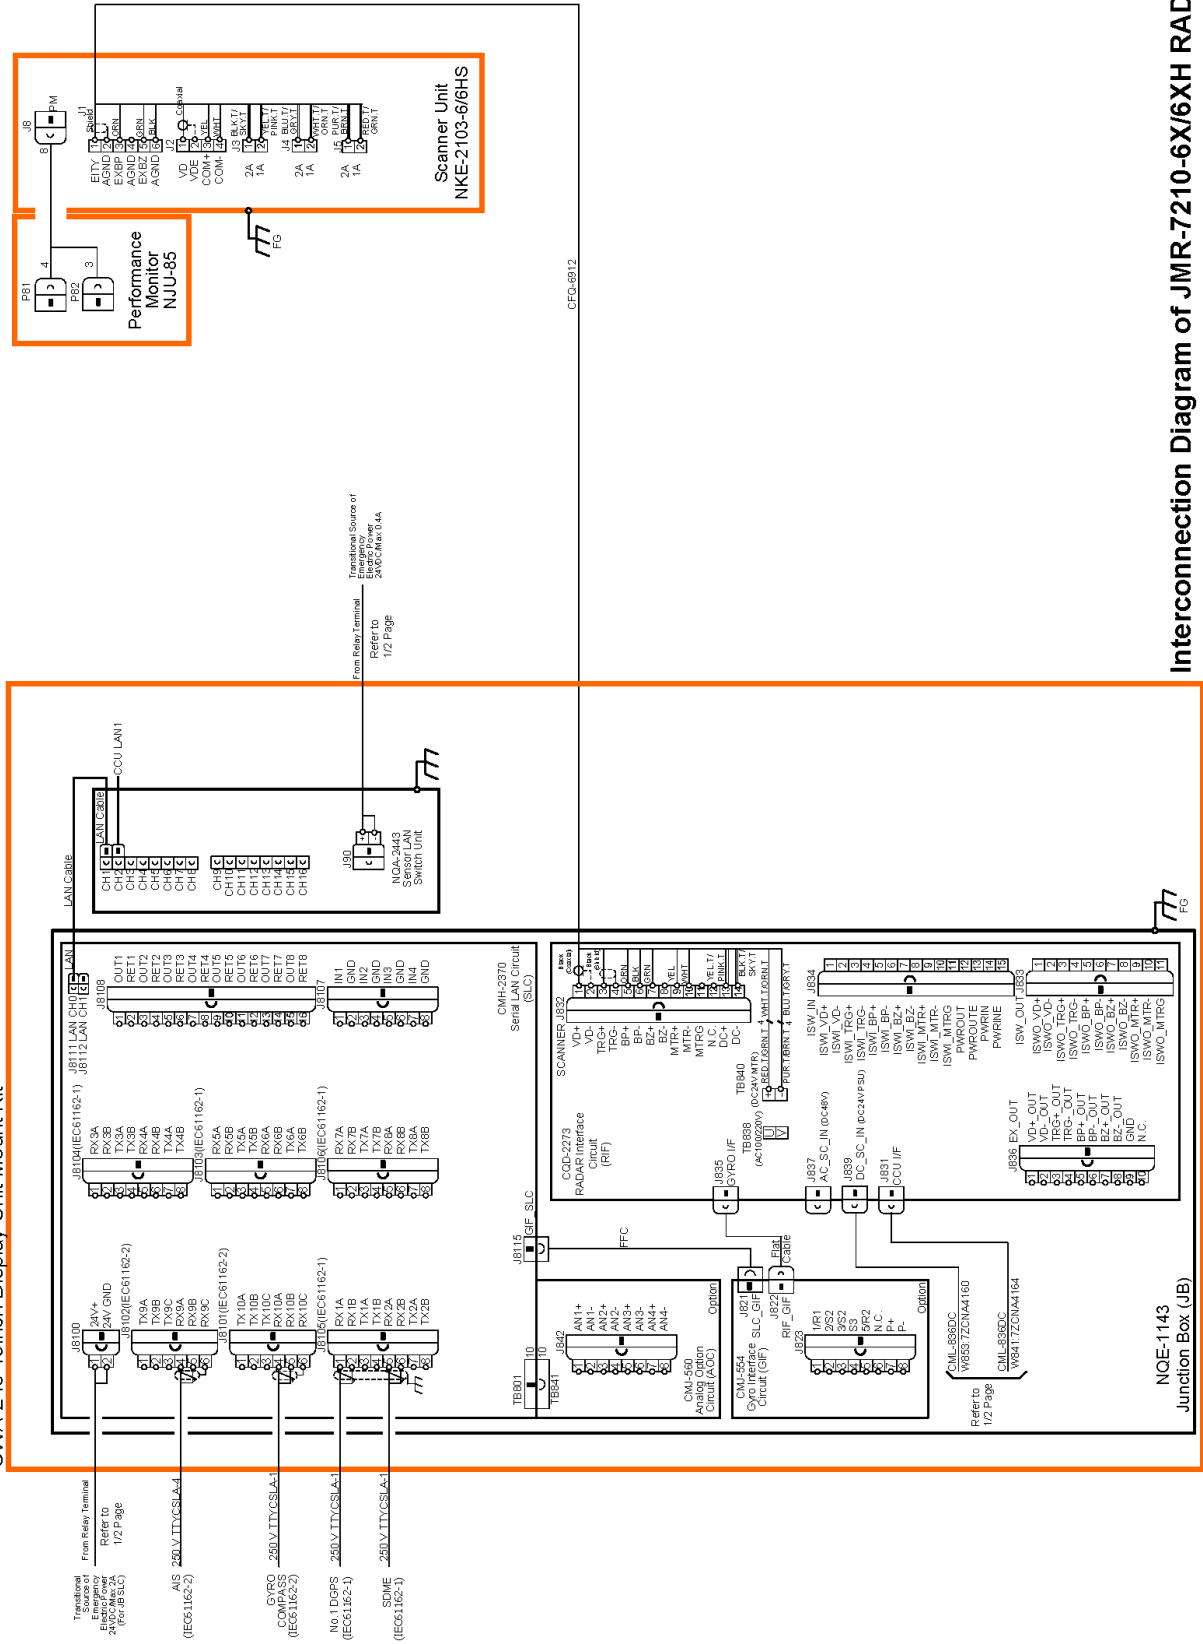


Interconnection Diagram of JMR-7210-6X/6XH RADAR (2/2)

Desktop type

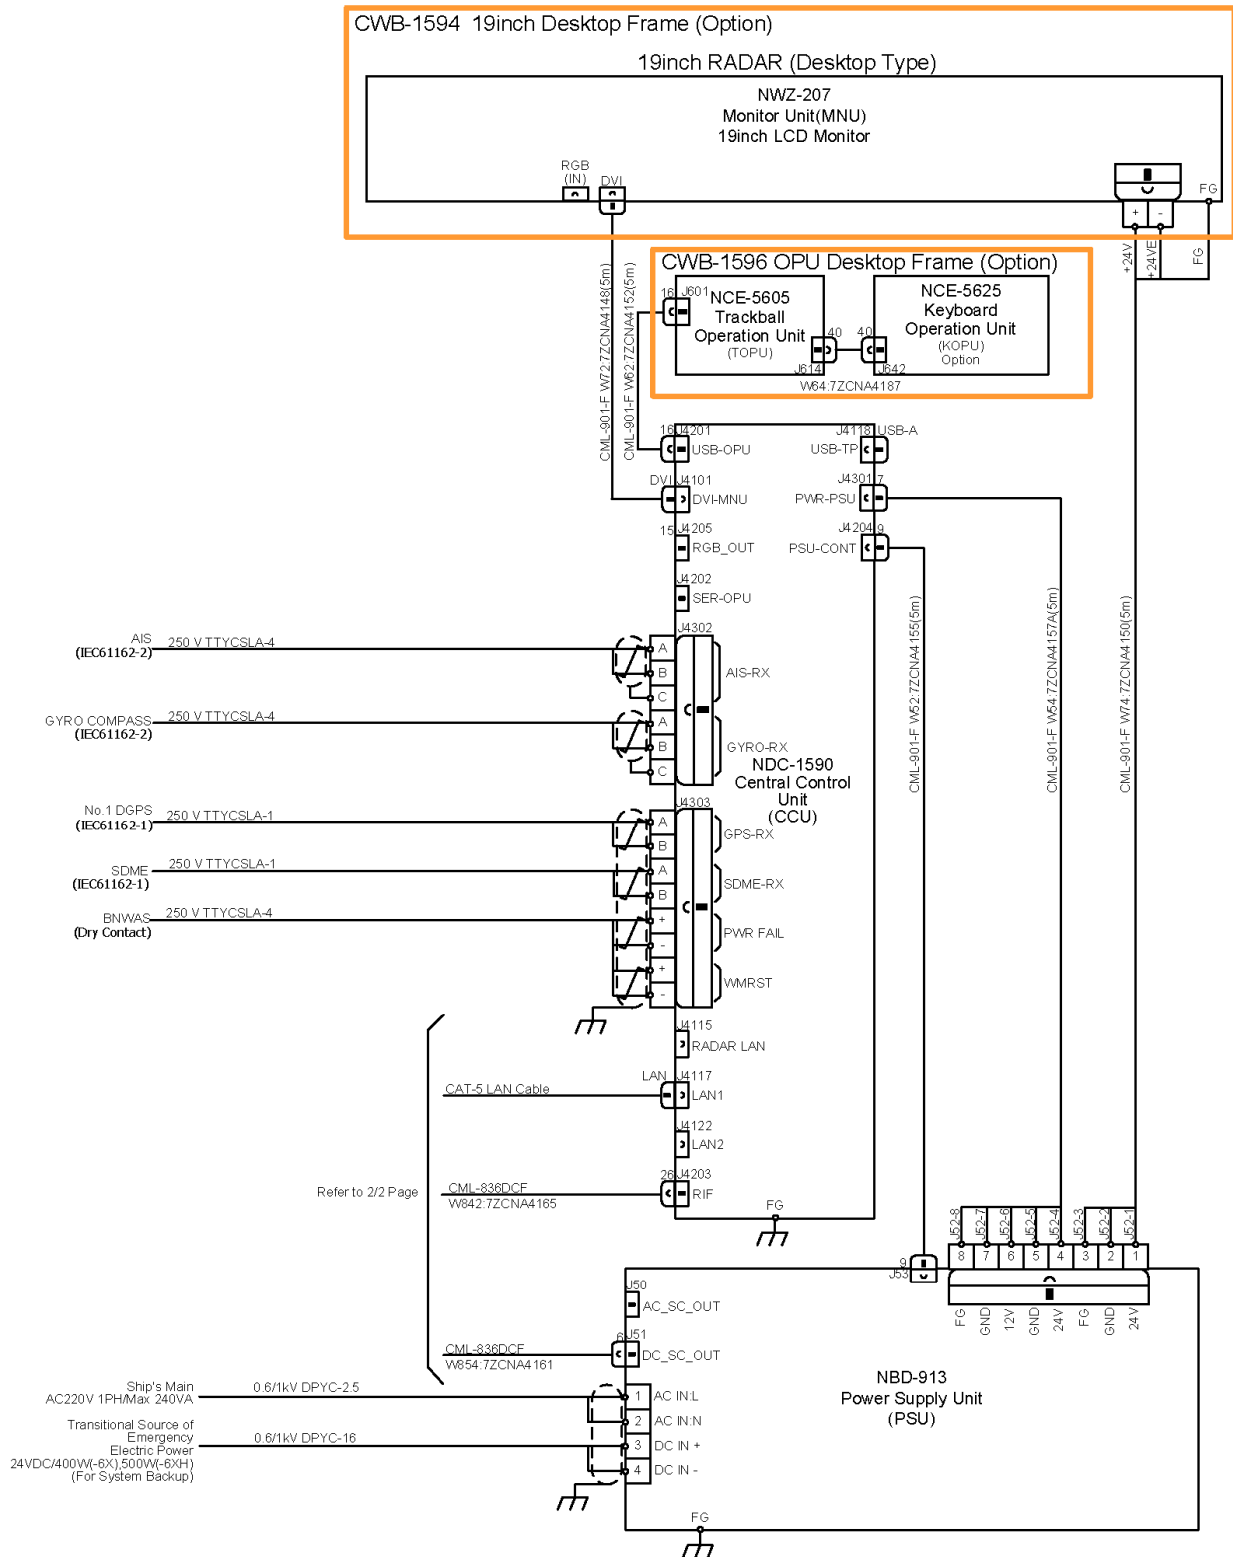

Interconnection Diagram of JMR-7210-6X/6XH RADAR (1/2)

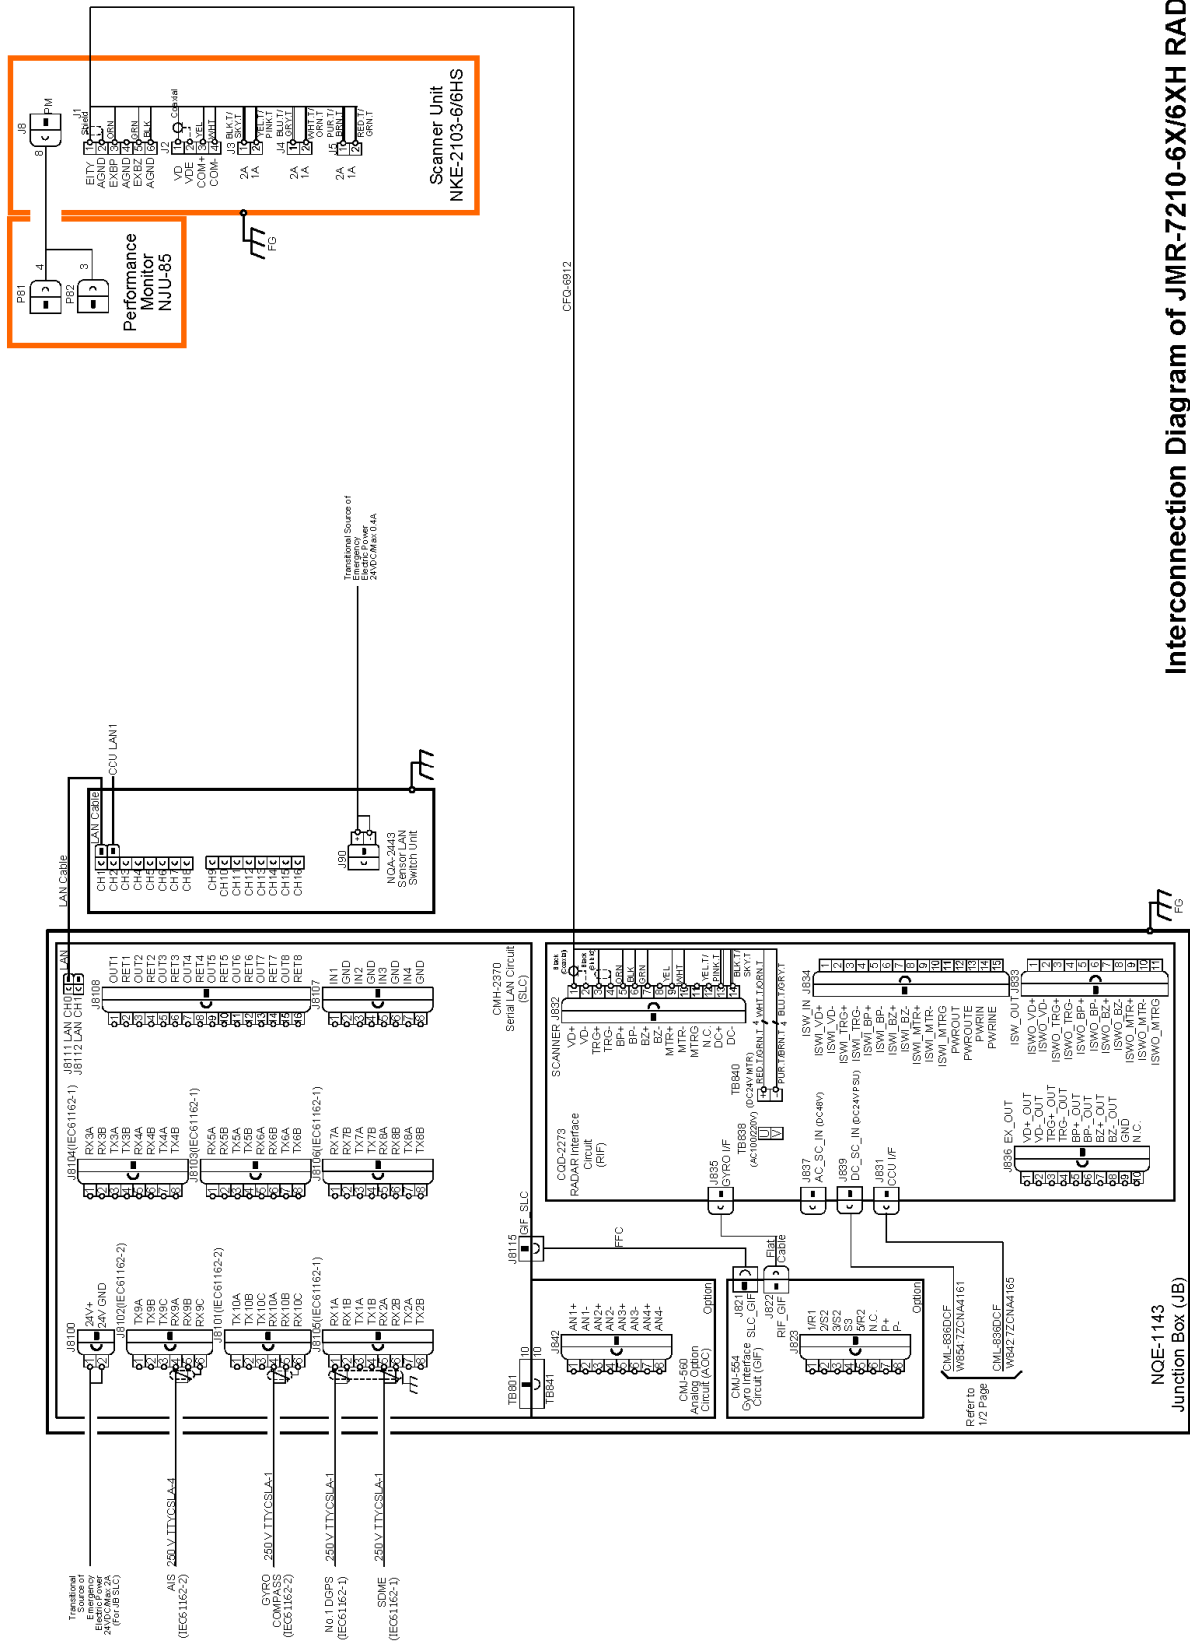


Interconnection Diagram of JMR-7210-6X/6XH RADAR (2/2)

8.3.15 JMR-7272-S Interconnection Diagrams


Stand alone type

CWA-245 19inch Display Unit Mount Kit

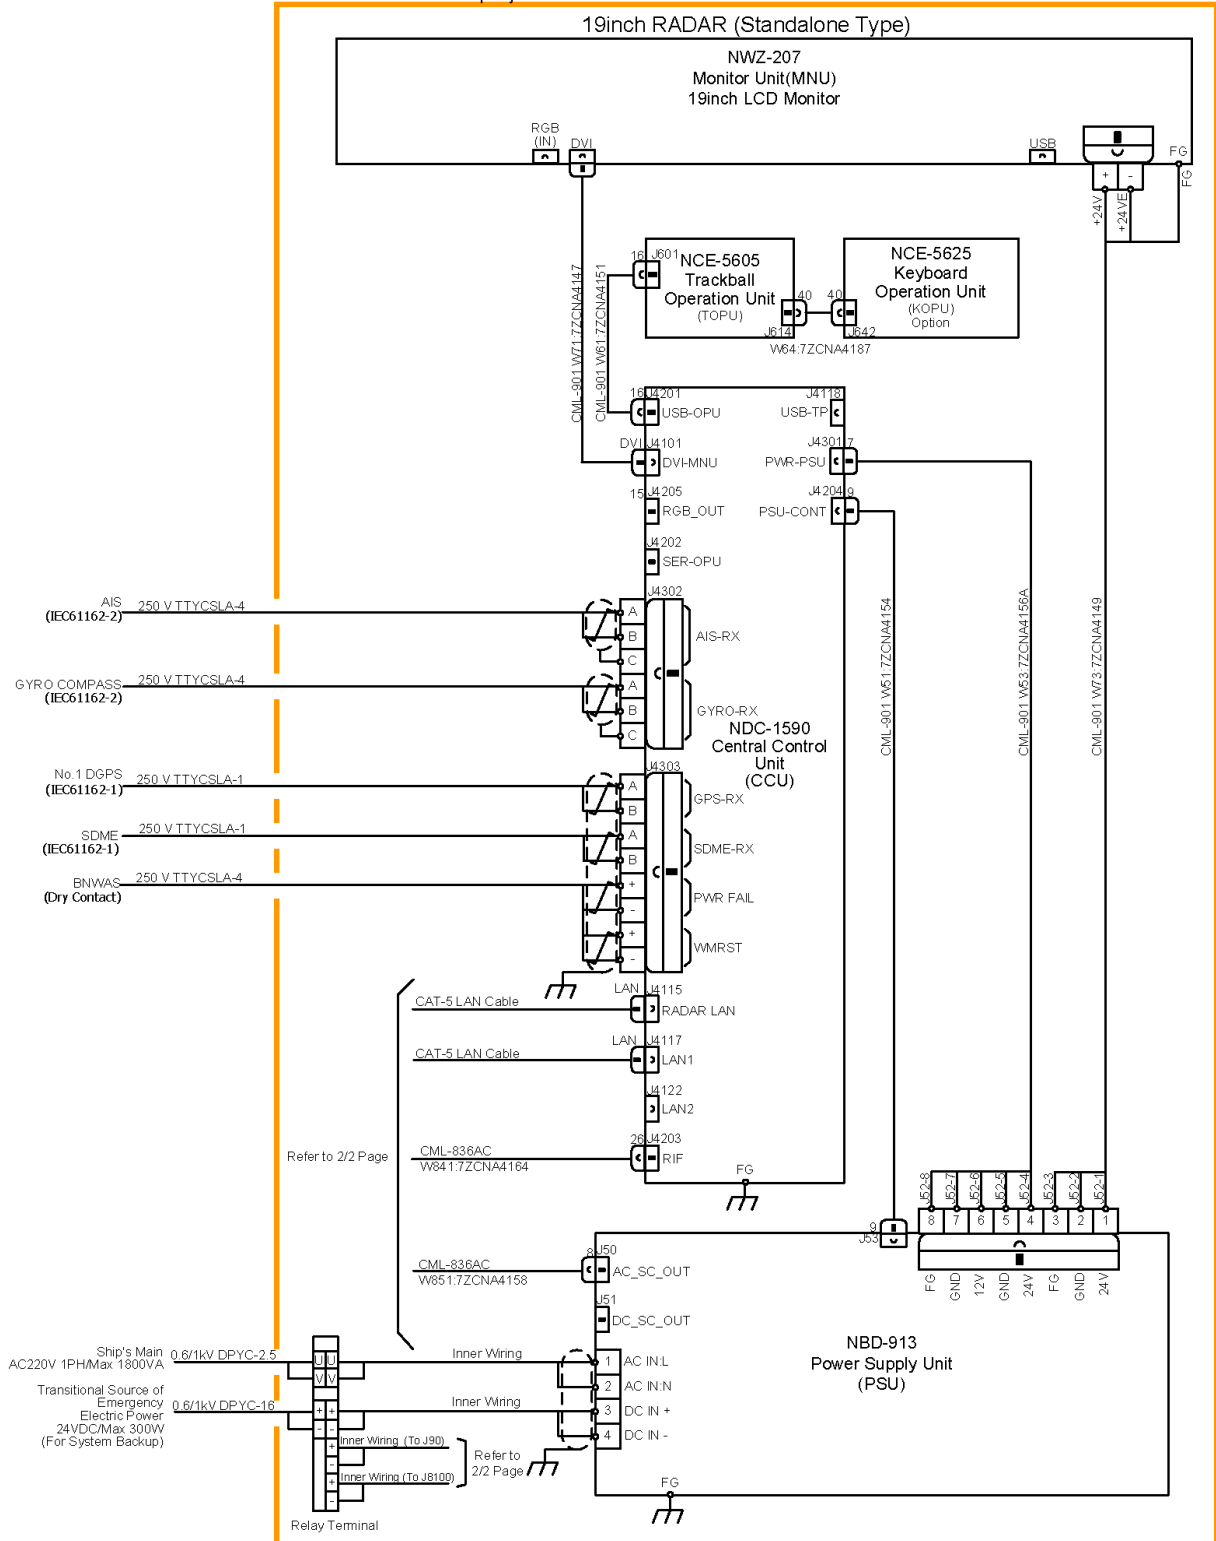


Interconnection Diagram of JMR-7272-S RADAR (1/2)

Desktop type

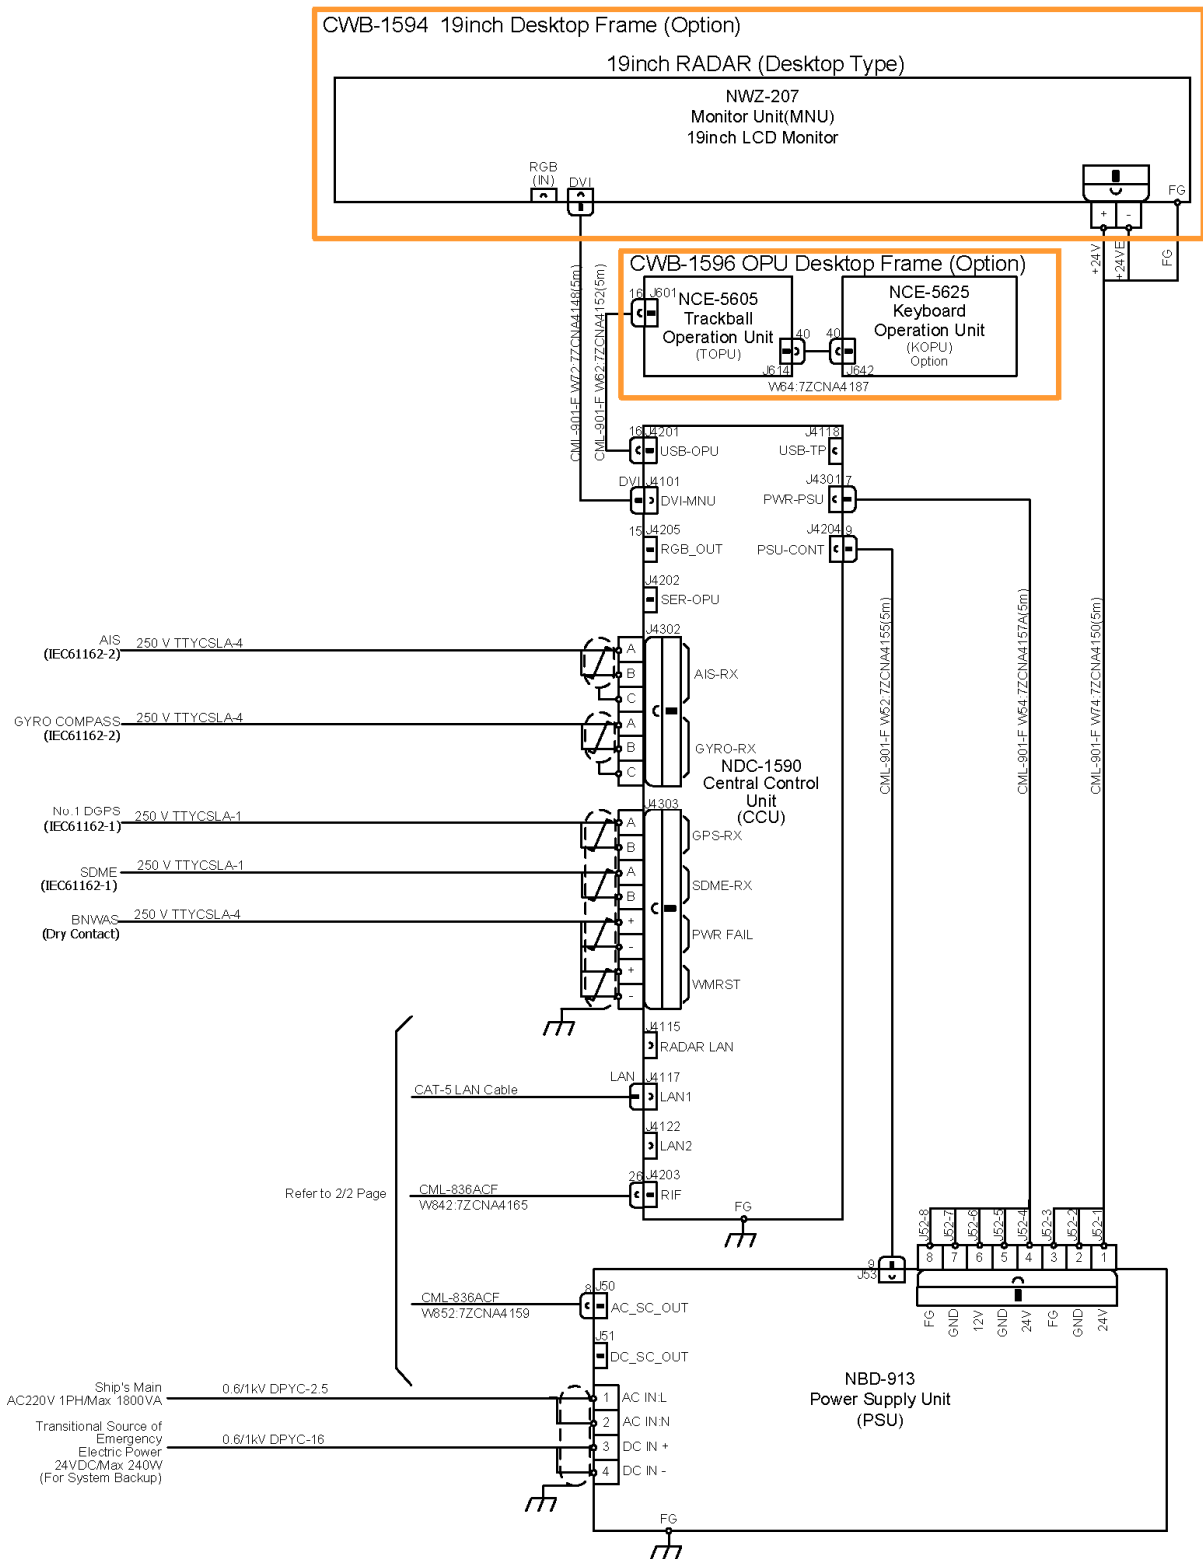


Interconnection Diagram of JMR-7272-S RADAR (1/2)

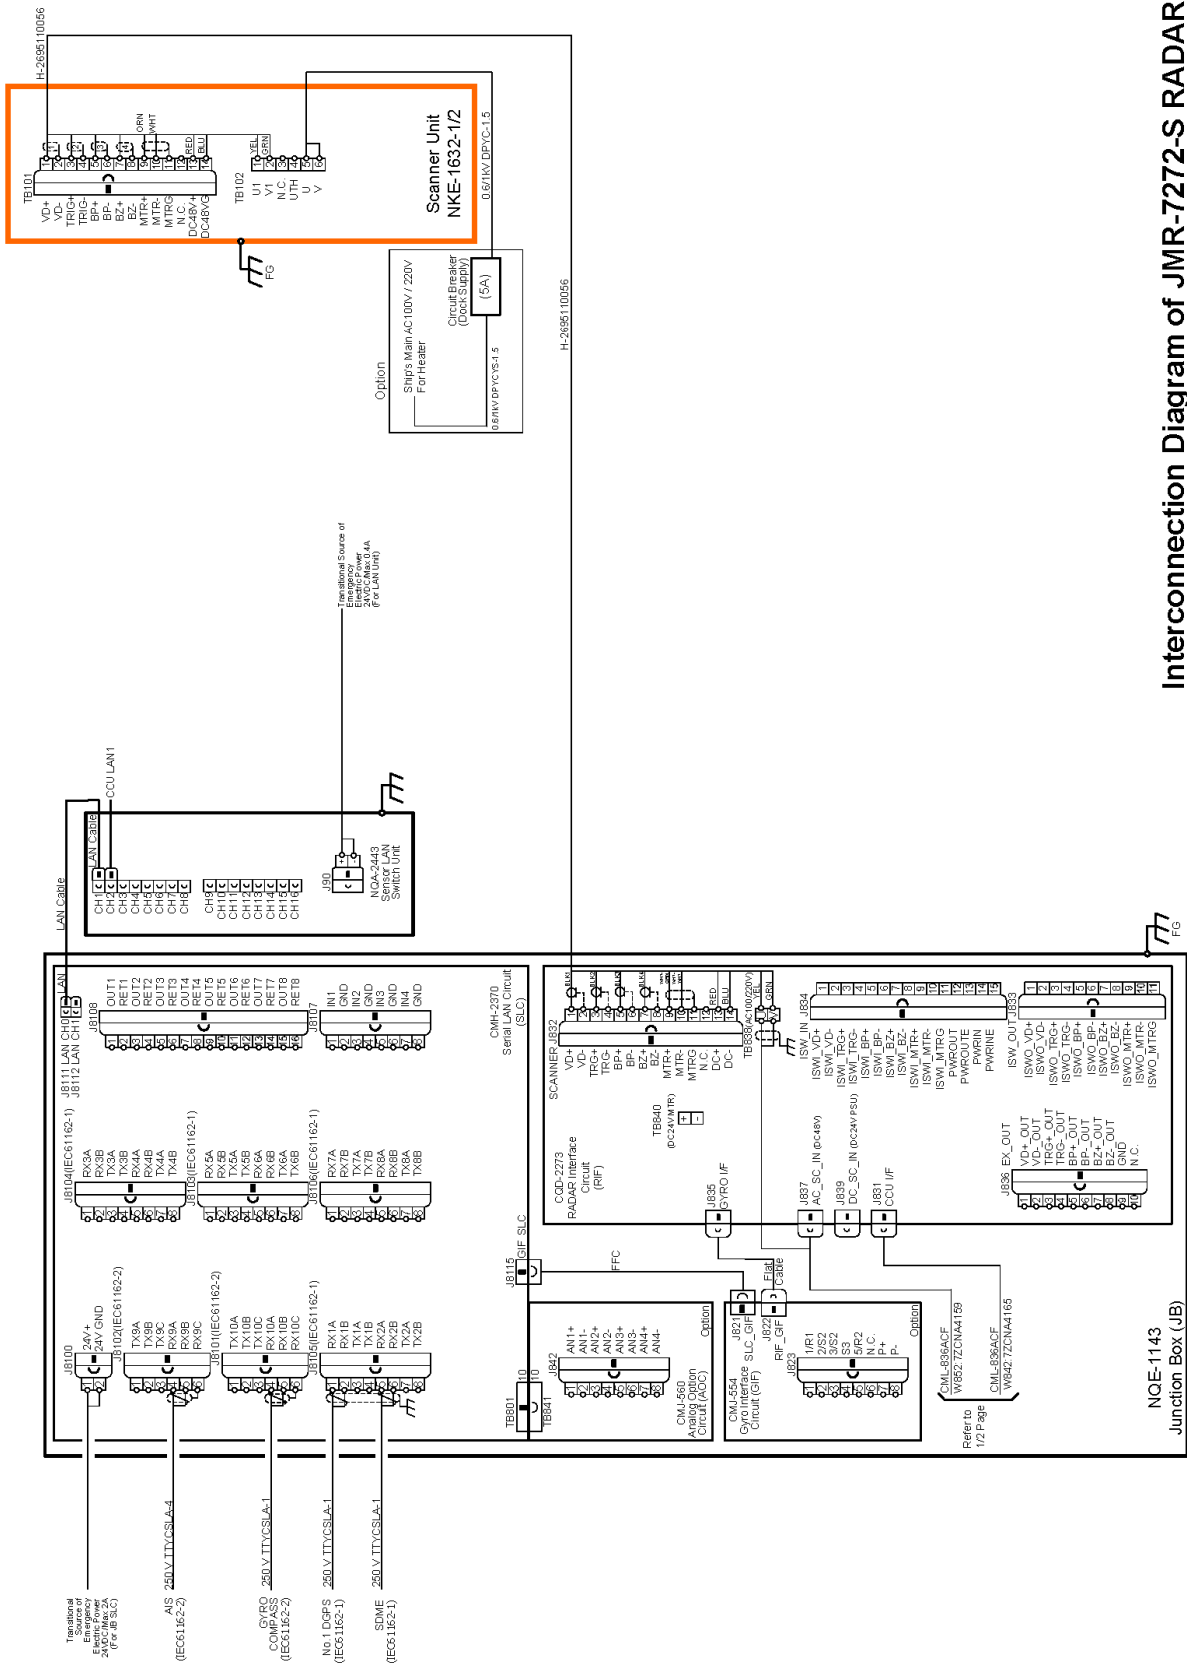

Interconnection Diagram of JMR-7272-S RADAR (2/2)


8.3.16 JMR-7282-S/SH Interconnection Diagrams Stand alone type

CWA-245 19inch Display Unit Mount Kit

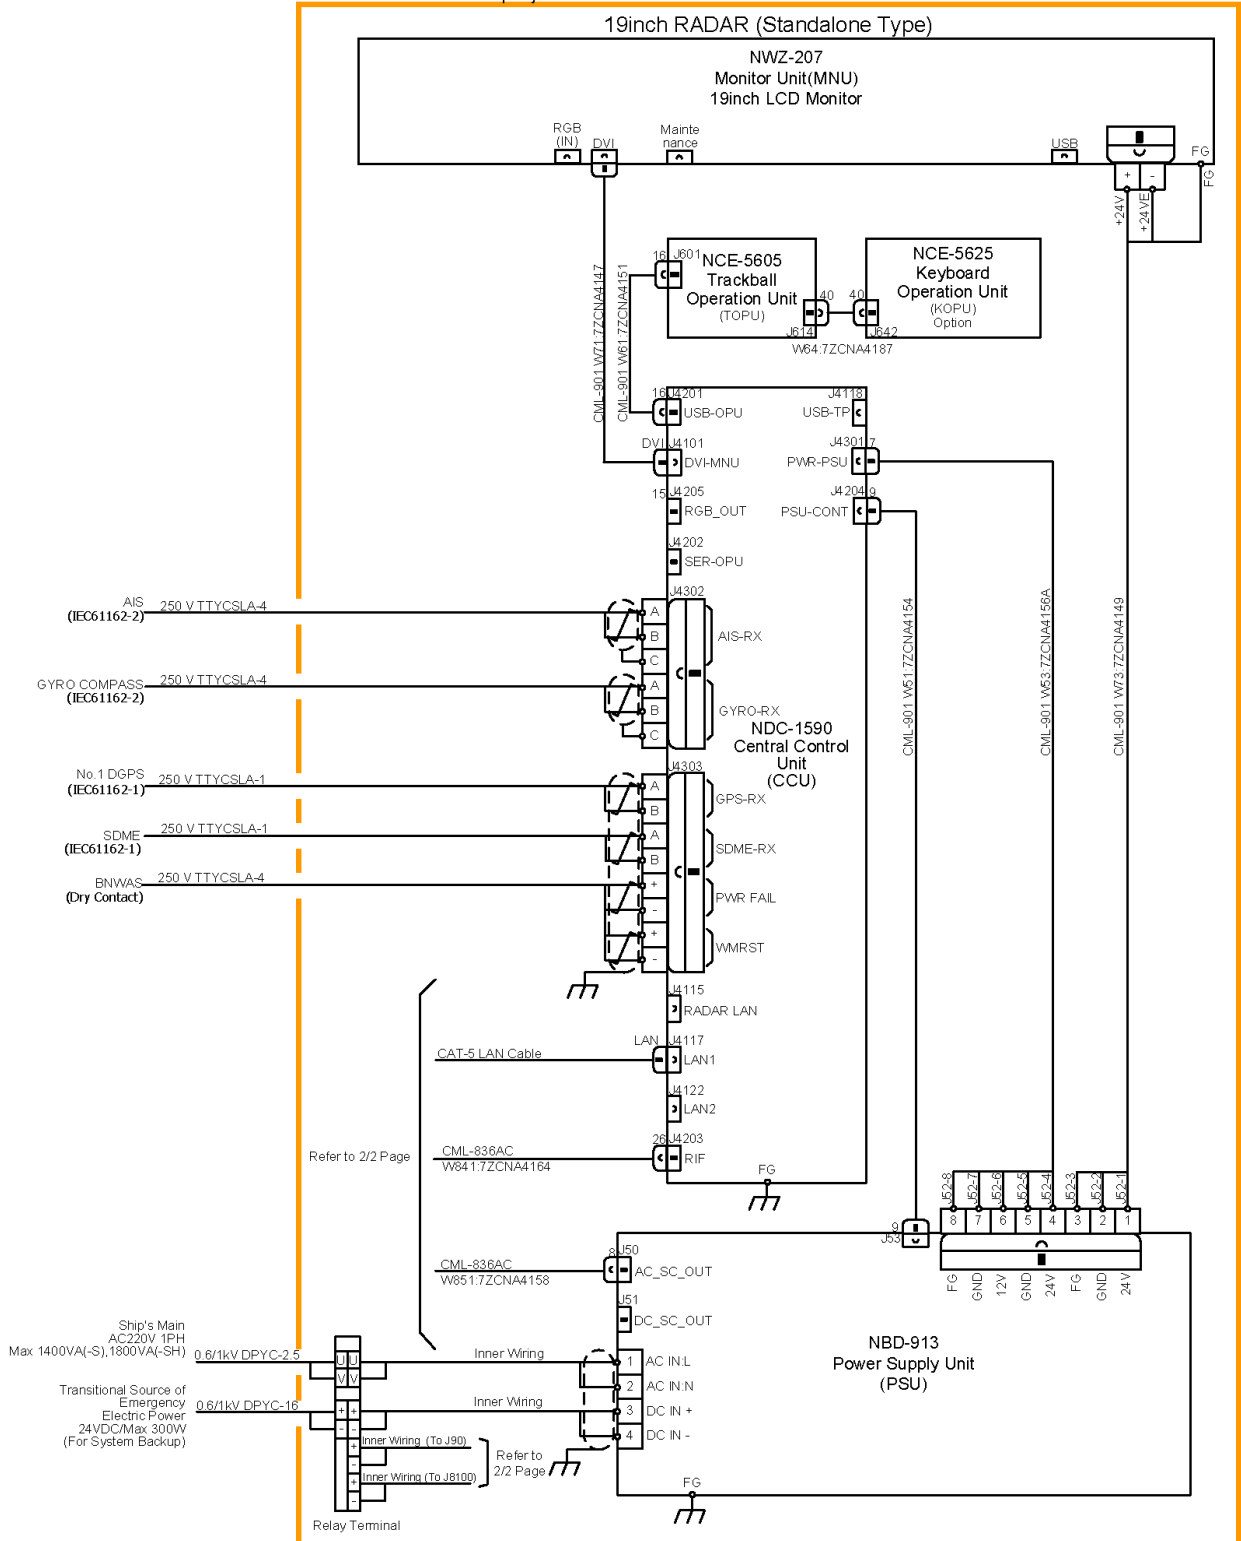


Interconnection Diagram of JMR-7282-S/SH RADAR (1/2)

Desktop type

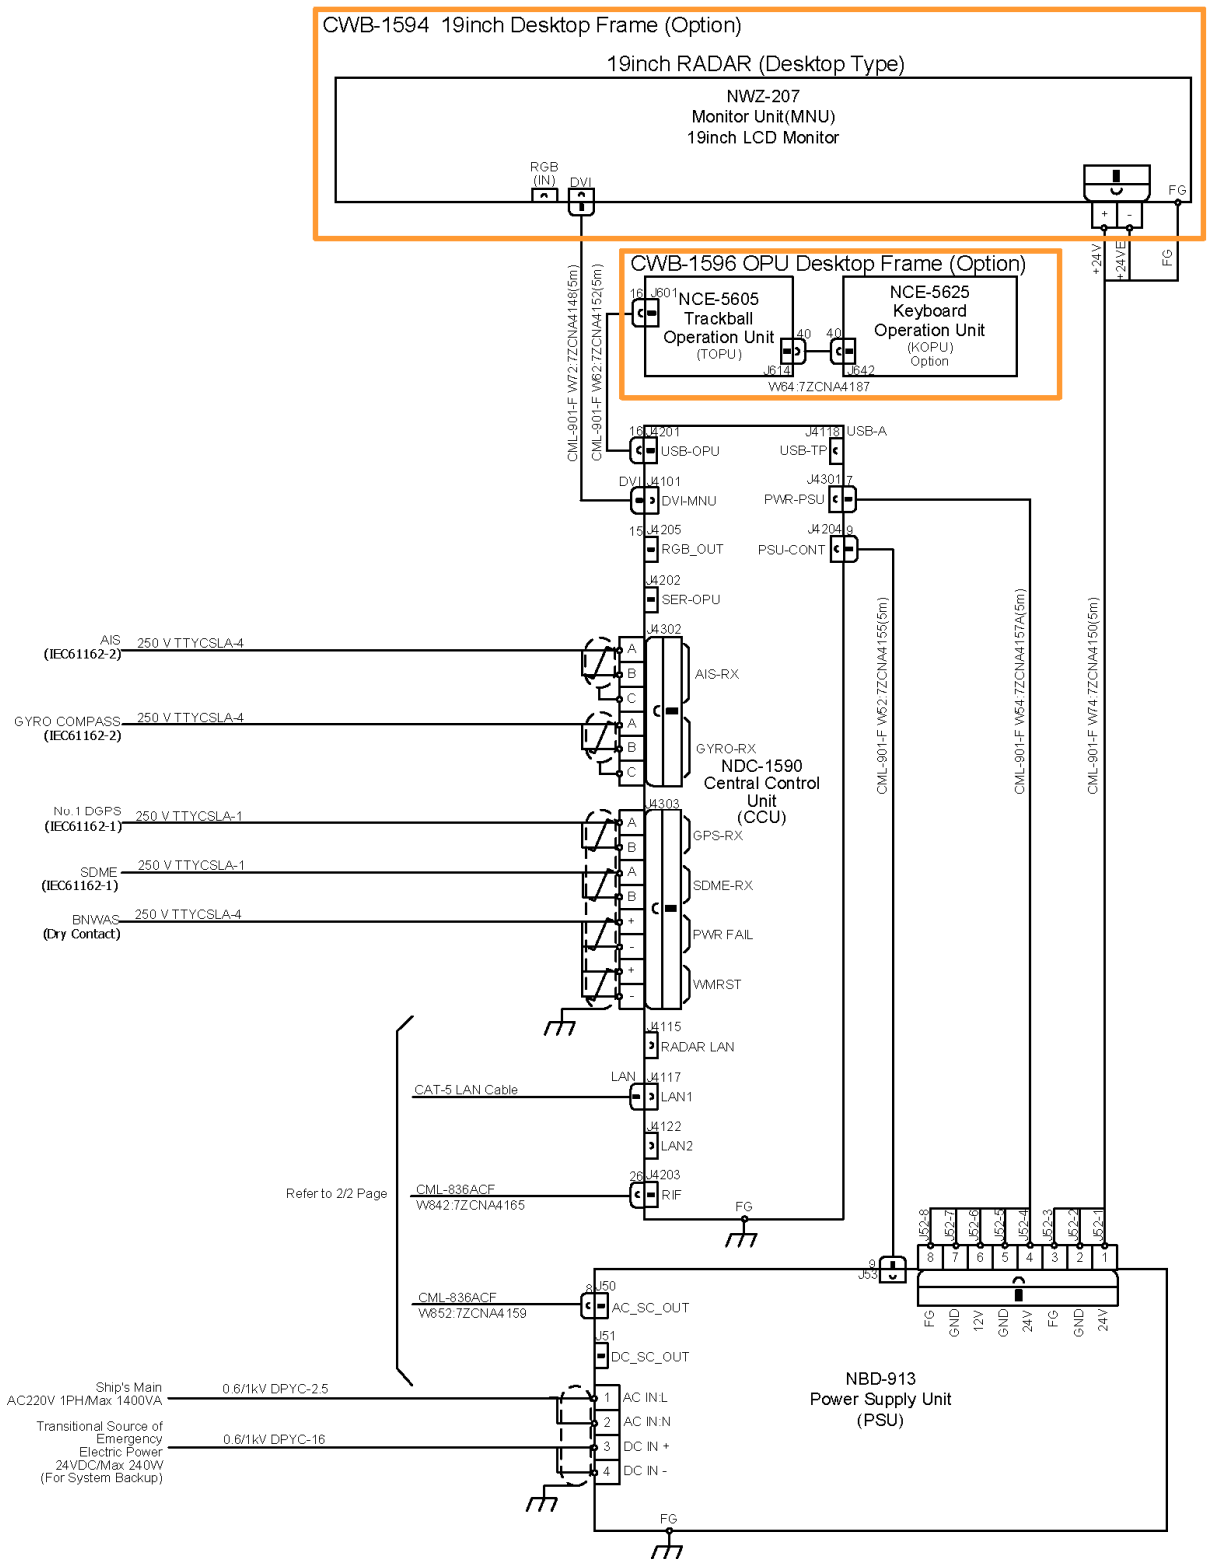


Interconnection Diagram of JMR-7282-S/SH RADAR (1/2)

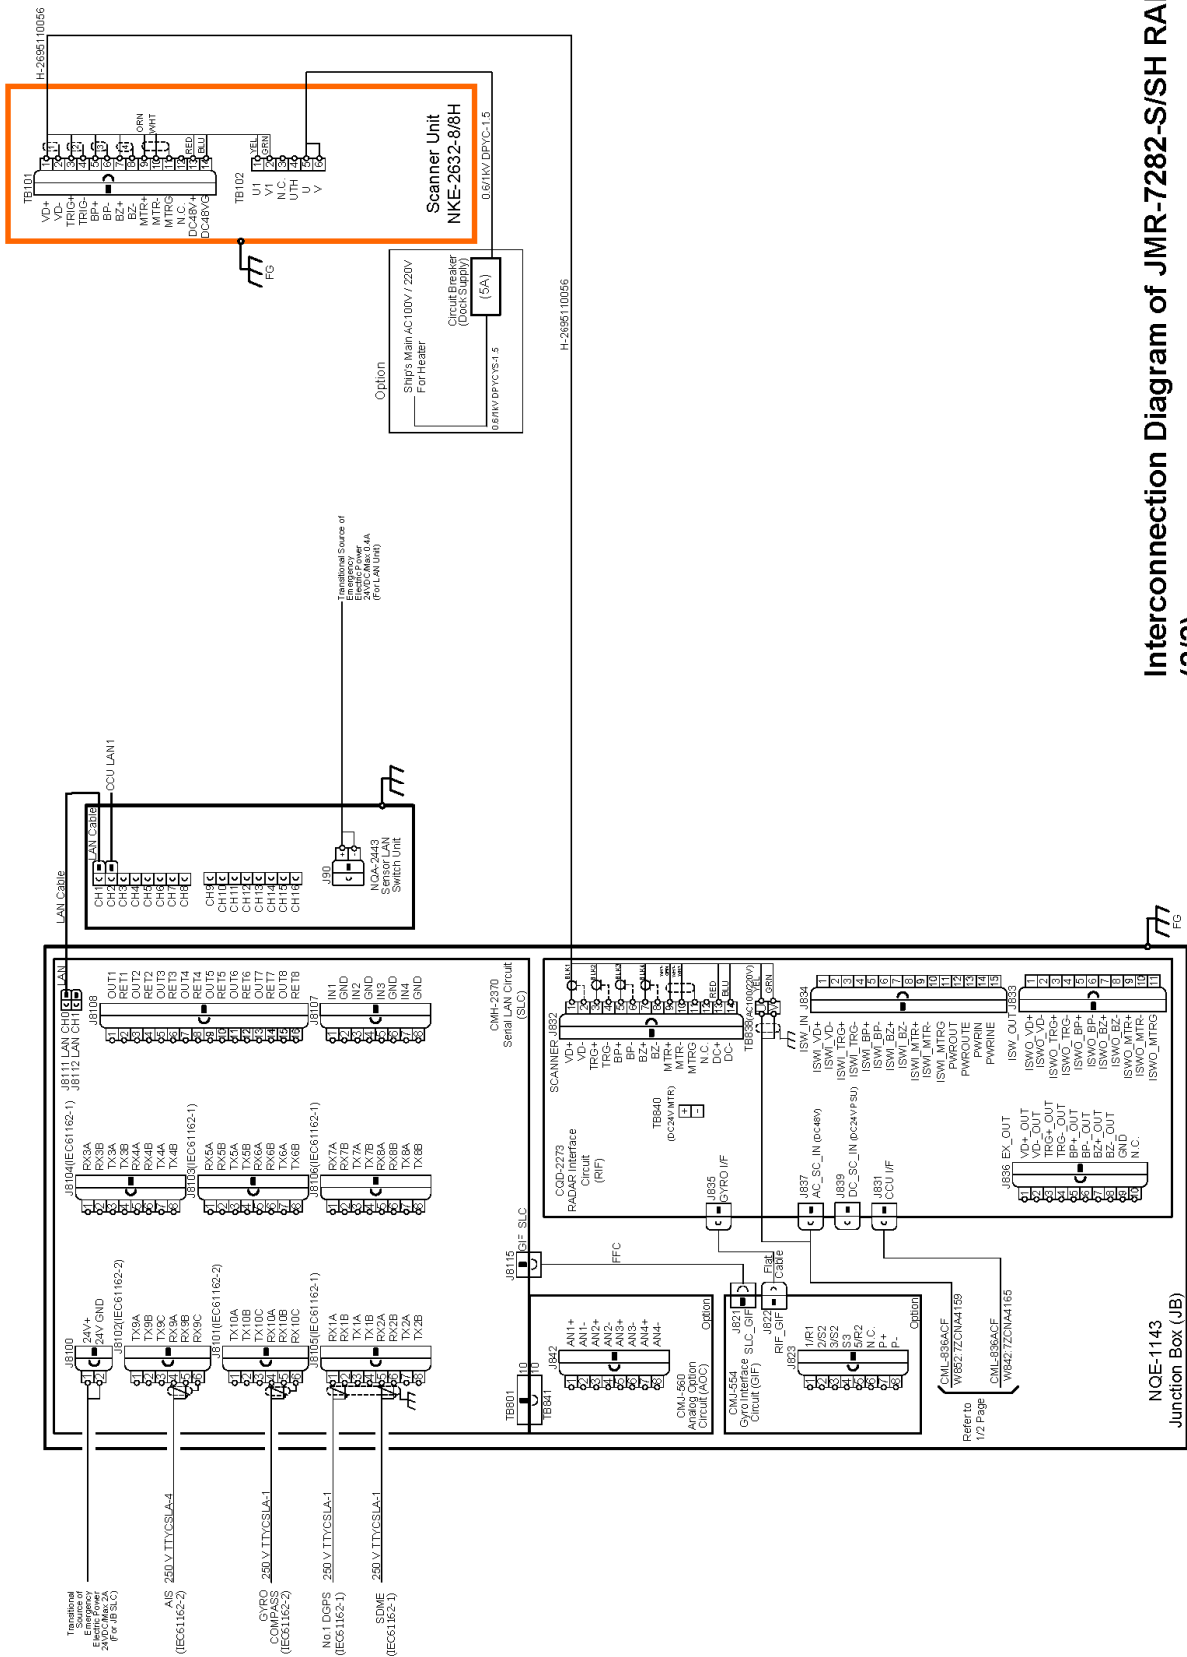

Interconnection Diagram of JMR-7282-S/SH RADAR (2/2)


Interconnection Diagrams of Scanner Unit

8.3.17 NKE-1139 (AC110V)

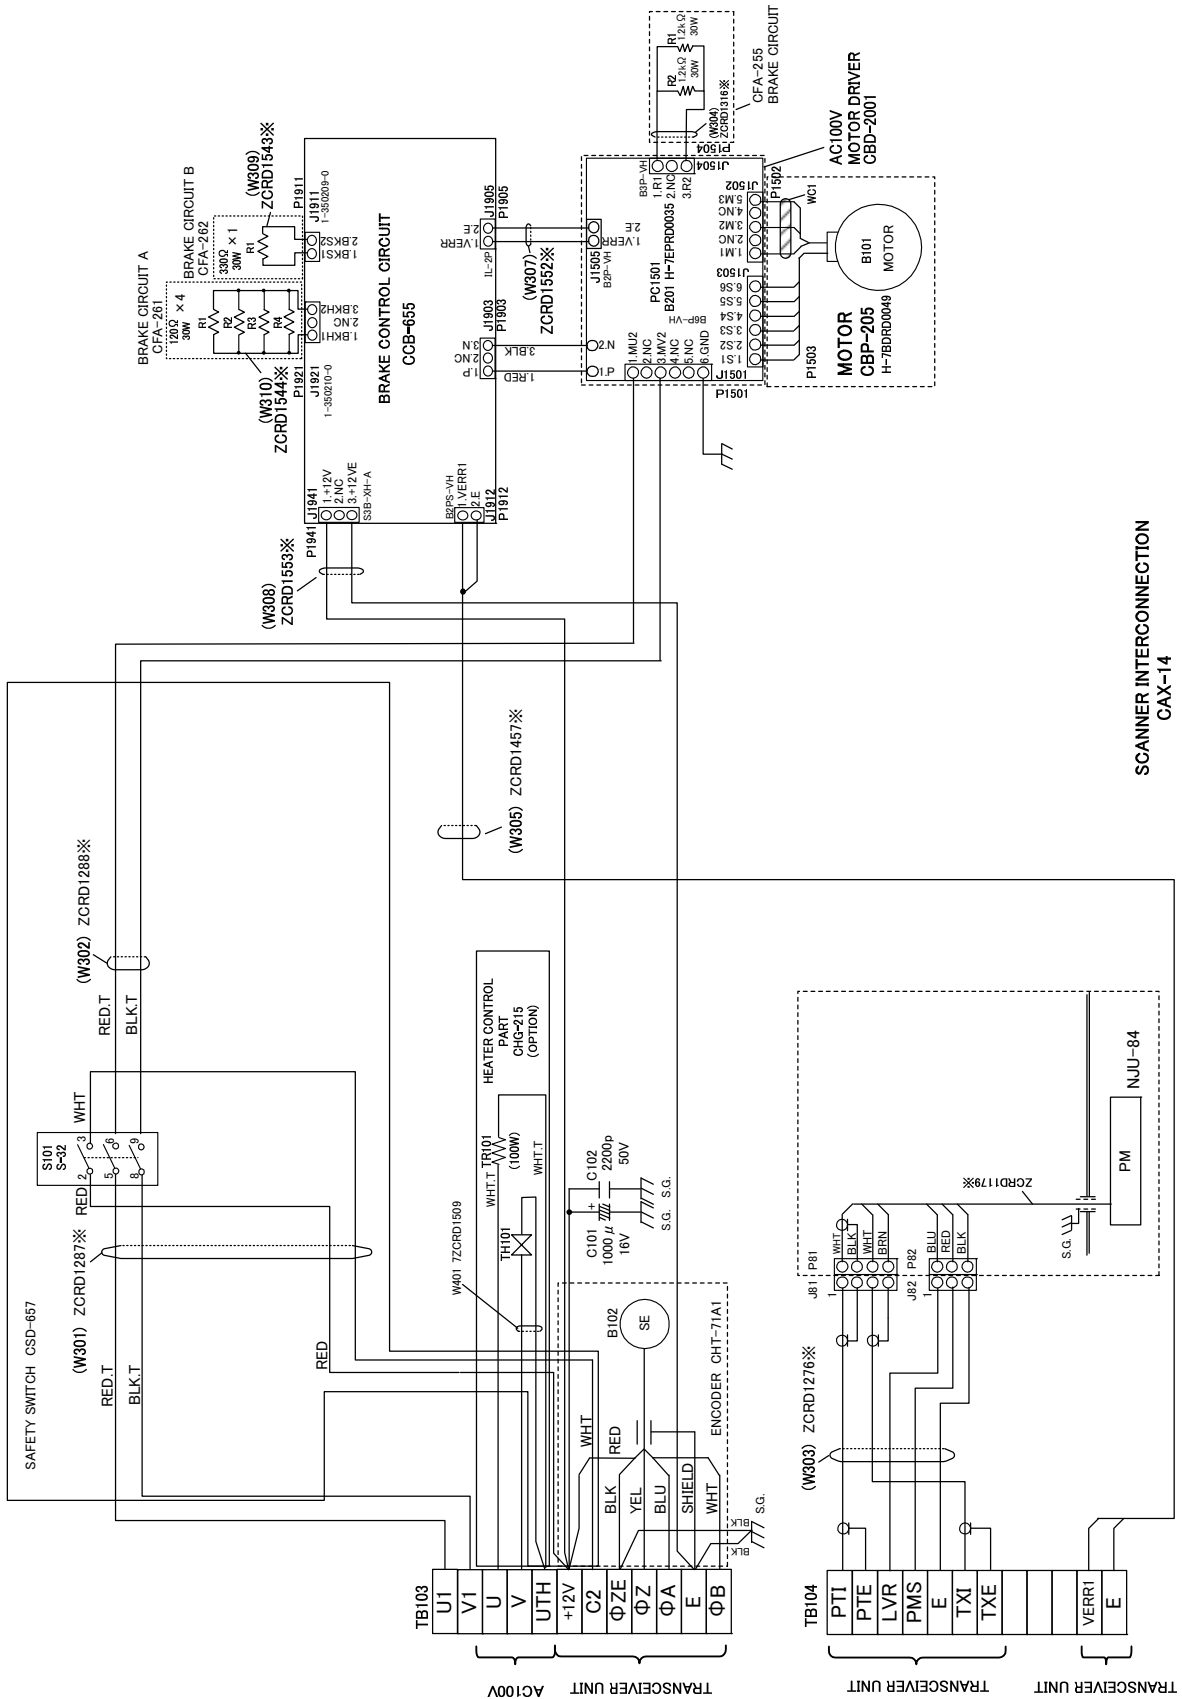


NKE-1139PM (AC100V) サハント, 3ユニット
空中線機内接続図

8.3.18 NKE-1139 (AC220V)

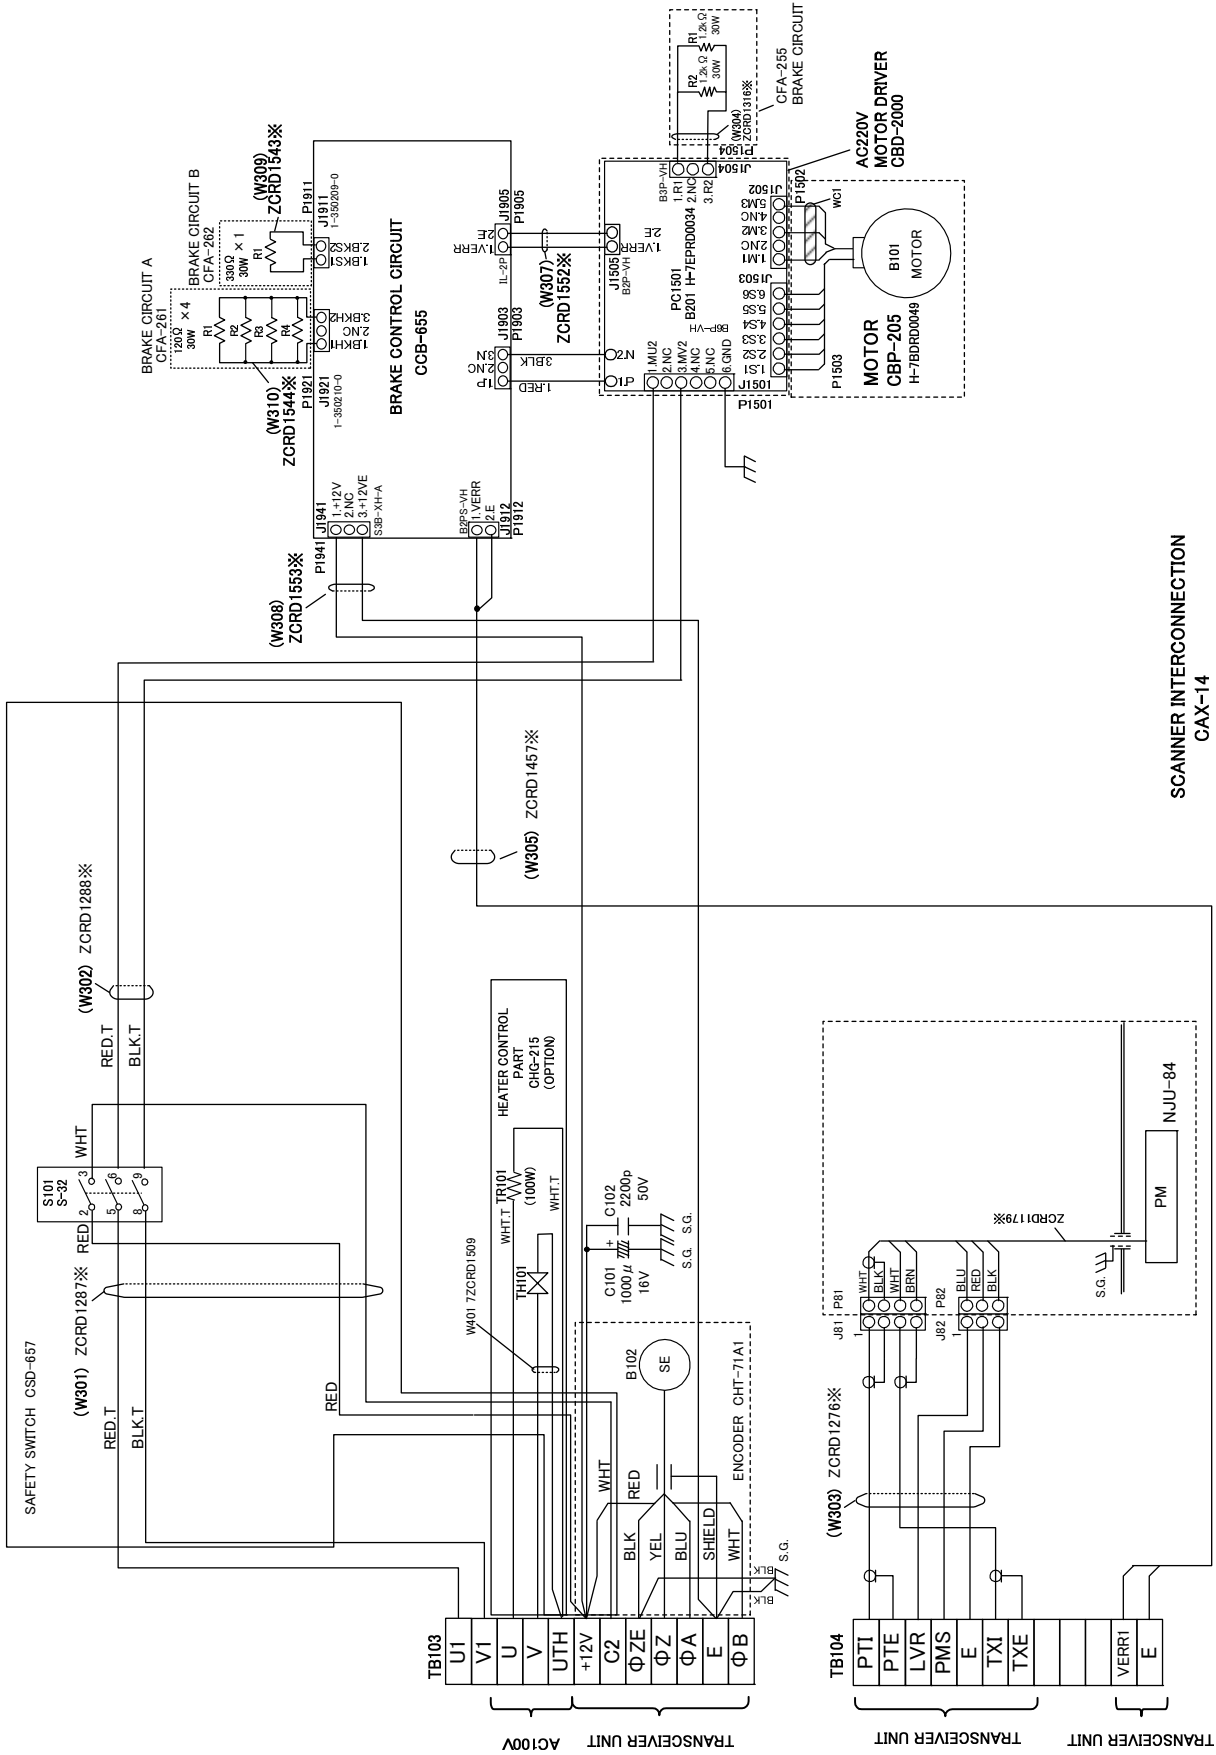


NKE-1139PM (AC220V) サウンド・ユニット
空中線機内接続図

8.3.20 NKE-1130 (AC110V)

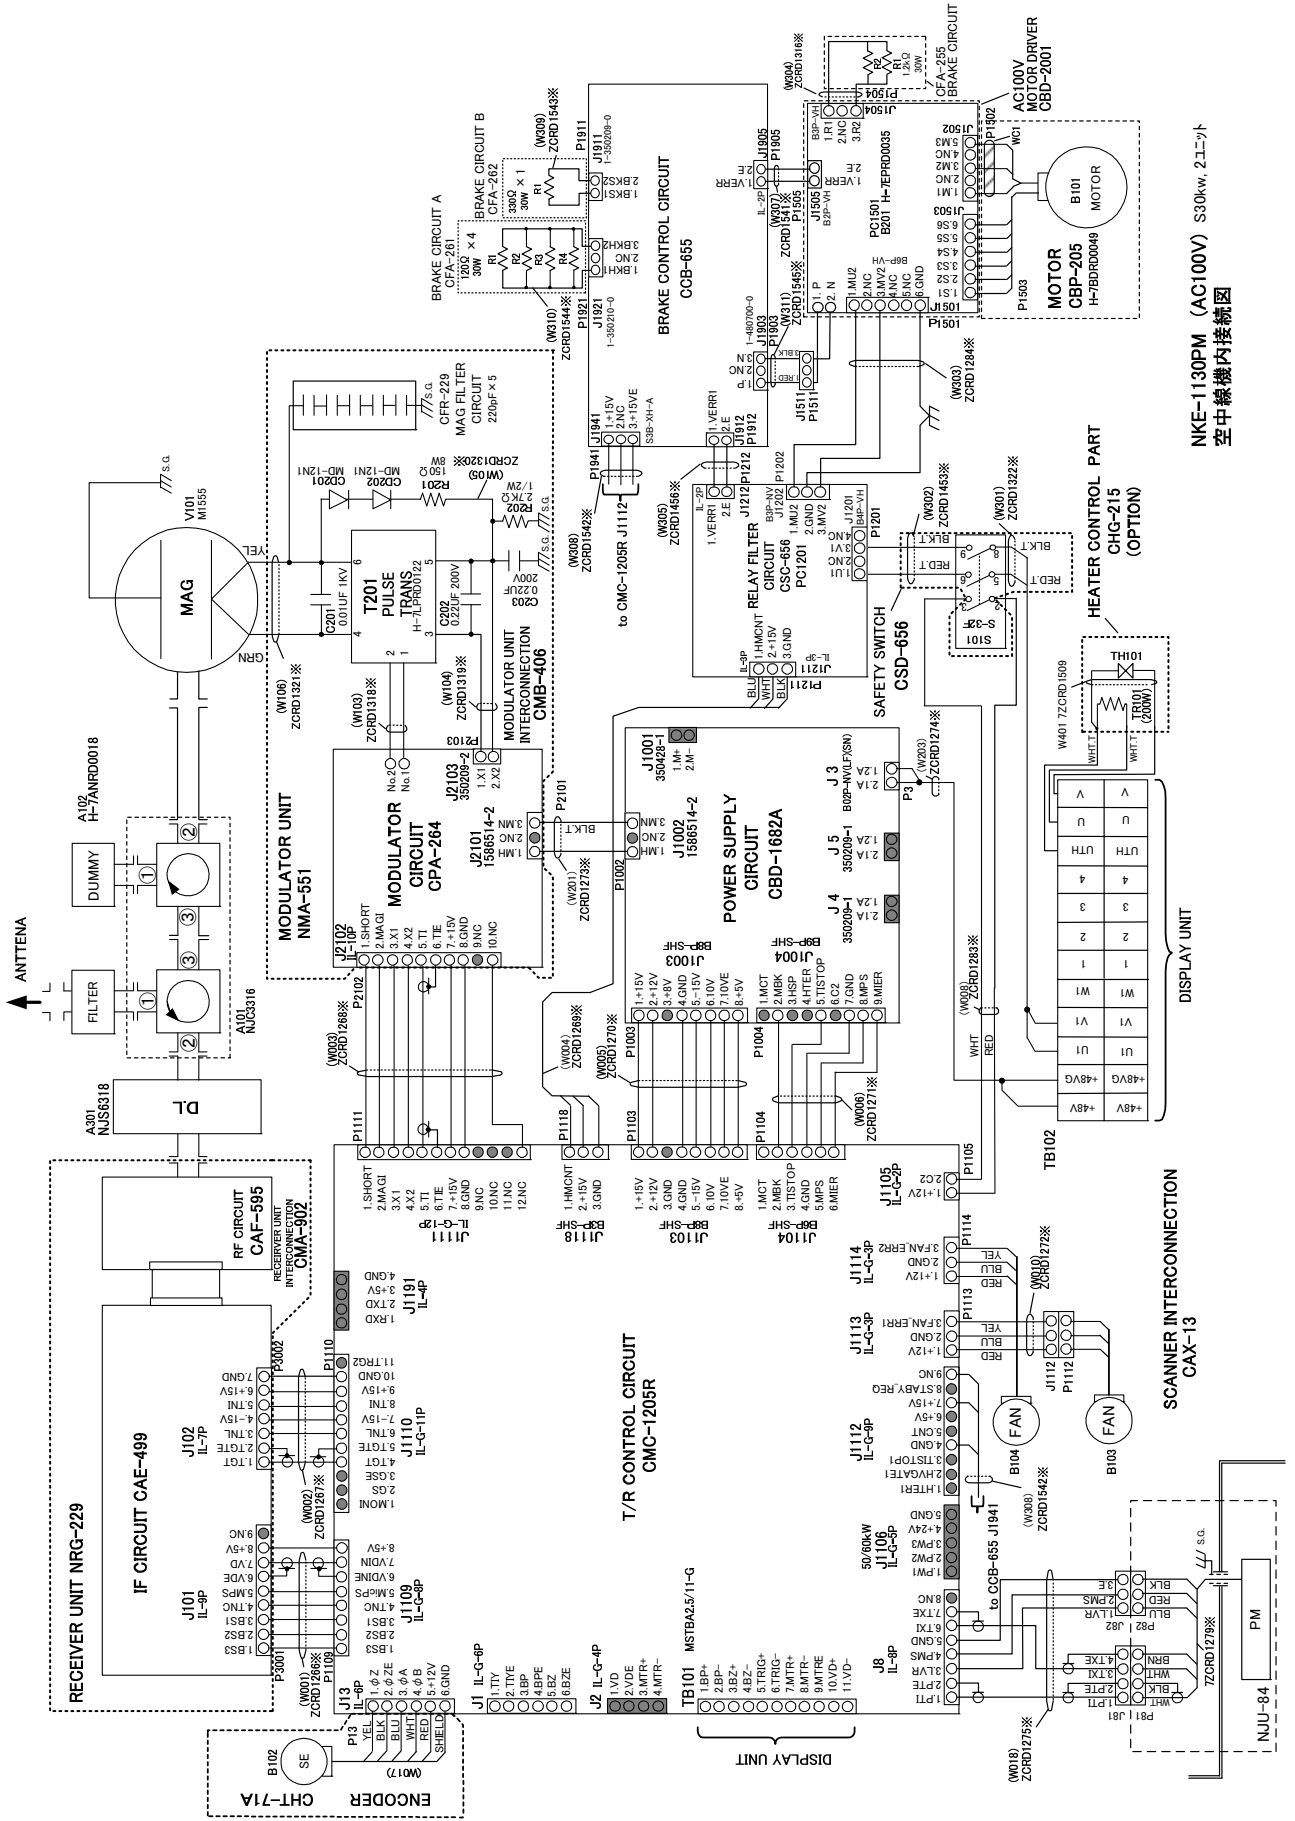


NKE-1130PM (AC100V) S30kw, 2ユニット
空中線機内接続図

8.3.21 NKE-1130 (AC220V)

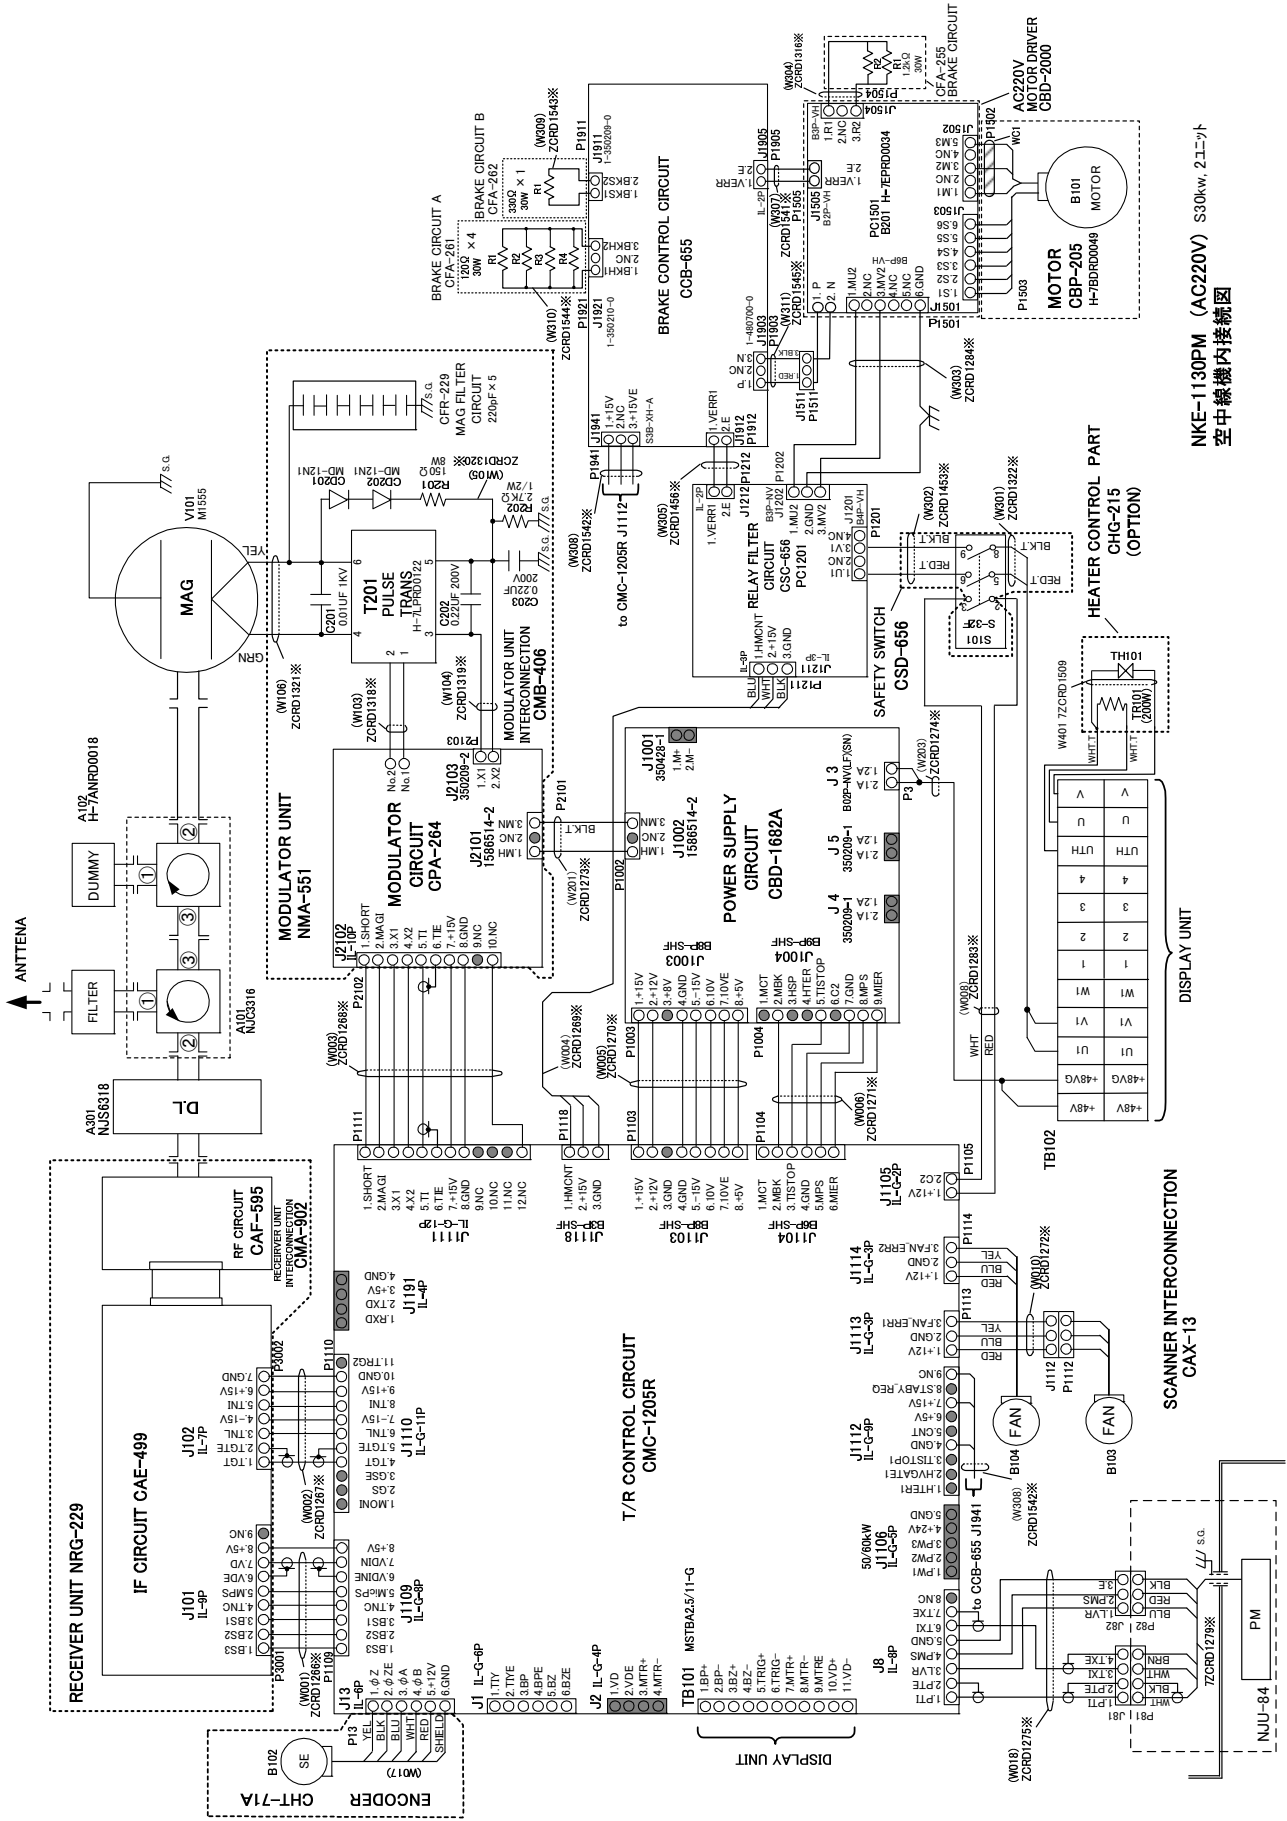

NKE-1130PM (AC220V) S30kw, 2ユニット
空中線機内接続図


8.3.22 NKE-1129 (AC110V)

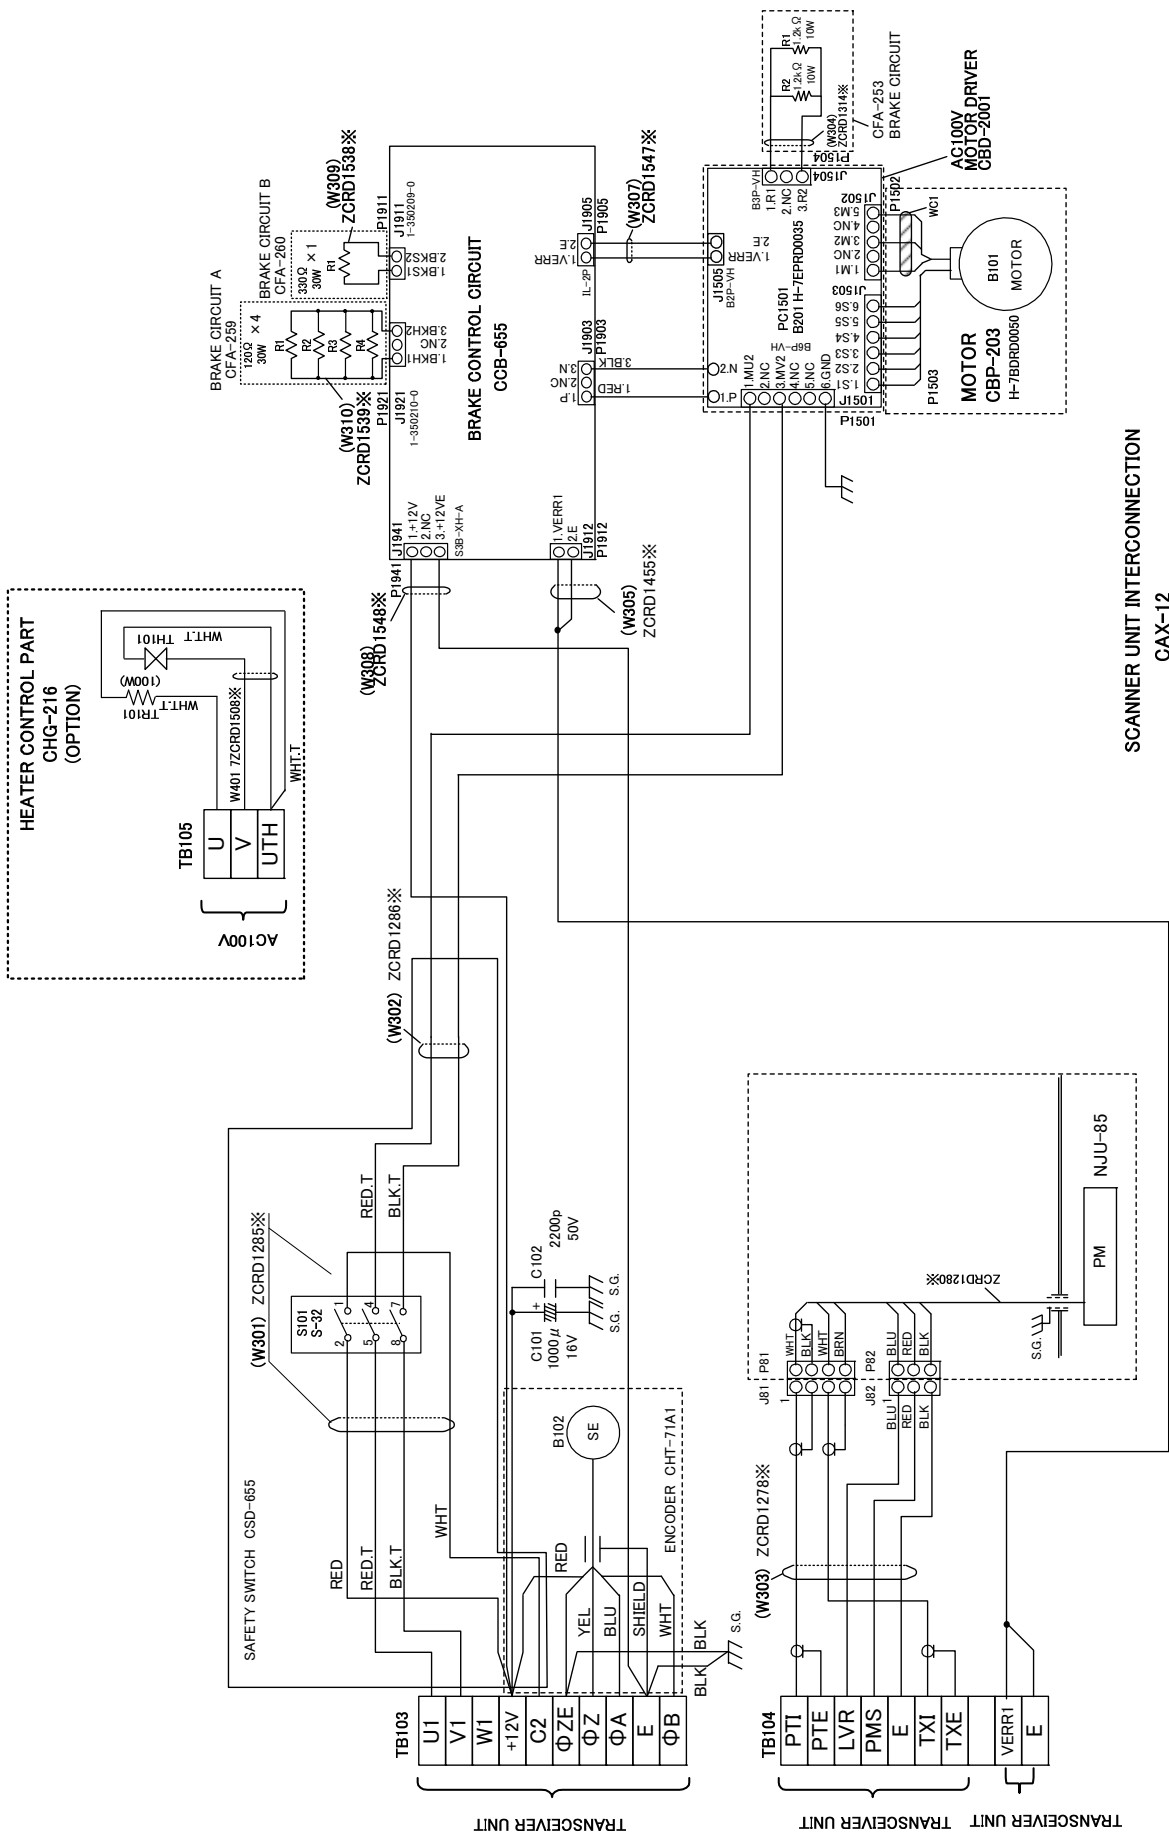

SCANNER UNIT INTERCONNECTION
CAX-12

NKE-1129PM (AC100V) Xハンド, 3ユニット
空中線機内接続図


8.3.23 NKE-1129 (AC220V)

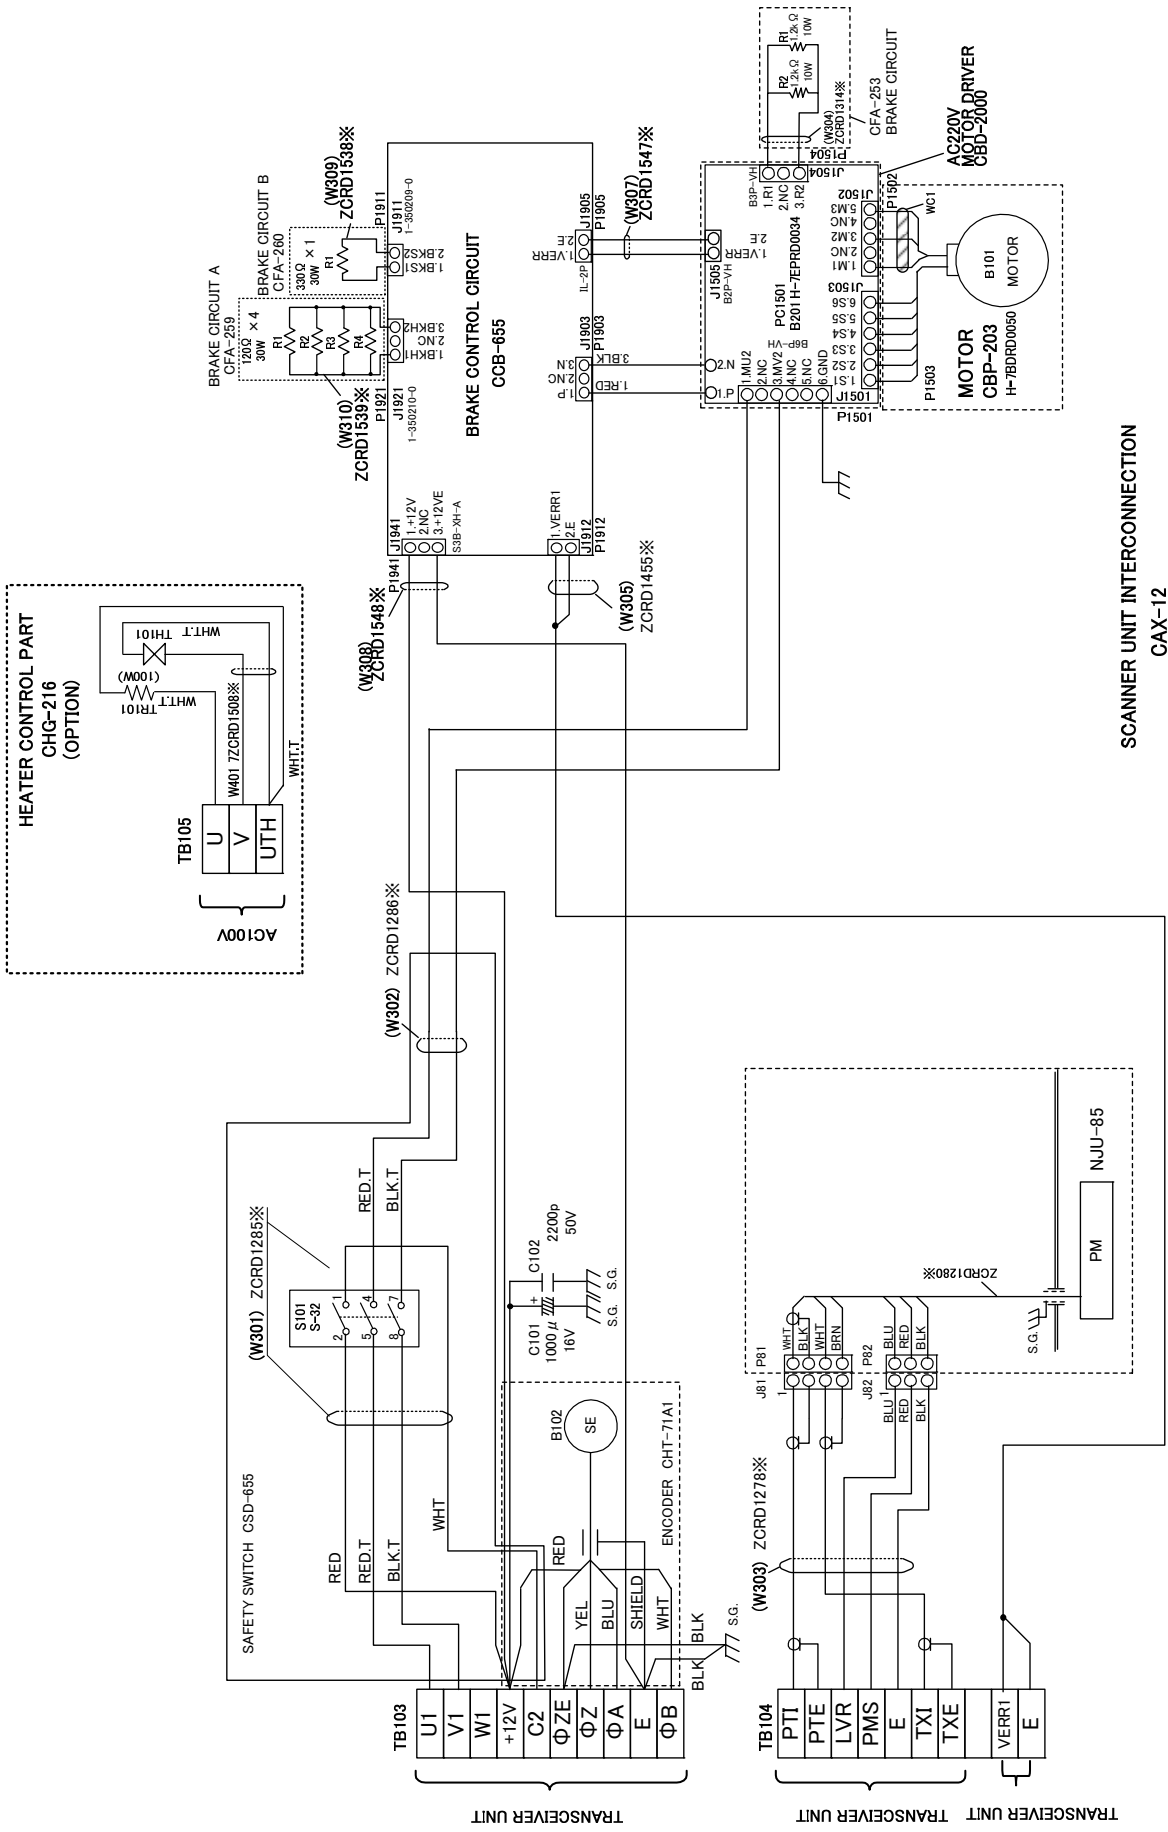

SCANNER UNIT INTERCONNECTION
CAX-12

NKE-1129PM (AC220V) ハンド, 3ユニット
空中線機内接続図


8.3.24 NTG-3225

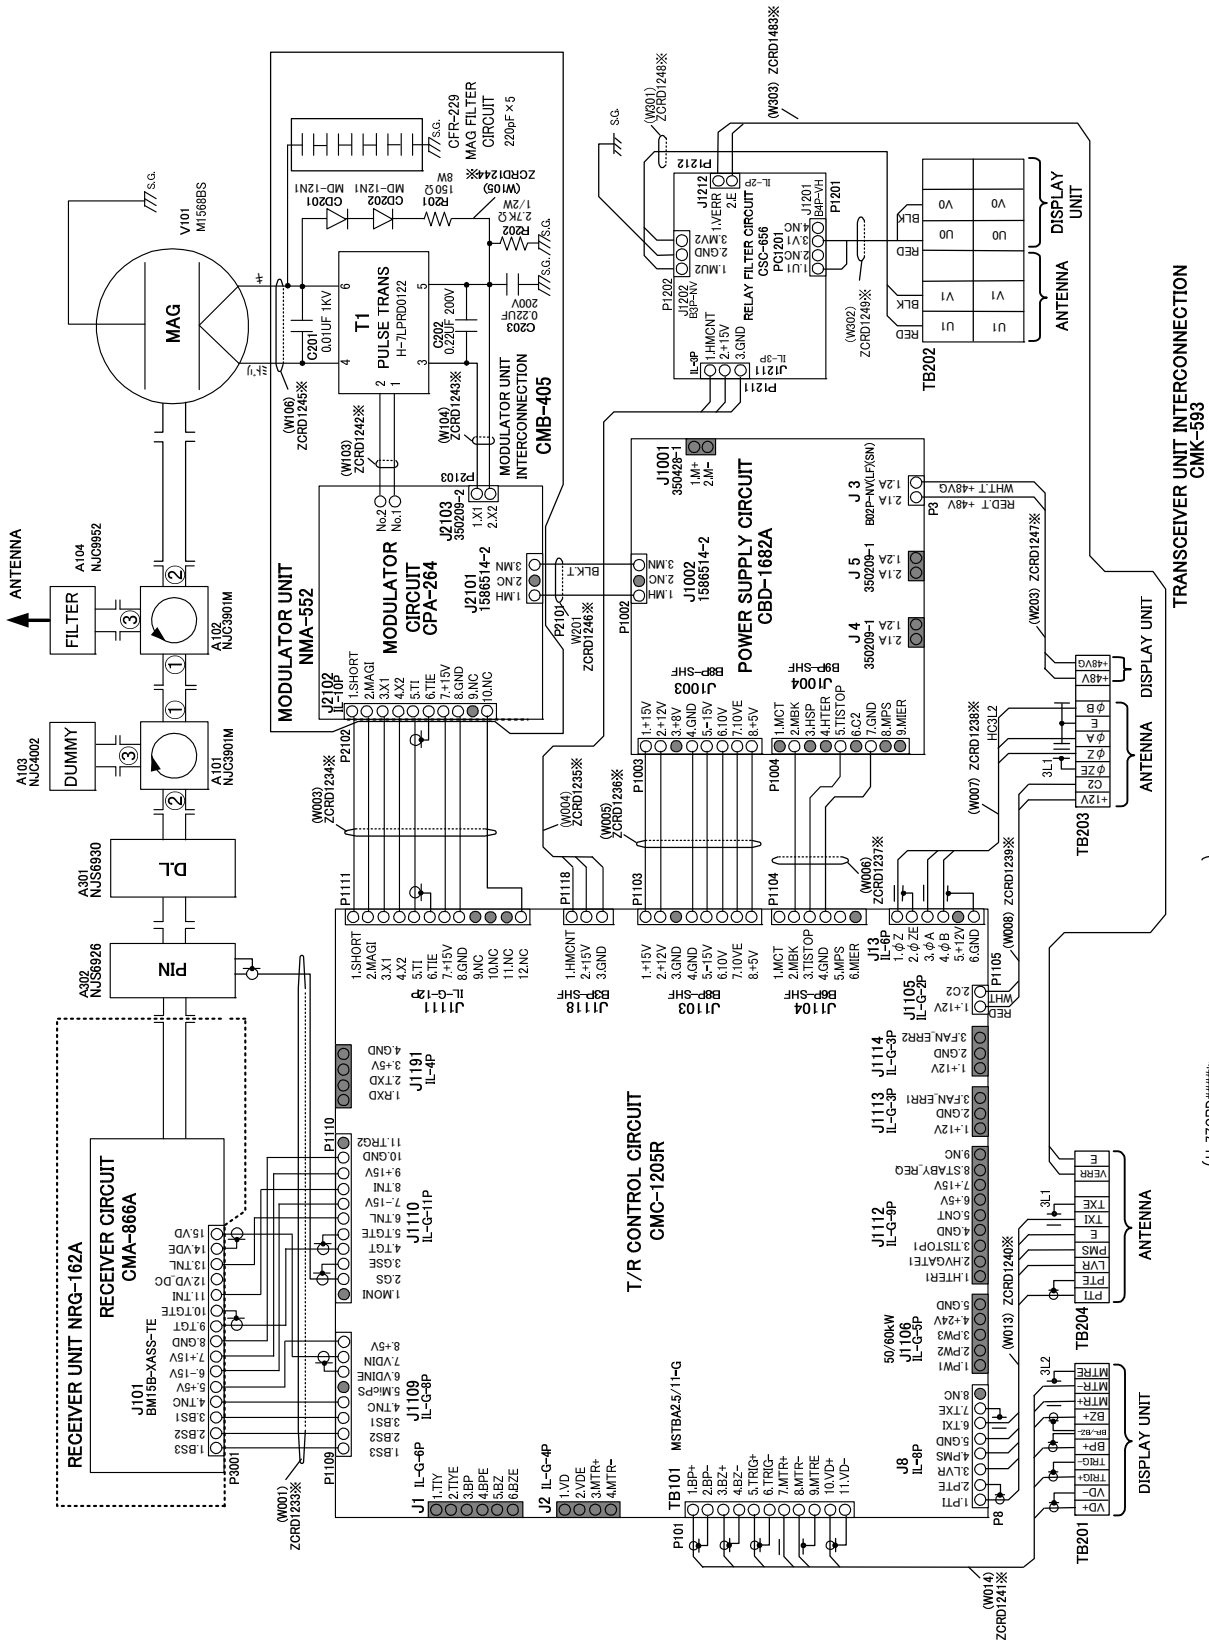

NTG-3225
送受信機機内接続図


(H-7ZCRD###: "##" means specification document No. "##" means revision of the specification document.)

8.3.25 NKE-1125 (AC110V)

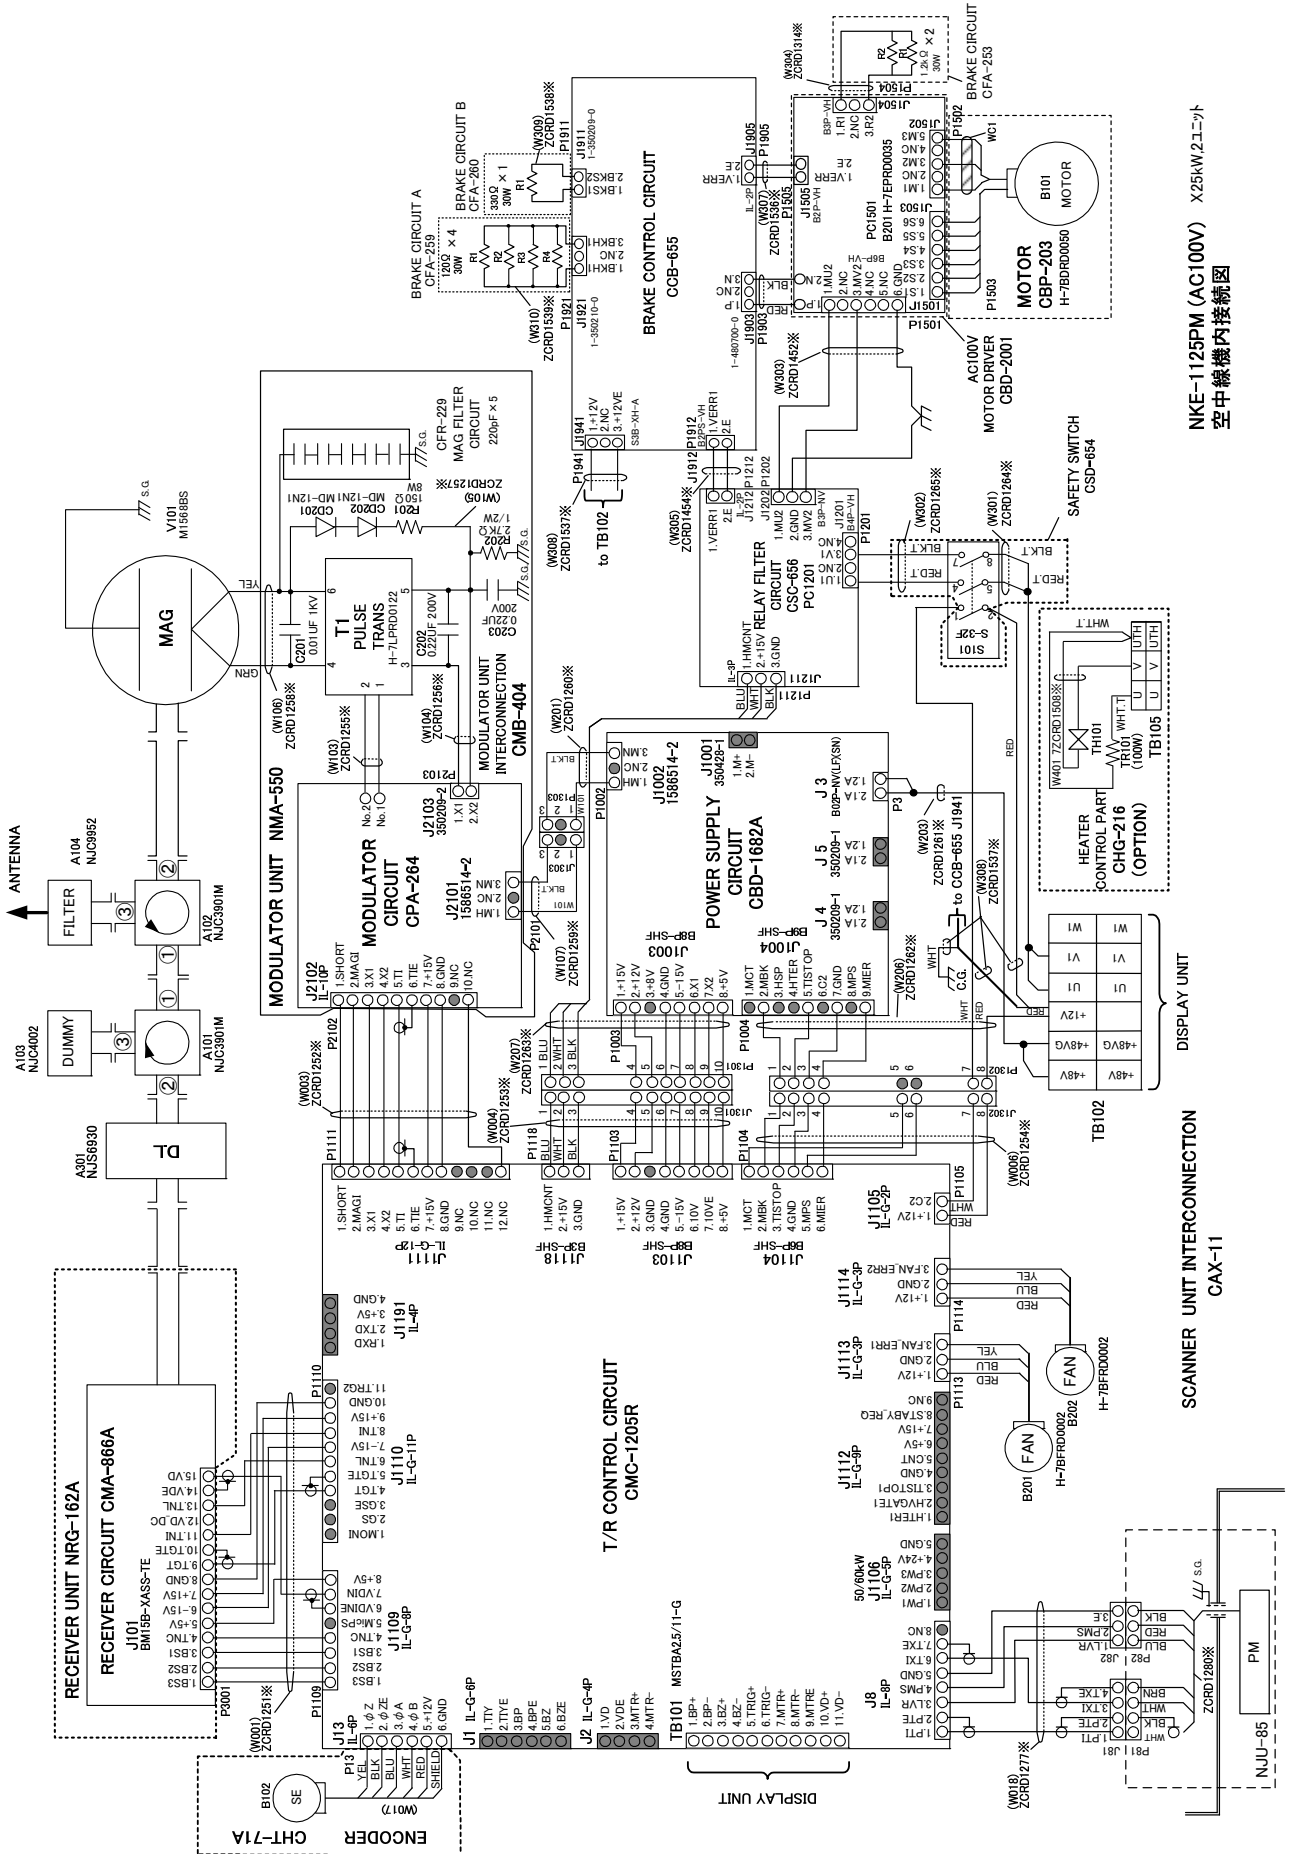


NKE-1125PM (AC100V) X25kW(2.2ユ-ト)
空中線機内接線図

8.3.26 NKE-1125 (AC220V)

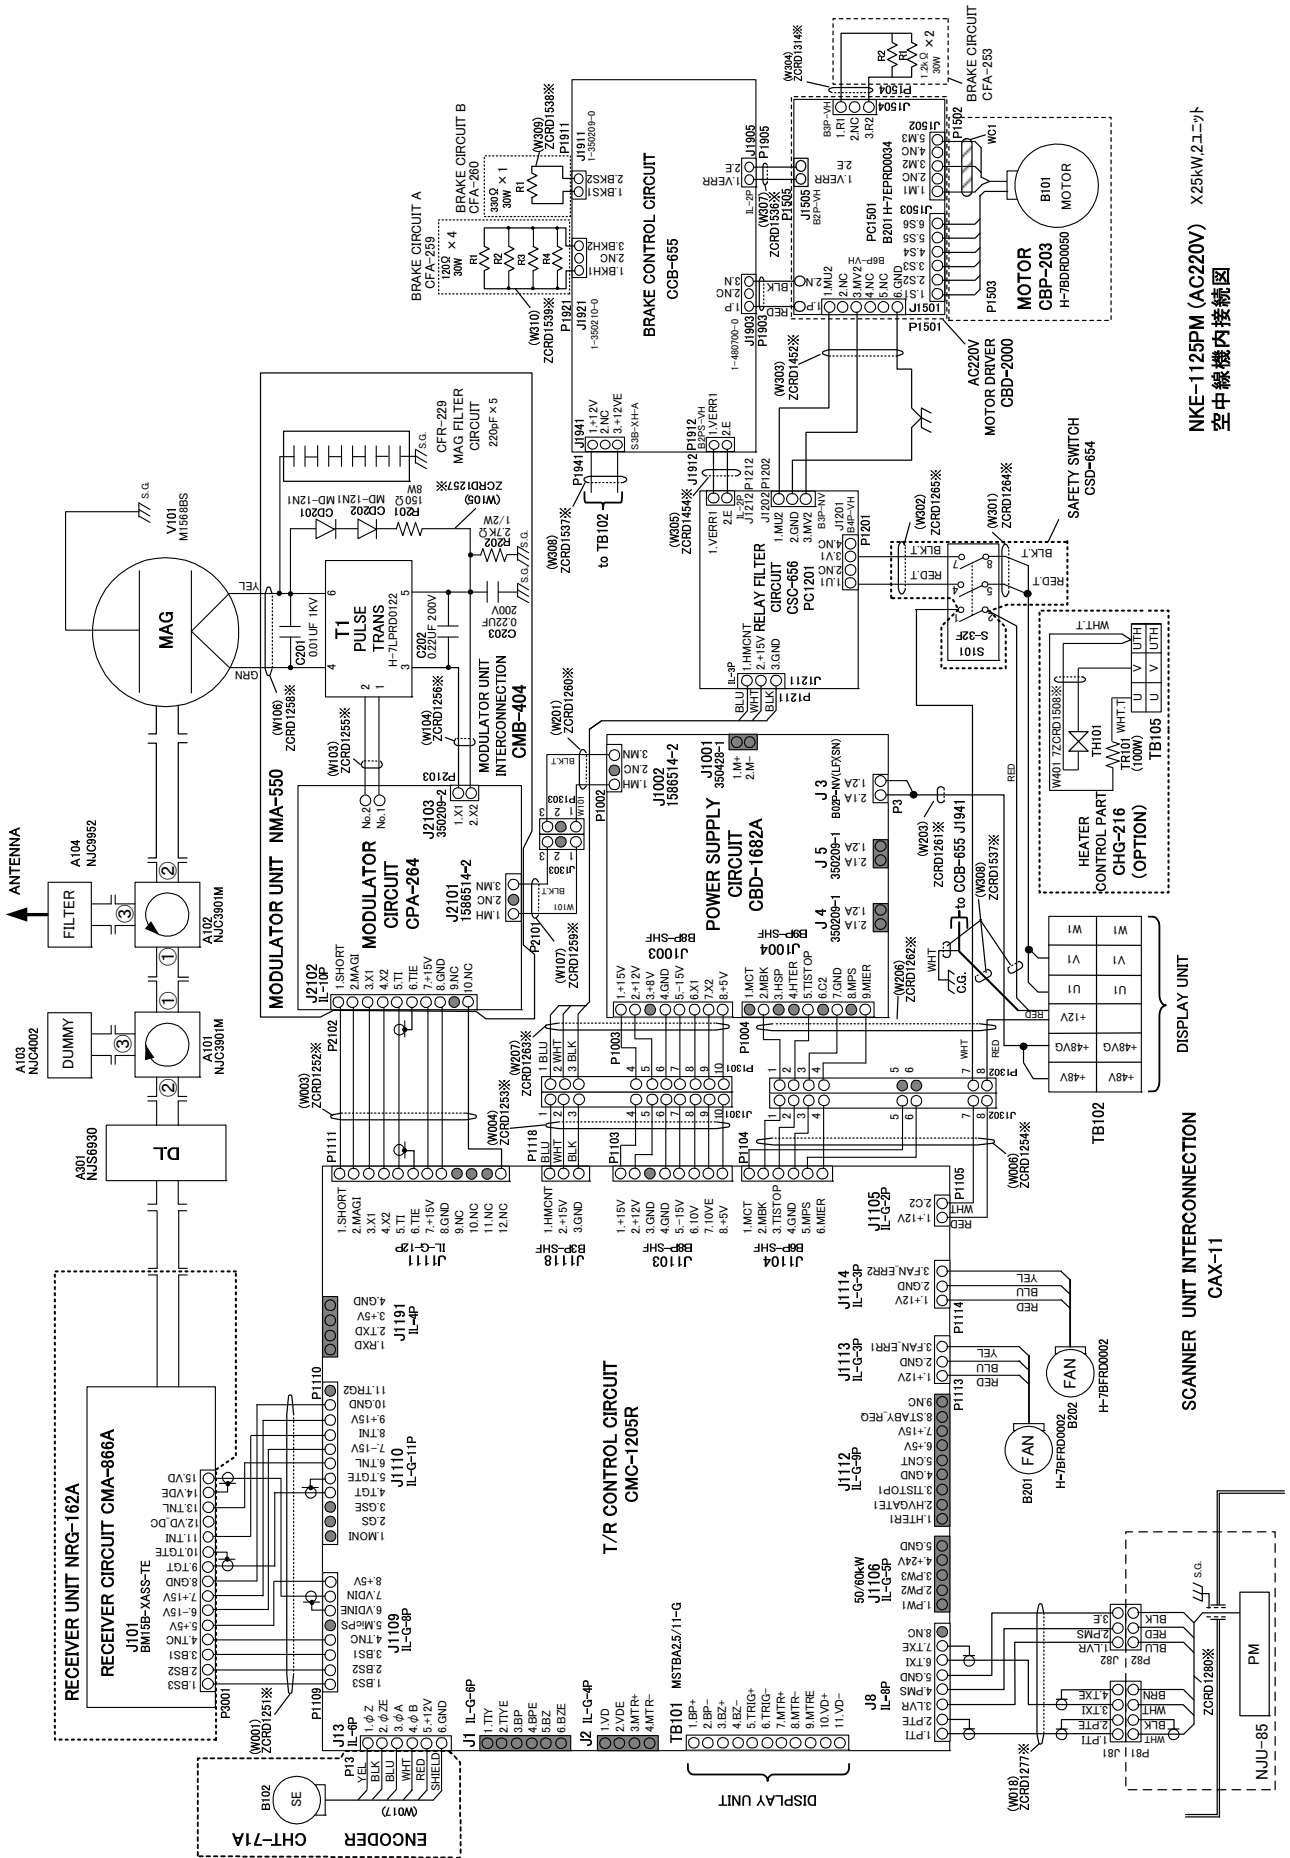

NKE-1125PM (AC220V) X25kW(2.2ユ-ト) 空中線機内接線図


8.3.28 NKE-2103-6/6HS

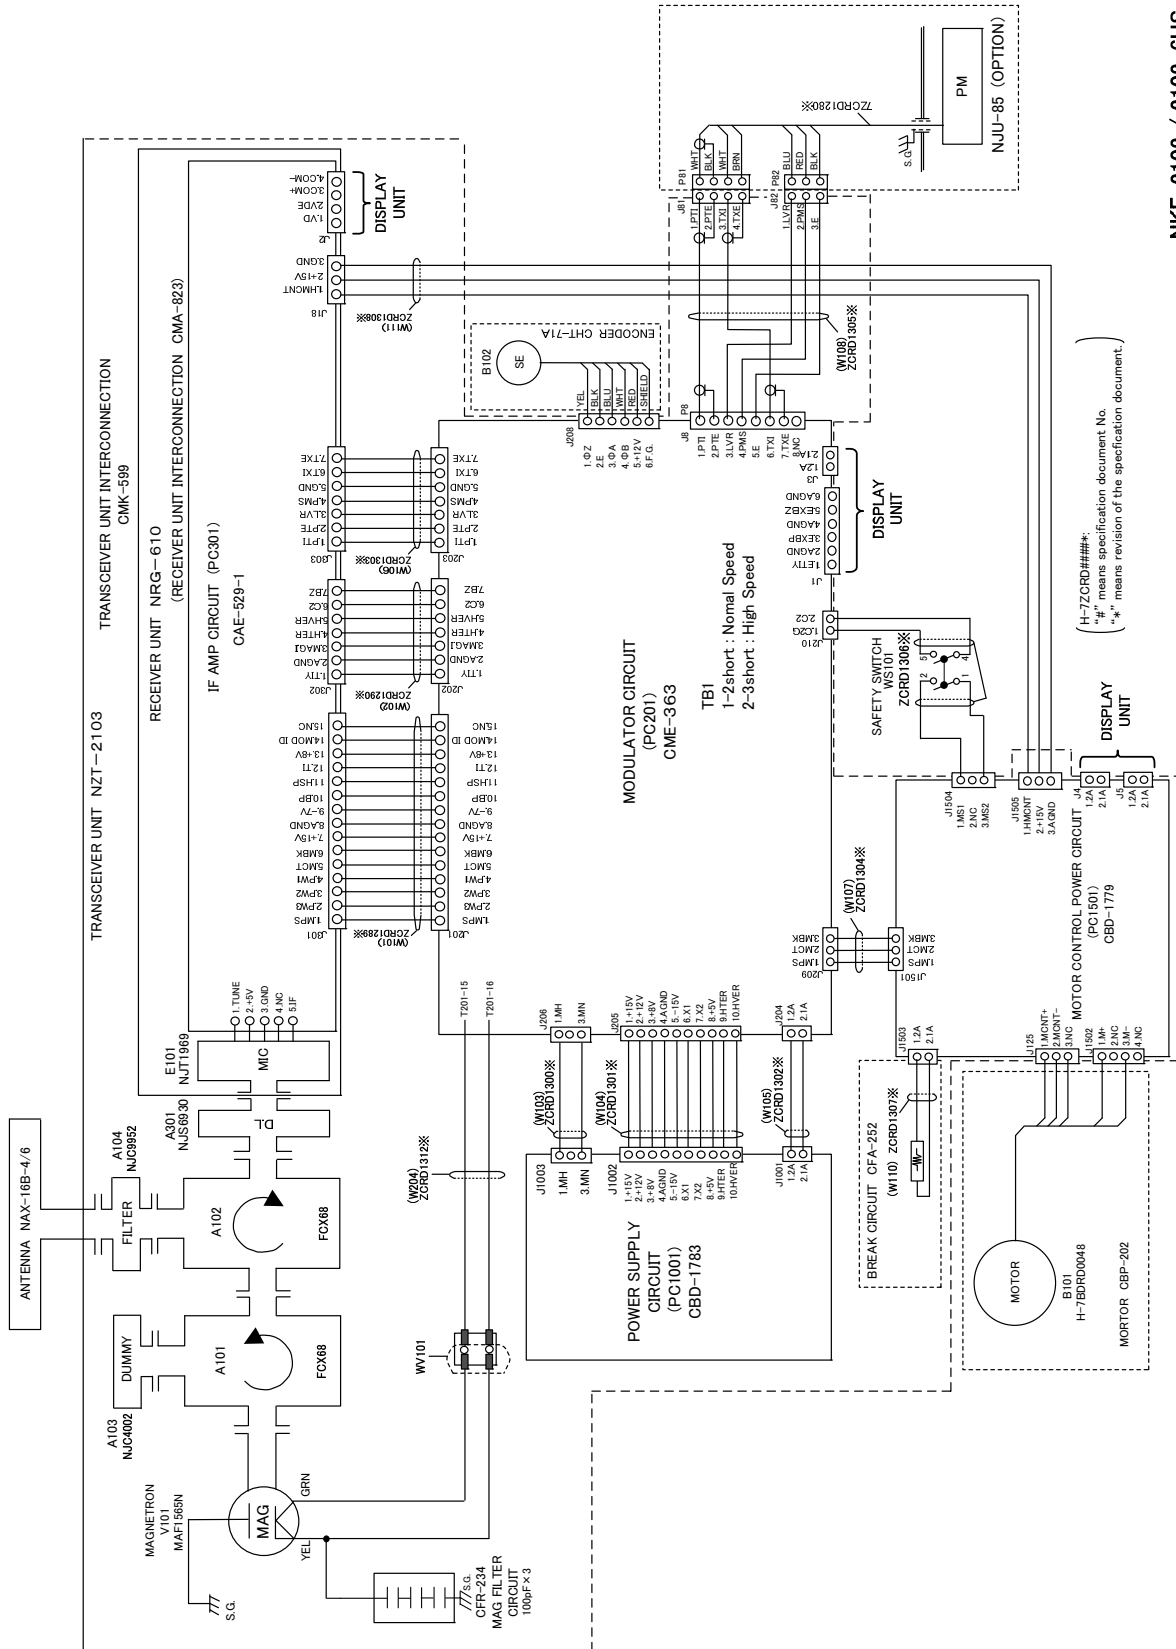

NKE-2103 / 2103-6HS
 空中線機内接続図

SCANNER UNIT INTERCONNECTION
 CAX-10

8.3.30 NKE-2632/NKE-2632-H

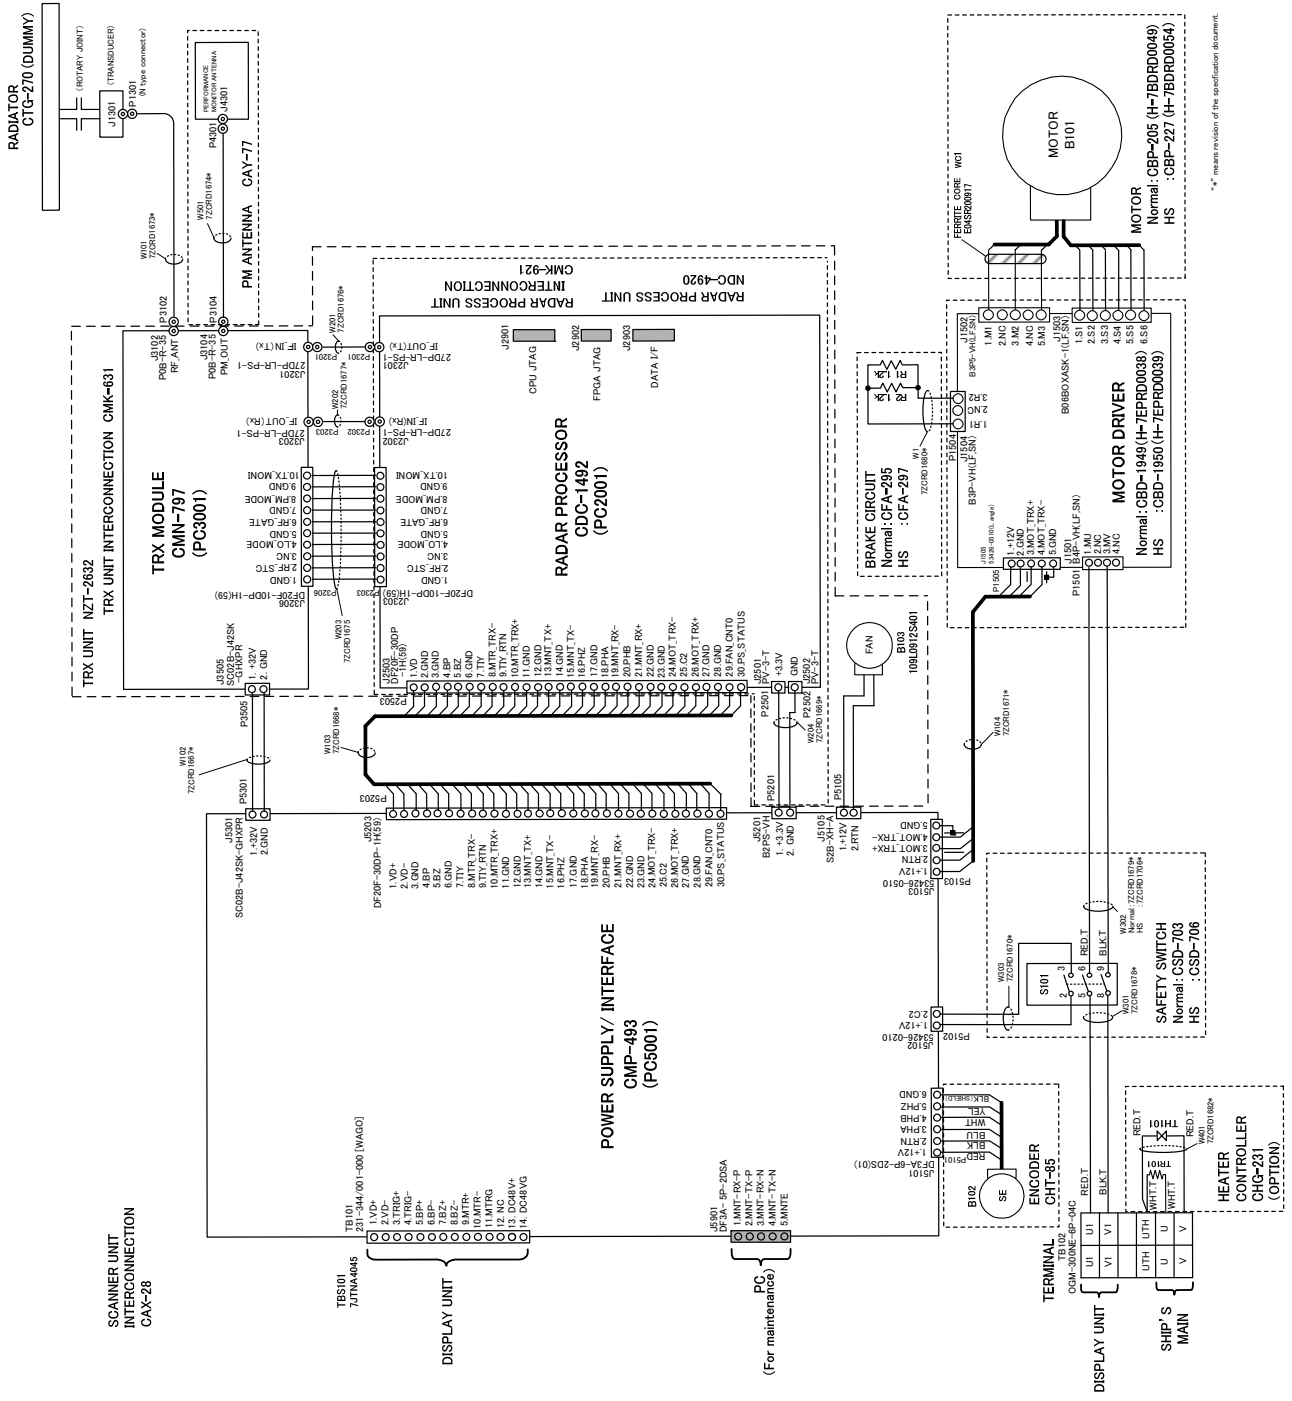

NKE-2632/2632-H INTERCONNECTION

アスベストは使用していません

Not use the asbestos

CODE No.7ZPNA4467A

For further information, contact:

JRC *Japan Radio Co., Ltd.*

Since 1915

URL <http://www.jrc.co.jp>

Marine Service Department

Telephone : +81-3-3492-1305

Facsimile : +81-3-3779-1420

e-mail : tmisc@jrc.co.jp

SEATTLE Branch

Telephone : +1-206-654-5644

Facsimile : +1-206-654-7030

e-mail : marineservice@jrcamerica.com

ALPHATRON

Alphatron Marine BV

URL <http://www.alphatronmarine.com>

Rotterdam (Head office)

Alphatron Marine B.V.

Telephone : +31 (0)10- 453 4000

Facsimile : +31 (0)10- 452 9214

e-mail : service@alphatronmarine.com

Singapore Branch

Alphatron Marine Systems Pte Ltd

Telephone : +65 6863 0335

Facsimile : +65 6863 3305

e-mail : service@alphatronmarinesystems.com

01ETM

ISO 9001, ISO 14001 Certified

©JUL. 2015 Edition 3 JRC

Printed in Japan