

HGP-3000E

USER MANUAL

Draft Version 1.1

Nov 08, 1999



FCC RF EXPOSURE INFORMATION

WARNING! *Read this information before using your phone*

In August 1996 the Federal Communications Commission (FCC) of the United States with its action in Report and Order FCC 96-326 adopted an updated safety standard for human exposure to radio frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards.



CAUTION Use only the supplied or an approved antenna. Unauthorized antennas, modifications, or attachments could impair call quality, damage the phone, or result in violation of FCC regulations.

Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for replacement antenna.

Body-worn Operation

This device was tested for typical body-worn operations with the back of the phone kept 0.6 inches (1.5 cm) from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 0.6 inches (1.5 cm) must be maintained between the user's body and the back of the phone, including the antenna, whether extended or retracted. Third-party belt-clips, holsters and similar accessories containing metallic components should not be used. Body-worn accessories that cannot maintain 0.6 inch (1.5 cm) separation distance between the user's body and the back of the phone, and have not been tested for typical body-worn operations may not comply with FCC RF exposure limits and should be avoided.

For more information about RF exposure, please visit the FCC website at www.fcc.gov

SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES

DRIVING SAFETY

Talking on the phone while driving is extremely dangerous and is illegal in some states. Remember, safety comes first. Check the laws and regulations on the use of phones in the areas where you drive. Always obey them.

Also, if using your phone while driving please:

- Give full attention to driving. Driving safety is your first responsibility.
- Use hands-free operation, if available.
- Pull off the road and park before making or answering a call, if driving conditions require.

If you must use the phone while driving, please use one-touch, speed dialing, and auto answer modes.

An airbag inflates with great force. DO NOT place objects, including both installed or portable wireless equipment, in the area over the airbag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

WARNING: Failure to follow these instructions may lead to serious personal injury and possible property damage.

SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES

ELECTRONIC DEVICES

Most modern electronic equipment is shielded from RF energy.

However, certain electronic equipment may not be shielded against the RF signals from your wireless phone.

Pacemakers

The Health Industry Manufacturers Association recommends that a minimum separation of six (6) inches be maintained between a hand-held wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research.

If you have a pacemaker:

- ALWAYS keep the phone more than six inches from your pace-maker when the phone is turned on.
- Do not carry the phone in a breast pocket.
- Use the ear opposite the pacemaker to minimize the potential for interference.
- If you have any reason to suspect that interference is taking place, turn your phone OFF immediately.

Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your service provider (or call the customer service line to discuss alternatives).

SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES

ELECTRONIC DEVICES

Other Medical Devices

If you use any other personal medical device, consult the manufacturer of your device to determine if they are adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information.

Turn your phone OFF in healthcare facilities when any regulations posted in these areas instruct you to do so. Hospitals or healthcare facilities may be using equipment that could be sensitive to external RF energy.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted Facilities

Turn your phone OFF where posted notices so require.

SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES

OTHER SAFETY GUIDELINES

Aircraft

FCC Regulations prohibit using your phone while in the air. Switch OFF your phone before boarding an aircraft.

Blasting Areas

To avoid interfering with blasting operations, turn your phone OFF when in a "blasting area" or in areas posted: "Turn off two-way radio" Obey all signs and instructions.

Potentially Explosive Atmospheres

Turn your phone OFF when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death. Areas with a potentially explosive atmosphere are often, but not always, clearly marked. They include fueling areas such as gas stations; below deck on boats; fuel or chemical transfer or storage facilities; vehicles using liquefied petroleum gas (such as propane or butane); areas where the air contains chemicals or articles, such as grain, dust, or metal powders; and any other area where you would normally be advised to turn off your vehicle engine.

SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES

PRECAUTIONS

Your Handheld Portable Telephone is a high quality piece of equipment.

Before operating the equipment, read all instructions and cautionary markings on (1) AC Adaptor (2) Battery and (3) Product Using Battery.

1. DO NOT use this equipment in an extreme environment where high temperature or high humidity exists.
2. DO NOT abuse the equipment. Avoid striking, shaking or shocking. When not using the unit, lay down the unit to avoid possible damage due to instability.
3. DO NOT expose this equipment to rain or spilled beverages.
4. DO NOT use unauthorized accessories.
5. DO NOT disassemble the phone or its accessories. If service or repair is required, return unit to an authorized audiovox cellular service center. If unit is disassembled, the risk of electric shock or fire may result.
6. DO NOT short-circuit the battery terminals by metal items etc

SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES

WARNING

The following offenses are punishable by fine, imprisonment, or both:

- Using obscene, indecent, or profane language.
- Using the unit to give off false distress calls.
- Wiretapping or otherwise intercepting a telephone call, unless that person has first obtained the consent of the parties participating in the call.
- Making anonymous calls to annoy, harass, or molest other people.
- Charging to an account without authorization to avoid payment for service.
- Refusing to yield a party line when informed that it is needed for an emergency call (It is also unlawful to take over a party line by stating falsely that it is needed for an emergency).

TABLE OF CONTENTS

CHAPTER 1 BEFORE USING YOUR PHONE 1

Package Includes	5
Handset Description	5
Basic Functions	6
The Function Keys	6
Display Indicators	6
Screen Status, Display and Function	6
Using the Battery	7
installing the Battery	7
Removing The Battery	7
Charging the Battery	7
Power Connection	7
Charging the Battery Only	7
Charging the Battery with the Handset	8
Charging Completion	8
Status of Charger LED	8
Important Battery Information	9

CHAPTER 2 BASIC OPERATION 9

Turning the Phone On and Off	10
Turning the Phone On	10
Turning the Phone Off	10
How to Use the Menu	10
Menu Summary	11
Basic Functions	12
Key Pad Lock	12
Making a Call	12
Pause Feature	12
How to Answer Calls	13
Caller ID Function	13
Call Waiting Function	13
Missed Call Display	13
How to Adjust Volume	13
Functions During a Call	14
Sending Your Number to a Pager	14
Scratch Pad	14
Mute	14

TABLE OF CONTENTS (CONT'D.)

CHAPTER 3 MEMORY FUNCTION	15
How to Store a Phone Number	16
How to Enter Letters and Characters Using the Dial Buttons	16
How to Make a Call Using A Stored Phone Number	17
One Touch/Two Touch Dialing	17
How to Find Your Phone Book	18
Recalling by Memory Location Number	18
Recalling by Name (Alpha)	19
CHAPTER 4 MENU	20
Settings	21
Auto Retry	21
Auto Answer	22
Auto Hyphen	22
Open to Answer	22
DTMF Length	22
One Touch Dialing	22
Voice Privacy	22
Display	23
Logo Display	23
Banner	23
LCD Contrast	23
Graphic Icon	23
Language	23
Backlight	23
Lighting Length	23
Volume	24
Ringer Type	24
Ring Mode	24
Volume Adjustment	24
Call Timers	25
Last Call	25
All Calls	25
Home Calls	25
Roam Calls	25
Bio-Rhythm	25

TABLE OF CONTENTS (CONT'D)

Alerts	26
Minute Alert	26
Fade Alert	26
Roam Alert	26
Connect Alert	26
Phone Info	27
Checking My Number	27
Checking the Phone Version	27
CHAPTER 5 SECURITY FEATURES	27
How to Lock Your Phone	28
Auto Lock	28
Lock Code Change	29
How to Restrict Your Phone	29
Restriction Functions	29
To Restrict Incoming Calls	29
Restricting Outgoing Calls	29
Restricting the Key Pad	29
Restricting the Phone Book	30
Restricting Long Distance Calls	30
Restrict Calls to 900 Numbers	30
How to Reset Your Phone	31
How to Clear Your Phone Memory	31
Clearing Stored Phone Numbers	31
Clearing schedule Contents	31
Clearing Air Time in Home Service Area	32
Roam Calls	32
CHAPTER 6 SUPPLEMENTARY FUNCTIONS	32
Melody Setup	33
Entering Melody	33
To Enter Melody	33
Listening to the Melody	33

TABLE OF CONTENTS (CONT'D.)

CHAPTER 7 VOICE MAIL AND TEXT MESSAGES . . .	34
Receiving a Message	34
Voice Mail Message	35
Text Message	35
Checking Received Message	35
Checking Received Voice Mail Message	35
Erase Text Messages	36

CHAPTER 1

BEFORE USING YOUR PHONE

Please read this chapter before using this product.

- ❶ Package Includes
- ❷ Handset Description
- ❸ Basic Functions
- ❹ Display Icons
- ❺ Using the Battery
- ❻ Charging the Battery
- ❼ Important Battery Information

PACKAGE INCLUDES

Thank you for purchasing this product. Please check the product contents by comparing them with the following pictures.

 
Handset



Standard Battery



User Manual

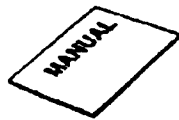

Extended Battery (optional)



 
Handstrap



Desktop Charger



Ear mic



HANDSET DESCRIPTION

LED

Blinks when you
make a call or
receive a call

Volume Button

Used to adjust
the volume of
the earpiece and
ringer volume.

Antenna

For best call
quality, extend
the antenna during
the call

Earpiece

LCD Screen

Function

Keys

Keypad

Microphone

BASIC FUNCTIONS

THE FUNCTION KEYS



This key is used to make or receive a call.



This key is used to terminate a call or exit the current menu. This key is used to turn the handset on or off. It also releases the Key Lock function.



These keys are used to scroll through the contents of the menu.



(Soft 1) This key is used to access the Menu when pressed and held for more than 1 second.



(Soft 2) This key is used to access voice or text messages.

DISPLAY INDICATORS

SCREEN STATUS, DISPLAY AND FUNCTION



Signal Strength

Indicates current signal strength. More lines mean better signal strength.



Roaming

Indicates the Phone is outside of its home area.

Service Indicator

When a call is in progress,  is displayed.

When  is displayed, the phone is in idle mode.

When  is displayed, the phone is not receiving a signal from the system.



Message

Indicates a text message or voice mail message is aiting.



Alarm

Indicates that the alarm is activated.



Battery

Indicates battery charge level status. The more black

will not turn on or the battery may slip out during use.

USING THE BATTERY

USING THE BATTERY

- 1 **①** Insert the bottom of battery into the groove at the bottom of the handset. Then **②** press in the top of the battery until it snaps

REMOVING THE BATTERY

- 1 Push the tab **①** with one hand and lift the top of the battery **②** to separate.

The battery must be correctly placed in the battery com-partment.

If battery is incorrectly inserted, the handset



CHARGING THE BATTERY

POWER CONNECTION

- 1 Connect the charger to a standard 120V AC outlet.
LED will green when the power is connected.

CHARGING THE BATTERY ONLY

- 1 To charge the battery only, insert the battery pack charging slot on the rear of the charger.
LED will indicate charging status.
 - Red indicates charging
 - Green indicates charging is complete

☐ Battery is not charged when you purchase the product.

☐ Fully charge the battery before use.



CHARGING THE BATTERY

CHARGING THE BATTERY WITH THE HANDSET

- 1 To charge the battery with the handset, insert the handset into the charger.



Charging the battery with the handset on is less efficient than charging it with the handset off.

CHARGING COMPLETION

- 1 Charging is completed when the green-colored LED stays on.

CHARGING THE BATTERY

STATUS OF CHARGER LED'S

Charing Slot	Charging on Safety Mode (Green Color On)	Charging in Progress (Red Color On)	Charging Completion (Green Color On)
Front Charging Slot (Charging Slot for Handset Only) Charging Slot			



If the red LED does not come on after the handset or battery has been inserted into the charging slot, re-insert or check power.

IMPORTANT BATTERY INFORMATION

Use only batteries and chargers approved by the phone manufacturer. When a charger is not in use, disconnect it from the power source. Do not leave the battery connected to a charger for longer than a week; overcharging may shorten its life.

If left unused, a fully charged battery may completely drain (discharge) in 1 - 4 weeks.

Never use any charger or battery that is damaged or worn out.

Use the battery only for its intended purpose.

Do not short circuit the battery. Accidental short circuiting can occur when a metallic object (e.g. coin, clip or pen) causes direct connection of the two terminals of the battery (metal strips on the back of the battery),

for example, when you carry a spare battery in your pocket or purse. Short circuiting the terminals may damage the battery or the connecting object.

Leaving the battery in hot or cold places, such as in a closed car in summer or winter conditions, reduces the capacity and lifetime of the battery. Always try to keep the battery between 41 °F and 95 °F (5 °C and 35 °C). A phone with a hot or cold battery may temporarily not work (or charge) even if the battery is fully charged.

Temperature extremes affect the ability of your battery to charge; allow it to cool down or warm up first.

When the battery is not in use, store it uncharged in a cool, dark and dry place.

The battery is a sealed unit with no serviceable parts. Do not attempt to open the case.

It is recommended that you allow your battery to fully discharge before you recharge it.

The battery can be charged and discharged hundreds of times but will eventually wear out. When the operating time is shorter than normal, it is time to buy a new battery.

Do not dispose of a battery in a fire!

Dispose of used batteries in accordance with local regulations. Recycle!

CHAPTER 2

BASIC OPERATION

- ❶ Turning the Phone On and Off
- ❷ How to Use the Menu
- ❸ Menu Summary
- ❹ Basic Functions
- ❺ Functions During a Call

TURNING THE PHONE ON AND OFF

TURNING THE PHONE ON

- 1
 - Press and hold [END/P]
 - The phone is locked if "Lock Code" is displayed on the screen. When "Lock Code" is displayed, enter the 4-digit lock code to unlock the phone.
 - The default lock code is the last 4 digits of your phone number.

TURNING THE PHONE OFF

- 1
 - Press and hold [END/P] until "Good Bye" is displayed.



- If the "LOW BATTERY WARNING POWER OFF"s displayed and the power goes off, there is a possibility of damaging the memory. Change or charge the battery immediately
- If the battery is removed while the phone is on, it may erase last call information.

HOW TO USE THE MENU

- 1 In the standby screen, press and hold [∓]
- 2 In the menu, use scroll keys to view the menu selections. If you press and hold the scroll keys, the menu scrolls automatically.
Use the following to scroll:
[◀*], [▶#], [^], [∇] volume [+], volume [□], located on side of handset.
- 3 To go back to previous screen, press [⋮].
To the exit menu, press [END/P]
- 4 To go into submenu press the corresponding number or select the desired item using the scroll key.
- 5 [∓], [⋮], and [SEND] can be used while using the menu.

MENU SUMMARY

1:CHECK BILLING

2:PHONE BOOK 1 : CALL LOGS 1:MISSED CALL
2:ANSWERED CALL
3:DIALED CALL

2 : BY LOCATION
3: BY NAME

3:SETTING

1:AUTO RETRY
2:AUTO ANSWER
3:ONE TOUCH
4:VOICE PRIVACY
5:BACKLIGHT
6:LCD CONTRAST
7:LOGO DISPLAY
8:LANGUAGE

4:VOLUME

1:RING MODE
2:RING TYPE
3:KEYPAD

5:TIMER

1:LAST CALL
2:ALL CALLS
3:HOME CALLS
4:ROAM CALLS

MENU SUMMARY

6:SPECIAL

1 : SCHEDULE 1:LIST ALL
2:INPUT SCHEDULE
3:PAUSE ALL
2:MELODY 1: WRITE MELODY
2: HEAR MELODY
3:MELODY SPEED
3:STOPWATCH
4:CALCULATOR
5:BIORHYTHM 1:TODAY
2:SOMEDAY
3:BIRTHDAY

7:ALERT

1 : MIN ALERT
2: AREA ALERT
3:FADE ALERT
4:LOW SIG ALERT
5:CONNECT ALERT

 
 
0:SECRET

1:AUTO LOCK
2:CHANGE CODE
3:CHANGE BANNER
4:RESTRICT 1 : INCOMING
2 : OUTGOING
3: MEMORY
4: LONG DISTANCE
5:900 # 'S
5:RESET
6: CLEAR 1:CLR NUMBER
2:CLR SCHEDULE
3:CLR CALL LOGS
4:CLR HOME CALLS
5:CLR ROAM CALLS
7:PHONE #
8:VERSION

BASIC FUNCTIONS

MAKING A CALL

- 1 Enter the phone number.
How to modify the phone number
You have entered:
 - To erase the last number entered:
Press [...].
 - To erase all numbers entered and start again: Press [...] and hold for more than half of a second.

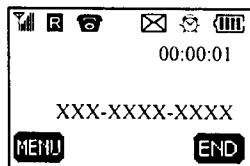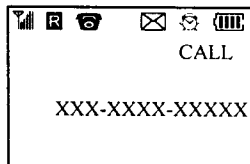


- 2 Press [SEND].
 - "CALL FAILED" message is displayed when the call does not connect.
 - If the line is busy, press [END/P]. Retry by pressing [SEND].
 - If you select the AUTO RETRY function, the call will be retried automatically for the time you have selected.
Press [END/P] to end the call.

BASIC FUNCTIONS

PAUSE FEATURE

Pauses are used for automated systems (i.e., voice mail and calling cards). To insert Pauses:

 - 1 Enter phone number, then press [· ·] .

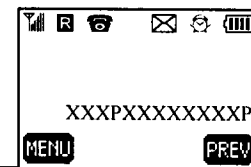

- 2 Select desired pause.
 - When idling status;
 - 1 : STORE
 - 2 : BY NUMBER
 - 3: HARD PAUSE
 - 4:ONE HYPHEN
 - When Receiving call status;
 - 1:STORE
 - 2:SEND PHONE#
 - 3:SCRATCH PAD
 - 4:MUTE
 - 5:VIEW PHONE#
 - 6:HARD PAUSE
 - 7:ONE HYPHEN
 - 8:VOICE PRIVACY

Pause Definitions

- HARD PAUSE: If you enter the pause character (P), the number entered after the Pause character will be sent after the number dialed.

- 3
 - Press [SEND] to dial or [1] to store.

BASIC FUNCTIONS

HOW TO ANSWER CALLS

- 1 When phone rings or LED blinks press any key except Volume or [END/P].
- 2 To end the call, press [END/P].

OPEN TO ANS

This function allows an incoming call to be answered by opening the flip cover. To enable this function press [••], [3], [2].

If you set up the AUTO ANSWER function in advance, the call will be answered after the selected number of rings. (Refer to page 22)

CALLER ID FUNCTION

when there is an incoming call, the caller's phone number is displayed on the screen.



The Caller ID number is saved in the call log.

CALL WAITING FUNCTION

 
This function notifies you there is an incoming call when you are on the phone.

- To answer the call, press [SEND] when you hear the beep.
- To switch back to the first caller, press [SEND] again.

BASIC FUNCTIONS

MISSED CALL DISPLAY

- 1 Displays the number of missed calls and the time the call was missed.
 - The message will be cleared when you press the [••] or [END/P] key.

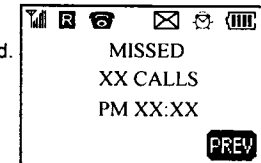

HOW TO ADJUST VOLUME

You can adjust the volume in two ways: by using the volume control keys on the side of the handset, or by using the menu.

- 1 Adjust volume by using the volume control keys during the following operation.
 - During a Call : Earpiece volume adjustment.
 - Standby Status : Ringer volume adjustment.
 - When the Phone Rings : Ringer volume adjustment.
 - Call status in hands-free : Hands-free volume adjustment. Press [END/P] when the phone rings and it will mute the ringer.

VIBRATOR

This function disables the ringer and vibrates the phone any time an incoming call is in process. To enable this function press [••], [4], [1] and select VIBRATOR or by pressing the "up" and "down" keys at the left upper side of the phone.

FUNCTIONS DURING A CALL

SENDING YOUR NUMBER TO A PAGER

This function enables the phone number of the handset to be transmitted automatically to a pager, depending on pager service.

1. After calling a pager, when you are asked to enter your number, press and hold [∅ ∅] then [1] "SEND PHONE #"

 
SCRATCH PAD

1. While in a call press and hold [∅ ∅] , then [2] "SCRATCH PAD"
2. Enter the phone number, then press [∅ ∅] .

FUNCTIONS DURING A CALL

MUTE

1. Press and hold [∅ ∅] then [3] "Mute".

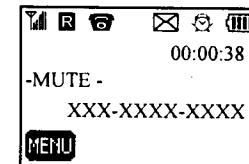

To unmute, press [∅ ∅], then [3] "Mute" again.

CHAPTER 3

MEMORY FUNCTION

- 1 How to Store a Phone Number
- 2 How to Make a Call Using a Stored Phone Number
- 3. How to Find Your Call Logs
- 4 How to Find Your Phone Book

HOW TO STORE A PHONE NUMBER

You can store up to 100 frequently used phone numbers in memory.

1. Enter the phone number you want to store and press [••], then [1] "Store"

- The first available initial empty memory location number is displayed.

If there is no empty location,

"MEMORY SPACE IS FULL!"

is displayed with a warning sound.

- If there is a desired memory location number, enter the number.

 


2. If the "OVERWRITE?" message appears after entering the memory location number, it means there is another stored phone number in that location already.

Select "YES/NO?" and press [••] "SEL".


- Yes: Deletes the previously stored number and stores the new one.

- No: Keeps the previously stored number.

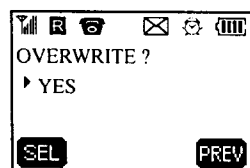


3. Enter the person's name and press [••].

 - To make secret, select Yes. It can then be displayed only when the lock code is entered.

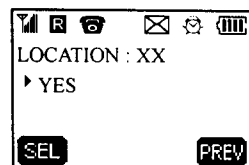

 4. Search mobil/office/home type and then, press[••]

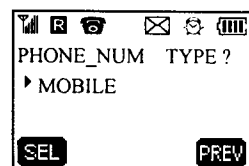

HOW TO STORE A PHONE NUMBER

HOW To enter letters and characters using the dial buttons

1. Select characters you wish to enter using the key pad.

Key Pad	1Repetition	2Repetition	3Repetition	4Repetition	5Repetition
1	1				
2ABC	A	B	C	2	
3DEF	D	E	F	3	
4GHI	G	H	I	4	
:	:	:	:	:	:
9WXYZ	w	x	Y	Z	9

- Press [••] to toggle between upper and lower case.

- When entering special characters such as 0,?!@_+={}()*#;:/, press [▽] repeatedly. The special characters will be displayed in order.

2. Press [▲] to enter the next character.

- Cursor moves to the next column automatically in two seconds after the next character.

3. Repeat until all the characters you want are entered.

- You can store up to 16 characters.

4. Erasing Entry:

- To erase one letter, press [←].

- To erase the entire entry, press and hold [←]

HOW TO MAKE A CALL USING A STORED PHONE NUMBER

2:ONE TOUCH/TWO TOUCH DIALING

This feature allows the phone book entries to be dialed via the keypad.

ONE TOUCH DIALING:

1-9 : Press corresponding memory number and hold for more than 1 second.

TWO TOUCH DIALING:

00, 10-99 : press the first digit and second digits of the memory number short and long respectively.

- If no phone number is stored in the location depressed, "Empty Location" will appear on the screen.
- If a phone number is stored in the secret location, the number is not displayed when making a call.

 
*One touch dialing must be turned on in the
handset. See page 37.*

HOW TO FIND YOUR CALL LOGS


Your phone can display the 10 most recent missed, incoming, outgoing calls. You can call those numbers without dialing their whole number.

MISSED CALLS

1. Press [∞] then [2] then [1] then [1]
2. Press [∞] to check the detail information about phone number.
 - The last missed call, its phone number, time and date are displayed.

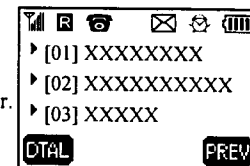

 3. To check your missed calls using the scroll keys:
 - [∞ *] Scrolls up the phone numbers.
 - [# ∞] Scrolls down the phone numbers.

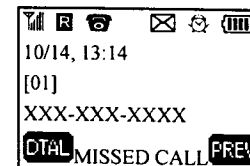

3. Press [SEND] to dial desired missed call number

HOW TO FIND YOUR CALL LOGS

ANSWERED CALLS

1. Press [∓] then [2] then [1] then [2]. (Refer to previous page)
 - The last answered call, its phone number, time and date are displayed.

DIALED CALLS

1. Press [∓] then [2] then [1] then [3].
Press [SEND] to dial desired answered call number (Refer to previous page)
 - The last outgoing call, its phone number, time and date are displayed.

 
HOW TO FIND YOUR PHONE BOOK

RECALLING BY MEMORY LOCATION NUMBER

1. Press [∓] then [2] then [2].

2. Enter the memory location number.

- If you don't enter a specific memory location number, use the scroll key to search from the first memory location number.

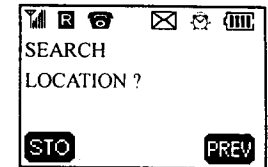

3. Search phone numbers using scroll key.

- [▲] / [▼] scrolls up the phone numbers.
- [∓] edit the phone #.
- [...] erase the phone #.
- [▲] / [▼] search mobil/office/home number.

4. Press [SEND] to dial desired phone book number.

 
HOW TO FIND YOUR PHONE BOOK

RECALLING BY NAME

1. Press [↵] then [2] then [3]

2. Enter the alpha (or part of the alpha).

Then press [↵].

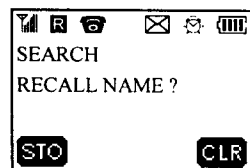

2. To locate the phone number using the scroll key.

- [↵] / [#] search phone number.
- [↵] edit the phone #.
- [↵] erase the phone #.
- [↵] / [↵] search mobil/office/home number

4. Press [SEND] to dial

CHAPTER 4

MENU

Please read this chapter before using this product.

- 1. Check Billing Feature**
- 2. Settings**
- 3. Display**
- 4. Volume**
- 5. Timers**
- 6. Bio-Rhythm**
- 7. Alerts**
- 8. Phone Info**
- 9. Security**

CHECK BILLING FEATURE

This allows you to automatically dial our customer care center to check your phone bill balance.

1. Press [**∅ ∅**] then [**1**]

2. Billing and the phone number will show on the screen and our phone will automatically dial 888-772-1017

SETTINGS

AUTO RETRY

When a call is not connected, this function retries the call automatically at a set interval or amount or retries.

REPEAT

1. Press [**∅ ∅**] then [**3**] then [**1**] then [**2**]

2. Select the parameter (OFF,3,5,10 times) by using the scroll, Key Press [**∅ ∅**].

SETTINGS

AUTO ANSWER

This function answers an incoming call automatically after a number of rings that the user sets.

1. Press [**· ·**] then [**3**] then [**2**].

 
2. Select the parameter

(OFF, 1, 2, 4 RINGS)

by using the scroll keys.

Press [**· ·**] to set.

- Auto answer function does not work if you select lamp.

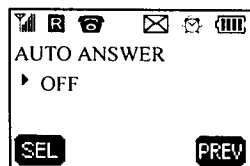

SETTINGS

ONE TOUCH DIALING

This function allows the phone book entries to be dialed via the keypad.

1. Press [**· ·**] then [**3**] then [**3**]

2. Select the parameter(NO, YES)

by using the scroll keys. Press [**· ·**].

VOICE PRIVACY

1. Press [**· ·**] then [**3**] then [**4**]

2. Select the parameter (STANDARD, ENHANCED) by using the scroll keys. Press [**· ·**].

LOGO DISPLAY

LOGO DISPLAY

1. Press [**· ·**] then [**3**] then [**8**].

 


2. Select the parameter Banner (Date, World Map) by using the scroll keys. Press [**· ·**].

LCD CONTRAST

This function adjusts the LCD screen contrast.

1. Press [**· ·**] then [**3**] then [**6**]

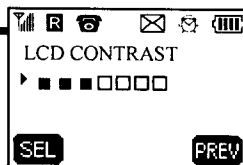

2. Select the contrast level by using the scroll keys Press [**· ·**].

BACKLIGHT

LIGHTING LENGTH

This function allows you to adjust time to light up the screen, so that you can conveniently use the phone even in dark places.

1. Press [**· ·**] then [**3**] then [**5**]
2. Select the parameter (OFF, OFF IN DAY, 10 SEC, 5 SEC, 3 SEC) by using the scroll keys. Press [**· ·**].

 
VOLUME

RINGER MODE

1. Press [**⋮**] then [**4**] then [**1**]
2. Select the parameter (RINGER, BELL AFTER VIB, SILENT, VIBRATOR, SLIDE BELL) by using the scroll keys.
3. Press [**⋮**].

RINGER TYPE

- 1 Press [**⋮**] then [**4**] then [**2**].
2. Select the parameter (1-15) by using the scroll keys.
 - **✕** Different tones (1-6).
 - **🔊** Different melodies (7-18).
3. Press [**⋮**].

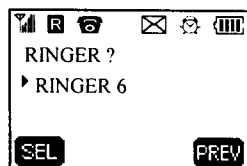

VOLUME

VOLUME ADJUSTMENT

1. Press [**⋮**] then [**4**] then [**3**] the volume of for keypad
 - If the warning alarm sounds because of low battery, the sound will not be heard even if the user presses the button.
2. Select the volume level by using the scroll keys.
 - [**⏮** *]/[**▲**] scroll up to increase volume.
 - [**#** **▶**]/[**▼**] scroll down to lower volume, or setting to Silent
3. Press [**⋮**].

CALL TIMERS

LAST CALL

1. Press [**⋮**] then [**5**] then [**1**]

ALL CALLS

1. Press [**⋮**] then [**5**] then [**2**]

HOME CALLS

1. Press [**⋮**] then [**5**] then [**3**]

ROAM CALLS

1. Press [**⋮**] then [**5**] then [**4**]

BIO-RHYTHM

This function identifies the biorhythms of today or a specific day using solar calendar.

1. Press [**⋮**] then [**6**] then [**5**].

2. Press key [**3**] " BIRTHDAY?"

● Enter your solar calendar birthday n year/month/date, and then press [**1**].

3. To find out today bio-rhythm, select TODAY and to find out biorhythm

of a specific day, select SOMEDAY

● Bio-rhythm function is available only when the phone can register the current time from the network system.

● For Some Day Bio, you cannot enter the dates before your birthday.

● For Birthday, you cannot enter the dates later than today date.

● Physical, Emotional and intelligent quotients appear with a number showing how many days have passed since your birth date for the date you want to find out Bio-rhythm displayed on the top portion of the screen.

● What is Bio-rhythm?

Biorhythm is a life rhythm which is governed by three rhythm curves called physical, emotional, and intelligent and starts from our body from our birth to death.

 
1 Physical rhythm

● This rhythm controls wide-ranging physical elements related to resistance to diseases, physical strength, adjustment of muscle exercise, speed, physiology and other basic physical functions with a cycle of 23 days. 2 Emotional rhythm.

● This rhythm adjusts creativity, sensitivity, mental health and recognition about world and humans with a cycle of 28 days.

3 Intelligent rhythm.

● This rhythm affects our memory, susceptibility to fright, acceptance of knowledge and logical and analytic power with a cycle of 33 days.

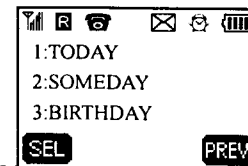


ALERTS

MIN ALERT

1. Press [**• •**] then [**7**] then [**1**].

This function sounds an alert in every minute, letting you know the call lapse time.

 
Select the parameter (RELEASE, SETTING) by using the scroll keys. Press [**• •**].

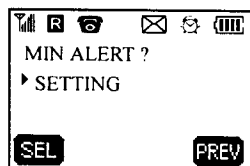

CONNECT ALERT

This function sounds an alert when the signal of a received call is weak.

 1. Press [**• •**] then [**7**] then [**2**]

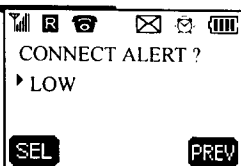


2..Select the parameter (OFF, Low ,Mid, High) by using the scroll keys. Press [**• •**].

ALERTS

AREA ALERT

This function sounds an alert and gives out a message when the handset enters a new service area, when it enters another service area, or when it leaves the user service area.

 1. Press [**• •**] then [**7**] then [**3**].

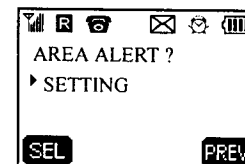


2.Select the parameter (RELEASE, SETTING) by using the scroll keys. Press [**• •**].

FADE ALERT

This function sounds alert when the phone can make calls due to poor signal strength

 1. Press [**• •**] then [**7**] then [**4**].

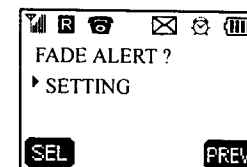

2.Select the parameter (RELEASE, SETTING) by using the scroll keys. Press [**• •**].

PHONE INFO

 
CHECKING MY NUMBER

This is a function to check the telephone number of the handset currently in use.

1. Press [*****] then [**0**]

then [**7**].

● Press and hold [**#** >] for 2 seconds and your phone number will be displayed.

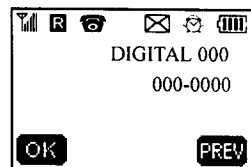


CHECKING THE PHONE VERSION

This function checks the version of the handset currently in use.

1. Press [*****] then [**0**]

 then [**8**]

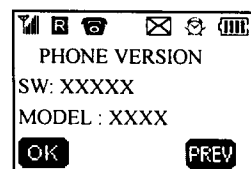

CHAPTER 5

SECURITY FEATURES

1. How to Lock Your Phone
2. How to Restrict Your Phone
3. How to Reset Your Phone
4. How to Clear Your Phone Memory

HOW TO LOCK YOUR PHONE

AUTO LOCK

This function prevents any other person from using the handset without permission. When it is locked, the handset can be used to dial or use any other function.

1. Press [*] then [0] then enter [Lock Code] then [1]

- The default lock code is the last 4 digits of your phone number.

2. Select the parameter (OFF, POWER ON, AFTER 20 Sec)

parameter by using the scroll keys. Press [*].

- "POWER ON?" locks the handset upon powering on the handset each time.
- "NO USE?" unlocks the handset and leaves it unlocked.



*Incoming calls, emergency dialing and alarm functions
are enabled when the handset is locked.*

HOW TO LOCK YOUR PHONE

LOCK CODE CHANGE

This function is used to change the 4-digit lock code.

1. Press [*] then [0] then enter

[[Lock Code] then [2].

- The default lock code is the last 4 digits of your phone number.

2. Enter 4-digit new lock code.

3. Re-enter the new lock code. Press [*].

4. The display will read lock code changed.

HOW TO CHANGE YOUR BANNER

BANNER CHANGE

This function changes the banner displayed on the LCD.

You can enter a banner up to 16 characters long.

1. Press [**• •**] then [**0**] then [**3**]



2. Enter a banner using instructions for alpha keys on page 25.

HOW TO RESTRICT YOUR PHONE

RESTRICTION FUNCTIONS

 
You can restrict six different functions

1. Press [**• •**] then [**0**] then

enter [Lock Code] then [**4**].

- The default lock code is the last 4 digits of your phone number.

Using the scroll buttons, select "YES"

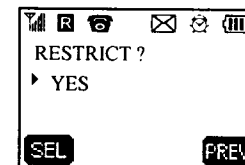

2. Press [**• •**].

TO RESTRICT INCOMING CALLS

 
When this function is enabled, the phone does not respond to incoming calls. However, outgoing calls can still be made.

1. Press key [**1**] "INCOMING"

2. Select the parameter by using the scroll keys.

RESTRICT: to restrict incoming calls.

ALLOW: to allow incoming calls.

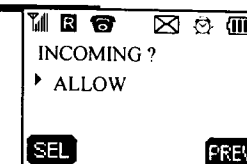


3. Press [**• •**].

HOW TO RESTRICT YOUR PHONE

RESTRICTING OUTGOING CALLS

 When this function is enabled, incoming calls can be answered, but outgoing calls cannot be made. It is still possible to make emergency calls.

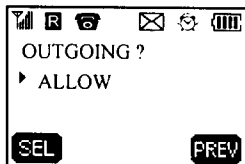

1. Press key [2] "OUTGOING?"

2. Select the parameter by using the scroll keys.

RESTRICT: to restrict outgoing calls.

ALLOW: to allow outgoing calls.

3. Press [*·].

HOW TO RESTRICT YOUR PHONE

RESTRICTING THE PHONE BOOK

This function blocks the storage of phone numbers or the use of stored phone numbers.

1. Press key [3] "MEMORY ONLY"

● The default lock code is the last

 
4 digits of your phone number.

2. Select the parameter by using the scroll keys.

RESTRICT: restricts phone book.

ALLOW: allows phone book use.

Press [*·].

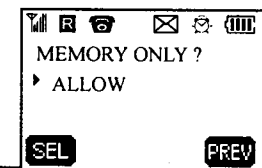

RESTRICTING LONG DISTANCE CALLS

 
1. Press key [4] "LONG DISTANCE"

2. Select the parameter by using the scroll keys.

RESTRICT: restricts long distance calls.

ALLOW: allows long distance calls.

3. Press [*·].

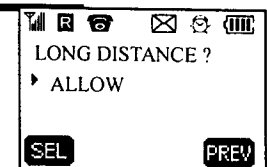

HOW TO RESTRICT YOUR PHONE

 
RESTRICT CALLS TO 999 NUMBERS

1. Press key [5] "900 #'s"

2. Select the parameter by using the scroll keys.

RESTRICT: restricts 900 service.

ALLOW: allows 900 service.

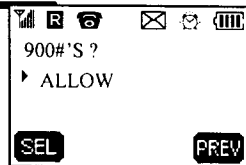

3. Press [••].

HOW TO RESET YOUR PHONE

This function resets each value set in the memory to its default value.

1. Press [••] then [0] then

[Lock Code] then [5].



2. Select the parameter by using the scroll

keys. Press [••].

● If you select "YES" the

following screen is displayed,

and then the phone will be

automatically turned off.

The message "THIS PHONE"s RESTRICTED"

is

displayed on the screen.

HOW TO CLEAR YOUR PHONE MEMORY

 
CLEARING STORED PHONE NUMBERS

This function clears all stored numbers.

1. Press [**· ·**] then [**0**] then enter

[Lock Code] then [**6**] then [**1**].

The default lock code is the last 4 digits of your phone number.

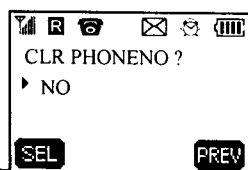

2. Select the parameter (NO, YES) by using the scroll keys. Press [**· ·**].

CLEARING SCHEDULE CONTENTS

This function clears all schedule contents and reserved call information.

1. Press [**· ·**] then [**0**] then enter

[Lock Code] then [**6**] then [**2**].

The default lock code is the last 4 digits of your phone number.



2. Select the parameter (NO, YES) by using the scroll keys. Press [**· ·**].

MEMORY CLEARING FUNCTION

 
CLEARING DIALED NUMBER IN CALL LOGS

This function clears dialed number in call logs

1. Press [**· ·**] then [**0**] then enter

[Lock Code] then [**6**] then [**3**]

The default lock code is the last 4 digits of your phone number.

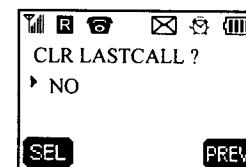

2. Select the parameter (NO, YES) by using the scroll keys. Press [**· ·**].

 
CLEARING AIR TIME IN HOME SERVICE AREA

This function clears air time used in home service area

1. Press [**· ·**] then [**0**] then enter

[Lock Code] then [**6**] then [**4**]

The default lock code is the last 4 digits of your phone number.

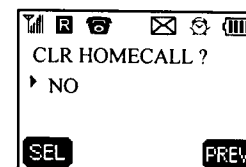

2. Select the parameter (NO, YES) by using the scroll keys. Press [**· ·**].

MEMORY CLEARING FUNCTION

CLEARING ROAM CALLS

 
This function clears air time used in other service areas

1. Press [**• •**] then [**0**] then enter

[Lock Code] then [**6**] then [**5**].

The default lock code is the last 4

digits of your phone number.

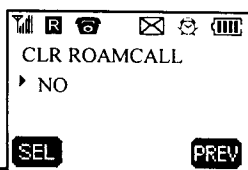

2. Select the parameter (NO, YES) by

using the scroll keys. Press [**• •**].

CHAPTER 6

SUPPLEMENTARY FUNCTIONS

1 .Melody Setup Function

2 .Optional Services

MELODY SETUP

WRITING MELODY

Press [**· ·**] then [**6**] then [**2**], then [**1**].

 
 
2. By pressing the [**· ·**] select the melody title and enter a melody via the key pad. Press [**· ·**] to store melody.

- If you select previously entered melody,

"OVERWRITE ?" IS DISPLAYED.


- By pressing the [**SEND**], the previously entered melody is played with musical note displayed on the screen.

- To end the melody, press [**---**].
- You can edit previously entered melody.
- "Ondalsem" is default melody.

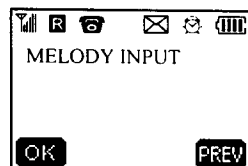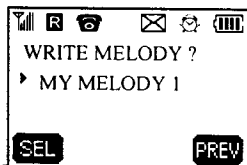


3. Press [**· ·**] after entering melody speed.

 - Speed : Select the Parameter
(Moderato, Allegro, largo --- by using the scroll keys)

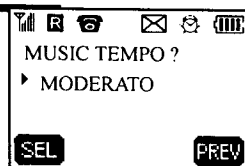

4. Press [**· ·**] after entering the title of the melody

 - Select the parameter you want.
- Entered melody is added to the ringer type list.

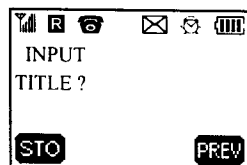

MELODY SETUP

TO ENTER MELODY

 
- When you press dial key 9, a quarter note is displayed.
- The dial keys 1, 2, 3, 4, 5, 6, 7, 8, 9, 0, correspond to musical notes do, re, mi, fa, sol, la, ti, do, respectively.
- Select the length of tone by pressing [**^ ***] in sequence while the quarter note is displayed.
- When you press [**# ^**], # sign is displayed under the musical note and it changes to a half note.
- To enter a pause, press [**^ ***] in sequence after pressing [**· ·**] and select the length of a pause.
- It is possible to move and edit musical notes by pressing volume keys [**-**]/**+**].
- To add musical notes while you edit, hold [**· ·**] and enter the note.
- To delete the note, press [**---**].
- Press [**· ·**] to play back the melody you've entered. Press [**---**] to stop.
- When you enter 11 notes, the screen moves to the next screen.
- You can enter up to 100 notes

HEARING MELODY

1. Press [**· ·**] then [**6**] then [**2**], then [**2**].

3. Select the melody title you want to hear, and The title of melody is displayed and melody gets played.

- The melody gets replayed when pressing [**· ·**]
- Press [**---**] to stop the melody.
- If there is no entered melody, "Ondalsem" will be played.

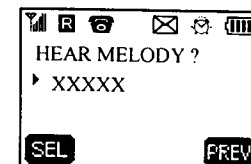


MELODY SETUP

MELODY SPEED


1. Press [· ·] then [6] then [2] , then [3].

2. By pressing the [· ·] select the melody title you want to change the speed

 3. By pressing the [· ·] select the melody speed

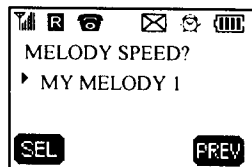

 4. By pressing the [· ·] select the music tempo

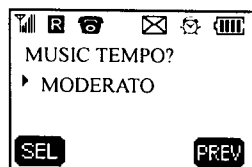

SCHEDULE

INPUT SCHEDULE

 
1. Press [· ·], then [6] then [1] then [2] .

2. Select the date in calendar and press the [· ·]

[▲][▼]- month input

[◀*][▶#] , numeric key

- day input

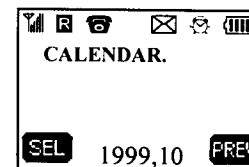


3. Press [1], and select the parameter(one time or daily)


To set alarm, press [2] and input the schedule title .

To set reserved call, press [3] and input the phone number .

 And, press [· ·].

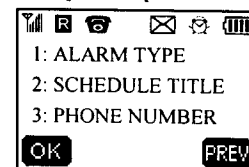

 
4. Input the time and press [· ·]

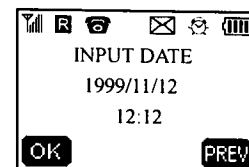


SCHEDULE

VIEW SCHEDULE LIST

 1. Press [**• •**] then [**6**] then [**1**] then [**1**].

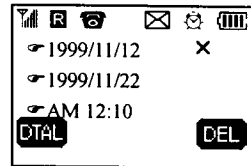

 2. By pressing the [**• •**] you can view the more details about each item

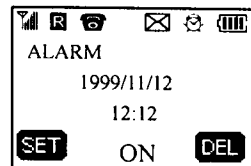


PAUSE ALL SCHEDULE

You can make all schedule pause temporarily.

1. Press [**• •**] then [**6**] then [**1**] then [**3**].

 2. Select the parameter (NO, YES) by using the scroll keys. Press [**• •**].

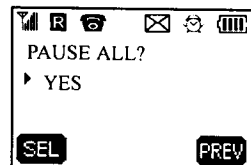

CHAPTER 7

VOICE MAIL AND TEXT MESSAGES

This chapter describes convenient functions that allow you to check voice mail and receive text messages with the handset.

1. Receiving a Message
2. Checking Received Voice Mail Message
3. Checking the Received Text Message

RECEIVING A MESSAGE

 
DIRECT VIEW SET

1. When message is received, displays

the following message.

[▲][▼] [◀*][▶#] - display text

[· ·] - delete message

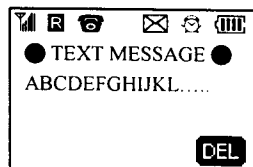

DIRECT VIEW RELEASE

1. When message is received, displays

the following message.

You can view the message

in the sms menu



CHECKING RECEIVED MESSAGE

 
CHECKING RECEIVED VOICE MAIL MESSAGE

1. Press [· ·] .

2. Press [1] "VOICE MAIL"

● It displays the number of voice mail messages currently received in your voice mailbox.

● To access your voice mailbox, press [SEND].

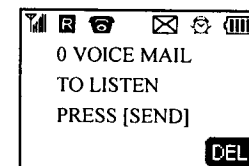

CHECKING RECEIVED MESSAGE

CHECKING RECEIVED TEXT MESSAGE

 
 
 
1. Press [∅ ∅ ∅] and press [2] "TEXT MAIL"

2. To read new mail, press [1]

Then press [∅ ∅] and you can view the details.

To read stored mail, press [2]

To erase stored mail, press [3]

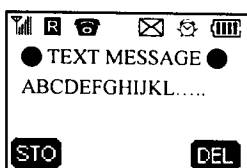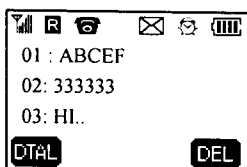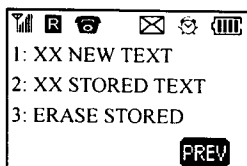


DIRECT VIEW

DIRECT VIEW SETTING

When text message is received, displays text directly on the screen

1. Press [∅ ∅ ∅] .then press [3]

 2. Select the parameter (NO, YES) by using the scroll keys. Press [∅ ∅].

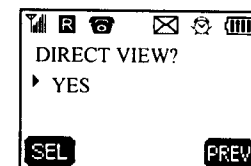

BELL TYPE

BELL TYPE SETTING

When text message is received, sounds selected bell.

1. Press [∅ ∅ ∅] .then press [4]

2. Select the parameter(ringer, vibrator, silent) by

using the scroll keys. Press [∅ ∅].

