

Frequency (MHz)	Switch Position
72.1	0
72.2	1
72.3	2
72.4	3
72.5	4
72.6	5
72.7	6
72.8	7
72.9	8
73.0	9
73.1	A
73.2	B
73.3	C
73.4	D
73.5	E
73.6	F


Transmitter Channel Selection Chart

Instructions:
Select desired frequency from the chart, then turn the channel switch to the corresponding number (0-9) or letter (A-F) position.

Channel Switch



FREQ SELECT SWITCH AND MICROCONTROLLER

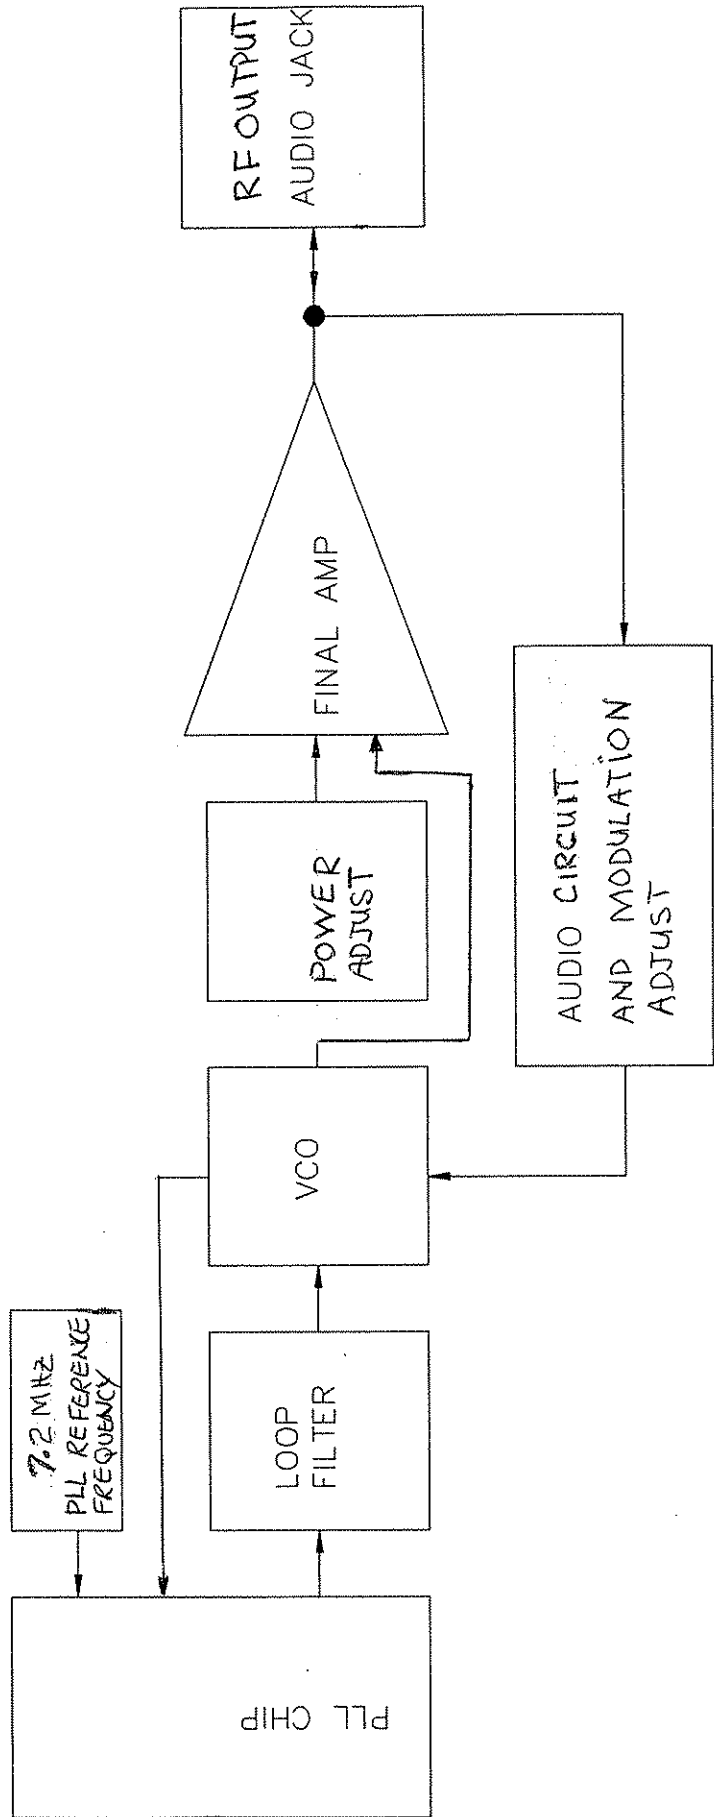

T32 BLOCK DIAGRAM