

**FUJIFILM**

DIGITAL CAMERA

**X-T30**

Owner's Manual

## Introduction

Thank you for your purchase of this product. Be sure that you have read this manual and understood its contents before using the camera. Keep the manual where it will be read by all who use the product.

### For the Latest Information

The latest versions of the manuals are available from:

*<http://fujifilm-dsc.com/en/manual/>*



The site can be accessed not only from your computer but also from smartphones and tablets. It also contains information on the software license.



For information on firmware updates, visit:

*[http://www.fujifilm.com/support/digital\\_cameras/software/](http://www.fujifilm.com/support/digital_cameras/software/)*



## Chapter Index

---

<b>Menu List</b>	iv
<b>1 Before You Begin</b>	1
<b>2 First Steps</b>	25
<b>3 Basic Photography and Playback</b>	41
<b>4 Movie Recording and Playback</b>	47
<b>5 Taking Photographs</b>	53
<b>6 The Shooting Menus</b>	97
<b>7 Playback and the Playback Menu</b>	161
<b>8 The Setup Menus</b>	185
<b>9 Shortcuts</b>	221
<b>10 Peripherals and Optional Accessories</b>	233
<b>11 Connections</b>	249
<b>12 Technical Notes</b>	261









## Menu List

Camera menu options are listed below.

### Shooting Menus

Adjust settings when shooting photos or movies.

 See page 97 for details.





 IMAGE QUALITY SETTING		 AF/MF SETTING	
IMAGE SIZE	: 98	FOCUS AREA	: 110
IMAGE QUALITY	: 99	AF MODE	: 111
RAW RECORDING	: 99	AF-C CUSTOM SETTINGS	: 112
1/3 FILM SIMULATION	: 100	1/3 STORE AF MODE BY ORIENTATION	: 115
B & W ADJ.   (Warm/Cool)	: 101	AF POINT DISPLAY  	: 115
GRAIN EFFECT	: 101	NUMBER OF FOCUS POINTS	: 116
COLOR CHROME EFFECT	: 101	PRE-AF	: 116
WHITE BALANCE	: 102	AF ILLUMINATOR	: 116
DYNAMIC RANGE	: 104	FACE/EYE DETECTION SETTING	: 117
D RANGE PRIORITY	: 105	AF+MF	: 119
HIGHLIGHT TONE	: 106	MF ASSIST	: 120
2/3 SHADOW TONE	: 106	2/3 FOCUS CHECK	: 120
COLOR	: 106	2/3 INTERLOCK SPOT AE & FOCUS AREA	: 121
SHARPNESS	: 106	INSTANT AF SETTING	: 121
NOISE REDUCTION	: 107	DEPTH-OF-FIELD SCALE	: 122
LONG EXPOSURE NR	: 107	RELEASE/FOCUS PRIORITY	: 122
LENS MODULATION OPTIMIZER	: 107	3/3 TOUCH SCREEN MODE	: 123
COLOR SPACE	: 107		
3/3 PIXEL MAPPING	: 108		
SELECT CUSTOM SETTING	: 108		
EDIT/SAVE CUSTOM SETTING	: 109		

	<b>SHOOTING SETTING</b>	
	SCENE POSITION	126
	DRIVE SETTING	127
	SPORTS FINDER MODE	130
1/2	PRE-SHOT ES	130
	SELF-TIMER	131
	INTERVAL TIMER SHOOTING	132
	PHOTOMETRY	133
	SHUTTER TYPE	134
	FLICKER REDUCTION	135
	IS MODE	135
2 1/2	ISO	136
	MOUNT ADAPTER SETTING	138
	WIRELESS COMMUNICATION	140
	<b>FLASH SETTING</b>	
	FLASH FUNCTION SETTING	141
	RED EYE REMOVAL	141
	TTL-LOCK MODE	142
	LED LIGHT SETTING	142
	MASTER SETTING	143
	CH SETTING	143
	<b>MOVIE SETTING</b>	
	MOVIE MODE	144
	FULL HD HIGH SPEED REC	145
	FILM SIMULATION	146
1/4	B & W ADJ.  (Warm/Cool)	146
	WHITE BALANCE	147
	DYNAMIC RANGE	147
	HIGHLIGHT TONE	148
	SHADOW TONE	148
	COLOR	148
	SHARPNESS	149
	NOISE REDUCTION	149
2/4	INTERFRAME NR	149
	F-Log RECORDING	149
	PERIPHERAL LIGHT CORRECTION	150
	FOCUS AREA	150
	MOVIE AF MODE	150
	AF-C CUSTOM SETTING	151
	FACE/EYE DETECTION SETTING	152
	MF ASSIST	152
	FOCUS CHECK	153
3/4	HDMI OUTPUT INFO DISPLAY	153
	4K MOVIE OUTPUT	154
	FULL HD MOVIE OUTPUT	154
	4K HDMI STANDBY QUALITY	155
	HDMI REC CONTROL	155
	ZEBRA SETTING	155
	ZEBRA LEVEL	155
4/4	AUDIO SETTING	156
	MIC/REMOTE RELEASE	158
	TIME CODE SETTING	158
	TALLY LIGHT	160
	MOVIE SILENT CONTROL	160

## The Playback Menu

Adjust playback settings.








 See page 167 for details.

 <b>PLAY BACK MEN</b>		 <b>PLAY BACK MEN</b>	
<b>RAW CONVERSION</b>	:167	<b>IMAGE TRANSFER ORDER</b>	:178
<b>ERASE</b>	:170	<b>WIRELESS COMMUNICATION</b>	:179
<b>CROP</b>	:172	<b>SLIDE SHOW</b>	:179
<b>RESIZE</b>	:173	<b>PHOTOBOOK ASSIST</b>	:180
<b>PROTECT</b>	:174	<b>PC AUTO SAVE</b>	:181
<b>IMAGE ROTATE</b>	:175	<b>PRINT ORDER (DPOF)</b>	:182
<b>RED EYE REMOVAL</b>	:176	<b>instax PRINTER PRINT</b>	:183
<b>VOICE MEMO SETTING</b>	:177	<b>DISP ASPECT</b>	:184

## Setup Menu

Adjust basic camera settings.

 See page 185 for details.

 USER SETTING 		 SCREEN SETTING 	
FORMAT	186	EVF BRIGHTNESS	192
DATE/TIME	187	EVF COLOR	192
TIME DIFFERENCE	187	EVF COLOR ADJUSTMENT	192
 言語/LANG.	188	LCD BRIGHTNESS	193
MY MENU SETTING	188	$1\frac{1}{3}$ LCD COLOR	193
SENSOR CLEANING	189	LCD COLOR ADJUSTMENT	193
SOUND & FLASH	189	IMAGE DISP.	194
RESET	189	AUTOROTATE DISPLAYS	194
 SOUND SETTING 		PREVIEW EXP./WB IN MANUAL MODE	195
AF BEEP VOL.	190	NATURAL LIVE VIEW	195
SELF-TIMER BEEP VOL.	190	FRAMING GUIDELINE	196
OPERATION VOL.	190	$2\frac{1}{3}$ AUTOROTATE PB	196
SHUTTER VOLUME	191	FOCUS SCALE UNITS	197
SHUTTER SOUND	191	APERTURE UNIT FOR CINEMA LENS	197
PLAYBACK VOLUME	191	DISP. CUSTOM SETTING	198
		LARGE INDICATORS MODE(EVF)	199
		LARGE INDICATORS MODE(LCD)	200
		$3\frac{1}{3}$ LARGE INDICATORS DISP. SETTING	201
		INFORMATION CONTRAST ADJ.	201

1/2	<b>FUNCTION (Fn) SETTING</b>	202	<b>SAVE DATA SETTING</b>	
	<b>FOCUS LEVER SETTING</b>	202	<b>FRAME NO.</b>	213
	<b>EDIT/SAVE QUICK MENU</b>	203	<b>SAVE ORG IMAGE</b>	214
	<b>FUNCTION (Fn) SETTING</b>	204	<b>EDIT FILE NAME</b>	214
	<b>COMMAND DIAL SETTING</b>	207	<b>SELECT FOLDER</b>	214
	<b>SHUTTER AF</b>	208	<b>COPYRIGHT INFO</b>	215
	<b>SHUTTER AE</b>	208		
	<b>SHOOT WITHOUT LENS</b>	208	<b>CONNECTION SETTING</b>	
	<b>SHOOT WITHOUT CARD</b>	209	<b>Bluetooth SETTINGS</b>	216
	<b>FOCUS RING</b>	209	<b>PC AUTO SAVE</b>	217
	<b>FOCUS RING OPERATION</b>	209	<b>instax PRINTER CONNECTION SETTING</b>	218
2/2	<b>AE/AF-LOCK MODE</b>	209	<b>PC CONNECTION MODE</b>	218
	<b>AWB-LOCK MODE</b>	210	<b>GENERAL SETTINGS</b>	219
	<b>APERTURE RING SETTING (A)</b>	210	<b>INFORMATION</b>	219
	<b>APERTURE SETTING</b>	210	<b>RESET WIRELESS SETTING</b>	219
	<b>TOUCH SCREEN SETTING</b>	211		
	<b>POWER MANAGEMENT</b>			
	<b>AUTO POWER OFF</b>	212		
	<b>PERFORMANCE</b>	212		











# Table of Contents

Introduction.....	ii
For the Latest Information.....	ii
Menu List.....	iv
Shooting Menus.....	iv
The Playback Menu.....	vi
Setup Menus.....	vii
Supplied Accessories.....	xix
About This Manual.....	xx
Symbols and Conventions.....	xx
Terminology.....	xx



## **1 Before You Begin** **1**





Parts of the Camera.....	2
The Serial Number Plate.....	4
The Focus Stick (Focus Lever).....	4
The Shutter Speed Dial.....	5
The Drive Dial.....	5
The Exposure Compensation Dial.....	5
The Auto Mode Selector Lever.....	6
The Command Dials.....	7
The Indicator Lamp.....	8
Focusing the Viewfinder.....	9
The LCD Monitor.....	9
Camera Displays.....	10
The Electronic Viewfinder.....	10
The LCD Monitor.....	12
Choosing a Display Mode.....	14
Adjusting Display Brightness.....	15
Display Rotation.....	15
The DISP/BACK Button.....	16
Customizing the Standard Display.....	17
Using the Menus.....	20
Touch Screen Mode.....	21
Shooting Touch Controls.....	21
Playback Touch Controls.....	24



















<b>2</b>	<b>First Steps</b>	<b>25</b>
	Attaching the Strap .....	26
	Attaching a Lens.....	28
	Inserting the Battery and a Memory Card .....	29
	Compatible Memory Cards .....	32
	Charging the Battery .....	33
	Turning the Camera On and Off .....	36
	Checking the Battery Level.....	37
	Basic Setup .....	38
	Choosing a Different Language.....	40
	Changing the Time and Date.....	40
<b>3</b>	<b>Basic Photography and Playback</b>	<b>41</b>
	Taking Photographs (Mode P).....	42
	Viewing Pictures .....	45
	Deleting Pictures.....	46
<b>4</b>	<b>Movie Recording and Playback</b>	<b>47</b>
	Recording Movies .....	48
	Adjusting Movie Settings.....	50
	Viewing Movies.....	51
<b>5</b>	<b>Taking Photographs</b>	<b>53</b>
	Choosing a Shooting Mode .....	54
	Mode P: Program AE .....	54
	Mode S: Shutter-Priority AE .....	56
	Mode A: Aperture-Priority AE.....	59
	Mode M: Manual Exposure .....	60
	Auto Mode .....	61
	Autofocus.....	64
	Focus Mode.....	65
	Autofocus Options (AF Mode).....	67
	Focus-Point Selection.....	69
	Manual Focus.....	73
	Checking Focus.....	75

<b>Exposure Compensation</b> .....	<b>77</b>
C (Custom) .....	77
<b>Focus/Exposure Lock</b> .....	<b>78</b>
The AF-L and AE-L Buttons .....	79
<b>Bracketing</b> .....	<b>80</b>
 AE BKT .....	81
 ISO BKT .....	81
 FILM SIMULATION BKT .....	81
 WHITE BALANCE BKT .....	81
 DYNAMIC RANGE BKT .....	82
 FOCUS BKT .....	82
<b>Continuous Shooting (Burst Mode)</b> .....	<b>83</b>
<b>Multiple Exposures</b> .....	<b>85</b>
<b>Advanced Filters</b> .....	<b>87</b>
Advanced Filter Options .....	88
<b>Panoramas</b> .....	<b>89</b>
<b>Flash Photography</b> .....	<b>92</b>
Flash Settings .....	94

## **6 The Shooting Menus** **97**

<b>IMAGE QUALITY SETTING</b> .....	<b>98</b>
IMAGE SIZE .....	98
IMAGE QUALITY .....	99
RAW RECORDING .....	99
FILM SIMULATION .....	100
B & W ADJ.   (Warm/Cool) .....	101
GRAIN EFFECT .....	101
COLOR CHROME EFFECT .....	101
WHITE BALANCE .....	102
DYNAMIC RANGE .....	104
D RANGE PRIORITY .....	105
HIGHLIGHT TONE .....	106
SHADOW TONE .....	106
COLOR .....	106
SHARPNESS .....	106

NOISE REDUCTION.....	107
LONG EXPOSURE NR.....	107
LENS MODULATION OPTIMIZER.....	107
COLOR SPACE.....	107
PIXEL MAPPING.....	108
SELECT CUSTOM SETTING.....	108
EDIT/SAVE CUSTOM SETTING.....	109
<b>AF/MF SETTING.....</b>	<b>110</b>
FOCUS AREA.....	110
AF MODE.....	111
AF-C CUSTOM SETTINGS.....	112
STORE AF MODE BY ORIENTATION.....	115
AF POINT DISPLAY   .....	115
NUMBER OF FOCUS POINTS.....	116
PRE-AF.....	116
AF ILLUMINATOR.....	116
FACE/EYE DETECTION SETTING.....	117
AF+MF.....	119
MF ASSIST.....	120
FOCUS CHECK.....	120
INTERLOCK SPOT AE & FOCUS AREA.....	121
INSTANT AF SETTING.....	121
DEPTH-OF-FIELD SCALE.....	122
RELEASE/FOCUS PRIORITY.....	122
TOUCH SCREEN MODE.....	123
<b>SHOOTING SETTING.....</b>	<b>126</b>
SCENE POSITION.....	126
DRIVE SETTING.....	127
SPORTS FINDER MODE.....	130
PRE-SHOT   .....	130
SELF-TIMER.....	131
INTERVAL TIMER SHOOTING.....	132
PHOTOMETRY.....	133
SHUTTER TYPE.....	134
FLICKER REDUCTION.....	135
IS MODE.....	135
ISO.....	136

MOUNT ADAPTER SETTING.....	138
WIRELESS COMMUNICATION .....	140
<b>FLASH SETTING.....</b>	<b>141</b>
FLASH FUNCTION SETTING.....	141
RED EYE REMOVAL.....	141
TTL-LOCK MODE.....	142
LED LIGHT SETTING.....	142
MASTER SETTING .....	143
CH SETTING.....	143
<b>MOVIE SETTING .....</b>	<b>144</b>
MOVIE MODE.....	144
FULL HD HIGH SPEED REC.....	145
 FILM SIMULATION.....	146
 B & W ADJ.   (Warm/Cool).....	146
 WHITE BALANCE.....	147
 DYNAMIC RANGE.....	147
 HIGHLIGHT TONE.....	148
 SHADOW TONE.....	148
 COLOR .....	148
 SHARPNESS .....	149
 NOISE REDUCTION .....	149
 INTERFRAME NR.....	149
F-Log RECORDING.....	149
 PERIPHERAL LIGHT CORRECTION .....	150
 FOCUS AREA .....	150
MOVIE AF MODE .....	150
 AF-C CUSTOM SETTING.....	151
 FACE/EYE DETECTION SETTING.....	152
 MF ASSIST .....	152
 FOCUS CHECK.....	153
HDMI OUTPUT INFO DISPLAY.....	153
4K MOVIE OUTPUT .....	154
FULL HD MOVIE OUTPUT.....	154
4K HDMI STANDBY QUALITY .....	155
HDMI REC CONTROL.....	155
ZEBRA SETTING.....	155
ZEBRA LEVEL .....	155

AUDIO SETTING .....	156
MIC/REMOTE RELEASE .....	158
TIME CODE SETTING .....	158
TALLY LIGHT .....	160
MOVIE SILENT CONTROL .....	160

## **7 Playback and the Playback Menu** **161**

<b>The Playback Display .....</b>	<b>162</b>
The DISP/BACK Button .....	163
<b>Viewing Pictures .....</b>	<b>165</b>
Playback Zoom .....	166
Multi-Frame Playback .....	166
<b>The Playback Menu .....</b>	<b>167</b>
RAW CONVERSION .....	167
ERASE .....	170
CROP .....	172
RESIZE .....	173
PROTECT .....	174
IMAGE ROTATE .....	175
RED EYE REMOVAL .....	176
VOICE MEMO SETTING .....	177
IMAGE TRANSFER ORDER .....	178
WIRELESS COMMUNICATION .....	179
SLIDE SHOW .....	179
PHOTOBOOK ASSIST .....	180
PC AUTO SAVE .....	181
PRINT ORDER (DPOF) .....	182
instax PRINTER PRINT .....	183
DISP ASPECT .....	184

## **8 The Setup Menus** **185**

<b>USER SETTING .....</b>	<b>186</b>
FORMAT .....	186
DATE/TIME .....	187
TIME DIFFERENCE .....	187
🗣️ 言語/LANG. ....	188
MY MENU SETTING .....	188

SENSOR CLEANING .....	189
SOUND & FLASH.....	189
RESET .....	189
<b>SOUND SETTING.....</b>	<b>190</b>
AF BEEP VOL.....	190
SELF-TIMER BEEP VOL.....	190
OPERATION VOL.....	190
SHUTTER VOLUME.....	191
SHUTTER SOUND.....	191
PLAYBACK VOLUME .....	191
<b>SCREEN SETTING .....</b>	<b>192</b>
EVF BRIGHTNESS.....	192
EVF COLOR.....	192
EVF COLOR ADJUSTMENT .....	192
LCD BRIGHTNESS.....	193
LCD COLOR .....	193
LCD COLOR ADJUSTMENT .....	193
IMAGE DISP.....	194
AUTOROTATE DISPLAYS.....	194
PREVIEW EXP/WB IN MANUAL MODE.....	195
NATURAL LIVE VIEW.....	195
FRAMING GUIDELINE.....	196
AUTOROTATE PB .....	196
FOCUS SCALE UNITS .....	197
APERTURE UNIT FOR CINEMA LENS .....	197
DISP. CUSTOM SETTING.....	198
LARGE INDICATORS MODE(EVF) .....	199
LARGE INDICATORS MODE(LCD) .....	200
LARGE INDICATORS DISP. SETTING.....	201
INFORMATION CONTRAST ADJ. ....	201
<b>BUTTON/DIAL SETTING .....</b>	<b>202</b>
FOCUS LEVER SETTING.....	202
EDIT/SAVE QUICK MENU.....	203
FUNCTION (Fn) SETTING .....	204
COMMAND DIAL SETTING .....	207

SHUTTER AF.....	208
SHUTTER AE.....	208
SHOOT WITHOUT LENS.....	208
SHOOT WITHOUT CARD.....	209
FOCUS RING.....	209
FOCUS RING OPERATION.....	209
AE/AF-LOCK MODE.....	209
AWB-LOCK MODE.....	210
APERTURE RING SETTING (A).....	210
APERTURE SETTING.....	210
TOUCH SCREEN SETTING.....	211
<b>POWER MANAGEMENT.....</b>	<b>212</b>
AUTO POWER OFF.....	212
PERFORMANCE.....	212
<b>SAVE DATA SETTING.....</b>	<b>213</b>
FRAME NO.....	213
SAVE ORG IMAGE.....	214
EDIT FILE NAME.....	214
SELECT FOLDER.....	214
COPYRIGHT INFO.....	215
<b>CONNECTION SETTING.....</b>	<b>216</b>
Bluetooth SETTINGS.....	216
PC AUTO SAVE.....	217
instax PRINTER CONNECTION SETTING.....	218
PC CONNECTION MODE.....	218
GENERAL SETTINGS.....	219
INFORMATION.....	219
RESET WIRELESS SETTING.....	219

## **9 Shortcuts 221**

Shortcut Options.....	222
<b>MY MENU.....</b>	<b>223</b>
MY MENU SETTING.....	223
<b>The Q (Quick Menu) Button.....</b>	<b>225</b>
The Quick Menu Display.....	225
Viewing and Changing Settings.....	226
Editing the Quick Menu.....	227



The Fn (Function) Buttons .....	228
Assigning Roles to the Function Buttons.....	230
<b>10 Peripherals and Optional Accessories</b> .....	<b>233</b>
<b>External Flash Units</b> .....	<b>234</b>
Using an External Flash .....	235
SYNC TERMINAL.....	236
SHOE MOUNT FLASH .....	237
MASTER(OPTICAL) .....	240
<b>Lenses</b> .....	<b>244</b>
Lens Parts.....	244
Removing Lens Caps .....	245
Attaching Lens Hoods .....	245
Power Zoom .....	246
Lenses with Aperture Rings.....	246
Lenses with No Aperture Rings.....	247
Lenses with O.I.S. Switches.....	247
Manual Focus Lenses.....	248
Lens Care.....	248
<b>11 Connections</b> .....	<b>249</b>
<b>HDMI Output</b> .....	<b>250</b>
Connecting to HDMI Devices .....	250
Shooting.....	251
Playback.....	251
<b>Wireless Connections (Bluetooth®, Wireless LAN/Wi-Fi)</b> .....	<b>252</b>
Smartphones and Tablets: FUJIFILM Camera Remote .....	252
Copying Pictures to a Computer: PC AutoSave .....	254
<b>Connecting to Computers via USB</b> .....	<b>255</b>
Copying Pictures to a Computer.....	257
Creating JPEG Copies of RAW Images:	
FUJIFILM X RAW STUDIO.....	258
Saving and Loading Camera Settings (FUJIFILM X Acquire).....	258
<b>instax SHARE Printers</b> .....	<b>259</b>
Establishing a Connection .....	259
Printing Pictures.....	260

<b>12 Technical Notes</b>	<b>261</b>
Accessories from Fujifilm.....	262
Software from Fujifilm.....	265
FUJIFILM Camera Remote .....	265
FUJIFILM PC AutoSave .....	265
MyFinePix Studio.....	265
RAW FILE CONVERTER EX.....	265
FUJIFILM X RAW STUDIO .....	266
FUJIFILM X Acquire .....	266
For Your Safety .....	267
Product Care .....	276
Cleaning the Image Sensor .....	277
Firmware Updates.....	278
Checking the Firmware Version.....	278
Troubleshooting.....	279
Warning Messages and Displays .....	288
Memory Card Capacity .....	291
Specifications .....	292

## Supplied Accessories

---

The following are included with the camera:

- NP-W126S rechargeable battery
- AC-5VG AC power adapter
- Plug adapter (Shape of adapter varies with region of sale)
- USB cable
- Body cap
- Metal strap clips (× 2)
- Clip attaching tool
- Protective covers (× 2)
- Shoulder strap
- *Owner's Manual* (this manual)






- The plug adapter supplied varies with the country or region.
- If you purchased a lens kit, check that a lens is included.
- For information on compatible computer software, see “Software from Fujifilm” (p. 265).

## About This Manual

This manual contains instructions for your FUJIFILM X-T30 digital camera. Be sure you have read and understood its contents before proceeding.

### Symbols and Conventions

The following symbols are used in this manual:

-  Information that should be read to prevent damage to the product.
-  Additional information that may be helpful when using the product.
-  Pages on which related information may be found.

Menus and other text in the displays are shown in **bold**. Illustrations are for explanatory purposes only; drawings may be simplified, while photographs are not necessarily taken with the model of camera described in this manual.

### Terminology

The optional SD, SDHC, and SDXC memory cards the camera uses to store pictures are referred to as “memory cards”. The electronic viewfinder may be referred to as the “EVF” and the LCD monitor as the “LCD”.

## AF-C CUSTOM SETTING

Select focus-tracking options when recording movies in focus mode **C**.

### TRACKING SENSITIVITY

Choose how long the camera waits to switch focus when an object enters the focus area behind or in front of the current subject. See “TRACKING SENSITIVITY” (📖 113).

Options				
0	1	2	3	4

### AF SPEED


Adjust the autofocus response speed.

Options										
-5	-4	-3	-2	-1	0	+1	+2	+3	+4	+5

## FACE/EYE DETECTION SETTING

Enable or disable Intelligent Face Detection when recording movies.

Option	Description
<b>FACE DETECTION ON</b>	See “FACE/EYE DETECTION SETTING” (📖 117).
<b>OFF</b>	Intelligent Face Detection and eye priority off.

 When Intelligent Face Detection is enabled, the camera will focus using continuous AF even when single AF (S) is chosen with the focus mode selector. Intelligent Face Detection is not available in manual focus mode.

## MF ASSIST

Choose how focus is displayed in manual focus mode.

Option	Description
<b>STANDARD</b>	Focus is displayed normally (focus peaking is not available).
<b>FOCUS PEAK HIGHLIGHT</b>	The camera heightens high-contrast outlines. Choose a color and peaking level.

**FOCUS CHECK**

If **ON** is selected, the display will automatically zoom in on the selected focus area when the focus ring is rotated in manual focus mode.

Options	
<b>ON</b>	<b>OFF</b>









**DMI OUTPUT INFO DISPLAY**


If **ON** is selected, HDMI devices to which the camera is connected will mirror the information in the camera display.

Options	
<b>ON</b>	<b>OFF</b>

## 4K MOVIE OUTPUT

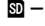



Choose the destination for 4K movies shot while the camera is connected to an HDMI recorder or other device that supports 4K.


Option	Description
 <b>SD 4K</b> 	4K movies are recorded to the camera memory card and output to the HDMI device in 4K.
 <b>SD 4K</b> 	4K movies are recorded to a camera memory card in 4K and output to the HDMI device in Full HD.
 <b>SD FHD</b> 	4K movies are output to the HDMI device in 4K and recorded to the camera memory card in Full HD.
 <b>SD</b> 	4K movies are output to the HDMI device in 4K. The camera does not record 4K movies to a memory card.

 This option is only available when **4K: 16:9** or **DCI: 17:9** is selected for **MOVIE SETTING > MOVIE MODE** in the shooting menu.

## FULL HD MOVIE OUTPUT

Choose the destination for Full HD movies shot while the camera is connected to an HDMI device.

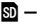Option	Description
 <b>SD FHD</b> 	Full HD movies are output to the HDMI device and recorded to the camera memory card.
 <b>SD</b> 	Full HD movies are not recorded to the camera memory card but are output to the HDMI device.

 • This option is only available when **FHD: 16:9** or **FHD: 17:9** is selected for **MOVIE SETTING > MOVIE MODE** in the shooting menu.

- Movies are recorded to the memory card in 4:2:0 8-bit format.
- When **OFF** is selected for **HDMI OUTPUT INFO DISPLAY**, movies will be output to the HDMI device in 4:2:2 10-bit format.



## K HDMI STANDBY QUALITY

Choose whether output to connected HDMI devices switches from 4K to Full HD during standby.

Option	Description
<b>4K</b>	Output to HDMI devices continues at 4K during standby.
<b>FHD</b>	Output to HDMI devices switches to Full HD during standby, reducing the drain on the battery.



## HDMI REC CONTROL

Choose whether the camera sends movie start and stop signals to the HDMI device when the shutter button is pressed to start and stop movie recording.

Options	
<b>ON</b>	<b>OFF</b>

## ZEBRA SETTING

Highlights that may be overexposed are shown by zebra stripes in the movie mode display.

Option	Description
<b>ZEBRA RIGHT</b>	 Right-slanting stripes.
<b>ZEBRA LEFT</b>	 Left-slanting stripes.
<b>OFF</b>	Stripes off.

## ZEBRA LEVEL

Choose the brightness threshold for the zebra stripe display.

Options										
<b>100</b>	<b>95</b>	<b>90</b>	<b>85</b>	<b>80</b>	<b>75</b>	<b>70</b>	<b>65</b>	<b>60</b>	<b>55</b>	<b>50</b>

## AUDIO SETTING

Adjust audio-related settings for movie recording.

### INTERNAL MIC LEVEL ADJUSTMENT

Adjust the recording level for the built-in microphone.

Option	Description
<b>AUTO</b>	The camera adjusts the recording level automatically.
<b>MANUAL</b>	Adjust the recording level manually. Press the focus stick (focus lever) right to choose from 25 recording levels.
<b>OFF</b>	Turn the built-in microphone off.

### EXTERNAL MIC LEVEL ADJUSTMENT

Adjust the recording level for external microphones.

Option	Description
<b>AUTO</b>	The camera adjusts the recording level automatically.
<b>MANUAL</b>	Adjust the recording level manually. Press the focus stick (focus lever) right to choose from 25 recording levels.
<b>OFF</b>	Disable recording using external microphones.

### MIC LEVEL LIMITER

Reduces distortion caused by input that exceeds the limits of the microphone's audio circuits.

Options	
<b>ON</b>	<b>OFF</b>

## WIND FILTER

Choose whether to enable wind noise reduction during movie recording.

Options	
ON	OFF

## LOW CUT FILTER

Choose whether to enable the low-cut filter, reducing low-frequency noise during movie recording.

Options	
ON	OFF

## HEADPHONES VOLUME

Adjust the headphone volume.

Option	Description
10—1	Choose a volume of from 1 to 10.
0	Mute output to the headphones.

## MIC/REMOTE RELEASE

Specify whether the device connected to the microphone/remote release connector is a microphone or a remote release.

Options	
 MIC	 REMOTE

## TIME CODE SETTING

Adjust time code (hour, minute, second, and frame number) display settings for movie recording.

### TIME CODE DISPLAY

Select **ON** to display time codes during movie recording and playback.

Options	
<b>ON</b>	<b>OFF</b>

### START TIME SETTING

Choose the time code starting time.

Option	Description
<b>MANUAL INPUT</b>	Highlight this option and press the focus stick (focus lever) right to choose a start time manually.
<b>CURRENT TIME</b>	Set the start time to the current time.
<b>RESET</b>	Set the start time to 00:00:00.

## COUNT UP SETTING

Choose whether time is clocked continuously or only during movie recording.


Option	Description
<b>REC RUN</b>	Time is clocked only during movie recording.
<b>FREE RUN</b>	Time is clocked continuously.

## DROP FRAME

At frame rates of **59.94P**, and **29.97P**, a discrepancy will gradually develop between the time code (measured in seconds) and the actual recording time (measured in fractions of a second). Choose whether the camera drops frames as necessary to match the recording time to the time code.

Option	Description
<b>ON</b>	The camera drops frames as necessary to maintain a strict match between the time code and the actual recording time.
<b>OFF</b>	Frames are not dropped.

- The time code display varies with the option selected.

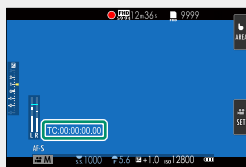

TC:00:00:00.00

ON

TC:00:00:00.00

OFF

- Selecting a frame rate of **23.98P** disables frame drop.


## HDMI TIME CODE OUTPUT

Choose whether time codes are output to HDMI devices.


Options	
<b>ON</b>	<b>OFF</b>

## TALLY LIGHT



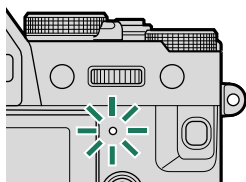

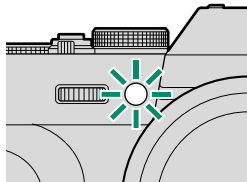


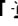
Choose the lamp (indicator or AF-assist) that lights during movie recording and whether the lamp blinks or remains steady.



Indicator lamp



AF-assist illuminator

Option	Description
<b>FRONT OFF</b> <b>REAR</b> 	The indicator lamp lights during movie recording.
<b>FRONT OFF</b> <b>REAR</b> 	The indicator lamp blinks during movie recording.
<b>FRONT</b>  <b>REAR</b> 	The indicator and AF-assist lamps light during movie recording.
<b>FRONT</b>  <b>REAR OFF</b>	The AF-assist lamp lights during movie recording.
<b>FRONT</b>  <b>REAR</b> 	The indicator and AF-assist lamps blink during movie recording.
<b>FRONT</b>  <b>REAR OFF</b>	The AF-assist lamp blinks during movie recording.
<b>FRONT OFF</b> <b>REAR OFF</b>	The indicator and AF-assist lamps remain off during movie recording.

## MOVIE SILENT CONTROL

Select **ON** to disable camera dials and adjust movie settings using touch-screen controls, preventing the sounds made by camera controls being recorded with the movie (📖 23).

Options	
<b>ON</b>	<b>OFF</b>


# Playback and the Playback Menu

# 7

## The Playback Display

This section lists the indicators that may be displayed during playback.

**!** For illustrative purposes, displays are shown with all indicators lit.


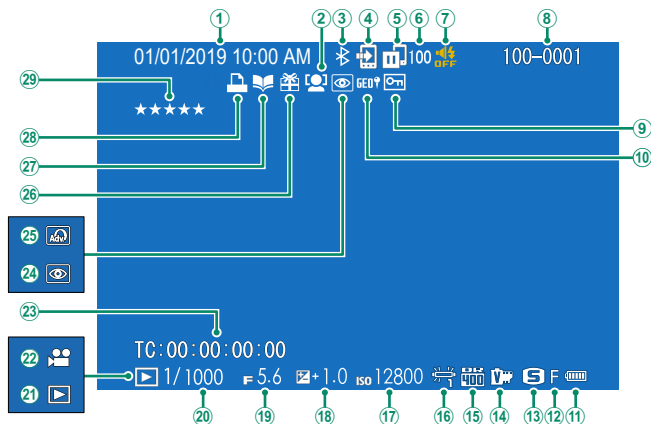


① Date and time.....	38, 40, 187	⑩ White balance.....	102
② Face detection indicator.....	117	⑪ Sensitivity.....	136
③ Bluetooth ON/OFF.....	216	⑫ Exposure compensation.....	77
④ Image transfer order.....	178	⑬ Aperture.....	55, 59, 60
⑤ Image transfer status.....	216, 252	⑭ Shutter speed.....	55, 56, 60
⑥ Number of frames selected for upload... 178		⑮ Playback mode indicator.....	45
⑦ Sound and flash indicator.....	189	⑯ Movie icon.....	51
⑧ Frame number.....	213	⑰ Time code.....	158
⑨ Protected image.....	174	⑱ Red-eye removal indicator.....	141, 176
⑩ Location data.....	219, 253	⑲ Advanced filter.....	87
⑪ Battery level.....	37	⑳ Gift image.....	45
⑫ Image quality.....	99	㉑ Photobook assist indicator.....	180
⑬ Image size.....	98	㉒ DPOF print indicator.....	182
⑭ Film simulation.....	100	㉓ Rating.....	163
⑮ Dynamic range.....	104		



## The DISP/BACK Button

The **DISP/BACK** button controls the display of indicators during playback.


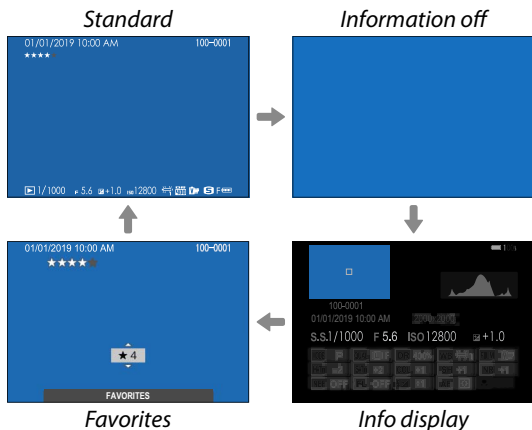
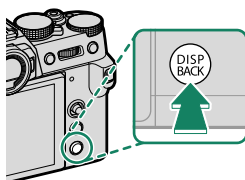


### Favorites: Rating Pictures


To rate the current picture, press **DISP/BACK** and press the focus stick (focus lever) up and down to select from zero to five stars.

**Viewing Photo Information**

The photo information display changes each time the focus stick (focus lever) is pressed up.

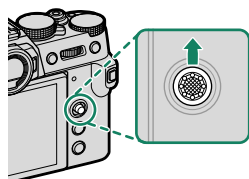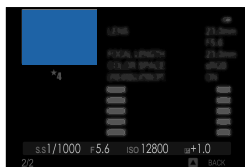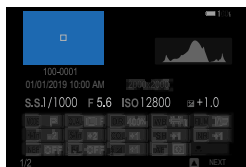*Basic data**Info display 2**Info display 1***Zooming in on the Focus Point**


Press the center of the rear command dial to zoom in on the focus point. Press again to return to full-frame playback.

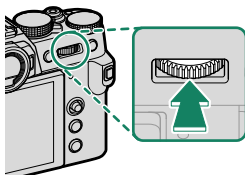

## Viewing Pictures

Read this section for information on playback zoom and multi-frame playback.

Use the rear command dial to go from full-frame playback to playback zoom or multi-frame playback.

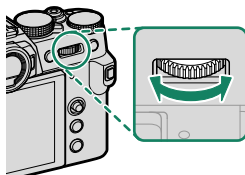

*Full-frame playback*




*Multi-frame playback*



*Nine-frame view*



*Hundred-frame view*

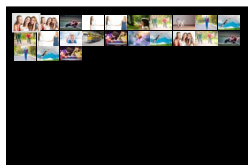

*Playback zoom*

**DISP/BACK  
MENU/OK**



*Medium zoom*



*Maximum zoom*



## Playback Zoom

Rotate the rear command dial right to zoom in on the current picture, left to zoom out. To exit zoom, press **DISP/BACK**, **MENU/OK**, or the center of the rear command dial.

- The maximum zoom ratio varies with the option selected for **IMAGE QUALITY SETTING > IMAGE SIZE**.
  - Playback zoom is not available with cropped or resized copies saved at a size of **640**.

### Scroll

When the picture is zoomed in, the focus stick (focus lever) can be used to view areas of the image not currently visible in the display.



*Navigation window*

## Multi-Frame Playback

To change the number of images displayed, rotate the rear command dial left when a picture is displayed full frame.


- Use the focus stick (focus lever) to highlight images and press **MENU/OK** to view the highlighted image full frame.
  - In the nine- and hundred-frame displays, press the focus stick up or down to view more pictures.



## The Playback Menu

Adjust playback settings.

The playback menu is displayed when you press **MENU/OK** in playback mode.

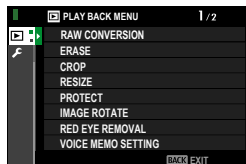


### RAW CONVERSION


Even if you don't have a computer, you can use the camera to modify RAW pictures and save them in JPEG format.

#### Saving RAW Pictures in JPEG Format

- 1 Display a RAW picture.
- 2 Highlight **RAW CONVERSION** in the playback menu.
- 3 Press **MENU/OK**.  
A list of settings will be displayed.

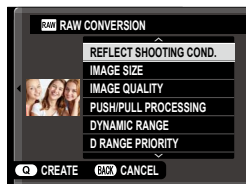

- 4 Press the focus stick (focus lever) up or down to highlight a setting.
- 5 Press the focus stick right to display options.

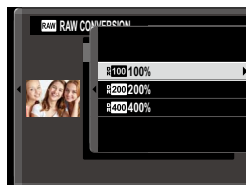



- 6 Press the focus stick up or down to highlight the desired option.
- 7 Press **MENU/OK** to select the highlighted option. The settings list shown in Step 3 will be displayed. Repeat Steps 4 to 7 to adjust additional settings.
- 8 Press the **Q** button.  
A preview of the JPEG copy will be displayed.
- 9 Press **MENU/OK**.  
The JPEG copy will be saved.




RAW conversion options can also be displayed by pressing the **Q** button when a RAW picture is displayed during playback.

The settings that can be adjusted when converting pictures from RAW to JPEG are:

Setting	Description
<b>REFLECT SHOOTING COND.</b>	Create a JPEG copy using the settings in effect at the time the photo was taken.
<b>IMAGE SIZE</b>	Choose an image size.
<b>IMAGE QUALITY</b>	Adjust image quality.
<b>PUSH/PULL PROCESSING</b>	Adjust exposure.
<b>DYNAMIC RANGE</b>	Enhance details in highlights for natural contrast.
<b>D RANGE PRIORITY</b>	Reduce loss of detail in highlights and shadows for natural-looking results when photographing high-contrast scenes.
<b>FILM SIMULATION</b>	Simulate the effects of different types of film.
<b>B &amp; W ADJ.   (Warm/Cool)</b>	Add a warm or cool cast to monochrome pictures.
<b>GRAIN EFFECT</b>	Add a film grain effect.
<b>COLOR CHROME EFFECT</b>	Deepen colors in shadows.
<b>WHITE BALANCE</b>	Adjust white balance.
<b>WB SHIFT</b>	Fine-tune white balance.
<b>HIGHLIGHT TONE</b>	Adjust highlights.
<b>SHADOW TONE</b>	Adjust shadows.
<b>COLOR</b>	Adjust color density.
<b>SHARPNESS</b>	Sharpen or soften outlines.
<b>NOISE REDUCTION</b>	Process the copy to reduce mottling.
<b>LENS MODULATION OPTIMIZER</b>	Improve definition by adjusting for diffraction and the slight loss of focus at the periphery of the lens.
<b>COLOR SPACE</b>	Choose the color space used for color reproduction.

## ERASE


Delete individual pictures, multiple selected pictures, or all pictures.

 Deleted pictures cannot be recovered. Protect important pictures or copy them to a computer or other storage device before proceeding.

Option	Description
<b>FRAME</b>	Delete pictures one at a time.
<b>SELECTED FRAMES</b>	Delete multiple selected pictures.
<b>ALL FRAMES</b>	Delete all unprotected pictures.

## FRAME

- 1 Select **FRAME** for **ERASE** in the playback menu.
- 2 Press the focus stick (focus lever) left or right to scroll through pictures and press **MENU/OK** to delete.

 • A confirmation dialog is not displayed before pictures are deleted; be sure the correct picture is selected before pressing **MENU/OK**.

• Additional pictures can be deleted by pressing **MENU/OK**. Press the focus stick left or right to scroll through pictures and press **MENU/OK** to delete.



## SELECTED FRAMES

---

- 1 Select **SELECTED FRAMES** for **ERASE** in the playback menu.
- 2 Highlight pictures and press **MENU/OK** to select.
  - Selected pictures are indicated by check marks (☑).
  - To deselect a highlighted picture, press **MENU/OK** again.
- 3 When the operation is complete, press **DISP/BACK** to display a confirmation dialog.
- 4 Highlight **OK** and press **MENU/OK** to delete the selected pictures.



Pictures in photobooks or printer orders are shown by **!**.

## ALL FRAMES

---

- 1 Select **ALL FRAMES** for **ERASE** in the playback menu.
- 2 A confirmation dialog will be displayed; highlight **OK** and press **MENU/OK** to delete all unprotected pictures.



- Pressing **DISP/BACK** cancels deletion; note that any pictures deleted before the button was pressed cannot be recovered.
- If a message appears stating that the selected images are part of a DPOF print order, press **MENU/OK** to delete the pictures.

## ROP

Create a cropped copy of the current picture.

---

- 1 Display the desired picture.
- 2 Select **CROP** in the playback menu.
- 3 Use the rear command dial to zoom in and out and press the focus stick (focus lever) up, down, left, or right to scroll the picture until the desired portion is displayed.
- 4 Press **MENU/OK** to display a confirmation dialog.
- 5 Press **MENU/OK** again to save the cropped copy to a separate file.



- The higher the zoom ratio, the smaller the number of pixels in the cropped copy.
- If the size of the final copy will be **640**, **YES** will be displayed in yellow.
- All copies have an aspect ratio of 3:2.

## RESIZE

Create a small copy of the current picture.

---

- 1 Display the desired picture.
- 2 Select **RESIZE** in the playback menu.
- 3 Highlight a size and press **MENU/OK** to display a confirmation dialog.
- 4 Press **MENU/OK** again to save the resized copy to a separate file.




The sizes available vary with the size of the original image.

## PROTECT

Protect pictures from accidental deletion. Highlight one of the following options and press **MENU/OK**.

Option	Description
<b>FRAME</b>	Protect selected pictures. Press the focus stick (focus lever) left or right to view pictures and press <b>MENU/OK</b> to select or deselect. Press <b>DISP/BACK</b> when the operation is complete.
<b>SET ALL</b>	Protect all pictures.
<b>RESET ALL</b>	Remove protection from all pictures.

 Protected pictures will be deleted when the memory card is formatted.

 Protecting images currently selected for upload to paired smart-phones or tablets removes upload marking.

## IMAGE ROTATE

Rotate pictures.

- 1 Display the desired picture.
- 2 Select **IMAGE ROTATE** in the playback menu.
- 3 Press the focus stick (focus lever) down to rotate the picture 90° clockwise, up to rotate it 90° counterclockwise.
- 4 Press **MENU/OK**. The picture will automatically be displayed in the selected orientation whenever it is played back on the camera.




- Protected pictures cannot be rotated. Remove protection before rotating pictures.
- The camera may not be able to rotate pictures created with other devices. Pictures rotated on the camera will not be rotated when viewed on a computer or on other cameras.
- Pictures taken with **SCREEN SET-UP > AUTOROTATE PB** are automatically displayed in the correct orientation during playback.

## RED EYE REMOVAL

Remove red-eye from portraits. The camera will analyze the image; if red-eye is detected, the image will be processed to create a copy with reduced red-eye.

- 1 Display the desired picture.
- 2 Select **RED EYE REMOVAL** in the playback menu.
- 3 Press **MENU/OK**.




- Results vary depending on the scene and the camera's success in detecting faces.
- The amount of time needed to process the image varies with the number of faces detected.
- Red eye cannot be removed from pictures that have already been processed using red-eye removal, which are indicated by a  icon during playback.
- Red eye removal cannot be performed on RAW images.

## VOICE MEMO SETTING


Add a voice memo to the current photograph.

- 1 Select **ON** for **VOICE MEMO SETTING** in the playback menu.
- 2 Display a photo to which you wish to add a voice memo.
- 3 Press and hold the center of the front command dial to record the memo. Recording ends after 30 s or when you release the dial.

-  • The new memo will be recorded over any existing memos.
- Voice memos cannot be added to protected pictures.
- Deleting the picture also deletes the memo.

### Playing Voice Memos


Pictures with voice memos are indicated by  icons during playback.

- To play a memo, select the picture and press the center of the front command dial.
- A progress bar will be displayed while the memo plays back.
- Volume can be adjusted by pressing **MENU/OK** to pause playback and then pressing the focus stick (focus lever) up or down to adjust the volume. Press **MENU/OK** again to resume playback. Volume can also be adjusted using  **SOUND SET-UP > PLAYBACK VOLUME**.

## IMAGE TRANSFER ORDER

Select photos for upload to a paired smartphone or tablet.

- 1 Select **IMAGE TRANSFER ORDER > SELECT FRAMES** in the playback menu.
- 2 Highlight photos and press **MENU/OK** to select or deselect. Repeat until all the desired photos have been selected.
- 3 Press **DISP/BACK** to exit to playback.

 If **ON** is selected for both **CONNECTION SETTING > Bluetooth SETTINGS > Bluetooth ON/OFF** and **AUTO IMAGE TRANSFER**, upload will begin shortly after you exit to playback or turn the camera off.

-  • Image transfer orders can contain a maximum of 999 pictures.
- The following cannot be selected for upload:
  - Protected pictures
  - Movies
  - RAW images
  - "Gift" pictures (pictures taken with other cameras)
- If **PAIRING/TRANSFER ORDER** is selected for **CONNECTION SETTING > GENERAL SETTINGS > BUTTON SETTING**, photos can also be marked for upload using the **Fn1** button.
- To remove upload marking from all pictures in the current order, select **IMAGE TRANSFER ORDER > RESET ORDER**.
- If **ON** is selected for **CONNECTION SETTING > Bluetooth SETTINGS > AUTO IMAGE TRANSFER**, photos will automatically be marked for upload as they are taken.



## WIRELESS COMMUNICATION

Connect to smartphones running the latest version of the FUJIFILM Camera Remote app. The smartphone can then be used to:

- Control the camera and take pictures remotely
- Receive pictures uploaded from the camera
- Browse the pictures on the camera and download selected pictures
- Upload location data to the camera



For downloads and other information, visit:

[http://app.fujifilm-dsc.com/en/camera\\_remote/](http://app.fujifilm-dsc.com/en/camera_remote/)

## SLIDE SHOW

View pictures in an automated slide show. Press **MENU/OK** to start and press the focus stick (focus lever) right or left to skip ahead or back. Press **DISP/BACK** at any time during the show to view on-screen help. The show can be ended at any time by pressing **MENU/OK**.






The camera will not turn off automatically while a slide show is in progress.

## PHOTOBOOK ASSIST

Create books from your favorite photos.

### Creating a Photobook

- 1 Select **NEW BOOK** for  **PLAY BACK MENU > PHOTOBOOK ASSIST**.
- 2 Scroll through the images and press the focus stick (focus lever) up to select or deselect. Press **MENU/OK** to exit when the book is complete.
  -  • Neither photographs **640** or smaller nor movies can be selected for photobooks.
  - The first picture selected becomes the cover image. Press the focus stick down to select the current image for the cover instead.
- 3 Highlight **COMPLETE PHOTOBOOK** and press **MENU/OK** (to select all photos for the book, choose **SELECT ALL**). The new book will be added to the list in the photobook assist menu.

-  • Books can contain up to 300 pictures.
- Books that contain no photos are automatically deleted.

#### Photobooks

Photobooks can be copied to a computer using MyFinePix Studio software.

## Viewing Photobooks

Highlight a book in the photobook assist menu and press **MENU/OK** to display the book, then press the focus stick (focus lever) left or right to scroll through the pictures.

## Editing and Deleting Photobooks

Display the photobook and press **MENU/OK**. The following options will be displayed; select the desired option and follow the on-screen instructions.

- **EDIT:** Edit the book as described in “Creating a Photobook”.
- **ERASE:** Delete the book.

## PC AUTO SAVE

Upload pictures from the camera to a computer running the latest version of FUJIFILM PC AutoSave (note that you must first install the software and configure the computer as a destination for images copied from the camera).



For downloads and other information, visit:

[http://app.fujifilm-dsc.com/en/pc\\_autosave/](http://app.fujifilm-dsc.com/en/pc_autosave/)


## PRINT ORDER (DPOF)

Create a digital “print order” for DPOF-compatible printers.

- 1 Select **PLAY BACK MENU > PRINT ORDER (DPOF)**.
- 2 Select **WITH DATE** to print the date of recording on pictures, **WITHOUT DATE** to print pictures without dates, or **RESET ALL** to remove all pictures from the print order before proceeding.
- 3 Display a picture you wish to include in or remove from the print order.
- 4 Press the focus stick (focus lever) up or down to choose the number of copies (up to 99).



To remove a picture from the order, press the focus stick down until the number of copies is 0.

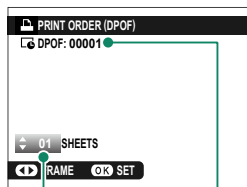

Total number of prints

Number of copies



Repeat steps 3–4 to complete the print order.

- 5 The total number of prints is displayed in the monitor. Press **MENU/OK** to exit.




- The pictures in the current print order are indicated by a icon during playback.
- Print orders can contain a maximum of 999 pictures.
- If a memory card is inserted containing a print order created by another camera, you will need to delete the order before creating as described above.

## instax PRINTER PRINT

To print pictures to optional Fujifilm instax SHARE printers, first select **CONNECTION SETTING** > **instax PRINTER CONNECTION SETTING** and enter the instax SHARE printer name (SSID) and password, then follow the steps below.

- 1 Turn the printer on.
- 2 Select **PLAY BACK MENU** > **instax PRINTER PRINT**. The camera will connect to the printer.

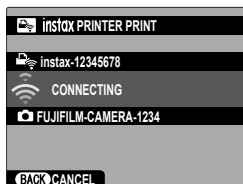


- 3 Use the focus stick (focus lever) to display the picture you want to print, then press **MENU/OK**. The picture will be sent to the printer and printing will start.






- Pictures taken with other cameras cannot be printed.
- The area printed is smaller than the area visible in the LCD monitor.
- The displays may vary depending on the printer connected.

## DISP ASPECT

 Choose how High Definition (HD) devices display pictures with an aspect ratio of 3:2 (this option is available only when an HDMI cable is connected).



		Option	
		16:9	3:2
Display			


-  Select 16:9 to display the image so that it fills the screen with its top and bottom cropped out, 3:2 to display the entire image with black bands at either side.


# The Setup Menus

# 8

## USER SETTING



Adjust basic camera settings.

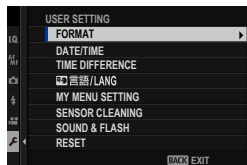To access basic camera settings, press **MENU/OK**, select the  (SET UP) tab, and choose **USER SETTING**.





### FORMAT



To format a memory card:

- 1 Select  **USER SETTING** > **FORMAT** in the  (SET UP) tab.
- 2 A confirmation dialog will be displayed. To format the memory card, highlight **OK** and press **MENU/OK**.

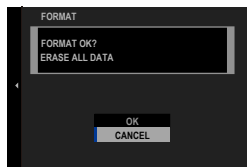 To exit without formatting the memory card, select **CANCEL** or press **DISP/BACK**.





-  All data—including protected pictures—will be deleted from the memory card. Be sure important files have been copied to a computer or other storage device.
- Do not open the battery-chamber cover during formatting.

 The format menu can also be displayed by pressing the center of the rear command dial while pressing and holding the  button.




## DATE/TIME



To set the camera clock:



- 1 Select  **USER SETTING** > **DATE/TIME** in the  (**SET UP**) tab.
- 2 Press the focus stick (focus lever) left or right to highlight the year, month, day, hour, or minute and press up or down to change. To change the order in which the year, month, and day are displayed, highlight the date format and press the focus stick up or down.
- 3 Press **MENU/OK** to set the clock.




## TIME DIFFERENCE

Switch the camera clock instantly from your home time zone to the local time at your destination when traveling. To specify the difference between your local and home time zone:

- 1 Highlight  **LOCAL** and press **MENU/OK**.
- 2 Use the focus stick (focus lever) to choose the time difference between local time and your home time zone. Press **MENU/OK** when settings are complete.

To set the camera clock to local time, highlight  **LOCAL** and press **MENU/OK**. To set the clock to the time in your home time zone, select  **HOME**.

Options	
 <b>LOCAL</b>	 <b>HOME</b>


 If  **LOCAL** is selected,  will be displayed in yellow for about three seconds when the camera is turned on.

Choose a language.

## MY MENU SETTING


Edit the items listed in the **MY** (MY MENU) tab, a personalized custom menu of frequently-used options.

- 1 Highlight **USER SETTING > MY MENU SETTING** in the **(SET UP)** tab and press **MENU/OK**.

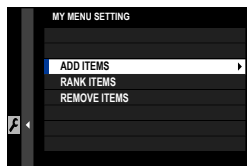


To reorder items, select **RANK ITEMS**. To delete items, select **REMOVE ITEMS**.

- 2 Press the focus stick (focus lever) up or down to highlight **ADD ITEMS** and press **MENU/OK**. Options that can be added to “my menu” are highlighted in blue.

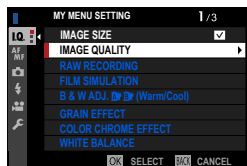

Items currently in “my menu” are indicated by check marks.

- 3 Choose a position for the item and press **MENU/OK**. The item will be added to “my menu”.

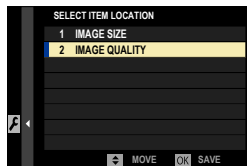


- 4 Press **MENU/OK** to return to the edit display.
- 5 Repeat Steps 3 and 4 until all the desired items have been added.

“My menu” can contain up to 16 items.

## SENSOR CLEANING

Remove dust from the camera image sensor.

Option	Description
<b>OK</b>	Clean the sensor immediately.
<b>WHEN SWITCHED ON</b>	Sensor cleaning will be performed when the camera is turned on.
<b>WHEN SWITCHED OFF</b>	Sensor cleaning will be performed when the camera turns off (sensor cleaning is not however performed if the camera turns off in playback mode).

 Dust that cannot be removed using sensor cleaning can be removed using a blower (📖 277).

## SOUND & FLASH

Select **OFF** to disable the speaker, flash, illuminator, and self-timer lamp in situations in which camera sounds and lights may be unwelcome.

Options	
<b>ON</b>	<b>OFF</b>

## RESET

Reset shooting or setup menu options to default values.


- 1 Highlight the desired option and press **MENU/OK**.


Option	Description
<b>SHOOTING MENU RESET</b>	Reset all shooting menu settings other than custom white balance and custom settings banks created using <b>EDIT/SAVE CUSTOM SETTING</b> to default values.
<b>SET-UP RESET</b>	Reset all setup menu settings other than <b>DATE/TIME</b> , <b>TIME DIFFERENCE</b> , and <b>CONNECTION SETTING</b> to default values.

- 2 A confirmation dialog will be displayed; highlight **OK** and press **MENU/OK**.


## SOUND SETTING

Make changes to camera sounds.

To access sound settings, press **MENU/OK**, select the  (**SET UP**) tab, and choose **SOUND SET-UP**.

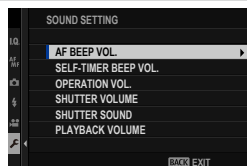

### AF BEEP VOL.


Choose the volume of the beep that sounds when the camera focuses. The beep can be muted by selecting  **OFF**.

#### Options


 (high)

 (medium)

 (low)

 **OFF** (mute)

### SELF-TIMER BEEP VOL.


Choose the volume of the beep that sounds while the self-timer is active. The beep can be muted by selecting  **OFF**.

#### Options


 (high)

 (medium)

 (low)

 **OFF** (mute)

### OPERATION VOL.


Adjust the volume of the sounds produced when camera controls are operated. Choose  **OFF** to disable control sounds.

#### Options

 (high)

 (medium)

 (low)

 **OFF** (mute)




## SHUTTER VOLUME

Adjust the volume of the sounds produced by the electronic shutter. Choose **OFF** to disable the shutter sound.

Options			
 (high)	 (medium)	 (low)	 OFF (mute)

## SHUTTER SOUND

Choose the sound made by the electronic shutter.

Options		
 1 SOUND 1	 2 SOUND 2	 3 SOUND 3

## PLAYBACK VOLUME


Adjust the volume for movie playback.

Options											
10	9	8	7	6	5	4	3	2	1	0	

## SCREEN SETTING

Make changes to display settings.

To access display settings, press **MENU/OK**, select the **SET UP** tab, and choose **SCREEN SET-UP**.

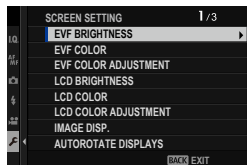

### EVF BRIGHTNESS

Adjust the brightness of the display in the electronic viewfinder.

Option	Description
<b>AUTO</b>	Automatic brightness adjustment.
<b>MANUAL</b>	Adjust brightness manually; choose from options between +5 and -7.

### EVF COLOR


Adjust the hue of the display in the electronic viewfinder.

Options											
+5	+4	+3	+2	+1	0	-1	-2	-3	-4	-5	

### EVF COLOR ADJUSTMENT

Adjust the color of the display in the electronic viewfinder.

- 1 Adjust colors using the focus stick (focus lever).

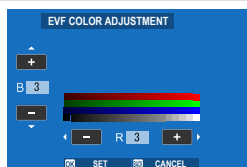

- 2 Press **MENU/OK**.

## LCD BRIGHTNESS

Adjust monitor brightness.

Options										
+5	+4	+3	+2	+1	0	-1	-2	-3	-4	-5

## LCD COLOR

Adjust monitor hue.

Options										
+5	+4	+3	+2	+1	0	-1	-2	-3	-4	-5

## LCD COLOR ADJUSTMENT

Adjust the color of the display in the LCD monitor.

- 1 Adjust colors using the focus stick (focus lever).
- 2 Press **MENU/OK**.

## IMAGE DISP.

Choose how long images are displayed after shooting.

Option	Description
<b>CONTINUOUS</b>	Pictures are displayed until the <b>MENU/OK</b> button is pressed or the shutter button is pressed halfway. To zoom in on the active focus point, press the center of the rear command dial; press again to cancel zoom.
<b>1.5 SEC</b>	Pictures are displayed for the selected time or until the shutter button is pressed halfway.
<b>0.5 SEC</b>	
<b>OFF</b>	Pictures are not displayed after shooting.



- Colors may differ slightly from those in the final image.
- “Noise” mottling may be visible at high sensitivities.

## AUTOROTATE DISPLAYS

Choose whether the indicators in the viewfinder and LCD monitor rotate to match camera orientation.

Options	
ON	OFF



## PREVIEW EXP./WB IN MANUAL MODE

Choose whether to enable exposure and/or white balance preview in manual exposure mode.

Option	Description
<b>PREVIEW EXP./WB</b>	Enable exposure and white balance preview.
<b>PREVIEW WB</b>	Preview white balance only. Choose this option in situations in which exposure and white balance are likely to change during shooting, as may be the case when you use a flash with an incandescent monitoring lamp.
<b>OFF</b>	Disable exposure and white balance preview. Choose this option when using a flash or on other occasions on which exposure may change when the picture is taken.




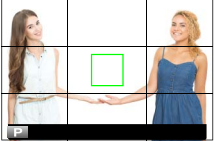
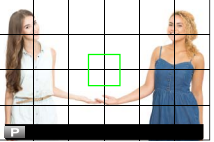
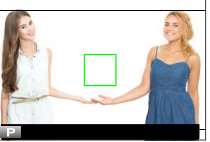
## NATURAL LIVE VIEW

Choose whether the effects of film simulation, white balance, and other settings are visible in the monitor.

Option	Description
<b>ON</b>	The effects of camera settings are not visible in the monitor, but shadows in low-contrast, back-lit scenes and other hard-to-see subjects more visible. Colors and tone will differ from those in the final picture. The display will however be adjusted to show the effects of advanced filters and of monochrome and sepia settings.
<b>OFF</b>	The effects of film simulation, white balance, and other settings can be previewed in the monitor.

## FRAMING GUIDELINE

Choose a framing grid for shooting mode.

		Option		
		 GRID 9	 GRID 24	 HD FRAMING
Display				
	For “rule of thirds” composition.	A six-by-four grid.	Frame HD pictures in the crop shown by the lines at the top and bottom of the display.	

 Framing guides are not shown at default settings but can be displayed using  **SCREEN SET-UP** > **DISP. CUSTOM SETTING** ( 198).

## AUTOROTATE PB

Choose **ON** to automatically rotate “tall” (portrait-orientation) pictures during playback.

Options	
<b>ON</b>	<b>OFF</b>

## FOCUS SCALE UNITS

Choose the units used for the focus distance indicator.

Options	
METERS	FEET

## APERTURE UNIT FOR CINEMA LENS

Choose whether the camera displays aperture as a T-number (used for movie camera lenses) or an f/-number (used for still camera lenses) when an optional FUJINON MKX-series lens is attached. For information on using cinema lenses, see the documentation provided with the lens.

Option	Description
<b>T NUMBER</b>	A measure of lens aperture commonly used by cinematographers. Lens transmittance is taken into account to better calculate exposure.
<b>F NUMBER</b>	A measure of lens aperture commonly used by photographers. Lens transmittance is assumed to be 100%, meaning that the same aperture may produce different exposures depending on the lens.

## ISP. CUSTOM SETTING

Choose the items shown in the standard indicator display.


- 1 In shooting mode, use the **DISP/BACK** button to display standard indicators.
- 2 Press **MENU/OK** and select **SCREEN SET-UP > DISP. CUSTOM SETTING** in the **(SET UP)** tab.
- 3 Highlight items and press **MENU/OK** to select or deselect.

Item	Default	Item	Default
FRAMING GUIDELINE	<input type="checkbox"/>	CONTINUOUS MODE	<input checked="" type="checkbox"/>
ELECTRONIC LEVEL	<input type="checkbox"/>	DUAL IS MODE	<input checked="" type="checkbox"/>
FOCUS FRAME	<input checked="" type="checkbox"/>	TOUCH SCREEN MODE	<input checked="" type="checkbox"/>
AF DISTANCE INDICATOR	<input type="checkbox"/>	WHITE BALANCE	<input checked="" type="checkbox"/>
MF DISTANCE INDICATOR	<input checked="" type="checkbox"/>	FILM SIMULATION	<input checked="" type="checkbox"/>
HISTOGRAM	<input type="checkbox"/>	DYNAMIC RANGE	<input checked="" type="checkbox"/>
LIVE VIEW HIGHLIGHT ALERT	<input type="checkbox"/>	BOOST MODE	<input checked="" type="checkbox"/>
SHOOTING MODE	<input checked="" type="checkbox"/>	FRAMES REMAINING	<input checked="" type="checkbox"/>
APERTURE/S-SPEED/ISO	<input checked="" type="checkbox"/>	IMAGE SIZE/QUALITY	<input checked="" type="checkbox"/>
INFORMATION BACKGROUND	<input checked="" type="checkbox"/>	MOVIE MODE & REC. TIME	<input checked="" type="checkbox"/>
Expo. Comp. (Digit)	<input type="checkbox"/>	IMAGE TRANSFER ORDER	<input checked="" type="checkbox"/>
Expo. Comp. (Scale)	<input checked="" type="checkbox"/>	MIC LEVEL	<input checked="" type="checkbox"/>
FOCUS MODE	<input checked="" type="checkbox"/>	GUIDANCE MESSAGE	<input checked="" type="checkbox"/>
PHOTOMETRY	<input checked="" type="checkbox"/>	BATTERY LEVEL	<input checked="" type="checkbox"/>
SHUTTER TYPE	<input checked="" type="checkbox"/>	FRAMING OUTLINE	<input type="checkbox"/>
FLASH	<input checked="" type="checkbox"/>		

- 4 Press **DISP/BACK** to save changes.
- 5 Press **DISP/BACK** as needed to exit the menus and return to the shooting display.

## LARGE INDICATORS MODE(EVF)

Select **ON** to display large indicators in the electronic viewfinder. The indicators displayed can be selected using **SCREEN SETTING > LARGE INDICATORS DISP. SETTING**.

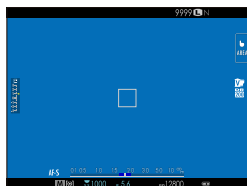

OFF



ON

**!** Some icons are not displayed when **ON** is selected for **LARGE INDICATORS MODE(EVF)** (📖 11).


**📌** If **LARGE INDICATORS MODE** is assigned to a function button, the button can be used to toggle **LARGE INDICATORS MODE** on (**ON**) and off (**OFF**) (📖 204, 230).

## LARGE INDICATORS MODE(LCD)

Select **ON** to display large indicators in the LCD monitor. The indicators displayed can be selected using **SCREEN SETTING > LARGE INDICATORS DISP. SETTING**.



OFF

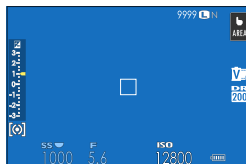


ON

! Some icons are not displayed when **ON** is selected for **LARGE INDICATORS MODE(LCD)** (📖 13).

📄 If **LARGE INDICATORS MODE** is assigned to a function button, the button can be used to toggle **LARGE INDICATORS MODE** on (**ON**) and off (**OFF**) (📖 204, 230).

## LARGE INDICATORS DISP. SETTING

Choose the indicators displayed when **ON** is selected for **SCREEN SETTING > LARGE INDICATORS MODE(EVF)** or **LARGE INDICATORS MODE(LCD)**.

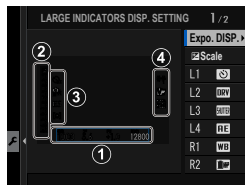

Option	Description
① <b>Expo. DISP.</b>	Choose the items listed at the bottom of the display. Selected items are indicated by check marks (☑); to deselect, highlight the check marks and press <b>MENU/OK</b> .
② <b>Scale</b>	Select <b>ON</b> to display the exposure indicator.
③ <b>L1, L2, L3, L4</b>	Choose up to four large icons for display on the left side of the screen.
④ <b>R1, R2, R3, R4</b>	Choose up to four large icons for display on the right side of the screen.


## INFORMATION CONTRAST ADJ.


Adjust display contrast.

Option	Description
<b>HIGH CONTRAST</b>	High contrast.
<b>STANDARD</b>	Normal contrast.
<b>LOW CONTRAST</b>	Low contrast.
<b>DARK AMBIENT LIGHTING</b>	Contrast adjusted for dim ambient lighting.

## **BUTTON/DIAL SETTING**


Access options for camera controls.

To access control options, press **MENU/OK**, select the  (**SET UP**) tab, and choose **BUTTON/DIAL SETTING**.

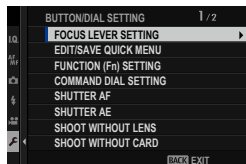

## **FOCUS LEVER SETTING**





Choose the functions performed by the focus stick (focus lever).

Option	Description
<b>LOCK (OFF)</b>	The focus stick cannot be used during shooting.
<b>PUSH  TO UNLOCK</b>	Press the stick to view the focus-point display and tilt the stick to select a focus point.
<b>ON</b>	Tilt the stick to view the focus-point display and select a focus point.



## EDIT/SAVE QUICK MENU

Choose the items displayed in the quick menu.

- 1 Select  **BUTTON/DIAL SETTING** > **EDIT/SAVE QUICK MENU** in the  (**SET UP**) tab.
  - 2 The current quick menu will be displayed; use the focus stick (focus lever) to highlight the item you wish to change and press **MENU/OK**.
  - 3 Highlight any of the following options and press **MENU/OK** to assign it to the selected position.
    - IMAGE SIZE
    - IMAGE QUALITY
    - FILM SIMULATION\*
    - B & W ADJ.   (Warm/Cool)\*
    - GRAIN EFFECT\*
    - COLOR CHROME EFFECT\*
    - DYNAMIC RANGE\*
    - D RANGE PRIORITY\*
    - WHITE BALANCE\*
    - HIGHLIGHT TONE\*
    - SHADOW TONE\*
    - COLOR\*
    - SHARPNESS\*
    - NOISE REDUCTION\*
    - SELECT CUSTOM SETTING\*
    - AF MODE (MOVIE AF MODE)
    - AF-C CUSTOM SETTINGS
    - FACE/EYE DETECTION SETTING
    - MF ASSIST
    - TOUCH SCREEN MODE
    - SELF-TIMER
    - PHOTOMETRY
    - SHUTTER TYPE
    - FLICKER REDUCTION
    - ISO\*
    - FLASH FUNCTION SETTING
    - FLASH COMPENSATION
    - MOVIE MODE
    - FULL HD HIGH SPEED REC
    - INTERNAL/EXTERNAL MIC LEVEL ADJUSTMENT
    - SOUND & FLASH
    - EVF/LCD BRIGHTNESS
    - EVF/LCD COLOR
    - NONE
- \* Stored in custom settings bank.



- Select **NONE** to assign no option to the selected position.
- When **SELECT CUSTOM SETTING** is selected, current settings are shown in the quick menu by the label **BASE**.



The quick menu can also be accessed in shooting mode by holding the **Q** button.

## FUNCTION (Fn) SETTING

Choose the roles played by the function buttons.

- 1 Select  **BUTTON/DIAL SETTING** > **FUNCTION (Fn) SETTING** in the  (**SET UP**) tab.
- 2 Highlight the desired control and press **MENU/OK**.
- 3 Highlight any of the following options and press **MENU/OK** to assign it to the selected control.
  - IMAGE SIZE
  - IMAGE QUALITY
  - RAW
  - FILM SIMULATION
  - GRAIN EFFECT
  - COLOR CHROME EFFECT
  - DYNAMIC RANGE
  - D RANGE PRIORITY
  - WHITE BALANCE
  - SELECT CUSTOM SETTING
  - FOCUS AREA
  - FOCUS CHECK
  - AF MODE
  - AF-C CUSTOM SETTINGS
  -  **FACE SELECT**  
  - **FACE DETECTION ON/OFF**
  - DRIVE SETTING
  - SPORTS FINDER MODE
  - PRE-SHOT **ES** 
  - SELF-TIMER
  - **PHOTOMETRY**
  - SHUTTER TYPE
  - FLICKER REDUCTION
  - **ISO**
  - IS MODE
  - WIRELESS COMMUNICATION
  - FLASH FUNCTION SETTING
  - TTL-LOCK
  - MODELING FLASH
  - FULL HD HIGH SPEED REC
  - ZEBRA SETTING
  - INTERNAL/EXTERNAL MIC LEVEL ADJUSTMENT
  - MOVIE SILENT CONTROL
  - PREVIEW DEPTH OF FIELD
  - PREVIEW EXP/WB IN MANUAL MODE
  - NATURAL LIVE VIEW
  - HISTOGRAM
  - ELECTRONIC LEVEL
  - LARGE INDICATORS MODE
  - AE LOCK ONLY
  - AF LOCK ONLY
  - AE/AF LOCK
  - AF-ON
  - AWB LOCK ONLY
  - APERTURE SETTING
  - PERFORMANCE
  - AUTO IMAGE TRANSFER
  - SELECT PAIRING DESTINATION
  - Bluetooth ON/OFF
  - PLAYBACK
  - NONE (control disabled)

- **AE LOCK ONLY**, **AF LOCK ONLY**, **AE/AF LOCK**, **AF-ON**, and **AWB LOCK ONLY** cannot be assigned to the touch function buttons (**T-Fn1** through **T-Fn4**).
- Function button assignment options can also be accessed by holding the **DISP/BACK** button.

## AF-ON

---

If **AF-ON** is selected, you can press the control instead of keeping the shutter button pressed halfway.

## MODELING FLASH

---







If **MODELING FLASH** is selected when a compatible shoe-mounted flash unit is attached, you can press the control to test-fire the flash and check for shadows and the like (modeling flash).


## TTL-LOCK



---

If **TTL-LOCK** is selected, you can press the control to lock flash output according to the option selected for **FLASH SETTING > TTL-LOCK MODE** (📖 142).



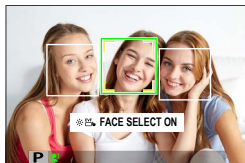

## FACE SELECT

 **FACE SELECT**  can be enabled or disabled by pressing the button to which  **FACE SELECT**  is assigned. Enabling  **FACE SELECT**  allows the focus stick (focus lever) or (during viewfinder photography) touch controls (📖 21) to be used to select the face that will be used for focus.



The following features can be accessed using the focus stick or during viewfinder photography when  **FACE SELECT**  is enabled:


- The face used to set focus can be selected using the focus stick. Press the center of the stick to temporarily enable focus-area selection (📖 69).
- The touch screen (monitor) can be used to select the face used to set focus during viewfinder photography.


  **FACE SELECT**  is automatically enabled in  **ADVANCED SR AUTO** mode.

## COMMAND DIAL SETTING

Choose the roles played by the command dials.

Option	Description
<b>FRONT COMMAND DIAL 1</b>	Assign shutter speed ( <b>S.S. (PROGRAM SHIFT)</b> ) or aperture ( <b>APERTURE</b> ) <sup>1</sup> to <b>FRONT COMMAND DIAL 1</b> .
<b>FRONT COMMAND DIAL 2</b>	Assign shutter speed ( <b>S.S. (PROGRAM SHIFT)</b> ), aperture ( <b>APERTURE</b> ) <sup>1</sup> , exposure compensation ( <b>EXP. COMPENSATION</b> ) <sup>2</sup> , sensitivity ( <b>ISO</b> ), or no role ( <b>NONE</b> ) to <b>FRONT COMMAND DIAL 2</b> or <b>FRONT COMMAND DIAL 3</b> .
<b>FRONT COMMAND DIAL 3</b>	
<b>REAR COMMAND DIAL</b>	Assign shutter speed ( <b>S.S. (PROGRAM SHIFT)</b> ), aperture ( <b>APERTURE</b> ) <sup>1</sup> , exposure compensation ( <b>EXP. COMPENSATION</b> ) <sup>2</sup> , sensitivity ( <b>ISO</b> ), or no role ( <b>NONE</b> ) to the rear command dial.

- 1 Aperture set to **A** (auto) and lens equipped with aperture ring or **COMMAND** selected for  **BUTTON/DIAL SETTING** > **APERTURE RING SETTING (A)**.  
 2 Exposure compensation dial rotated to **C**.

-  **COMMAND DIAL SETTING** can also be accessed by pressing and holding the center of the front command dial.
- You can also press the center of the front command dial to cycle through settings in the order **FRONT COMMAND DIAL 1**, **FRONT COMMAND DIAL 2**, and **FRONT COMMAND DIAL 3**.

## HUTTER AF


Choose whether the camera focuses when the shutter button is pressed halfway.

Option	Description
AF-S	<ul style="list-style-type: none"><li>• <b>ON</b>: Focus locks when the shutter button is pressed halfway.</li><li>• <b>OFF</b>: No focus operation is performed when the shutter button is pressed halfway.</li></ul>
AF-C	<ul style="list-style-type: none"><li>• <b>ON</b>: The camera focuses while the shutter button is pressed halfway.</li><li>• <b>OFF</b>: No focus operation is performed when the shutter button is pressed halfway.</li></ul>

## SHUTTER AE

If **ON** is selected, exposure will lock while the shutter button is pressed halfway.

Option	Description
AF-S/MF	<ul style="list-style-type: none"><li>• <b>ON</b>: Exposure locks when the shutter button is pressed halfway.</li><li>• <b>OFF</b>: Exposure does not lock when the shutter button is pressed halfway.</li></ul>
AF-C	<ul style="list-style-type: none"><li>• <b>ON</b>: Exposure locks while the shutter button is pressed halfway.</li><li>• <b>OFF</b>: Exposure does not lock when the shutter button is pressed halfway.</li></ul>

 Select **OFF** to allow the camera to adjust exposure before each shot taken in burst mode.

## SHOOT WITHOUT LENS

Choose **ON** to enable the shutter release when no lens is attached.

Options	
ON	OFF


## SHOOT WITHOUT CARD

Choose whether the shutter can be released without a memory card inserted in the camera.

Option	Description
<b>ON</b>	When no memory card is inserted, the shutter can be released to test camera function and the shooting and setup menus can be displayed.
<b>OFF</b>	The shutter is disabled if no memory card is inserted, preventing accidental loss of pictures taken without a memory card.

## FOCUS RING

Choose the direction in which the focus ring is rotated to increase the focus distance.

Options	
 <b>CW</b> (clockwise)	 <b>CCW</b> (counterclockwise)

## FOCUS RING OPERATION

Choose how the camera adjusts focus in response to the movement of the focus ring.

Option	Description
<b>NONLINEAR</b>	Focus is adjusted at the same rate as the ring is rotated.
<b>LINEAR</b>	Focus is adjusted linearly according to the amount the ring is rotated, but the focusing speed is unaffected by the speed the ring is rotated.

## AE/AF-LOCK MODE

This option determines the behavior of the button to which exposure and/or focus lock is assigned.

Option	Description
<b>AE&amp;AF ON WHEN PRESSING</b>	Exposure and/or focus will lock while the button is pressed.
<b>AE&amp;AF ON/OFF SWITCH</b>	Exposure and/or focus will lock when the button is pressed and remain locked until it is pressed again.

## AWB-LOCK MODE

Choose the behavior of function buttons assigned auto white balance (AWB) lock. Auto white balance lock is used to lock white balance at the value metered by the camera when **AUTO** is selected for white balance.

Option	Description
<b>AWB ON WHEN PRESSING</b>	Auto white balance locks while the button is pressed.
<b>AWB ON/OFF SWITCH</b>	Press the button once to lock auto white balance and again to end the lock.


## APERTURE RING SETTING (A)

Choose whether the front command dial can be used to adjust aperture when aperture is set to **A** (auto).

Option	Description
<b>AUTO</b>	The camera adjusts aperture automatically.
<b>COMMAND</b>	Aperture can be adjusted using the front command dial.

## APERTURE SETTING


























Choose the method used to adjust aperture when using lenses with no aperture rings.

Option	Description
<b>AUTO +</b>  <b>MANUAL</b>	Rotate the front command dial to choose the aperture. Rotate past minimum aperture to choose <b>A</b> (auto).
<b>AUTO</b>	Aperture is selected automatically; camera functions in exposure mode <b>P</b> (program AE) or <b>S</b> (shutter-priority AE).
<b>MANUAL</b>	Rotate the front command dial to choose the aperture; camera functions in exposure mode <b>A</b> (aperture-priority AE) or <b>M</b> (manual).




## TOUCH SCREEN SETTING


Enable or disable touch-screen controls.

Option	Description								
 <b>TOUCH SCREEN SETTING</b>	<ul style="list-style-type: none"> <li>• <b>ON</b>: The LCD monitor functions as a touch screen during shooting.</li> <li>• <b>OFF</b>: Touch controls disabled.</li> </ul>								
 <b>DOUBLE TAP SETTING</b>	<ul style="list-style-type: none"> <li>• <b>ON</b>: Tap the LCD monitor twice to zoom in on your subject during shooting.</li> <li>• <b>OFF</b>: Touch zoom disabled.</li> </ul>								
 <b>TOUCH FUNCTION</b>	Enable or disable touch function gestures.								
 <b>TOUCH SCREEN SETTING</b>	<ul style="list-style-type: none"> <li>• <b>ON</b>: The LCD monitor functions as a touch screen during playback.</li> <li>• <b>OFF</b>: Touch controls disabled.</li> </ul>								
<b>EVF TOUCH SCREEN AREA SETTINGS</b>	<p>Select the area of the LCD monitor used for touch controls while the viewfinder is active.</p> <ul style="list-style-type: none"> <li>• The area used for touch controls can be selected from:             <table border="0" data-bbox="362 684 911 815"> <tr> <td>-  (all)</td> <td>-  (left half)</td> </tr> <tr> <td>-  (right half)</td> <td>-  (top left quarter)</td> </tr> <tr> <td>-  (top right quarter)</td> <td>-  (bottom left quarter)</td> </tr> <tr> <td>-  (bottom right quarter)</td> <td></td> </tr> </table> </li> <li>• Choose <b>OFF</b> to disable touch controls while the viewfinder is active.</li> </ul>	-  (all)	-  (left half)	-  (right half)	-  (top left quarter)	-  (top right quarter)	-  (bottom left quarter)	-  (bottom right quarter)	
-  (all)	-  (left half)								
-  (right half)	-  (top left quarter)								
-  (top right quarter)	-  (bottom left quarter)								
-  (bottom right quarter)									

## POWER MANAGEMENT

Adjust power management settings.

To access power management settings, press **MENU/OK**, select the  (**SET UP**) tab, and choose **POWER MANAGEMENT**.

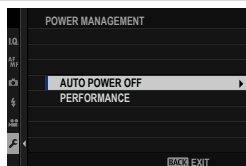

### AUTO POWER OFF


Choose the length of time before the camera turns off automatically when no operations are performed. Shorter times increase battery life; if **OFF** is selected, the camera must be turned off manually.

Options					
5 MIN	2 MIN	1 MIN	30 SEC	15 SEC	OFF

### PERFORMANCE

Select **BOOST** to improve focus and viewfinder display performance.


Option	AF performance (speed)	Viewfinder frame rate (approx.)	Battery endurance
<b>BOOST</b>	Fast	Fast	Low
<b>NORMAL</b>	Normal	Normal	Normal

 When **NORMAL** is selected, the frame rate will drop when no operations are being performed. Operating camera controls returns the frame rate to normal.

## SAVE DATA SETTING


Make changes to file management settings.

To access file management settings, press **MENU/OK**, select the **⚙️ (SET UP)** tab, and choose **SAVE DATA SET-UP**.

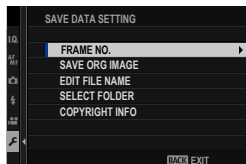


### FRAME NO.

New pictures are stored in image files named using a four-digit file number assigned by adding one to the last file number used. The file number is displayed during playback as shown. **FRAME NO.** controls whether file numbering is reset to 0001 when a new memory card is inserted or the current memory card is formatted.

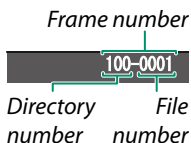

Option	Description
<b>CONTINUOUS</b>	Numbering continues from the last file number used or the first available file number, whichever is higher. Choose this option to reduce the number of pictures with duplicate file names.
<b>RENEW</b>	Numbering is reset to 0001 after formatting or when a new memory card is inserted.

-  If the frame number reaches 999-9999, the shutter release will be disabled. Format the memory card after transferring to a computer any pictures you wish to keep.
- Selecting **⚙️ USER SETTING > RESET** sets **FRAME NO.** to **CONTINUOUS** but does not reset the file number.
- Frame numbers for pictures taken with other cameras may differ.

## SAVE ORG IMAGE

Choose **ON** to save unprocessed copies of pictures taken using **RED EYE REMOVAL**.

Options	
<b>ON</b>	<b>OFF</b>

## EDIT FILE NAME

Change the file name prefix. sRGB images use a four-letter prefix (default "DSCF"), Adobe RGB images a three-letter prefix ("DSF") preceded by an underscore.

Option	Default prefix	Sample file name
sRGB	DSCF	ABCD0001
AdobeRGB	_DSF	_ABC0001

## ELECT FOLDER

Create folders and choose the folder used to store subsequent pictures.

Option	Description
<b>SELECT FOLDER</b>	To choose the folder in which subsequent pictures will be stored, press the focus stick (focus lever) up or down to highlight an existing folder and press <b>MENU/OK</b> .
<b>CREATE FOLDER</b>	Enter a five-character folder name to create a new folder in which to store subsequent pictures. The new folder will be created with the next picture you take and subsequent pictures will be stored in that folder.

## COPYRIGHT INFO


Copyright information, in the form of Exif tags, can be added to new images as they are taken. Changes to copyright information are reflected only in images taken after the changes are made.

Option	Description
<b>DISP COPYRIGHT INFO</b>	View the current copyright information.
<b>ENTER AUTHOR'S INFO</b>	Enter the creator's name.
<b>ENTER COPYRIGHT INFO</b>	Enter the name of the copyright holder.
<b>DELETE COPYRIGHT INFO</b>	Delete the current copyright information. This change applies only to images taken after this option is selected; copyright information recorded with existing images is not affected.

## CONNECTION SETTING

Adjust settings for connection to other devices.

To access connection settings, press **MENU/OK**, select the **SET UP** tab, and choose **CONNECTION SETTING**.

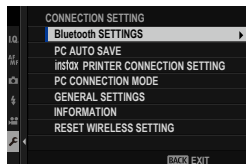

For more information on wireless connections, visit:  
<http://fujifilm-dsc.com/wifi/>

### Bluetooth SETTINGS

Adjust Bluetooth settings.

Option	Description
<b>PAIRING REGISTRATION</b>	To pair the camera with a smartphone or tablet, select this option, then launch FUJIFILM Camera Remote on the smart device and tap <b>PAIRING REGISTRATION</b> .
<b>SELECT PAIRING DESTINATION</b>	Choose a connection from a list of devices with which the camera has been paired using <b>PAIRING REGISTRATION</b> . Select <b>NO CONNECTION</b> to exit without connecting.
<b>DELETE PAIRING REG.</b>	Delete pairing information for selected devices. Choose the device in the device list. The selected device will also be removed from the devices listed in <b>SELECT PAIRING DESTINATION</b> .
<b>Bluetooth ON/OFF</b>	<ul style="list-style-type: none"><li>• <b>ON</b>: The camera automatically establishes a Bluetooth connection with paired devices when turned on.</li><li>• <b>OFF</b>: The camera does not connect via Bluetooth.</li></ul>
<b>AUTO IMAGE TRANSFER</b>	<ul style="list-style-type: none"><li>• <b>ON</b>: Mark photos for upload as they are taken. Mark JPEG photos for upload as they are taken.</li><li>• <b>OFF</b>: Photos are not marked for upload as they are taken.</li></ul>
<b>SMARTPHONE SYNC. SETTING</b>	Choose whether to synchronize the camera to the time and/or location provided by a paired smartphone. <ul style="list-style-type: none"><li>• <b>LOCATION&amp;TIME</b>: Synchronize the time and location.</li><li>• <b>LOCATION</b>: Synchronize the location.</li><li>• <b>TIME</b>: Synchronize the time.</li><li>• <b>OFF</b>: Synchronization off.</li></ul>

- Install the latest version of the FUJIFILM Camera Remote app on your smartphone or tablet before pairing the device with your camera or uploading images.
- When **ON** is selected for both **Bluetooth ON/OFF** and **AUTO IMAGE TRANSFER** or images are currently selected for upload using the **IMAGE TRANSFER ORDER** option in the  (playback) menu, upload to paired devices will begin shortly after you exit to playback or turn the camera off. **IMAGE TRANSFER ORDER** can also be used to select pictures for upload when **AUTO IMAGE TRANSFER** is off.

## C AUTO SAVE

Adjust settings for connection to computers via wireless LAN.


Option	Description
<b>PC AUTO SAVE SETTING</b>	Choose the method used for connection to computers via a wireless LAN. <ul style="list-style-type: none"> <li>• <b>SIMPLE SETUP</b>: Connect using WPS.</li> <li>• <b>MANUAL SETUP</b>: Choose the network from a list (<b>SELECT FROM NETWORK LIST</b>) or enter the name manually (<b>ENTER SSID</b>).</li> </ul>
<b>DELETE REGISTERED DESTINATION PC</b>	Remove selected destinations.
<b>DETAILS OF PREVIOUS CONNECTION</b>	View computers to which the camera has recently connected.

## instax PRINTER CONNECTION SETTING

Adjust settings for connection to optional Fujifilm instax SHARE printers.

### The Printer Name (SSID) and Password

The printer name (SSID) can be found on the bottom of the printer; the default password is "1111". If you have already chosen a different password to print from a smartphone, enter that password instead.

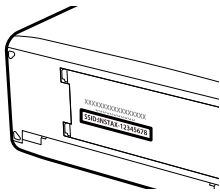

## PC CONNECTION MODE

Adjust settings for connection to a computer.






Option	Description
<b>USB CARD READER</b>	Connecting the camera to a computer via USB automatically enables data transfer mode, allowing data to be copied to the computer. The camera functions normally when not connected.
<b>USB RAW CONV./ BACKUP RESTORE</b>	Connecting the camera to a computer via USB automatically enables USB RAW conversion/backup restore mode. The camera functions normally when not connected. <ul style="list-style-type: none"><li>• <b>USB RAW CONV. (requires FUJIFILM X RAW STUDIO):</b> Use the camera's image processing engine to rapidly convert RAW files to high-quality JPEG images.</li><li>• <b>BACKUP RESTORE (requires FUJIFILM X Acquire):</b> Save and load camera settings. Reconfigure the camera in an instant or share settings with other cameras of the same type.</li></ul>

**!** **POWER MANAGEMENT > AUTO POWER OFF** settings also apply during tethered shooting. Select **OFF** to prevent the camera turning off automatically.



## GENERAL SETTINGS

Adjust settings for connection to wireless networks.

Option	Description
<b>NAME</b>	Choose a name ( <b>NAME</b> ) to identify the camera on the wireless network (the camera is assigned a unique name by default).
<b>RESIZE IMAGE FOR SMARTPHONE</b> 	Choose whether to resize images for upload to smartphones. Resizing applies only to the copy uploaded to the smartphone; the original is not affected. <ul style="list-style-type: none"> <li>• <b>ON</b>: Larger images are resized to  for upload. This setting is recommended.</li> <li>• <b>OFF</b>: Images are uploaded at their original size.</li> </ul>
<b>GEOTAGGING</b>	Choose whether location data downloaded from a smartphone are embedded in pictures as they are taken.
<b>LOCATION INFO</b>	Display the location data last downloaded from a smartphone.
 <b>BUTTON SETTING</b>	Choose the role played by function buttons assigned the <b>WIRELESS COMMUNICATION</b> function. <ul style="list-style-type: none"> <li>•  <b>PAIRING/TRANSFER ORDER</b>: The buttons can be used for pairing and selecting images for transfer.</li> <li>•  <b>WIRELESS COMMUNICATION</b>: The buttons can be used for wireless connections.</li> </ul>

## INFORMATION

View the camera's MAC and Bluetooth address.

## RESET WIRELESS SETTING

Restore wireless settings to their default values.




# 9

## Shortcuts

## Shortcut Options

Customize camera controls to suit your style or situation.

Frequently-used options can be added to the **Q** menu or a custom “my” menu or assigned to an **Fn** (function) button for direct access:

Shortcut Option	Description	
<b>“My menu”</b>	Add frequently-used options to this custom menu, which can be viewed by pressing <b>MENU/OK</b> and selecting the <b>MY</b> (“MY MENU”) tab.	223
<b>The Q menu</b>	The <b>Q</b> menu is displayed by pressing the <b>Q</b> button. Use the <b>Q</b> menu to view or change the options selected for frequently-used menu items.	225
<b>The function buttons</b>	Use the function buttons for direct access to selected features.	228



## MY MENU

Access a personalized menu of frequently-used options.

To display “my menu”, press **MENU/OK** in the shooting display and select the **MY** (MY MENU) tab.




The **MY** tab is only available if options have been assigned to **MY MENU**.

## MY MENU SETTING


To choose the items listed in the **MY** (MY MENU) tab:

- 1 Highlight **USER SETTING > MY MENU SETTING** in the **(SET UP)** tab and press **MENU/OK**.

To reorder items, select **RANK ITEMS**.  
To delete items, select **REMOVE ITEMS**.

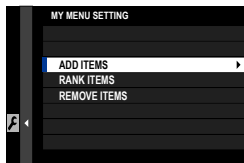


- 2 Press the focus stick (focus lever) up or down to highlight **ADD ITEMS** and press **MENU/OK**. Options that can be added to “my menu” are highlighted in blue.

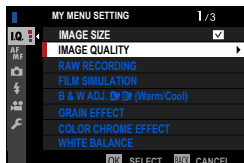

Items currently in “my menu” are indicated by check marks.

- 3 Choose a position for the item and press **MENU/OK**. The item will be added to “my menu”.

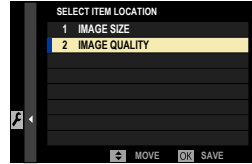

- 4 Press **MENU/OK** to return to the edit display.
- 5 Repeat Steps 3 and 4 until all the desired items have been added.


 “My menu” can contain up to 16 items.

## The Q (Quick Menu) Button

Press **Q** for quick access to selected options.

### The Quick Menu Display

At default settings, the quick menu contains the following items:

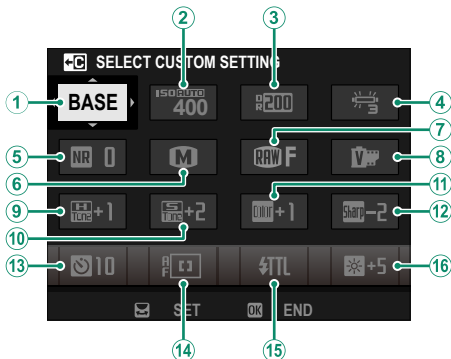

- |                         |                          |
|-------------------------|--------------------------|
| ① SELECT CUSTOM SETTING | ⑨ HIGHLIGHT TONE         |
| ② ISO                   | ⑩ SHADOW TONE            |
| ③ DYNAMIC RANGE         | ⑪ COLOR                  |
| ④ WHITE BALANCE         | ⑫ SHARPNESS              |
| ⑤ NOISE REDUCTION       | ⑬ SELF-TIMER             |
| ⑥ IMAGE SIZE            | ⑭ AF MODE                |
| ⑦ IMAGE QUALITY         | ⑮ FLASH FUNCTION SETTING |
| ⑧ FILM SIMULATION       | ⑯ EVF/LCD BRIGHTNESS     |

The quick menu shows the options currently selected for items ②–⑯, which can be changed as described on page 227.


#### SELECT CUSTOM SETTING

The **Q** **IMAGE QUALITY SETTING > SELECT CUSTOM SETTING** item (item ①) shows the current custom settings bank:

- **BASE**: No custom settings bank selected.
- **C 1–C 7**: Select a bank to view the settings saved using the **Q** **IMAGE QUALITY SETTING > EDIT/SAVE CUSTOM SETTING** option.
- **BASE** **C 1–C 7**: The current custom settings bank.



## Viewing and Changing Settings

- 1 Press **Q** to display the quick menu during shooting.

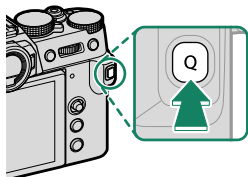


- 2 Use the focus stick (focus lever) to highlight items and rotate the rear command dial to change.

- Changes are not saved to the current settings bank.
- Settings that differ from those in the current settings bank (**C1–C7**) are shown in red.

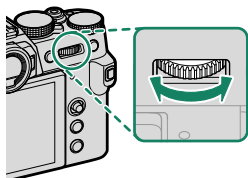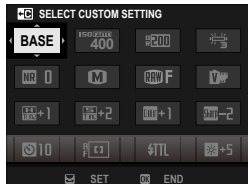

- 3 Press **Q** to exit when settings are complete.

 The quick menu can also be edited using touch controls.




## Editing the Quick Menu

To choose the items displayed in the quick menu:

1 Press and hold the **Q** button during shooting.

2 The current quick menu will be displayed; use the focus stick (focus lever) to highlight the item you wish to change and press **MENU/OK**.

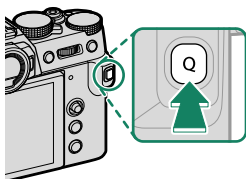

3 Highlight any of the following options and press **MENU/OK** to assign it to the selected position.

- IMAGE SIZE
- IMAGE QUALITY
- FILM SIMULATION\*
- B & W ADJ. (Warm/Cool)\*
- GRAIN EFFECT\*
- COLOR CHROME EFFECT\*
- DYNAMIC RANGE\*
- D RANGE PRIORITY\*
- WHITE BALANCE\*
- HIGHLIGHT TONE\*
- SHADOW TONE\*
- COLOR\*
- SHARPNESS\*
- NOISE REDUCTION\*
- SELECT CUSTOM SETTING\*
- AF MODE (MOVIE AF MODE)
- AF-C CUSTOM SETTINGS
- FACE/EYE DETECTION SETTING
- MF ASSIST
- TOUCH SCREEN MODE
- SELF-TIMER
- PHOTOMETRY
- SHUTTER TYPE
- FLICKER REDUCTION
- ISO\*
- FLASH FUNCTION SETTING
- FLASH COMPENSATION
- MOVIE MODE
- FULL HD HIGH SPEED REC
- INTERNAL/EXTERNAL MIC LEVEL ADJUSTMENT
- SOUND & FLASH
- EVF/LCD BRIGHTNESS
- EVF/LCD COLOR
- NONE


\* Stored in custom settings bank.

- Select **NONE** to assign no option to the selected position.
- When **SELECT CUSTOM SETTING** is selected, current settings are shown in the quick menu by the label **BASE**.


The quick menu can also be edited using **FUNCTION/DIAL SETTING > EDIT/SAVE QUICK MENU**.

## The Fn (Function) Buttons


Assign a role to the function buttons for quick access to the selected feature.

- The functions assigned to **T-Fn1** through **T-Fn4** can be accessed by flicking the monitor.
- Touch-function gestures are disabled by default. To enable touch-function gestures, select **ON** for **▶ BUTTON/DIAL SETTING > TOUCH SCREEN SETTING >  TOUCH FUNCTION**.

The default assignments are:

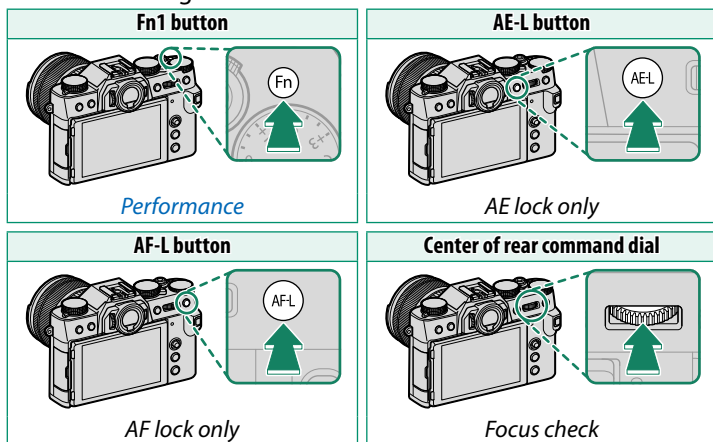


**T-Fn1 (flick up)**

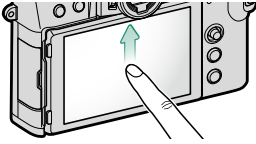


*Drive setting*

**T-Fn2 (flick left)**

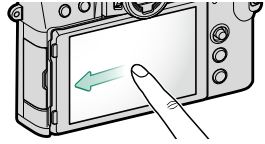


*Film simulation*

**T-Fn3 (flick right)**

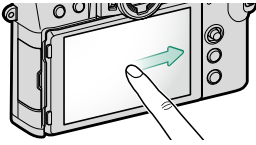

*White balance*

**T-Fn4 (flick down)**

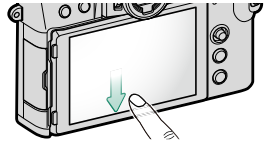


*AF mode*

## Assigning Roles to the Function Buttons




To assign roles to the buttons:

1 Press and hold the **DISP/BACK** button until a control selection menu is displayed.

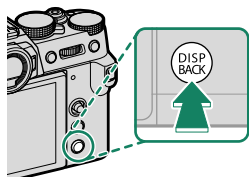2 Highlight a control and press **MENU/OK**.



3 Highlight the desired role and press **MENU/OK** to assign it to the selected control. Choose from:

- IMAGE SIZE
- IMAGE QUALITY
- RAW
- FILM SIMULATION
- GRAIN EFFECT
- COLOR CHROME EFFECT
- DYNAMIC RANGE
- D RANGE PRIORITY
- WHITE BALANCE
- SELECT CUSTOM SETTING
- FOCUS AREA
- FOCUS CHECK
- AF MODE
- AF-C CUSTOM SETTINGS
-  FACE SELECT 
- FACE DETECTION ON/OFF
- DRIVE SETTING
- SPORTS FINDER MODE
- PRE-SHOT **ES** 
- SELF-TIMER
- PHOTOMETRY
- SHUTTER TYPE
- FLICKER REDUCTION
- ISO
- IS MODE
- WIRELESS COMMUNICATION
- FLASH FUNCTION SETTING
- TTL-LOCK
- MODELING FLASH
- FULL HD HIGH SPEED REC
- ZEBRA SETTING
- INTERNAL/EXTERNAL MIC LEVEL ADJUSTMENT
- MOVIE SILENT CONTROL
- PREVIEW DEPTH OF FIELD
- PREVIEW EXP/WB IN MANUAL MODE
- NATURAL LIVE VIEW
- HISTOGRAM
- ELECTRONIC LEVEL
- LARGE INDICATORS MODE
- AE LOCK ONLY
- AF LOCK ONLY
- AE/AF LOCK
- AF-ON
- AWB LOCK ONLY
- APERTURE SETTING
- PERFORMANCE
- AUTO IMAGE TRANSFER
- SELECT PAIRING DESTINATION
- Bluetooth ON/OFF
- PLAYBACK
- NONE (control disabled)

- **AE LOCK ONLY**, **AF LOCK ONLY**, **AE/AF LOCK**, **AF-ON**, and **AWB LOCK ONLY** cannot be assigned to the touch function buttons (**T-Fn1** through **T-Fn4**).
- Button assignments can also be selected using **FUNCTION/DIAL SETTING > FUNCTION (Fn) SETTING**.

## AF-ON

---

If **AF-ON** is selected, you can press the control instead of keeping the shutter button pressed halfway.

## MODELING FLASH

---








If **MODELING FLASH** is selected when a compatible shoe-mounted flash unit is attached, you can press the control to test-fire the flash and check for shadows and the like (modeling flash).


## TTL-LOCK



---


If **TTL-LOCK** is selected, you can press the control to lock flash output according to the option selected for **FLASH SETTING > TTL-LOCK MODE** (📖 142).



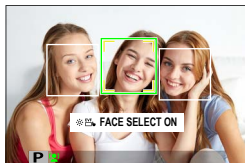

## FACE SELECT

 **FACE SELECT**  can be enabled or disabled by pressing the button to which  **FACE SELECT**  is assigned. Enabling  **FACE SELECT**  allows the focus stick (focus lever) or (during viewfinder photography) touch controls ( 21) to be used to select the face that will be used for focus.



The following features can be accessed using the focus stick or during viewfinder photography when  **FACE SELECT**  is enabled:


- The face used to set focus can be selected using the focus stick. Press the center of the stick to temporarily enable focus-area selection ( 69).
- The touch screen (monitor) can be used to select the face used to set focus during viewfinder photography.

  **FACE SELECT**  is automatically enabled in  **ADVANCED SR AUTO** mode.



# 10 Peripherals and Optional Accessories

## External Flash Units

The camera can be used with external flash units, which are more powerful than their built-in counterparts. Some support high-speed sync (FP) and can be used at shutter speeds faster than the sync speed, while others can function as master flash units controlling remote units via optical wireless flash control.

 You may be unable to test-fire the flash in some circumstances, for example when a setup menu is displayed on the camera.


### Red-Eye Removal

Red-eye removal is available when an option other than **OFF** is selected for  **FLASH SETTING** > **RED EYE REMOVAL** and a **FACE DETECTION ON** option is selected for  **AF/MF SETTING** > **FACE/EYE DETECTION SETTING**. Red-eye removal minimizes “red-eye” caused when light from the flash is reflected from the subject’s retinas.




## Using an External Flash

- 1 Connect the unit to the camera.
- 2 In shooting mode, select **FLASH FUNCTION SETTING** in the **FLASH SETTING** menu tab. The options available vary with the flash unit.

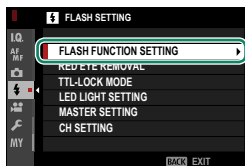

Menu	Description	
<b>Built-In Flash</b>	Displayed when the built-in flash is raised.	92
<b>SYNC TERMINAL</b>	Sync terminal options will be displayed if the built-in flash is lowered and either no flash unit, or an incompatible flash unit, is mounted on the hot shoe.	236
<b>SHOE MOUNT FLASH</b>	Displayed when an optional flash unit is mounted on the hot shoe and turned on.	237
<b>MASTER (OPTICAL)</b>	Displayed if an optional flash unit functioning as a master flash for Fujifilm optical wireless remote flash control is connected and turned on.	240


- 3 Highlight items using the focus stick (focus lever) and rotate the rear command dial to change the highlighted setting.

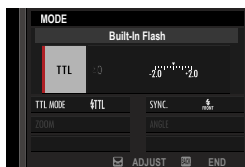

- 4 Press **DISP/BACK** to put the changes into effect.

## YNC TERMINAL


**SYNC TERMINAL** is displayed if the built-in flash is lowered and either no flash unit, or an incompatible flash unit, is mounted on the hot shoe.

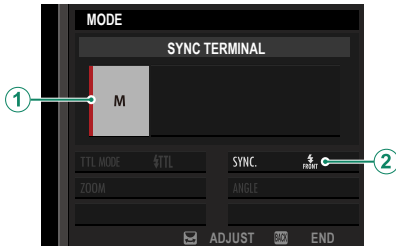


Setting	Description
① Flash control mode	Choose from the following options: <ul style="list-style-type: none"><li>• <b>M</b>: A trigger signal is transmitted via the hot shoe X contacts when a picture is taken. Choose a shutter speed slower than the sync speed; even slower speeds may be required if the unit uses long flashes or has a slow response time.</li><li>• <b>OFF (OFF)</b>: The trigger signal is disabled.</li></ul>
② Sync	Choose whether the flash is timed to fire immediately after the shutter opens ( <b>FRONT/1ST CURTAIN</b> ) or immediately before it closes ( <b>REAR/2ND CURTAIN</b> ). <b>1ST CURTAIN</b> is recommended in most circumstances.



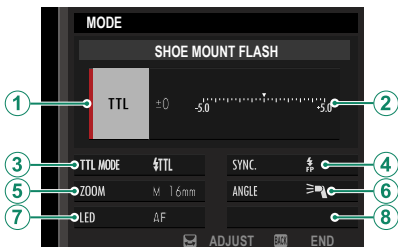


## SHOE MOUNT FLASH

The following options are available when an optional shoe-mounted flash unit is attached and turned on.



Setting	Description
<b>1</b> Flash control mode	The flash control mode selected with the flash unit. This can in some cases be adjusted from the camera; the options available vary with the flash. <ul style="list-style-type: none"> <li>• <b>TTL</b>: TTL mode. Adjust flash compensation (<b>2</b>).</li> <li>• <b>M</b>: The flash fires at the selected output regardless of subject brightness or camera settings. Output in some cases can be adjusted from the camera (<b>2</b>).</li> <li>• <b>MULTI</b>: Repeating flash. Compatible shoe-mounted flash units will fire multiple times with each shot.</li> <li>• <b>OFF (OFF)</b>: The flash does not fire. Some flash units can be turned off from the camera.</li> </ul>


Setting	Description
② Flash compensation/output	<p>The options available vary with flash control mode.</p> <ul style="list-style-type: none"> <li>• <b>TTL</b>: Adjust flash compensation (the full value may not be applied if the limits of the flash control system are exceeded). In the cases of the EF-X20, EF-20, and EF-42, the selected value is added to the value selected with the flash unit.</li> <li>• <b>M/MULTI</b>: Adjust flash output (compatible units only). Choose from values expressed as fractions of full power, from 1/4 (mode <b>M</b>) or 1/4 (<b>MULTI</b>) down to 1/512 in increments equivalent to 1/3 EV. The desired results may not be achieved at low values if they exceed the limits of the flash control system; take a test shot and check the results.</li> </ul>
③ Flash mode (TTL)	<p>Choose a flash mode for TTL flash control. The options available vary with the shooting mode (<b>P</b>, <b>S</b>, <b>A</b>, or <b>M</b>) selected.</p> <ul style="list-style-type: none"> <li>• <b>TTL (FLASH AUTO)</b>: The flash fires only as required; flash level is adjusted according to subject brightness. A  icon displayed when the shutter button is pressed halfway indicates that the flash will fire when the photo is taken.</li> <li>• <b>TTL (STANDARD)</b>: The flash fires with every shot if possible; flash level is adjusted according to subject brightness. The flash will not fire if not fully charged when the shutter is released.</li> <li>• <b>TTL SLOW (SLOW SYNC)</b>: Combine the flash with slow shutter speeds when photographing portrait subjects against a backdrop of night scenery. The flash will not fire if not fully charged when the shutter is released.</li> </ul>
④ Sync	<p>Control flash timing.</p> <ul style="list-style-type: none"> <li>• <b>FRONT (1ST CURTAIN)</b>: The flash fires immediately after the shutter opens (generally the best choice).</li> <li>• <b>REAR (2ND CURTAIN)</b>: The flash fires immediately before the shutter closes.</li> <li>• <b>FP (AUTO FP(HSS))</b>: High-speed sync (compatible units only). The camera automatically engages front-curtain high-speed sync at shutter speeds faster than the flash sync speed. Equivalent to <b>1ST CURTAIN</b> when <b>MULTI</b> is selected for flash control mode.</li> </ul>

Setting	Description
⑤ Zoom	The angle of illumination (flash coverage) for units that support flash zoom. Some units allow the adjustment to be made from the camera. If <b>AUTO</b> is selected, zoom will automatically be adjusted to match coverage to lens focal length.
⑥ Lighting	If the unit supports this feature, choose from: <ul style="list-style-type: none"> <li>•  (<b>FLASH POWER PRIORITY</b>): Gain range by slightly reducing coverage.</li> <li>•  (<b>STANDARD</b>): Match coverage to picture angle.</li> <li>•  (<b>EVEN COVERAGE PRIORITY</b>): Slightly increase coverage for more even lighting.</li> </ul>
⑦ LED light	Choose how the built-in LED light functions during still photography (compatible units only): as a catchlight (  / <b>CATCHLIGHT</b> ), as an AF-assist illuminator ( <b>AF/AF ASSIST</b> ), or as both a catchlight and an AF-assist illuminator (  / <b>AF ASSIST+CATCHLIGHT</b> ). Choose <b>OFF</b> to disable the LED during photography.
⑦ Number of flashes*	Choose the number of times the flash fires each time the shutter is released in <b>MULTI</b> mode.
⑧ Frequency*	Choose the frequency at which the flash fires in <b>MULTI</b> mode.


\* Full value may not be applied if limits of flash control system are exceeded.

## MASTER(OPTICAL)



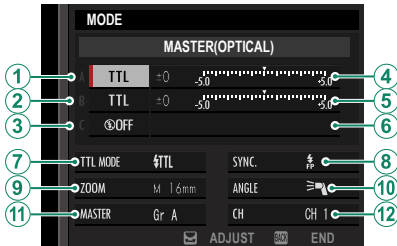

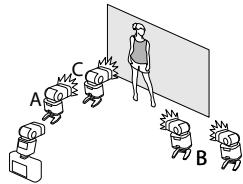


The options will be displayed if the unit is currently functioning as master flash for Fujifilm optical wireless remote flash control.






The master and remote units can be placed in up to three groups (A, B, and C) and flash mode and flash level adjusted separately for each group. Four channels are available for communication between the units; separate channels can be used for different flash systems or to prevent interference when multiple systems are operating in close proximity.



Setting	Description
① Flash control mode (group A)	<p>Choose flash control modes for groups A, B, and C. <b>TTL%</b> is available for groups A and B only.</p> <ul style="list-style-type: none"> <li>• <b>TTL</b>: The units in the group fire in TTL mode. Flash compensation can be adjusted separately for each group.</li> <li>• <b>TTL%</b>: If <b>TTL%</b> is selected for either group A or B, you can specify the output of the selected group as a percentage of the other and adjust overall flash compensation for both groups.</li> </ul>
② Flash control mode (group B)	<ul style="list-style-type: none"> <li>• <b>M</b>: In mode <b>M</b>, the units in the group fire at the selected output (expressed as a fraction of full power) regardless of subject brightness or camera settings.</li> </ul>
③ Flash control mode (group C)	<ul style="list-style-type: none"> <li>• <b>MULTI</b>: Choosing <b>MULTI</b> for any group sets all the units in all groups to repeating flash mode. All units will fire multiple times with each shot.</li> <li>• <b>OFF (OFF)</b>: If <b>OFF</b> is selected, the units in the group will not fire.</li> </ul>
④ Flash compensation/output (group A)	<p>Adjust flash level for the selected group according to option selected for flash control mode. Note that the full value may not be applied if the limits of the flash control system are exceeded.</p>
⑤ Flash compensation/output (group B)	<ul style="list-style-type: none"> <li>• <b>TTL</b>: Adjust flash compensation.</li> </ul>
⑥ Flash compensation/output (group C)	<ul style="list-style-type: none"> <li>• <b>M/MULTI</b>: Adjust flash output.</li> <li>• <b>TTL%</b>: Choose the balance between groups A and B and adjust overall flash compensation.</li> </ul>

Setting	Description
<p>⑦ Flash mode (TTL)</p>	<p>Choose a flash mode for TTL flash control. The options available vary with the shooting mode (<b>P</b>, <b>S</b>, <b>A</b>, or <b>M</b>) selected.</p> <ul style="list-style-type: none"> <li>•  <b>(FLASH AUTO)</b>: The flash fires only as required; flash level is adjusted according to subject brightness. A  icon displayed when the shutter button is pressed halfway indicates that the flash will fire when the photo is taken.</li> <li>•  <b>(STANDARD)</b>: The flash fires with every shot if possible; flash level is adjusted according to subject brightness. The flash will not fire if not fully charged when the shutter is released.</li> <li>•  <b>(SLOW SYNC.)</b>: Combine the flash with slow shutter speeds when photographing portrait subjects against a backdrop of night scenery. The flash will not fire if not fully charged when the shutter is released.</li> </ul>
<p>⑧ Sync</p>	<p>Control flash timing.</p> <ul style="list-style-type: none"> <li>•  <b>(1ST CURTAIN)</b>: The flash fires immediately after the shutter opens (generally the best choice).</li> <li>•  <b>(2ND CURTAIN)</b>: The flash fires immediately before the shutter closes.</li> <li>•  <b>(AUTO FP(HSS))</b>: High-speed sync (compatible units only). The camera automatically engages front-curtain high-speed sync at shutter speeds faster than the flash sync speed. Equivalent to <b>1ST CURTAIN</b> when <b>MULTI</b> is selected for flash control mode.</li> </ul>
<p>⑨ Zoom</p>	<p>The angle of illumination (flash coverage) for units that support flash zoom. Some units allow the adjustment to be made from the camera. If <b>AUTO</b> is selected, zoom will automatically be adjusted to match coverage to lens focal length.</p>




Setting	Description
⑩ Lighting	<p>If the unit supports this feature, choose from:</p> <ul style="list-style-type: none"> <li>•  (<b>FLASH POWER PRIORITY</b>): Gain range by slightly reducing coverage.</li> <li>•  (<b>STANDARD</b>): Match coverage to picture angle.</li> <li>•  (<b>EVEN COVERAGE PRIORITY</b>): Slightly increase coverage for more even lighting.</li> </ul>
⑪ Master	<p>Assign the master flash to group A (<b>Gr A</b>), B (<b>Gr B</b>), or C (<b>Gr C</b>). If <b>OFF</b> is selected, output from the master flash will be held to a level that does not affect the final picture. Available only if the unit is mounted on the camera hot shoe as a master flash for Fujifilm optical wireless remote flash control in <b>TTL</b>, <b>TTL%</b>, or <b>M</b> mode.</p>
⑪ Number of flashes	<p>Choose the number of times the flash fires each time the shutter is released in <b>MULTI</b> mode.</p>
⑫ Channel	<p>Choose the channel used by the master flash for communication with the remote flash units. Separate channels can be used for different flash systems or to prevent interference when multiple systems are operating in close proximity.</p>
⑫ Frequency	<p>Choose the frequency at which the flash fires in <b>MULTI</b> mode.</p>

## Lenses

The camera can be used with lenses for the FUJIFILM X-mount.

### Lens Parts

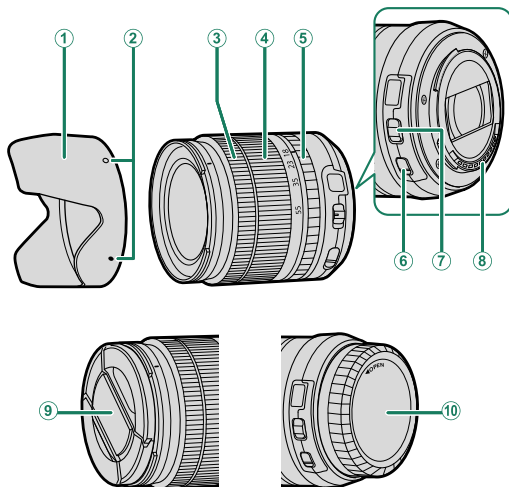



- ① Lens hood
- ② Mounting marks
- ③ Focus ring
- ④ Zoom ring
- ⑤ Aperture ring

- ⑥ O.I.S. switch
- ⑦ Aperture mode switch
- ⑧ Lens signal contacts
- ⑨ Front lens cap
- ⑩ Rear lens cap

## Removing Lens Caps


Remove lens caps as shown.

 Lens caps may differ from those shown.

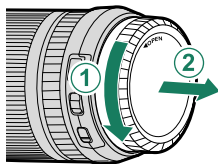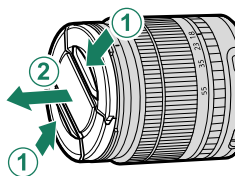

## Attaching Lens Hoods

When attached, lens hoods reduce glare and protect the front lens element.

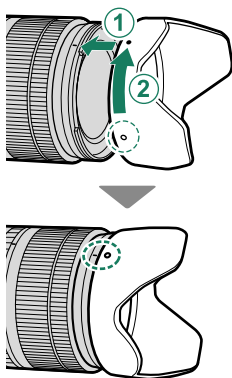


## Power Zoom

The focus ring can be used to adjust zoom when autofocus is enabled.

## Lenses with Aperture Rings


At settings other than **A**, you can adjust aperture by rotating the lens aperture ring (exposure modes **A** and **M**).


📖 When the aperture ring is set to **A**, rotate the command dials to adjust aperture (📖 207).

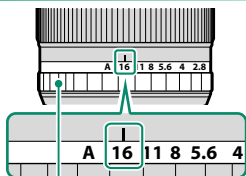

Aperture ring

### The Aperture Mode Switch

If the lens has an aperture mode switch, aperture can be adjusted manually by sliding the switch to  and rotating the aperture ring.

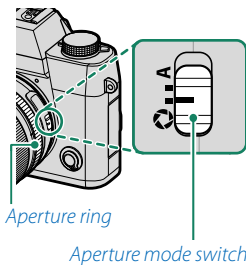


Aperture ring

Aperture mode switch

## Lenses with No Aperture Rings


The method used to adjust aperture can be selected using **Q** **BUTTON/DIAL SETTING** > **APERTURE SETTING**. When an option other than **AUTO** is selected, aperture can be adjusted using the front command dial.

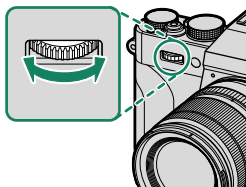

**Q** Aperture control defaults to the front command dial, but can be reassigned to the rear command dial using **Q** **BUTTON/DIAL SETTING** > **COMMAND DIAL SETTING**.

## Lenses with O.I.S. Switches


If the lens supports optical image stabilization (O.I.S.), the image stabilization mode can be chosen in the camera menus. To activate image stabilization, slide the O.I.S. switch to **ON**.

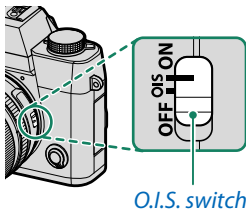


O.I.S. switch

## Manual Focus Lenses

Slide the focus ring to the front for auto-focus.

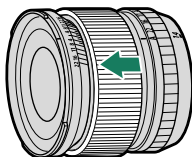


For manual focus, slide the focus ring to the back and rotate it while checking the results in the camera display. The focus distance and depth-of-field indicators can be used to assist manual focus.

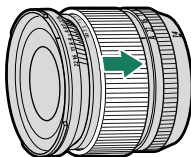

**!** Note that manual focus may not be available in all shooting modes.

### The Depth-of-Field Indicator

 The depth-of-field indicator shows the approximate depth of field (the distance in front of and behind the focus point that appears to be in focus). The indicator is displayed in film format.



### Lens Care

- Use a blower to remove dust, then gently wipe with a soft, dry cloth. Any remaining stains can be removed by wiping gently with a piece of Fujifilm lens-cleaning paper to which a small amount of lens-cleaning fluid has been applied.
- Replace the front and rear caps when the lens is not in use.

# 11 Connections


## HDMI Output

Camera shooting and playback displays can be output to HDMI devices.

### Connecting to HDMI Devices

Connect the camera to TVs or other HDMI devices using a third-party HDMI cable.

- 1 Turn the camera off.
- 2 Connect the cable as shown below.

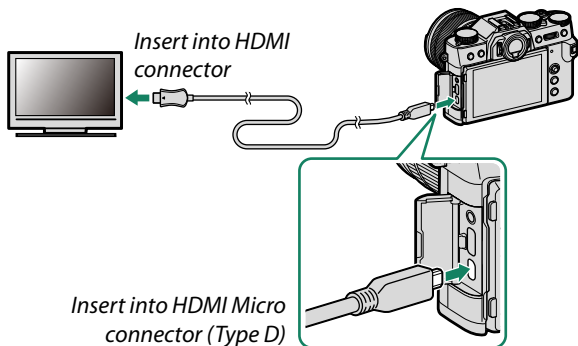


- 3 Configure the device for HDMI input as described in the documentation supplied with the device.
- 4 Turn the camera on. The contents of the camera display will be shown on the HDMI device. The camera display turns off in playback mode (📖 251).

- ! Making sure the connectors are fully inserted.
- The USB cable cannot be used while an HDMI cable is connected.
- Use an HDMI cable no more than 1.5 m (4.9 ft.) long.






## Shooting

Shoot photos and record movies while viewing the scene through the camera lens or saving footage to the HDMI device.

-  This feature can be used to save 4K and Full HD movies to an HDMI recorder.

## Playback

To start playback, press the camera  button. The camera monitor turns off and pictures and movies are output to the HDMI device. Note that the camera volume controls have no effect on sounds played on the TV; use the television volume controls to adjust the volume.

-  • Some televisions may briefly display a black screen when movie playback begins.
- An adapter cable (sold separately;  295) is required when using headphones.


## Wireless Connections (Bluetooth®, Wireless LAN/Wi-Fi)

Access wireless networks and connect to computers, smartphones, or tablets. For more information, visit:

<http://fujifilm-dsc.com/wifi/>

### Smartphones and Tablets: FUJIFILM Camera Remote

Connect to the camera via Bluetooth or wireless LAN.

 To establish a wireless connection to the camera, you will need to install the latest version of the FUJIFILM Camera Remote app on your smartphone or tablet.

#### FUJIFILM Camera Remote

Once a connection has been established, you can use FUJIFILM Camera Remote to:

- Control the camera and take pictures remotely
- Receive pictures uploaded from the camera
- Browse the pictures on the camera and download selected pictures
- Upload location data to the camera
- Release the camera shutter
- Update camera firmware

For downloads and other information, visit:

[http://app.fujifilm-dsc.com/en/camera\\_remote/](http://app.fujifilm-dsc.com/en/camera_remote/)

## SmartPhones and Tablets: Bluetooth® Pairing

Use **CONNECTION SETTING** > **Bluetooth SETTINGS** > **PAIRING REGISTRATION** to pair the camera with smartphones or tablets. Pairing offers a simple method for downloading photos from the camera.



- Photos are downloaded via a wireless connection.
- Once pairing is complete, you will be able to synchronize the camera clock and location data with the smartphone or tablet (📖 216).
- You can choose a connection from up to 7 paired smartphones or tablets.

## Smartphones and Tablets: Wireless LAN

Use the **WIRELESS COMMUNICATION** options in **SHOOTING SETTING** or the playback menu to connect to a smartphone or tablet via a Wireless LAN.



## Copying Pictures to a Computer: PC AutoSave

Install the latest version of FUJIFILM PC Autosave to your computer to upload pictures from the camera over wireless networks (Wi-Fi).

### FUJIFILM PC AutoSave

For downloads and other information, visit:  
[http://app.fujifilm-dsc.com/en/pc\\_autosave/](http://app.fujifilm-dsc.com/en/pc_autosave/)


## Computers: Wireless Connections

You can upload pictures from the camera using the **PC AUTO SAVE** option in the playback menu.




## Connecting to Computers via USB


Connect the camera to a computer to download pictures or take pictures remotely.

 Before downloading pictures or taking pictures remotely, connect the camera to a computer and check that it functions normally.

- 1 Turn the computer on.
- 2 Adjust settings according to whether you will be copying pictures to a computer (📖 257), save RAW pictures in other formats (📖 258), or Saving and Loading Camera Settings (📖 258).
- 3 Turn the camera off.
- 4 Connect a USB cable.

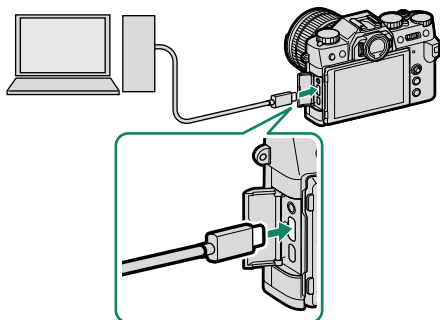

*USB connector (Type-C)*

 The USB cable must be no more than 1.5 m (4.9 ft.) long and be suitable for data transfer.

- 5 Turn the camera on.

## 6 Copy pictures to your computer.


- **Image transfer:** Use MyFinePix Studio or applications provided with your operating system.
- **RAW conversion:** Process RAW images using FUJIFILM X RAW STUDIO. The power of the camera's image processing engine is used for rapid processing.
- **Saving and loading camera settings:** Use FUJIFILM X Acquire to save or load camera settings. Save your preferred settings to a file in a single operation and copy them to multiple cameras.



- Turn the camera off before disconnecting the USB cable.
- When connecting USB cables, be sure the connectors are fully inserted in the correct orientation. Connect the camera directly to the computer; do not use a USB hub or keyboard.
- Loss of power during transfer could result in loss of data or damage to the memory card. Insert a fresh or fully-charged battery before connecting the camera.
- If a memory card containing a large number of images is inserted, there may be a delay before the software starts and you may be unable to import or save images. Use a memory card reader to transfer pictures.
- Make sure that the indicator lamp is off or lit green before turning the camera off.
- Do not disconnect the USB cable while transfer is in progress. Failure to observe this precaution could result in loss of data or damage to the memory card.
- Disconnect the camera before inserting or removing memory cards.
- In some cases, it may not be possible to access pictures saved to a network server using the software in the same way as on a stand-alone computer.
- Do not immediately remove the camera from the system or disconnect the USB cable once the message stating that copying is in progress clears from the computer display. If the number of images copied is very large, data transfer may continue after the message has ceased to be displayed.
- The user bears all applicable fees charged by the phone company or Internet service provider when using services that require an Internet connection.

## Copying Pictures to a Computer

- Before copying pictures to a computer, select **USB CARD READER** for **CONNECTION SETTING > PC CONNECTION MODE**.
- The software that can be used to copy pictures varies with your computer operating system.

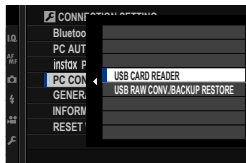


### Mac OS X/macOS

Pictures can be copied to your computer using Image Capture (supplied with your computer) or other software.

 Use a card reader to copy files over 4 GB in size.

### Windows


Use MyFinePix Studio to copy pictures to your computer, where they can be stored, viewed, organized, and printed.

 For more information on MyFinePix Studio, see “Software from Fujifilm” (p. 265).

## Creating JPEG Copies of RAW Images: FUJIFILM X RAW STUDIO

- Before proceeding, select **USB RAW CONV./BACKUP RESTORE** for **CONNECTION SETTING > PC CONNECTION MODE** in the camera menus.
- FUJIFILM X RAW STUDIO can be used to create JPEG copies of RAW images.



 For more information on FUJIFILM X RAW STUDIO, see “Software from Fujifilm” (📖 265).

## Saving and Loading Camera Settings (FUJIFILM X Acquire)

- Before proceeding, select **USB RAW CONV./BACKUP RESTORE** for **CONNECTION SETTING > PC CONNECTION MODE** in the camera menus.
- FUJIFILM X Acquire can be used to save and load camera settings.



 For more information on FUJIFILM X Acquire, see “Software from Fujifilm” (📖 265).



## instax SHARE Printers


Print pictures from your digital camera to instax SHARE printers.

### Establishing a Connection

Select **CONNECTION SETTING** > **instax PRINTER CONNECTION SETTING** and enter the instax SHARE printer name (SSID) and password.

#### The Printer Name (SSID) and Password

The printer name (SSID) can be found on the bottom of the printer; the default password is "1111". If you have already chosen a different password to print from a smartphone, enter that password instead.

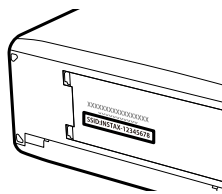

## Printing Pictures

- 1 Turn the printer on.
- 2 Select **PLAY BACK MENU > instax PRINTER PRINT**. The camera will connect to the printer.



- 3 Use the focus stick (focus lever) to display the picture you want to print, then press **MENU/OK**.



- Pictures taken with other cameras cannot be printed.
- The area printed is smaller than the area visible in the LCD monitor.
- The displays may vary depending on the printer connected.

- 4 The picture will be sent to the printer and printing will start.

# 12

## Technical Notes

## Accessories from Fujifilm

The following optional accessories are available from Fujifilm. For the latest information on the accessories available in your region, check with your local Fujifilm representative or visit [http://www.fujifilm.com/products/digital\\_cameras/index.html](http://www.fujifilm.com/products/digital_cameras/index.html).

### Rechargeable Li-ion batteries

**NP-W126/NP-W126S:** Additional high-capacity NP-W126/NP-W126S rechargeable batteries can be purchased as required.

### Battery chargers

**BC-W126/BC-W126S:** Replacement battery chargers can be purchased as required. At +20°C/+68°F, the BC-W126/BC-W126S charges an NP-W126/NP-W126S in about 150 minutes.

### DC couplers

**CP-W126:** For extended shooting or playback or when using the camera with a computer, use the CP-W126 to connect the camera to the **AC-9V** power adapter.

### AC power adapters

**AC-9V** (requires CP-W126 DC coupler): Use this 100–240 V, 50/60 Hz AC power adapter for extended shooting and playback or when copying pictures to a computer.

### Remote releases

**RR-100:** Use to reduce camera shake or keep the shutter open during a time exposure (ø2.5 mm).

### Stereo microphones

**MIC-ST1:** An external microphone for movie recording.

### FUJINON lenses

**XF-/XC-series lenses:** Interchangeable lenses for use exclusively with the FUJIFILM X-mount.

**FUJINON MKX-series lenses:** Cinema lenses for the FUJIFILM X-mount.

### Macro extension tubes

**MCEX-11/16:** Attach between the camera and the lens to shoot at high reproduction ratios.

**Teleconverters**

**XF1.4X TC WR:** Increases the focal length of the compatible lenses by about 1.4x.

**XF2X TC WR:** Increases the focal length of the compatible lenses by about 2.0x.

**Mount adapters**

**FUJIFILM M MOUNT ADAPTER:** Allows the camera to be used with a wide selection of M-mount lenses.

**Body caps**

**BCP-001:** Cover the camera lens mount when no lens is attached.

**Shoe-mounted flash units**

**EF-X500:** In addition to manual and TTL flash control, this clip-on flash unit has a Guide Number of 50/164 (ISO 100, m/ft.) and supports FP (high-speed sync), allowing it to be used at shutter speeds that exceed the flash sync speed. Featuring support for the optional EF-BP1 battery pack and Fujifilm optical wireless flash control, it can be used as a master or remote flash unit for remote wireless flash photography.

**EF-BP1:** A battery pack for shoe-mounted flash units. Takes up to 8 AA batteries.

**EF-42:** This clip-on flash unit has a Guide Number of 42/137 (ISO 100, m/ft.) and supports manual and TTL flash control.

**EF-X20:** This clip-on flash unit has a Guide Number of 20/65 (ISO 100, m/ft.) and supports manual and TTL flash control.

**EF-20:** This clip-on flash unit has a Guide Number of 20/65 (ISO 100, m/ft.) and supports TTL flash control (manual flash control is not supported).

**Hand grips**

**MHG-XT10:** Features an improved grip. Batteries and memory cards can be removed with the grip in place, and the grip is equipped with a rail for quick-shoe camera mounts.

**Leather cases**

**BLC-XT10:** This case combines practicality with the luxury of leather and comes with a shoulder strap made of the same material, as well as a cloth that can be used to wrap the camera before putting it in the case and on other occasions. Pictures can be taken and batteries inserted or removed with the camera still in its case.

**Grip belts**

**GB-001:** Improves grip. Combine with a hand grip for more secure handling.

**instax SHARE printers**

**SP-1/SP-2/SP-3:** Connect via wireless LAN to print pictures on instax film.

## Software from Fujifilm

The camera can be used with the following Fujifilm software.

### FUJIFILM Camera Remote

Establish a wireless connection between your camera and a smartphone or tablet (📖 252).

[http://app.fujifilm-dsc.com/en/camera\\_remote/](http://app.fujifilm-dsc.com/en/camera_remote/)

### FUJIFILM PC AutoSave

Download pictures from your camera over wireless networks (📖 254).

[http://app.fujifilm-dsc.com/en/pc\\_autosave/](http://app.fujifilm-dsc.com/en/pc_autosave/)

### MyFinePix Studio

Manage, view, print, and edit the many images downloaded from your digital camera (📖 257).

<http://fujifilm-dsc.com/mfs/>

Once download is complete, double-click the downloaded file ("MFPS\_Setup.EXE") and follow the on-screen instructions to complete installation.

### RAW FILE CONVERTER EX

View RAW pictures on your computer and convert them into other formats.

<http://fujifilm-dsc.com/rfc/>

## FUJIFILM X RAW STUDIO

When the camera is connected to a computer via USB, FUJIFILM X RAW STUDIO can use the camera's unique image processing engine to rapidly convert RAW files to high-quality JPEG images.

*<http://fujifilm-x.com/x-stories/fujifilm-x-raw-studio-features-users-guide/>*

## FUJIFILM X Acquire

Save and load camera settings. Reconfigure the camera in an instant or share settings with other cameras of the same type.

*<http://fujifilm-x.com/x-stories/fujifilm-x-acquire-features-users-guide/>*

 The camera does not support tethered photography.



# For Your Safety

## IMPORTANT SAFETY INSTRUCTIONS

- **Read Instructions:** All the safety and operating instructions should be read before the appliance is operated.
- **Retain Instructions:** The safety and operating instructions should be retained for future reference.
- **Heed Warnings:** All warnings on the appliance and in the operating instructions should be adhered to.
- **Follow Instructions:** All operating and use instructions should be followed.

### Installation

**Power Sources:** This video product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your appliance dealer or local power company. For video products intended to operate from battery power, or other sources, refer to the operating instructions.

**Grounding or Polarization:** This video product is equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.

**Alternate Warnings:** This video product is equipped with a three-wire grounding-type plug, a plug having a third (grounding) pin. This plug will only fit into a grounding-type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the grounding type plug.

**Overloading:** Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock.

**Ventilation:** Slots and openings in the cabinet are provided for ventilation, to ensure reliable operation of the video product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the video product on a bed, sofa, rug, or other similar surface.

This video product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to. This video product should never be placed near or over a radiator or heat register.

**Attachments:** Do not use attachments not recommended by the video product manufacturer as they may cause hazards.

**Water and Moisture:** Do not use this video product near water—for example, near a bath tub, wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool, and the like.

**Power-Cord Protection:** Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the appliance.

**Accessories:** Do not place this video product on an unstable cart, stand, tripod, bracket, or table. The video product may fall, causing serious injury to a child or adult, and serious damage to the appliance. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the video product. Any mounting of the appliance should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer.


An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.



### Antennas

**Outdoor Antenna Grounding:** If an outside antenna or cable system is connected to the video product, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges. Section 810 of the National Electrical Code, ANSI/NFPA No. 70, provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

#### EXAMPLE OF ANTENNA GROUNDING AS PER NATIONAL ELECTRICAL CODE

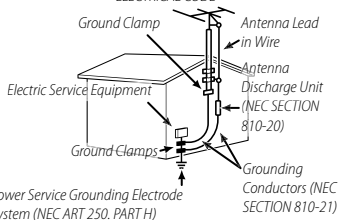

**Power Lines:** An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.

#### Use

**Cleaning:** Unplug this video product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.

**Object and Liquid Entry:** Never push objects of any kind into this video product through openings as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spill liquid of any kind on the video product.

**Lightning:** For added protection for this video product receiver during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the video product due to lightning and power-line surges.

#### Service

**Servicing:** Do not attempt to service this video product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

**Damage Requiring Service:** Unplug this video product from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- When the power-supply cord or plug is damaged
- If liquid has been spilled, or objects have fallen into the video product.
- If the video product has been exposed to rain or water.
- If the video product has been dropped or the cabinet has been damaged.

If the video product does not operate normally follow the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the video product to its normal operation.

When the video product exhibits a distinct change in performance — this indicates a need for service.

**Replacement Parts:** When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.

**Safety Check:** Upon completion of any service or repairs to this video product, ask the service technician to perform safety checks to determine that the video product is in proper operating condition.



## Be sure to read these notes before use

### Safety Notes




- Make sure that you use your camera correctly. Read these safety notes and your *Owner's Manual* carefully before use.
- After reading these safety notes, store them in a safe place.

### About the Icons




The icons shown below are used in this document to indicate the severity of the injury or damage that can result if the information indicated by the icon is ignored and the product is used incorrectly as a result.

	<b>WARNING</b>	This icon indicates that death or serious injury can result if the information is ignored.
	<b>CAUTION</b>	This icon indicates that personal injury or material damage can result if the information is ignored.

The icons shown below are used to indicate the nature of the instructions which are to be observed.

	Triangular icons tell you that this information requires attention ("Important").
	Circular icons with a diagonal bar tell you that the action indicated is prohibited ("Prohibited").
	Filled circles with an exclamation mark indicate an action that must be performed ("Required").

The symbols on the product (including the accessories) represent the following:

	AC
	DC
	Class II equipment (The construction of the product is double-insulated.)










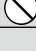


### WARNING





 



 






**If a problem arises, turn the camera off, remove the battery, disconnect the USB cable, and unplug the AC power adapter.** Continued use of the camera when it is emitting smoke, is emitting any unusual odor, or is in any other abnormal state can cause a fire or electric shock. Contact your Fujifilm dealer.





**Do not allow water or foreign objects to enter the camera or connecting cables.** Do not use the camera or connecting cables following ingress of fresh or salt water, milk, beverages, detergents, or other liquids. Should liquid find its way into the camera or connecting cables, turn the camera off, remove the battery, disconnect the USB cable, and disconnect and unplug the AC adapter. Continued use of the camera can cause a fire or electric shock. Contact your Fujifilm dealer.


 <b>WARNING</b>	
 <small>Do not use in the bathroom or shower</small>	<b>Do not use the camera in the bathroom or shower.</b> This can cause a fire or electric shock.
 <small>Do not disassemble</small>	<b>Never attempt to change or take apart the camera (never open the case).</b> Failure to observe this precaution can cause fire or electric shock.
 <small>Do not touch internal parts</small>	<b>Should the case break open as the result of a fall or other accident, do not touch the exposed parts.</b> Failure to observe this precaution could result in electric shock or in injury from touching the damaged parts. Remove the battery immediately, taking care to avoid injury or electric shock, and take the product to the point of purchase for consultation.
	<b>Do not change, heat or unduly twist or pull the connection cord and do not place heavy objects on the connection cord.</b> These actions could damage the cord and cause a fire or electric shock. If the cord is damaged, contact your Fujifilm dealer. <b>Do not use cables with bent connectors.</b>
	<b>Do not place the camera on an unstable surface.</b> This can cause the camera to fall or tip over and cause injury.
	<b>Never attempt to take pictures while in motion.</b> Do not use the camera while walking or driving. This can result in you falling down or being involved in a traffic accident.
	<b>Do not touch any metal parts of the camera during a thunderstorm.</b> This can cause an electric shock due to induced current from the lightning discharge.
	<b>Do not use the battery except as specified.</b> Load the battery as shown by the indicator.
	<b>Do not disassemble, modify, or heat batteries. Do not drop, strike, or throw batteries or otherwise subject them to strong impacts. Do not use batteries that show signs of leaking, deformation, discoloration, or other abnormalities. Use only designated chargers to recharge rechargeable batteries and do not attempt to recharge non-rechargeable Li-ion or alkaline batteries. Do not short batteries or store them with metallic objects.</b> Failure to observe these precautions could result in the batteries overheating, igniting, rupturing, or leaking, causing fire, burns, or other injury.
	<b>Use only batteries or AC power adapters specified for use with this camera. Do not use voltages other than the power supply voltage shown.</b> The use of other power sources can cause a fire.
	<b>If the battery leaks and fluid gets in contact with your eyes, skin or clothing, flush the affected area with clean water and seek medical attention or call an emergency number right away.</b>


 <b>WARNING</b>	
	<b>Do not use the charger to charge batteries other than those specified here.</b> The supplied charger is for use only with batteries of the type supplied with the camera. Using the charger to charge conventional batteries or other types of rechargeable batteries can cause the battery to leak, overheat or burst.
	<b>Using a flash too close to a person's eyes may cause visual impairment.</b> Take particular care when photographing infants and young children.
	<b>Do not remain in prolonged contact with hot surfaces.</b> Failure to observe this precaution could result in low-temperature burns, particularly at high ambient temperatures or with users who suffer from poor circulation or reduced sensation, in which case use of a tripod or similar precautions are recommended.
	<b>Do not leave one part of the body in contact with the product for prolonged periods while the product is on.</b> Failure to observe this precaution could result in low-temperature burns, particularly during prolonged use, at high ambient temperatures, or with users who suffer from poor circulation or reduced sensation, in which case use of a tripod or similar precautions are recommended.
	<b>Do not use in the presence of flammable objects, explosive gases, or dust.</b>
	<b>When carrying the battery, install it in a digital camera or keep it in the hard case. When storing the battery, keep it in the hard case. When discarding, cover the battery terminals with insulation tape.</b> Contact with other metallic objects or batteries could cause the battery to ignite or burst.
	<b>Keep memory cards, hot shoes, and other small parts out of the reach of small children.</b> Children may swallow small parts; keep out of reach of children. Should a child swallow a small part, seek medical attention or call emergency.
	<b>Keep out of reach of small children.</b> Among the elements that could cause injury are the strap, which could become entangled about a child's neck, causing strangulation, and the flash, which could cause visual impairment.
	<b>Follow the directions of airline and hospital personnel.</b> This product generates radio-frequency emissions that could interfere with navigational or medical equipment.
 <b>CAUTION</b>	
	<b>Do not use this camera in locations affected by oil fumes, steam, humidity or dust.</b> This can cause a fire or electric shock.
	<b>Do not leave this camera in places subject to extremely high temperatures.</b> Do not leave the camera in locations such as a sealed vehicle or in direct sunlight. This can cause a fire.


**CAUTION**

 **Do not place heavy objects on the camera.** This can cause the heavy object to tip over or fall and cause injury.


 **Do not move the camera while the AC power adapter is still connected.** Do not pull on the connection cord to disconnect the AC power adapter. This can damage the power cord or cables and cause a fire or electric shock.


 **Do not cover or wrap the camera or the AC power adapter in a cloth or blanket.** This can cause heat to build up and distort the casing or cause a fire.


 **Do not use the plug if it is damaged or if it does not fit securely into the outlet.** Failure to observe this precaution could result in fire or electric shock.


 **When you are cleaning the camera or you do not plan to use the camera for an extended period, remove the battery and disconnect and unplug the AC power adapter.** Failure to do so can cause a fire or electric shock.


**CAUTION**

 **When charging ends, unplug the charger from the power socket.** Leaving the charger plugged into the power socket can cause a fire.

 **When a memory card is removed, the card could come out of the slot too quickly. Use your finger to hold it and gently release the card.** Injury could result to those struck by the ejected card.


 **Request regular internal testing and cleaning for your camera.** Build-up of dust in your camera can cause a fire or electric shock. Contact your Fujifilm dealer to request internal cleaning every two years. Please note that this service is not free of charge.

 **Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.**

 **Batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.**

**The Battery and Power Supply**

**Note:** Check the type of battery used in your camera and read the appropriate sections.

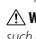 **WARNING:** Battery shall not be exposed to excessive heat such as sunshine, fire or the like.

The following describes the proper use of batteries and how to prolong their life. Incorrect use can shorten battery life or cause leakage, overheating, fire, or explosion.

**Li-ion Batteries**

Read this section if your camera uses a rechargeable Li-ion battery.

The battery is not charged at shipment. Charge the battery before use. Keep the battery in its case when not in use.

**Notes on the Battery**

The battery gradually loses its charge when not in use. Charge the battery one or two days before use.

Battery life can be extended by turning the camera off when not in use.

Battery capacity decreases at low temperatures; a depleted battery may not function when cold. Keep a fully charged spare battery in a warm place and exchange as necessary, or keep the battery in your pocket or other warm place and insert it in the camera only when shooting. Do not place the battery in direct contact with hand warmers or other heating devices.

**Charging the Battery**

Charge the battery in the supplied battery charger. Charging times will increase at ambient temperatures below +10 °C (+50 °F) or above +35 °C (+95 °F). Do not attempt to charge the battery at temperatures above 40 °C (+104 °F); at temperatures below 0 °C (+32 °F), the battery will not charge.

Do not attempt to recharge a fully charged battery. The battery does not however need to be fully discharged before charging. The battery may be warm to the touch immediately after charging or use. This is normal.

**Battery Life**

At normal temperatures, the battery can be recharged about 300 times. A noticeable decrease in the length of time the battery will hold a charge indicates that it has reached the end of its service life and should be replaced.

**Storage**

Performance may be impaired if the battery is left unused for extended periods when fully charged. Run the battery flat before storing it.

If the camera will not be used for an extended period, remove the battery and store it in a dry place with an ambient temperature of from +15 °C to +25 °C (+59 °F to +77 °F). Do not store in locations exposed to extremes of temperature.

**Cautions: Handling the Battery**

- Do not transport or store with metal objects such as necklaces or hairpins.
- Do not expose to flame or heat.
- Do not disassemble or modify.
- Use with designated chargers only.
- Dispose of used batteries promptly.
- Do not drop or subject to strong physical shocks.
- Do not expose to water.
- Keep the terminals clean.
- The battery and camera body may become warm to the touch after extended use. This is normal.

**Caution: Disposal**

Dispose of used batteries in accord with local regulations. Attention should be drawn to the environmental aspects of battery disposal. Use the apparatus under moderate climate.

**AC Power Adapters**

Use only Fujifilm AC power adapters designated for use with this camera. Other adapters could damage the camera.

- The AC power adapter is for indoor use only.
- Be sure the DC plug is securely connected to the camera.
- Turn the camera off before disconnecting the adapter. Disconnect the adapter by the plug, not the cable.
- Do not use with other devices.

- Do not disassemble.
- Do not expose to high heat and humidity.
- Do not subject to strong physical shocks.
- The adapter may hum or become hot to the touch during use. This is normal.
- If the adapter causes radio interference, reorient or relocate the receiving antenna.

**Using the Camera**

- Do not aim the camera at extremely bright light sources, such as the sun in a cloudless sky. Failure to observe this precaution could damage the camera image sensor.
- Strong sunlight focused through the viewfinder may damage the panel of electronic viewfinder (EVF). Do not aim the electronic viewfinder at the sun.

**Trademark Information**

Digital Split Image is a trademark or registered trademark of FUJIFILM Corporation. Digital Micro Prism is a trademark or registered trademark of FUJIFILM Corporation. The typefaces included herein are solely developed by DynaComware Taiwan Inc. Mac, OS X, and macOS are trademarks of Apple Inc. in the U.S.A. and other countries. Windows is a registered trademark of Microsoft Corporation in the U.S.A. and other countries. Adobe, the Adobe logo, Photoshop, and Lightroom are trademarks or registered trademarks of Adobe Systems Incorporated in the U.S.A. and other countries. Wi-Fi® and Wi-Fi Protected Setup® are registered trademarks of the Wi-Fi Alliance. The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc., and any use of such marks by Fujifilm is under license. The SDHC and SDXC logos are trademarks of SD-3C, LLC. The HDMI logo is a trademark or registered trademark of HDMI Licensing LLC. All other trade names mentioned in this manual are the trademarks or registered trademarks of their respective owners.

**Take Test Shots**

Before taking photographs on important occasions (such as at weddings or before taking the camera on a trip), take a test shot and view the results to ensure that the camera is functioning normally. FUJIFILM Corporation cannot accept liability for damages or lost profits incurred as a result of product malfunction.

**Notes on Copyright**

Unless intended solely for personal use, images recorded using your digital camera system cannot be used in ways that infringe copyright laws without the consent of the owner. Note that some restrictions apply to the photographing of stage performances, entertainments, and exhibits, even when intended purely for personal use. Users are also asked to note that the transfer of memory cards containing images or data protected under copyright laws is only permissible within the restrictions imposed by those copyright laws.

**Electrical Interference**

This camera may interfere with hospital or aviation equipment. Consult with hospital or airline staff before using the camera in a hospital or on an aircraft.

**Handling**

To ensure that images are recorded correctly, do not subject the camera to impact or physical shocks while images are being recorded.

**Color Television Systems**

NTSC (National Television System Committee) is a color television telecasting specification adopted mainly in the U.S.A., Canada, and Japan. PAL (Phase Alternation by Line) is a color television system adopted mainly in European countries and China.

**Liquid Crystal**

In the event that the display is damaged, care should be taken to avoid contact with liquid crystal. Take the urgent action indicated should any of the following situations arise:

- **If liquid crystal comes in contact with your skin**, clean the area with a cloth and then wash thoroughly with soap and running water.
- **If liquid crystal enters your eyes**, flush the affected eye with clean water for at least 15 minutes and then seek medical assistance.
- **If liquid crystal is swallowed**, rinse your mouth thoroughly with water. Drink large quantities of water and induce vomiting, then seek medical assistance.

Although the display is manufactured using extremely high-precision technology, it may contain pixels that are always lit or that do not light. This is not a malfunction, and images recorded with the product are unaffected.

**Exif Print (Exif Version 2.3)**

Exif Print is a newly revised digital camera file format in which information stored with photographs is used for optimal color reproduction during printing.

**IMPORTANT NOTICE: Read Before Using the Software**

Direct or indirect export, in whole or in part, of licensed software without the permission of the applicable governing bodies is prohibited.

## NOTICES

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

Please read the "Safety Notes" and make sure you understand them before using the camera.

Perchlorate Material—special handling may apply. See:  
<http://www.dtscc.ca.gov/hazardouswaste/perchlorate>

For Customers in the U.S.A.

### Tested To Comply With FCC Standards FOR HOME OR OFFICE USE



Contains IC : 10293A-WMBNBM26A

Contains FCC ID : COF-WMBNBM26A

**FCC Statement:** This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**CAUTION:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**FCC Caution:** Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

**Radiation Exposure Statement:** This device meets the government's requirements for exposure to radio waves. This device is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.

The exposure standard for wireless device employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg. Tests for SAR are conducted using standard operating positions accepted by the FCC with the device transmitting at its highest certified power level in all tested frequency bands.

**Notes on the Grant:** To comply with Part 15 of the FCC Rules, this product must be used with a Fujifilm-specified ferrite-core A/V cable, USB cable, and DC supply cord.



A lithium ion battery that is recyclable powers the product you have purchased. Please call 1-800-8-BATTERY for information on how to recycle this battery.

**For Customers in Canada****CAN ICES-3 (B)/NMB-3(B)**

**CAUTION:** This Class B digital apparatus complies with Canadian ICES-003.

**Industry Canada statement:** This device complies with Industry Canada's licence-exempt RSSs. Operation is subject to the following two conditions: (1) This device may not cause interference; and (2) This device must accept any interference, including interference that may cause undesired operation of the device.

This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter, except tested built-in radios. The County Code Selection feature is disabled for products marketed in the US/ Canada.

**Radiation Exposure Statement:** The available scientific evidence does not show that any health problems are associated with using low power wireless devices. There is no proof, however, that these low power wireless devices are absolutely safe. Low power Wireless devices emit low levels of radio frequency energy (RF) in the microwave range while being used. Whereas high levels of RF can produce health effects (by heating tissue), exposure of low-level RF that does not produce heating effects causes no known adverse health effects. Many studies of low-level RF exposures have not found any biological effects. Some studies have suggested that some biological effects might occur, but such findings have not been confirmed by additional research. X-T30 has been tested and found to comply with IC radiation exposure limits set forth for an uncontrolled environment and meets RSS-102 of the IC radio frequency (RF) Exposure rules.

**Disposal of Electrical and Electronic Equipment in Private Households****In the European Union, Norway, Iceland and Liechtenstein:**

This symbol on the product, or in the manual and in the warranty, and/or on its packaging indicates that this product shall not be treated as household waste. Instead it should be taken to an applicable collection point for the recycling of electrical and electronic equipment.

By ensuring this product is disposed of correctly, you will help prevent potential negative consequences to the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

This symbol on the batteries or accumulators indicates that those batteries shall not be treated as household waste.

If your equipment contains easy removable batteries or accumulators please dispose these separately according to your local requirements.

The recycling of materials will help to conserve natural resources. For more detailed information about recycling this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

**In Countries Outside the European Union, Norway, Iceland and Liechtenstein:**

If you wish to discard this product, including the batteries or accumulators, please contact your local authorities and ask for the correct way of disposal.

**In Japan:** This symbol on the batteries indicates that they are to be disposed of separately.



## Wireless Network and Bluetooth Devices: Cautions

This product complies with the following EU Directives:

- RoHS Directive 2011/65/EU
- RE Directive 2014/53/EU

Hereby, FUJIFILM Corporation declares that the radio equipment type **FF180006** is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address: [http://www.fujifilm.com/products/digital\\_cameras/x/fujifilm\\_x\\_t30/pdf/index/fujifilm\\_x\\_t30\\_cod.pdf](http://www.fujifilm.com/products/digital_cameras/x/fujifilm_x_t30/pdf/index/fujifilm_x_t30_cod.pdf)

This compliance is indicated by the following conformity marking placed on the product:



This marking is valid for non-Telecom products and EU harmonized Telecom products (e.g. Bluetooth®).

**IMPORTANT:** Read the following notices before using the camera's built-in wireless transmitter.

Ⓢ This product, which contains encryption function developed in the United States, is controlled by the United States Export Administration Regulations and may not be exported or re-exported to any country to which the United States embargoes goods.

- **Use only a wireless network or Bluetooth device.** Fujifilm does not accept liability for damages resulting from unauthorized use. Do not use in applications requiring a high degree of reliability, for example in medical devices or other systems that may directly or indirectly impact human life. When using the device in computer and other systems that demand a greater degree of reliability than offered by wireless network or Bluetooth devices, be sure to take all necessary precautions to ensure safety and prevent malfunction.
- **Use only in the country in which the device was purchased.** This device conforms to regulations governing wireless network and Bluetooth devices in the country in which it was purchased. Observe all location regulations when using the device. Fujifilm does not accept liability for problems arising from use in other jurisdictions.
- **Do not use the device in locations subject to magnetic fields, static electricity, or radio interference.** Do not use the transmitter in the vicinity of microwave ovens or in other locations subject to magnetic fields, static electricity, or radio interference that may prevent reception of wireless signals. Mutual interference may occur when the transmitter is used in the vicinity of other wireless devices operating in the 2.4 GHz band.
- **The wireless transmitter operates in the 2.4 GHz band using DSSS, OFDM and GFSK modulation.**

- **Security.** Wireless network and Bluetooth devices transmit data via radio and consequently their use requires greater attention to security than applies in the case of wired networks.

- Do not connect to unknown networks or networks to which you do not have access rights, even if they are displayed on your device, as such access may be considered unauthorized. Connect only to networks to which you have access rights.
- Be aware that wireless transmissions may be vulnerable to interception by third parties.

- **The following may be punishable by law:**

- Disassembly or modification of this device
- Removal of device certification labels

- **This device operates on the same frequency as commercial, educational, and medical devices and wireless transmitters.**

It also operates on the same frequency as licensed transmitters and special unlicensed low-voltage transmitters used in RFID tracking systems for assembly lines and in other similar applications.

- **To prevent interference with the above devices, observe the following precautions.**

Confirm that the RFID transmitter is not in operation before using this device. Should you observe that the device causes interference in licensed transmitters used for RFID tracking, immediately stop using the affected frequency or move the device to another location. If you notice that this device causes interference in low-voltage RFID tracing systems, contact a Fujifilm representative.

- **Do not use this device on board an aircraft.** Note that Bluetooth may remain on even when the camera is off. Bluetooth can be disabled by selecting **OFF** for **CONNECTION SETTING > Bluetooth SETTINGS > Bluetooth ON/OFF**.





## Be sure to read these notes before using the lens

### Safety Notes




- Make sure that you use the lens correctly. Read these safety notes and the camera *Owner's Manual* carefully before use.
- After reading these safety notes, store them in a safe place.

### About the Icons




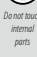

The icons shown below are used in this document to indicate the severity of the injury or damage that can result if the information indicated by the icon is ignored and the product is used incorrectly as a result.

	<b>WARNING</b> This icon indicates that death or serious injury can result if the information is ignored.
	<b>CAUTION</b> This icon indicates that personal injury or material damage can result if the information is ignored.

The icons shown below are used to indicate the nature of the instructions which are to be observed.

	Triangular icons tell you that this information requires attention ("Important").
	Circular icons with a diagonal bar tell you that the action indicated is prohibited ("Prohibited").
	Filled circles with an exclamation mark indicate an action that must be performed ("Required").

### ⚠ WARNING

	<b><i>Do not immerse in or expose to water.</i></b> Failure to observe this precaution can cause a fire or electric shock.
	<b><i>Do not disassemble (do not open the case).</i></b> Failure to observe this precaution can cause fire, electric shock, or injury due to product malfunction.
	<b><i>Should the case break open as the result of a fall or other accident, do not touch the exposed parts.</i></b> Failure to observe this precaution could result in electric shock or injury from touching the damaged parts. Remove the battery immediately, taking care to avoid injury or electric shock, and take the product to the point of purchase for consultation.
	<b><i>Do not place on unstable surfaces.</i></b> The product may fall, causing injury.
	<b><i>Do not view the sun through the lens or camera viewfinders.</i></b> Failure to observe this precaution can cause permanent visual impairment.

### ⚠ CAUTION

	<b><i>Do not use or store in locations that are exposed to steam, or smoke or are very humid or extremely dusty.</i></b> Failure to observe this precaution can cause fire or electric shock.
	<b><i>Do not leave in direct sunlight or in locations subject to very high temperatures, such as in a closed vehicle on a sunny day.</i></b> Failure to observe this precaution can cause fire.
	<b><i>Keep out of the reach of small children.</i></b> This product could cause injury in the hands of a child.
	<b><i>Do not handle with wet hands.</i></b> Failure to observe this precaution can cause electric shock.
	<b><i>Keep the sun out of the frame when shooting backlit subjects.</i></b> Sunlight focused into the camera when the sun is in or close to the frame can cause fire or burns.
	<b><i>When the product is not in use, replace the lens caps and store out of direct sunlight.</i></b> Sunlight focused by the lens can cause fire or burns.
	<b><i>Do not carry the camera or lens while they are attached to a tripod.</i></b> The product can fall or strike other objects, causing injury.


## Product Care

---

To ensure continued enjoyment of the product, observe the following precautions.

---

**Camera body:** Use a soft, dry cloth to clean the camera body after each use. Do not use alcohol, thinner, or other volatile chemicals, which could discolor or deform the leather on the camera body. Any liquid on the camera should be removed immediately with a soft, dry cloth. Use a blower to remove dust from the monitor, taking care to avoid scratches, and then gently wipe with a soft, dry cloth. Any remaining stains can be removed by wiping gently with a piece of Fujifilm lens-cleaning paper to which a small amount of lens-cleaning fluid has been applied. To prevent dust entering the camera, replace the body cap when no lens is in place.

**Image sensor:** Multiple photographs marred by spots or blotches in identical locations may indicate the presence of dust on the image sensor. Clean the sensor using  **USER SETTING > SENSOR CLEANING**.

## Cleaning the Image Sensor

Dust that cannot be removed using **USER SETTING > SENSOR CLEANING** can be removed manually as described below.

**!** Note that there will be a charge to repair or replace the image sensor if it is damaged during cleaning.

- 1** Use a blower (not a brush) to remove dust from the sensor.

**!** Do not use a brush or blower brush. Failure to observe this precaution could damage the sensor.




- 2** Check whether the dust has been successfully removed. Repeat Steps 1 and 2 as necessary.
- 3** Replace the body cap or lens.


## Firmware Updates

Updates to product firmware may result in changes not described in the manual. For more information, visit: [http://www.fujifilm.com/support/digital\\_cameras/software](http://www.fujifilm.com/support/digital_cameras/software)

### Checking the Firmware Version

 The camera will only display the firmware version if a memory card is inserted.


- 1 Turn the camera off and check that a memory card is inserted.
- 2 Turn the camera on while pressing the **DISP/BACK** button. The current firmware version will be displayed; check the firmware version.
- 3 Turn the camera off.

 To view the firmware version or update firmware for optional accessories such as interchangeable lenses, shoe-mounted flash units, and mount adapters, mount the accessories on the camera.

## Troubleshooting



Consult the table below should you encounter problems using your camera. If you don't find the solution here, contact your local Fujifilm distributor.

### Power and Battery

Problem	Solution
The camera does not turn on.	<ul style="list-style-type: none"><li>• <b>The battery is exhausted:</b> Charge the battery or insert a fully-charged spare battery (📖 33).</li><li>• <b>The battery is inserted incorrectly:</b> Reinsert in the correct orientation (📖 29).</li><li>• <b>The battery-chamber cover is not latched:</b> Latch the battery-chamber cover (📖 29).</li></ul>
The monitor does not turn on.	The monitor may not turn on if the camera is turned off and then on again very quickly. Keep the shutter button pressed halfway until the monitor activates.
The battery runs down quickly.	<ul style="list-style-type: none"><li>• <b>The battery is cold:</b> Warm the battery by placing it in a pocket or other warm place and reinsert it in the camera immediately before taking a picture.</li><li>• <b>There is dirt on the battery terminals:</b> Clean the terminals with a soft, dry cloth.</li><li>• <b>ON is selected for  AF/MF SETTING &gt; PRE-AF:</b> Turn PRE-AF off (📖 116).</li><li>• <b>The battery has been charged many times:</b> The battery has reached the end of its charging life. Purchase a new battery.</li></ul>
The camera turns off suddenly.	<b>The battery is exhausted:</b> Charge the battery or insert a fully-charged spare battery (📖 33).

Problem	Solution
Charging does not start.	<ul style="list-style-type: none"> <li>• Insert the battery (📖 29).</li> <li>• Reinsert the battery in the correct orientation (📖 29).</li> <li>• Make sure that the charger is correctly plugged in (📖 33).</li> <li>• Ensure that the plug adapter is correctly connected to the charger (📖 33).</li> </ul>
Charging is slow.	Charge the battery at room temperature.
The indicator lamp blinks, but the battery does not charge.	<ul style="list-style-type: none"> <li>• <b>There is dirt on the battery terminals:</b> Clean the terminals with a soft, dry cloth (📖 29).</li> <li>• <b>The battery has been charged many times:</b> The battery has reached the end of its charging life. Purchase a new battery. If the battery still fails to charge, contact your Fujifilm dealer (📖 262).</li> </ul>

## Menus and Displays

Problem	Solution
Display is not in English.	Select <b>ENGLISH</b> for  <b>USER SETTING</b> >  <b>言語/LANG.</b> (📖 40, 188).

## Shooting

Problem	Solution
<p>No picture is taken when the shutter button is pressed.</p>	<ul style="list-style-type: none"> <li>• <b>The memory card is full:</b> Insert a new memory card or delete pictures (📖 29, 170).</li> <li>• <b>The memory card is not formatted:</b> Format the memory card in the camera (📖 186).</li> <li>• <b>There is dirt on the memory card contacts:</b> Clean the contacts with a soft, dry cloth.</li> <li>• <b>The memory card is damaged:</b> Insert a new memory card (📖 29).</li> <li>• <b>The battery is exhausted:</b> Charge the battery or insert a fully-charged spare battery (📖 33).</li> <li>• <b>The camera has turned off automatically:</b> Turn the camera on (📖 36).</li> <li>• <b>You are using a third-party mount adapter:</b> Select <b>ON</b> for <b>SHOOT WITHOUT LENS</b> (📖 208).</li> </ul>
<p>Mottling (“noise”) appears in the monitor or viewfinder when the shutter button is pressed halfway.</p>	<p>Gain is increased to aid composition when the subject is poorly lit and aperture is stopped down, which may result in noticeable mottling when images are previewed in the displays. Images taken with the camera are unaffected.</p>
<p>The camera does not focus.</p>	<p><b>The subject is not suited to autofocus:</b> Use focus lock or manual focus (📖 78).</p>
<p>No panorama is recorded when the shutter button is pressed.</p>	<p><b>The indicator lamp was orange when you attempted to record a panorama:</b> Wait until the indicator lamps turns off (📖 8).</p>

Problem	Solution
No face is detected.	<ul style="list-style-type: none"> <li>• <b>The subject's face is obscured by sunglasses, a hat, long hair, or other objects:</b> Remove the obstructions (📖 117).</li> <li>• <b>The subject's face occupies only a small area of the frame:</b> Change the composition so that the subject's face occupies a larger area of the frame (📖 117).</li> <li>• <b>The subject's face is turned away from the camera:</b> Ask the subject to face the camera (📖 117).</li> <li>• <b>The camera is tilted:</b> Keep the camera level.</li> <li>• <b>The subject's face is poorly lit:</b> Shoot in bright light.</li> </ul>
The flash does not fire.	<ul style="list-style-type: none"> <li>• <b>The flash is disabled:</b> Adjust settings (📖 94).</li> <li>• <b>The battery is exhausted:</b> Charge the battery or insert a fully-charged spare battery (📖 33).</li> <li>• <b>The camera is in bracketing or continuous mode:</b> Select single frame mode (📖 5).</li> <li>• <b>The flash is lowered:</b> Raise the flash (📖 92).</li> </ul>
Some flash modes are not available.	<p><b>OFF is selected for SOUND &amp; FLASH:</b> Select <b>ON</b> (📖 189).</p>




Problem	Solution
The flash does not fully light the subject.	<ul style="list-style-type: none"> <li>• <b>The subject is not in range of the flash:</b> Position the subject in range of the flash.</li> <li>• <b>The flash window is obstructed:</b> Hold the camera correctly.</li> <li>• <b>Shutter speed is faster than the sync speed:</b> Choose a slower shutter speed (📖 56, 60, 294).</li> </ul>
Pictures are blurred.	<ul style="list-style-type: none"> <li>• <b>The lens is dirty:</b> Clean the lens.</li> <li>• <b>The lens is blocked:</b> Keep objects away from the lens (📖 43).</li> <li>• <b>!AF is displayed during shooting and the focus frame is displayed in red:</b> Check focus before shooting (📖 44).</li> </ul>
Pictures are mottled.	<ul style="list-style-type: none"> <li>• <b>Shutter speed is slow and the ambient temperature is high:</b> This is normal and does not indicate a malfunction. Use pixel mapping (📖 108).</li> <li>• <b>The camera has been used continuously at high temperatures:</b> Turn the camera off and wait for it to cool down (📖 36, 290).</li> <li>• <b>A temperature warning is displayed:</b> Turn the camera off and wait for it to cool down (📖 36, 290).</li> </ul>

## Playback

Problem	Solution
Pictures are grainy.	The pictures were taken with a different make or model of camera.
Playback zoom is unavailable.	The pictures were created using <b>RESIZE</b> or with a different make or model of camera.
No sound in movie playback.	<ul style="list-style-type: none"><li>• <b>Playback volume is too low:</b> Adjust playback volume (📖 191).</li><li>• <b>The microphone was obstructed:</b> Hold the camera correctly during recording.</li><li>• <b>The speaker is obstructed:</b> Hold the camera correctly during playback.</li><li>• <b>OFF is selected for SOUND &amp; FLASH:</b> Select <b>ON</b> (📖 189).</li></ul>
Selected pictures are not deleted.	Some of the pictures selected for deletion are protected.
Pictures remain after <b>ERASE &gt; ALL FRAMES</b> is selected.	Remove protection using the device with which it was originally applied (📖 174).
File numbering is unexpectedly reset.	The battery-chamber cover was opened while the camera was on. Turn the camera off before opening the battery-chamber cover (📖 213).

## Connections

Problem	Solution
The monitor is blank.	The camera is connected to a TV: Pictures will be displayed on the TV instead of in the camera monitor (📖 250).
Both the TV and camera monitor are blank.	The display mode selected with the <b>VIEW MODE</b> button is <b>EVF ONLY</b> +  : Put your eye to the viewfinder. Use the <b>VIEW MODE</b> button to choose another display mode (📖 14).
No picture or sound on TV.	<ul style="list-style-type: none"> <li>• <b>The camera is not properly connected:</b> Connect the camera properly (📖 250).</li> <li>• <b>Input on the television is set to "TV":</b> Set input to "HDMI" (📖 250).</li> <li>• <b>The volume on the TV is too low:</b> Use the controls on the television to adjust the volume (📖 250).</li> </ul>
The computer does not recognize the camera.	Be sure the camera and computer are correctly connected (📖 255).
Cannot transfer RAW or JPEG files to computer.	Use MyFinePix Studio to transfer pictures (Windows only; 📖 255).
<b>FUJIFILM X RAW STUDIO</b> or <b>FUJIFILM X Acquire</b> fails to correctly detect the camera.	Check the option selected for <b>PC CONNECTION MODE</b> on the camera. Select <b>USB RAW CONV./BACKUP RESTORE</b> before connecting the USB cable (📖 258).

## Wireless Transfer

For additional information on troubleshooting wireless connections, visit:

<http://digital-cameras.support.fujifilm.com/app?pid=x>




Problem	Solution
Cannot connect to smartphone. The camera is slow to connect or upload pictures to the smartphone. Upload fails or is interrupted.	<ul style="list-style-type: none"><li>• <b>The smartphone is too far away:</b> Move the devices closer (📖 252).</li><li>• <b>Nearby devices are causing radio interference:</b> Move the camera and smartphone away from microwave ovens or cordless phones (📖 252).</li></ul>
Cannot upload images.	<ul style="list-style-type: none"><li>• <b>The smartphone is connected to another device:</b> The smartphone and camera can connect to only one device at a time. End the connection and try again (📖 252).</li><li>• <b>There are several smartphones in the vicinity:</b> Try connecting again. The presence of multiple smartphones can make connection difficult (📖 252).</li><li>• <b>The image was created on another device:</b> The camera may not be able to upload images created on other devices.</li><li>• <b>The image is a movie:</b> Although you can select movies for upload when viewing the contents of camera memory on your smartphone, upload will take some time. Movies intended for display on a smartphone or tablet should be recorded at a frame size of 1280 × 720 (HD) or smaller. For information on viewing the pictures on the camera, visit: <a href="http://app.fujifilm-dsc.com/en/camera_remote/">http://app.fujifilm-dsc.com/en/camera_remote/</a></li></ul>
Smartphone will not display pictures.	Select <b>ON</b> for <b>GENERAL SETTINGS &gt; RESIZE IMAGE FOR SMARTPHONE</b> 📷. Selecting <b>OFF</b> increases upload times for larger images; in addition, some phones may not display images over a certain size (📖 219).



## Miscellaneous





Problem	Solution
The camera is unresponsive.	<ul style="list-style-type: none"> <li>• <b>Temporary camera malfunction:</b> Remove and reinsert the battery (📖 29).</li> <li>• <b>The battery is exhausted:</b> Charge the battery or insert a fully-charged spare battery (📖 33).</li> <li>• <b>The camera is connected to a wireless LAN:</b> End the connection.</li> </ul>
The camera does not function as expected.	Remove and reinsert the battery (📖 29). If the problem persists, contact your Fujifilm dealer.
Motion in the viewfinder or monitor appears jerky rather than smooth.	When <b>NORMAL</b> is selected for <b>PERFORMANCE</b> , the frame rate will drop if no operations are performed for a set period. The normal frame rate will be restored after you operate camera controls (📖 212).
No sound.	<ul style="list-style-type: none"> <li>• Adjust the volume (📖 190).</li> <li>• <b>OFF is selected for SOUND &amp; FLASH:</b> Select <b>ON</b> (📖 189).</li> </ul>
Pressing the Q button does not display the quick menu.	<b>TTL-LOCK is active:</b> End TTL-LOCK (📖 142).

## Warning Messages and Displays

The following warnings appear in the display.

Warning	Description
 (red)	Low battery. Charge the battery or insert a fully-charged spare battery.
 (blinks red)	Battery exhausted. Charge the battery or insert a fully-charged spare battery.
<b>!AF</b> (displayed in red with red focus frame)	The camera cannot focus. Use focus lock to focus on another subject at the same distance, then recompose the picture.
Aperture or shutter speed displayed in red	The subject is too bright or too dark and the picture will be over- or under-exposed. Use the flash for additional lighting when taking photographs of poorly-lit subject.
<b>FOCUS ERROR</b> <b>LENS CONTROL ERROR</b> <b>TURN OFF THE CAMERA AND TURN ON AGAIN</b>	Camera malfunction. Turn the camera off and then on again. If the message persists, contact a Fujifilm dealer.
<b>NO CARD</b>	The shutter can only be released when a memory card is inserted. Insert a memory card.
<b>CARD NOT INITIALIZED</b>	<ul style="list-style-type: none"><li>• <b>The memory card is not formatted or the memory card has been formatted in a computer or other device:</b> Format the memory card using  <b>USER SETTING &gt; FORMAT</b>.</li><li>• <b>The memory card contacts require cleaning:</b> Clean the contacts with a soft, dry cloth. If the message is repeated, format the card. If the message persists, replace the card.</li><li>• <b>Camera malfunction:</b> Contact a Fujifilm dealer.</li></ul>
<b>LENS ERROR</b>	Turn the camera off, remove the lens, and clean the mounting surfaces, then replace the lens and turn the camera on. If the problem persists, contact a Fujifilm dealer.




Warning	Description
<b>CARD ERROR</b>	<ul style="list-style-type: none"> <li>• <b>The memory card is not formatted for use in the camera:</b> Format the card.</li> <li>• <b>The memory card contacts require cleaning or the memory card is damaged:</b> Clean the contacts with a soft, dry cloth. If the message is repeated, format the card. If the message persists, replace the card.</li> <li>• <b>Incompatible memory card:</b> Use a compatible card.</li> <li>• <b>Camera malfunction:</b> Contact a Fujifilm dealer.</li> </ul>
<b>PROTECTED CARD</b>	The memory card is locked. Unlock the card.
<b>BUSY</b>	The memory card is incorrectly formatted. Use the camera to format the card.
<b> MEMORY FULL</b>	The memory card is full and pictures cannot be recorded. Delete pictures or insert a memory card with more free space.
<b>WRITE ERROR</b>	<ul style="list-style-type: none"> <li>• <b>Memory card error or connection error:</b> Reinsert the card or turn the camera off and then on again. If the message persists, contact a Fujifilm dealer.</li> <li>• <b>Not enough memory remaining to record additional pictures:</b> Delete pictures or insert a memory card with more free space.</li> <li>• <b>The memory card is not formatted:</b> Format the memory card.</li> </ul>
<b>FRAME NO. FULL</b>	The camera has run out of frame numbers (current frame number is 999-9999). Insert a formatted memory card and select <b>RENEW</b> for <b> SAVE DATA SET-UP &gt; FRAME NO.</b> Take a picture to reset frame numbering to 100-0001, then select <b>CONTINUOUS</b> for <b>FRAME NO.</b>

Warning	Description
<b>READ ERROR</b>	<ul style="list-style-type: none"> <li>• <b>The file is corrupt or was not created with the camera:</b> The file cannot be viewed.</li> <li>• <b>The memory card contacts require cleaning:</b> Clean the contacts with a soft, dry cloth. If the message is repeated, format the card. If the message persists, replace the card.</li> <li>• <b>Camera malfunction:</b> Contact a Fujifilm dealer.</li> </ul>
<b>PROTECTED FRAME</b>	An attempt was made to delete or rotate to a protected picture. Remove protection and try again.
<b>CAN NOT CROP</b>	The picture is damaged or was not created with the camera.
<b>DPOF FILE ERROR</b>	Print orders can contain no more than 999 pictures. Copy any additional pictures you wish to print to another memory card and create a second print order.
<b>CAN NOT SET DPOF</b>	The picture cannot be printed using DPOF.
 <b>CAN NOT SET DPOF</b>	Movies cannot be printed using DPOF.
<b>CAN NOT ROTATE</b>	The selected picture cannot be rotated.
 <b>CAN NOT ROTATE</b>	Movies cannot be rotated.
 <b>CANNOT EXECUTE</b>	Red-eye removal cannot be applied to movies.
 <b>CANNOT EXECUTE</b>	Red-eye removal cannot be applied to pictures created with other devices.
<b>MISMATCH: 4K MODE AND EXTERNAL MONITOR CHANGE MOVIE MODE</b>	The movie mode selected with the camera is not compatible with the device to which the camera is connected via HDMI. Try selecting a different movie mode (📖 144).
!🔊 (yellow)	Turn the camera off and wait for it to cool. Mottling may increase in pictures taken when this warning is displayed.
!🔊 (red)	Turn the camera off and wait for it to cool. While this warning is displayed, movie recording may not be available, mottling may increase, and performance, including frame advance rate and display quality, may drop.




## Memory Card Capacity

The following table shows the recording time or number of pictures available at different image sizes. All figures are approximate; file size varies with the scene recorded, producing wide variations in the number of files that can be stored. The number of exposures or length remaining may not diminish at an even rate.

		Capacity	8 GB		16 GB	
			FINE	NORMAL	FINE	NORMAL
Photos	 3:2		490	740	1030	1540
	RAW (UNCOMPRESSED)		130		270	
	RAW (LOSSLESS COMPRESSED)		240		500	
Movies <sup>1,2</sup>	 2160		9 minutes		20 minutes	
	 1080		9 minutes		20 minutes	

1 Use a UHS speed class 3 card or better.

2 Assumes default bit rate.

 Although movie recording will continue without interruption when the file size reaches 4 GB, subsequent footage will be recorded to a separate file which must be viewed separately.






## Specifications

System										
Model	FUJIFILM X-T30									
Product Number	FF180006									
Effective pixels	Approx. 26.1 million									
Image sensor	23.5 mm × 15.6 mm (APS-C), X-Trans CMOS sensor with primary color filter									
Storage media	Fujifilm-recommended SD/SDHC/SDXC memory cards									
Memory card slot	SD memory card slot (UHS-I compliant)									
File system	Compliant with Design Rule for Camera File System (DCF), Exif 2.3, and Digital Print Order Format (DPOF)									
File format	<ul style="list-style-type: none"><li>• <b>Still pictures:</b> Exif 2.3 JPEG (compressed); RAW (original RAF format, uncompressed or compressed using a lossless algorithm; special purpose software required); RAW+JPEG available</li><li>• <b>Movies:</b> H.264 standard with stereo sound (MOV)</li><li>• <b>Audio (voice memos):</b> Stereo sound (WAV)</li></ul>									
Image size	<table><tbody><tr><td><b>L</b> 3:2 (6240 × 4160)</td><td><b>L</b> 16:9 (6240 × 3512)</td><td><b>L</b> 1:1 (4160 × 4160)</td></tr><tr><td><b>M</b> 3:2 (4416 × 2944)</td><td><b>M</b> 16:9 (4416 × 2488)</td><td><b>M</b> 1:1 (2944 × 2944)</td></tr><tr><td><b>S</b> 3:2 (3120 × 2080)</td><td><b>S</b> 16:9 (3120 × 1760)</td><td><b>S</b> 1:1 (2080 × 2080)</td></tr></tbody></table> <p>RAW (6240 × 4160)</p> <p><b>L</b> panorama: vertical (2160 × 9600)/horizontal (9600 × 1440)</p> <p><b>M</b> panorama: vertical (2160 × 6400)/horizontal (6400 × 1440)</p>	<b>L</b> 3:2 (6240 × 4160)	<b>L</b> 16:9 (6240 × 3512)	<b>L</b> 1:1 (4160 × 4160)	<b>M</b> 3:2 (4416 × 2944)	<b>M</b> 16:9 (4416 × 2488)	<b>M</b> 1:1 (2944 × 2944)	<b>S</b> 3:2 (3120 × 2080)	<b>S</b> 16:9 (3120 × 1760)	<b>S</b> 1:1 (2080 × 2080)
<b>L</b> 3:2 (6240 × 4160)	<b>L</b> 16:9 (6240 × 3512)	<b>L</b> 1:1 (4160 × 4160)								
<b>M</b> 3:2 (4416 × 2944)	<b>M</b> 16:9 (4416 × 2488)	<b>M</b> 1:1 (2944 × 2944)								
<b>S</b> 3:2 (3120 × 2080)	<b>S</b> 16:9 (3120 × 1760)	<b>S</b> 1:1 (2080 × 2080)								
Lens mount	FUJIFILM X mount									
Sensitivity	<ul style="list-style-type: none"><li>• <b>Still pictures:</b> Standard output sensitivity equivalent to ISO 160–12800 in increments of 1/3 EV; AUTO; extended output sensitivity equivalent to ISO 80, 100, 125, 25600, or 51200</li><li>• <b>Movies:</b> Standard output sensitivity equivalent to ISO 160–12800 in increments of 1/3 EV; AUTO; extended output sensitivity equivalent to ISO 25600</li></ul>									
Metering	256-segment through-the-lens (TTL) metering; MULTI, SPOT, AVERAGE, CENTER WEIGHTED									
Exposure control	Programmed AE (with program shift); shutter-priority AE; aperture-priority AE; manual exposure									
Exposure compensation	<ul style="list-style-type: none"><li>• <b>Still pictures:</b> –5 EV–+5 EV in increments of 1/3 EV</li><li>• <b>Movies:</b> –2 EV–+2 EV in increments of 1/3 EV</li></ul>									

## System

## Shutter speed

- **MECHANICAL SHUTTER**
  - **Mode P:** 4 s to  $\frac{1}{4000}$  s
  - **Mode A:** 30 s to  $\frac{1}{4000}$  s
  - **Modes S and M:** 15 min. to  $\frac{1}{4000}$  s
  - **Bulb:** Max. 60 min.
- **ELECTRONIC SHUTTER**
  - **Mode P:** 4 s to  $\frac{1}{32000}$  s
  - **Mode A:** 30 s to  $\frac{1}{32000}$  s
  - **Modes S and M:** 15 min. to  $\frac{1}{32000}$  s
  - **Bulb:** Fixed at 1 s
- **MECHANICAL + ELECTRONIC**
  - **Mode P:** 4 s to  $\frac{1}{32000}$  s
  - **Mode A:** 30 s to  $\frac{1}{32000}$  s
  - **Modes S and M:** 15 min. to  $\frac{1}{32000}$  s
  - **Bulb:** Max. 60 min.

Continuous		Frame rate
CH	30fps(1.25X CROP)  <sup>1</sup>	30 <sup>2</sup>
	20fps(1.25X CROP)  <sup>1</sup>	20
	10fps(1.25X CROP)  <sup>1</sup>	10
	20fps  <sup>1</sup>	20
	10fps  <sup>1</sup>	10
	8.0fps	8.0
CL	5.0fps	5.0
	4.0fps	4.0
	3.0fps	3.0

<sup>1</sup> Available with electronic shutter only.




<sup>2</sup> During burst photography, the frame advance may drop below the value shown if:

- AF-C is selected for focus mode,
- **ON** is selected for **FLICKER REDUCTION**, or
- the burst exceeds a set length.



The frame rate and number of frames per burst varies with shooting conditions and type of memory card used.

## System

<b>Focus</b>	<ul style="list-style-type: none"><li>• <b>Mode:</b> Single or continuous AF; manual focus with focus ring</li><li>• <b>Autofocus system:</b> Intelligent hybrid AF (TTL contrast-detect/phase-detection AF) with AF-assist illuminator</li><li>• <b>Focus-area selection:</b> SINGLE POINT, ZONE, WIDE/TRACKING, ALL</li></ul>
<b>White balance</b>	Auto, Custom 1, Custom 2, Custom 3, color temperature selection, direct sunlight, shade, daylight fluorescent, warm white fluorescent, cool white fluorescent, incandescent, underwater
<b>Self-timer</b>	Off, 2 sec., 10 sec.
<b>Flash</b>	<ul style="list-style-type: none"><li>• <b>Type:</b> Manual pop-up flash unit</li><li>• <b>Guide number:</b> Approx. 7/22 (ISO 200, m/ft.)</li></ul>
<b>Flash mode</b>	<ul style="list-style-type: none"><li>• <b>MODE:</b> TTL MODE (FLASH AUTO, STANDARD, SLOW SYNC.), MANUAL, COMMANDER, OFF</li><li>• <b>SYNC. MODE:</b> 1ST CURTAIN, 2ND CURTAIN, AUTO FP (high-speed sync)</li><li>• <b>RED EYE REMOVAL:</b>  FLASH+REMOVAL,  FLASH,  REMOVAL, OFF</li></ul>
<b>Hot shoe</b>	Accessory shoe with TTL contacts; supports sync speeds as fast as $\frac{1}{180}$ s
<b>Sync contact</b>	X contact; supports sync speeds as fast as $\frac{1}{180}$ s
<b>Sync terminal</b>	—
<b>Viewfinder</b>	0.39-in., 2360k-dot OLED viewfinder; magnification 0.62 $\times$ with 50 mm lens (35 mm format equivalent) at infinity and diopter set to $-1.0$ m $^{-1}$ ; diagonal angle of view approximately 31 $^{\circ}$ (horizontal angle of view approximately 26 $^{\circ}$ ) <ul style="list-style-type: none"><li>• <b>Diopter adjustment:</b> <math>-4</math> to <math>+2</math> m<math>^{-1}</math></li><li>• <b>Eyepoint:</b> Approximately 17.5 mm</li></ul>
<b>LCD monitor</b>	3.0-in/7.6 cm, 1040k-dot color touchscreen LCD monitor, tilting

## System

- Movies**  
(with stereo sound)
- **Movie size:** **4K:** 16:9, **DCl:** 17:9, **FHD:** 16:9, **FHD:** 17:9
  - **Frame rate:** 59.94P\*, 50P\*, 29.97P, 25P, 24P, 23.98P  
\* **FHD:** only
  - **Bit rate:** 200Mbps, 100Mbps, 50Mbps
  - **Recording/output format**  
**H.264:** SD card, 4:2:0, 8-bit/HDMI output, 4:2:2, 10-bit
- 
- High-speed movies**
- **Movie size:** FULL HD 16:9
  - **Frame advance rate:** 120P, 100P

## Input/output terminals

- Microphone connector** ø2.5 mm mini-stereo jack
- 
- Headphone jack socket** Requires a USB Type-C to ø3.5 mm stereo mini-pin jack adapter cable compatible with analog audio I/O (USB Type-C Audio Adapter Accessory Mode)
- 
- Remote release connector** ø2.5 mm 3-pole mini jack
- 
- Digital input/output** USB connector (Type-C) USB3.1Gen1
- 
- HDMI output** HDMI Micro connector (type D)

**Power supply/other****Power supply** NP-W126S rechargeable battery (supplied with camera)

- Battery life**
- **Battery type:** NP-W126S
  - **Lens:** XF35mmF1.4 R
  - **Flash:** Disabled
  - **Shooting mode:** Mode P

Number of shots		
PERFORMANCE	LCD	EVF
<b>BOOST</b>	Approx. 310	Approx. 260
<b>NORMAL</b>	Approx. 390	Approx. 370

Total length of footage that can be recorded on a single charge		
Mode	Actual battery life of movie capture	Continuance battery life of movie capture
<b>4K</b> <sup>1</sup>	Approx. 40 minutes	Approx. 55 minutes
<b>FHD</b> <sup>2</sup>	Approx. 45 minutes	Approx. 75 minutes
<b>High-speed movies</b> <sup>3</sup>	Approx. 35 minutes	—

1 At a frame rate of 29.97 fps.

2 At a frame rate of 59.94 fps.

3 At a frame rate of 120 fps.

CIPA standard. Measured using battery supplied with camera and SD memory card.

**Note:** Battery endurance varies with battery charge level and the figures given above are not guaranteed. Battery endurance will decline at low temperatures.

**Camera size** 118.4 mm × 82.8 mm × 46.8 mm (31.9 mm excluding projections, (W × H × D) measured at thinnest part)/4.66 in. × 3.26 in. × 1.84 in. (1.26 in.)

**Camera weight** Approx. 338 g/11.9 oz., excluding battery, accessories, and memory card

**Shooting weight** Approx. 388 g/13.6 oz., including battery and memory card

- Operating conditions**
- **Temperature:** 0 °C to +40 °C/+32 °F to +104 °F
  - **Humidity:** 10% to 80% (no condensation)

**Wireless transmitter****Wireless LAN**

<b>Standards</b>	IEEE 802.11b/g/n (standard wireless protocol)
<b>Operating frequency (center frequency)</b>	<ul style="list-style-type: none"> <li>• <b>Japan, China:</b> 2,412 MHz–2,472 MHz (13 channels)</li> <li>• <b>Other countries:</b> 2,412 MHz–2,462 MHz (11 channels)</li> </ul>
<b>Access protocols</b>	Infrastructure

**Bluetooth®**

<b>Standards</b>	Bluetooth version 4.2 (Bluetooth Low Energy)
<b>Operating frequency (center frequency)</b>	2,402 MHz–2,480 MHz


**P-W126S rechargeable battery**

<b>Nominal voltage</b>	7.2 V
<b>Nominal capacity</b>	1260 mAh
<b>Operating temperature</b>	0 °C to +40 °C/+32 °F to +104 °F
<b>Dimensions (W × H × D)</b>	36.4 mm × 47.1 mm × 15.7 mm/1.4 in. × 1.9 in. × 0.6 in.
<b>Weight</b>	Approx. 47 g/1.7 oz.

**AC-116 AC power adapter**

<b>Rated input</b>	100 V–240 V AC, 50/60 Hz
<b>Input capacity</b>	10.5 VA (100 V), 11.9 VA (240 V)
<b>Rated output</b>	5.0 V DC, 1000 mA
<b>Operating temperature</b>	0 °C to +40 °C/+32 °F to +104 °F
<b>Weight</b>	Approx. 26 g ± 15%/0.9 oz. ± 15% (AC power adapter only)



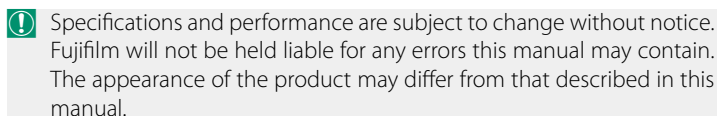







# FUJIFILM

---

**FUJIFILM Corporation**

7-3, AKASAKA 9-CHOME, MINATO-KU, TOKYO 107-0052, JAPAN

[http://www.fujifilm.com/products/digital\\_cameras/index.html](http://www.fujifilm.com/products/digital_cameras/index.html)

