



Blu-ray Disc Remote Control / Télécommande Blu-ray Disc / Mando a distancia de Blu-ray Disc

Instruction Manual / Mode d'emploi / Manual de instrucciones

CECH-ZRC1U

4-284-616-11(1)

WARNING

- Before using this product, carefully read this manual and retain it for future reference. Read also the instructions for the PlayStation 3 system.
- Do not handle damaged or leaking batteries.

Battery use

- Never throw batteries into a fire.
- If you come into contact with material from a leaking battery, take the following actions:
 - If the material gets into the eyes, do not rub. Immediately flush the eyes with clean water and seek medical attention.
 - If the material comes into contact with the skin or clothes, immediately rinse the affected area with clean water. Consult your physician if inflammation or soreness develops.
- Keep the product out of the reach of small children. Small children may swallow the batteries or small parts, which may injure or cause an accident.
- Do not use batteries other than those specified, and always replace with the same type of battery. Do not mix old and new batteries.
- Insert batteries with the plus and minus ends in the correct direction.
- Remove batteries when they have reached the end of their life, or if the BD remote control is to be stored for an extended period of time.
- This product is shipped with non-rechargeable batteries. At the end of the battery life please discard in accordance with local environmental laws.

Use and handling

- Do not expose the BD remote control to high temperatures, high humidity or direct sunlight.
- Do not allow liquid or small particles to get into the product.
- Do not put heavy objects on the product.
- Never disassemble or modify the product.
- Do not throw or drop the product, or otherwise expose it to strong physical impact.
- Do not place any rubber or vinyl materials on the product exterior for an extended period of time.
- When cleaning the product, use a soft, dry cloth. Do not use solvents or other cleaning agents.

FCC and IC NOTICE

This transmitter complies with FCC and IC radiation exposure limits set forth for uncontrolled environments and meets the FCC radio frequency (RF) Exposure Guidelines in Supplement C to RFET65 and RSS-102 of the IC radio frequency (RF) Exposure rules. This equipment has very low levels of RF energy that are deemed to comply with specific absorption rate (SAR).

This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

You are cautioned that any changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This Class B digital apparatus complies with Canadian ICES-003.

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved by the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be as chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communications.

This device complies with part 15 of the FCC Rules, the Canadian ICES-003 and RSS-Gen of IC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Setting the remote code for a TV that is not in the list of manufacturers

For TVs that are not on the list, you can manually enter the remote code so that you can operate the TV using the BD remote control.

- 1 Press the **CLEAR** button while pressing and holding down the **I/O TV** button. The TV button will flash.
- 2 Press the **CH +** button and the **I/O TV** button on the BD remote control one after the other. Repeat this until you can operate the TV. Pressing the **CH +** button will increase the number, and the **I/O TV** button will decrease the number.
- 3 Press the **ENTER** button. After the TV remote code is set, the TV button will light up. Check that you can operate the TV using the remote control.

If the number was not set

During step 3, if the DEVICES button flashes five times in quick succession or if you cannot operate the TV or the AV amplifier after entering the code, try again (starting from step 1) using a different code.

Restoring the settings to their default values

You can clear all current settings and restore the settings to their default values.

- 1 Press and hold the following buttons in the order shown: **MUTE** button → ***CLEAR** button → **ENTER** button

All of the DEVICES buttons will light and the settings will be restored to their default values.

Specifications

Power source	Size AAA batteries (2)
External dimensions	Approx. 50.0 x 230.0 x 19.5 mm (w x h x d)
Operating temperature	5°C - 35°C (41°F - 95°F)

Dimensions and specifications are subject to change without notice.

LIMITED WARRANTY

Sony Computer Entertainment America LLC (SCEA) warrants to the original purchaser that this product shall be free from defects in material and workmanship for a period of one (1) year from the date of purchase. This warranty does not apply to any consumables (such as batteries). For defects in material or workmanship within the warranty period, upon showing a proof of purchase, SCEA agrees for a period of one (1) year to either repair or replace this product with a new or factory reworked product at SCEA's option. For the purpose of this Limited Warranty, "factory reworked" means a product that has been returned to its original specifications. Visit <http://www.playstation.com/support> or call 1-800-345-7669 to receive a return authorization and shipping instructions. This warranty shall not be applicable and shall be void if the defect in the SCEA product has arisen through abuse, unreasonable use, mistreatment, neglect, or means other than from a defect in materials or workmanship.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES AND NO OTHER REPRESENTATIONS OR CLAIMS OF ANY NATURE SHALL BE BINDING ON OR ORIGINATE SCEA. ANY IMPLIED WARRANTIES APPLICABLE TO THIS PRODUCT, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE ONE (1) YEAR PERIOD DESCRIBED ABOVE. IN NO EVENT WILL SCEA BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM POSSESSION, USE OR MALFUNCTION OF THE SCEA PRODUCT. SOME STATES OR PROVINCES DO NOT ALLOW LIMITATION ON HOW LONG AN IMPLIED WARRANTY LASTS AND SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATIONS OF CONSEQUENTIAL OR INCIDENTAL DAMAGES, SO THE ABOVE LIMITATIONS OR EXCLUSION MAY NOT APPLY TO YOU.

 
This warranty gives you specific legal rights, and you may also have other rights which vary from state to state or province to province.

This warranty is valid only in the United States and Canada.

What you can do with the BD remote control

• The BD remote control uses Bluetooth® wireless technology to operate your PS3™ system and to control the playback of common types of disc media, including Blu-ray Disc™ (BD) media.

• Infrared (IR) technology enables you to operate peripheral devices such as your television and AV amplifier*. For IR operation you must point the IR transmitter of the BD remote control directly at the device. Check that there are no obstructions between the BD remote control and the device.

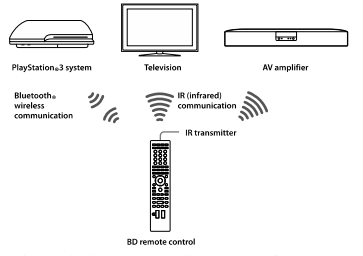

*Only the surround sound system (CECH-ZVS1U) (sold separately) and AV amplifiers made by Sony Corporation can be used.

Preparing for use

Remove the battery cover on the rear of the BD remote control and insert the supplied batteries. Set the batteries in the correct position.

Checking the PS3™ system

Operating the PS3™ system version

To use the BD remote control, the PS3™ system software must be version 3.60 or later. You can check the system software version by selecting **(Settings)** → **(System Settings)** → **(System Information)** on the XMB™ (XrossMediaBar) menu of the PS3™ system.

Registering (pairing) the BD remote control with a PS3™ system

 
This operation is performed only once, when you are using the BD remote control for the first time.

- 1 Turn on the PS3™ system.
- 2 From the PS3™ system's XMB menu, select **(Settings)** → **(Accessory Settings)** → **(Register BD Remote Control)**, and then press the **C** button.
- 3 Follow the on-screen instructions to register the BD remote control.

Hints

- For the latest usage instructions, refer to the user's guide for the PS3™ system (<http://manual.playstation.net/documen1>).
- Only one BD remote control can be registered with a PS3™ system at a time.
- When you pair the BD remote control with another PS3™ system, registration with the original PS3™ system is cleared. To use the BD remote control with the original PS3™ system, you will have to pair the devices again.

How to use the BD remote control

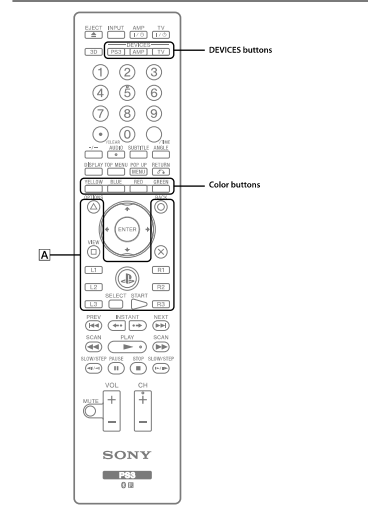

DEVICES buttons	
PS3 system button	Switch the BD remote control to operate the PS3™ system.
AMP button	Switch the BD remote control to operate an AV amplifier.
TV button	Switch the BD remote control to operate a TV.

Buttons for operating a PS3™ system, a TV or an AV amplifier

The meaning of the icons shown in the table below is as follows.

INPUT button*	[] [] Switch between input options.
I/O AMP button	[] Turn the AV amplifier on and off.
I/O TV button	[] Turn the TV on and off.
3D button	[] Switch between 2D and 3D images on the TV. Operation will differ depending on the TV.
0-9 buttons	[] Enter numbers.
*CLEAR button	[] Clear numbers that have been entered. [] Enter branch codes.
TIME button	[] View the elapsed time or remaining time of a title or chapter. [] When operating the TV, use this button to enter 3-digit channel codes.
-./- button	[] Enter channels of 2 digits or greater.
AUDIO button	Change audio.
SUBTITLE button	Switch subtitle languages.
ANGLE button	Change viewing angles on BDs with multiple angles recorded for the same scene. Switch to view in wide mode.
DISPLAY button	[] [] Display the status of and information about the content being played. [] Change the display window settings.
TOP MENU button	Display the menu.
POP UP/MENU button	[] [] Display the pop-up menu or the menu.
RETURN button	Go back to the previous display.
Color buttons	[] Perform functions assigned to each button. (Assigned functions vary depending on the content being played.)
Directional buttons	Select item.

Préparatifs pour l'utilisation

Retirez le couvercle à l'arrière de la télécommande BD et insérez les piles fournies. En vous assurez de bien respecter les polarités.

Commande du système PS3™

Vérifiez la version du logiciel de votre système PS3™

Pour utiliser la télécommande BD, votre système PS3™ doit utiliser la version logicielle 3.60 (ou ultérieure). Vous pouvez vérifier la version du logiciel de votre système en sélectionnant **(Paramètres)** → **(Paramètres système)** → **(Informations système)** dans le menu XMB™ (XrossMediaBar) du système PS3™.

Enregistrement (jumelage) de la télécommande BD pour le système PS3™

 
Cette opération n'est effectuée qu'une seule fois, lors de la première utilisation de la télécommande BD.

- 1 Mettez le système PS3™ sous tension.
- 2 Dans le menu XMB™ du système PS3™, sélectionnez **(Paramètres)** → **(Paramètres accessoires)** → **(Enregistrer la télécommande BD)**, puis appuyez sur la touche **C**.
- 3 Suivez les instructions qui s'affichent pour enregistrer la télécommande BD.

Consils

- Pour les dernières instructions en date, veuillez consulter le mode d'emploi du système PS3™ (www.playstation.com/manual).
- Il n'est possible d'enregistrer qu'une seule télécommande BD avec le système PS3™.
- Si vous enregistrez la télécommande BD avec un autre système PS3™, vous devez la réenregistrer si vous désirez utiliser la télécommande à nouveau avec le premier système PS3™.

Utilisation de la télécommande BD

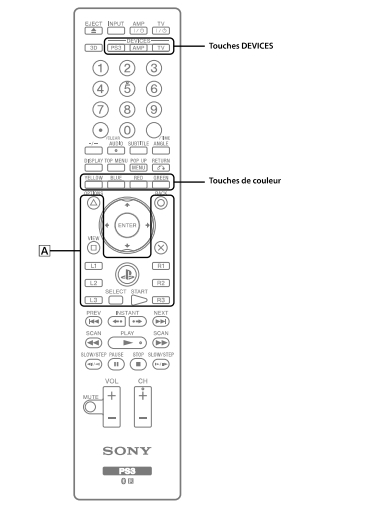

Touches DEVICES

Bascule d'un périphérique sur un autre.

Toucher du système PS3	Permet d'utiliser la télécommande BD avec le système PS3™.
Toucher AMP	Permet d'utiliser la télécommande BD avec l'amplificateur AV.
Toucher TV	Permet d'utiliser la télécommande BD avec le téléviseur.

ENTER button	Enter. Perform the same operation as pressing the C button on the TV or the PS3™ wireless controller (sold separately).
MUTE button*	[] Turn off the sound.
VOL + / VOL - button*	[] [] Adjust the sound level.
CH + / CH - button	[] [] Change channels. [] When operating the AV amplifier, selects the sound field.

When operating the PS3™ system, you do not need to press a DEVICES button to control the TV or AV amplifier.

Buttons for controlling the PS3™ system

These buttons cannot be used for operating a TV or an AV amplifier.

EJECT button	Eject the disc.
A button operations (refer to diagram A)	The buttons perform the same operations as those of a wireless controller.
▶ PLAY button	Start playback.
 PAUSE button	Stop playback temporarily.
■ STOP button	Stop playback.
◀ PREV. button	Go to the previous or next chapter.
▶ NEXT buttons	Go to the previous or next chapter.
◀ INSTANT. button	Go back or go forward 15 seconds.
▶ INSTANT buttons	The number of seconds may vary depending on the application.
◀ SCAN. button	Fast forward and fast reverse playback.
▶ SCAN buttons	Playback speed changes each time you press the button.
◀ SLOW/STEP button	Play content one frame at a time.
▶ SLOW/STEP buttons	If you press and hold down the button, content plays in slow motion.

Hints

- Depending on the product being operated, the BD remote control may not control some features. Some buttons may not function, or some buttons may function differently than indicated.
- Some content may have preset playback conditions set by the content developer. In this case, some remote control button operations may not be available.
- To turn on the PS3™ system using the BD remote control, press the PS3 system button and then press any button used to operate the PS3™ system.

If the battery charge is low

When the battery charge is low, the remote control may not operate properly or the distance within which you can operate the remote control may be reduced. In this case, replace both batteries with new ones.

Operating a TV or AV amplifier

You can use the BD remote control to operate a TV or an AV amplifier. Set the remote code to match the product in use. For TV brands other than Sony, you must first set the remote code (refer to the lists below). At the time of purchase, the BD remote control is set for use with Sony TVs and AV amplifiers.

- 1 Press the **CLEAR** button while pressing and holding down a DEVICES button. Press either the TV button for a TV or the AMP button for an AV amplifier.
- 2 Enter the 3 digit remote code while the DEVICES button is flashing. Try each code in the order and select a code that allows you to operate the TV or the AV amplifier with the BD remote control.
- 3 Press the **ENTER** button. After the TV or AV amplifier remote code is set, the DEVICES button will light. Check that you can operate the TV or the amplifier using the remote control.

Touches pour commander un système PS3™, un téléviseur ou un amplificateur AV

La signification des icônes présentées dans le tableau ci-dessous est la suivante.

[] []	Permet de commander le système PS3™.
[]	Permet de commander l'amplificateur AV.
[]	Permet de commander le téléviseur.
Toucher INPUT *	[] [] Bascule entre les différentes sources d'entrée.
I/O touche AMP	[] Permet d'allumer et d'éteindre l'amplificateur AV.
I/O touche TV	[] Permet d'allumer et d'éteindre le téléviseur.
Toucher 3D	[] Bascule entre les images 2D et 3D du téléviseur. Le fonctionnement peut être différent selon le téléviseur.
Touches 0 à 9	[] Permet de saisir des numéros.
*CLEAR touche	[] Permet d'effacer les numéros saisis. [] Permet de saisir les codes d'agence.
Toucher TIME	[] Affiche le temps écoulé ou le temps restant d'un titre ou d'un chapitre. [] Lorsque vous commandez le téléviseur, cette touche permet de saisir XXX.
Toucher -./-	[] [] Permet de saisir les numéros de chaîne à 2 chiffres ou plus.
Toucher AUDIO	Modifie l'audio.
Toucher SUBTITLE	Change la langue des sous-titres.
Toucher ANGLE	Permet de changer l'angle de prise de vue sur les disques BD qui comportent plusieurs angles de prise de vue sur une même scène. Permet de basculer l'affichage en mode Grand angle.
Toucher DISPLAY	[] [] Affiche les informations d'état ou autres informations relatives au contenu en cours de lecture. [] Change les paramètres d'affichage de la fenêtre.
Toucher TOP MENU	Affiche le menu principal.
Toucher POP UP/MENU	Affiche le menu contextuel ou le menu principal.
Toucher RETURN	Permet de revenir à un affichage précédent.
Touches de couleur	[] [] Exécute les fonctions attribuées aux touches respectives. (Les fonctions attribuées varient suivant le contenu en cours de lecture.)
Touches directionnelles	Sélection d'un élément.
Toucher ENTER	Entrée. Exécute la même commande que celle de la touche C de la manette sans fil (ou du SHOCK3™ (vendu séparément)).
Toucher MUTE *	[] Permet d'éteindre le son.
Touches VOL + / VOL - *	[] [] Permet de régler le volume.
Toucher CH + / CH -	[] [] Permet de changer de chaîne. [] Lorsque vous commandez l'amplificateur AV, sélectionnez le champ sonore.

Lorsque vous commandez le système PS3™, vous n'avez pas besoin d'appuyer sur une touche DEVICES pour commander le téléviseur ou l'amplificateur AV.

Touches de commande du système PS3™

Ces touches ne peuvent pas être utilisées pour commander un téléviseur ou un amplificateur AV.

[] [] []	Éjecte le disque.
Commandes de touche A (voir diagramme A)	Les touches exécutent les mêmes commandes que celles d'une manette sans fil.
▶ Toucher PLAY	Pour commencer la lecture.
 Toucher PAUSE	Pour arrêter temporairement la lecture.
■ Toucher STOP	Pour arrêter la lecture.
Touches ◀ PREV. button	Permet de passer au chapitre précédent ou suivant.
▶ NEXT	Permet de passer au chapitre précédent ou suivant.
Touches ◀ INSTANT. button	Permet de reculer ou d'avancer de 15 secondes.
▶ INSTANT buttons	Le nombre de secondes peut varier en fonction de l'application.
Touches ◀ SCAN. button	Lecture rapide vers l'avant et l'arrière.
▶ SCAN buttons	La vitesse de lecture change à chaque pression sur la touche.
Touches ◀ SLOW/STEP button	Permet de lire le contenu image par image.
▶ SLOW/STEP buttons	Si vous maintenez la touche enfoncée, le contenu se lit au ralenti.

Consils

- Selon l'appareil commandé, il se peut que certaines fonctions ne puissent pas être exécutées par la télécommande BD. Il se peut que certaines touches ne fonctionnent pas ou qu'elles fonctionnent différemment.
- Le contenu peut parfois avoir des conditions de lecture prédéfinies avant être spécifiées par son développeur. Le cas échéant, il se peut que certaines commandes accessibles par les touches de la télécommande ne soient pas disponibles.
- Pour allumer le système PS3™ à l'aide de la télécommande BD, appuyez sur la touche PS3™ puis appuyez sur l'icône qui permet de commander le système PS3™.

Si la charge des piles est faible

Lorsque la charge des piles est faible, il se peut que la télécommande ne fonctionne pas correctement ou que sa portée diminue. Le cas échéant, remplacez les deux piles par des neuves.

* Seul le système de son surround (CECH-ZVS1U) (vendu séparément) et les amplificateurs AV de Sony Corporation peuvent être utilisés.

