


Locks and Security



Keep vehicle doors and luggage compartment locked and keep keys and remote transmitters out of a child's reach. Unsupervised children could lock themselves in the trunk and risk injury. Children should be taught not to play in vehicles.

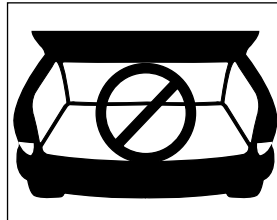

art=conmc313_a



On hot days, the temperature in the trunk or vehicle interior can rise very quickly. Exposure of people or animals to these high temperatures for even a short time can cause death or serious heat-related injuries, including brain damage. Small children are particularly at risk.


REMOTE ENTRY SYSTEM (IF EQUIPPED)

CIMS #1379636
com_rem-entry.eno
itdseq=105

This device complies with part 15 of the FCC rules and with RSS-210 of Industry Canada. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

The remote entry system allows you to lock or unlock all vehicle doors without a key.

The remote entry features operate with the ignition in any position, except in the 3 (ON) , with the transmission not in either P (Park) or N (Neutral).

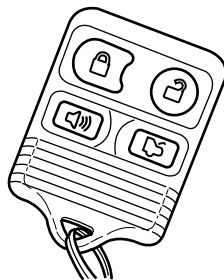

art=expcf318_a

If there are problems with the remote entry system, make sure to take **ALL remote entry transmitters** with you to the authorized dealer in order to aid in troubleshooting the problem.

DIFF-MARKED Review Copy —

 

(OLD=2008 Crown Victoria fus Owners Guide (post-2002-fmt) SME (#4545) (Sep-29-2006 15:15:31))

(NEW=2008 Crown Victoria fus Owners Guide (post-2002-fmt) CHAMP REVIEW (#5656) (Oct-30-2006 18:31:42))

2008 Crown Victoria (cro), Owners Guide (post-2002-fmt) (own2002), Market: USA (fus)




Locks and Security

Unlocking the doors


1. Press  and release to unlock the driver's door. **Note:** The interior lamps will illuminate.
2. Press  and release again within five seconds to unlock all the doors.

CIMS #1379639
com_unlock.fly-eno
itdseq=106


Locking the doors

Press  once to lock all the doors. The doors will lock upon first press. Press  again within three seconds to receive confirmation that the vehicle was successfully locked. **Note:** If all vehicle doors, the hood, and the trunk are closed upon the second press of the , the horn will chirp once and the parklamps/taillamps will flash once to confirm the successful locking.

CIMS #1379638
com_lock.fly-eno
itdseq=107

 
 
Upon the second press of the , if any door, the hood, or the trunk is not securely closed the horn will chirp twice to warn that successful locking was not complete. The park/taillamps will NOT flash if any door is ajar.

Car finder

Press  twice within 3 seconds. The horn will chirp and the turn lamps will flash. It is recommended that this method be used to locate your vehicle, rather than using the panic alarm.

CIMS #1601186
com_car-finder
itdseq=108

Sounding a panic alarm

Press  on the remote transmitter to activate the alarm. **Note:** The panic alarm only works with the ignition in the 1 (OFF/LOCK) position. Press  a second time to deactivate the alarm. You may also deactivate the alarm by turning the ignition to the 3 (ON) position.

CIMS #1379640
com_panic.fly-eno
itdseq=109

Opening the trunk

Press  once to open the trunk.

- Ensure that the trunk is closed and latched before driving your vehicle. Failure to properly latch the trunk may cause objects to fall out or block the driver's rear view.

This feature will not work with a vehicle speed greater than 3 mph (5 km/h) if the ignition is in the 2 (ACCESSORY) or 3 (ON) position.

CIMS #1379641
com_open-trunk.fly-eno
itdseq=110

Replacing the battery

The remote entry transmitter uses one coin type three-volt lithium battery CR2032 or equivalent.

CIMS #998940
com_battery-remote.fly
itdseq=111

DIFF-MARKED Review Copy —

(OLD=2008 Crown Victoria fus Owners Guide (post-2002-fmt) SME (#4545) (Sep-29-2006 15:15:31))


(NEW=2008 Crown Victoria fus Owners Guide (post-2002-fmt) CHAMP REVIEW (#5656) (Oct-30-2006 18:31:42))

2008 Crown Victoria (cro), Owners Guide (post-2002-fmt) (own2002), Market: USA (fus)

Locks and Security


To replace the battery:

1. Twist a thin coin between the two halves of the remote entry transmitter near the key ring. **DO NOT TAKE THE RUBBER COVER AND CIRCUIT BOARD OFF THE FRONT HOUSING OF THE REMOTE ENTRY TRANSMITTER.**

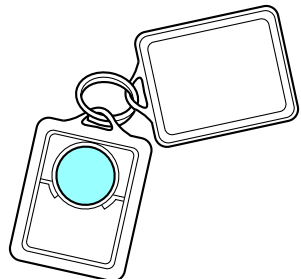

art=dewcf305_b

2. Do not wipe off any grease on the battery terminals on the back surface of the circuit board.

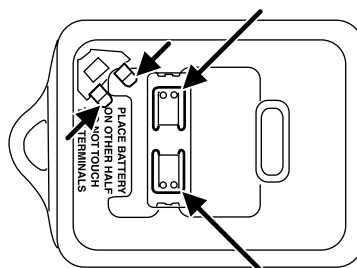

art=f23mc007_a

3. Remove the old battery. **Note:** Please refer to local regulations when disposing of transmitter batteries.

4. Insert the new battery. Refer to the diagram inside the remote entry transmitter for the correct orientation of the battery. Press the battery down to ensure that the battery is fully seated in the battery housing cavity.

5. Snap the two halves back together.

Note: Replacement of the battery will **not** cause the remote transmitter to become deprogrammed from your vehicle. The remote transmitter should operate normally after battery replacement.

Replacing lost transmitters

Take all your vehicle's transmitters to your authorized dealer if service is required.

If a remote transmitter has been lost and you would like to remove it from the vehicle's memory, or you would like to purchase additional remote transmitters and have them programmed to your vehicle:

- Take **all** your vehicle's transmitters to your authorized dealer for programming, or

CIMS #1379642
com_lost-remote.fly-eno
ltdseq=112


DIFF-MARKED Review Copy —
(OLD=2008 Crown Victoria fus Owners Guide (post-2002-fmt) SME (#4545) (Sep-29-2006 15:15:31))
(NEW=2008 Crown Victoria fus Owners Guide (post-2002-fmt) CHAMP REVIEW (#5656) (Oct-30-2006 18:31:42))
2008 Crown Victoria (cro), Owners Guide (post-2002-fmt) (own2002), Market: USA (fus)

Locks and Security

- Perform the following programming procedure yourself:

Note: Ensure the brake pedal is not depressed during this sequence.

Place the key in the ignition and cycle from 1 (OFF/LOCK) to 3 (ON) eight times in rapid succession within 10 seconds. After doors lock/unlock, press any control on all transmitters (up to four). After pressing the control on each remote transmitter, the door will lock and unlock. If programming multiple remote transmitters, you must press the control buttons on each remote transmitter within 7 seconds of each other to remain in programming mode. When completed, turn the ignition to 1 (OFF/LOCK).

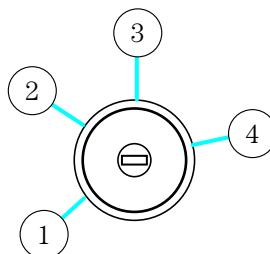

art=vilto303_a

All transmitters **must** be programmed at the same time.

- When completed, turn the ignition to the 1 (OFF/LOCK) position and wait at least 20 seconds in order to use the recently programmed transmitter(s).
- **All** transmitters **must** be programmed during the same programming cycle. A transmitter that is not programmed within the same programming cycle will be erased and will no longer operate your vehicle's locks. If this occurs, you will have to reprogram all the transmitters again, as you cannot just "add" a transmitter.

Illuminated entry

The interior lamps illuminate when the remote entry system is used to unlock the door(s) or sound the personal alarm.

The illuminated entry system will turn off the interior lights if:

- the ignition switch is turned to the 2 (ACCESSORY), 3 (ON) or 4 (START) positions, or
- the remote transmitter lock control is pressed, or
- after 25 seconds of illumination.

The dome lamp control must **not** be set to the **off** position for the illuminated entry system to operate.

The inside lights will not turn off if:

- they have been turned on with the dimmer control, or
- any door is open.

CIMS #1379643
com illuminate.fly-eno
itdseq=113

DIFF-MARKED Review Copy —
 (OLD=2008 Crown Victoria fus Owners Guide (post-2002-fmt) SME (#4545) (Sep-29-2006 15:15:31))
 (NEW=2008 Crown Victoria fus Owners Guide (post-2002-fmt) CHAMP REVIEW (#5656) (Oct-30-2006 18:31:42))
 2008 Crown Victoria (cro), Owners Guide (post-2002-fmt) (own2002), Market: USA (fus)

Locks and Security

The battery saver will shut off the interior lamps 30 minutes after the last door is closed, or after 10 minutes if the last door is left open.

Radio type approval numbers for remote entry receiver


If the type approval of your remote entry system is inspected in one of the countries listed in the following table, refer to the corresponding approval number:

Remote entry receiver certification numbers	
Gabon	01070305/ARTEL/GABTEL
Jordan	CAZ/ENG/CA/04/11/1
Zambia	TRC/LPD/2004/28

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

KEYLESS ENTRY SYSTEM (IF EQUIPPED)

 With the keyless entry keypad, you can:



- lock or unlock the vehicle doors without using the key.
- open the trunk.

See also *Remote entry system* in this chapter for more information.

Your vehicle has a factory-set 5-digit code that operates the keyless entry system. You can also program your own 5-digit personal entry code.

The factory-set code is located:

- On the owner's wallet card in the glove compartment, or
- At your dealer.

When using the keyless entry keypad, press the middle of each button in order to ensure a good activation.

Programming a personal entry code

You can program up to three personal codes to unlock your vehicle. These codes do not replace the permanent code that the authorized dealer gave you.

To create your own personal entry code:

1. Enter the factory set code. **Note:** The keypad will illuminate when pressed.

CIMS #1567936
com_rem-cert-numbers.eno
itdseq=114

CIMS #197220
com_keyless_enter.eno
itdseq=115

art=mntcf300_a

CIMS #197231
com_keyless_program.eno
itdseq=116

DIFF-MARKED Review Copy —
 (OLD=2008 Crown Victoria fus Owners Guide (post-2002-fmt) SME (#4545) (Sep-29-2006 15:15:31))
 (NEW=2008 Crown Victoria fus Owners Guide (post-2002-fmt) CHAMP REVIEW (#5656) (Oct-30-2006 18:31:42))
 2008 Crown Victoria (cro), Owners Guide (post-2002-fmt) (own2002), Market: USA (fus)

Locks and Security

2. Within five seconds press 1 • 2 on the keypad to enter the programming mode.
3. Enter your personal 5-digit code. Each number must be entered within five seconds of each other.
4. Press 1 • 2 to store the first personal code.
5. The doors will lock then unlock to confirm programming of the new code.

To store a second personal code:

1. Enter the factory set code.
2. Within five seconds press 1 • 2 on the keypad to enter the programming mode.
3. Enter a second personal 5-digit code. Each number must be entered within five seconds of each other.
4. Press 3 • 4 to store the second personal code.
5. The doors will again lock then unlock to confirm programming of the new code.

To store a third personal code:

1. Enter the factory set code.
2. Within five seconds press 1 • 2 on the keypad to enter the programming mode.
3. Enter a third personal 5-digit code. Each number must be entered within five seconds of each other.
4. Press 5 • 6 (or 7 • 8, or 9 • 0, or wait five seconds) to store the third personal code.
5. The doors will again lock then unlock to confirm programming of the new code.

Tips:

- Do not set a code that uses five of the same number.
- Do not use five numbers in sequential order.
- The factory set code will work even if you have set your own personal code.

Erasing personal code

To erase all of the personal entry codes programmed to a vehicle:

1. Enter the factory-set code.

Locks and Security

2. Press and release 1 • 2 within 5 seconds of step 1.
3. Press and hold 1 • 2 for two seconds. All of the vehicle doors will lock and then unlock to confirm erasure.

Unlocking the doors and releasing the trunk with the keyless entry system

To unlock the driver door, enter either the factory-set code or personal code (each digit pressed within 5 seconds of prior digit). The interior lamps will illuminate.

- To **unlock all doors**, enter the factory-set code or personal code (driver door unlocks) and press 3 • 4 within five seconds.
- To **release the trunk**, enter the factory-set code or personal code (driver door unlocks) and press 5 • 6 within five seconds.

After the factory-set code or personal code has been entered, you can unlock all doors (press 3 • 4) and release the trunk (press 5 • 6) as long as the controls are pressed within 5 seconds of each other.


Locking doors with the keyless entry system

It is not necessary to enter the factory-set code prior to locking all doors. To **lock the doors**, press 7 • 8 and press 9 • 0 at the same time. **Note:** The doors will not lock if the driver door is ajar.

Anti-scan feature

If the wrong code has been entered 7 times (35 consecutive button presses), the keypad will go into an anti-scan mode. This mode disables the keypad for one minute and the keypad lamp will flash.

The anti-scan feature will turn off after:

- one minute of keypad inactivity.
- pressing the  control on the remote entry transmitter.
- the ignition is turned to the 3 (ON) position.

SECURILOCK™ PASSIVE ANTI-THEFT SYSTEM

SecuriLock™ passive anti-theft system is an engine immobilization system. This system is designed to help prevent the engine from being started unless a **coded key programmed to your vehicle** is used. The use of the wrong type of coded key may lead to a “no-start” condition.

This device complies with part 15 of the FCC rules and with RSS-210 of Industry Canada. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

92

CIMS #1379646
com_securl_title.fly-eno
itdseq=117

DIFF-MARKED Review Copy —

(OLD=2008 Crown Victoria fus Owners Guide (post-2002-fmt) SME (#4545) (Sep-29-2006 15:15:31))

(NEW=2008 Crown Victoria fus Owners Guide (post-2002-fmt) CHAMP REVIEW (#5656) (Oct-30-2006 18:31:42))

2008 Crown Victoria (cro), Owners Guide (post-2002-fmt) (own2002), Market: USA (fus)