


## HOW TO USE REMOTE KEYLESS ENTRY SYSTEM WITH IGNITION KEY REMOVED

### LOCKING DOORS

1. Close all doors.
  2. Push the lock button on the remote controller.
  3. All doors will lock.
  4. The hazard indicator flashes twice.
- When the lock button is pushed with all doors locked, the hazard indicator flashes twice as a reminder that the doors are already locked.

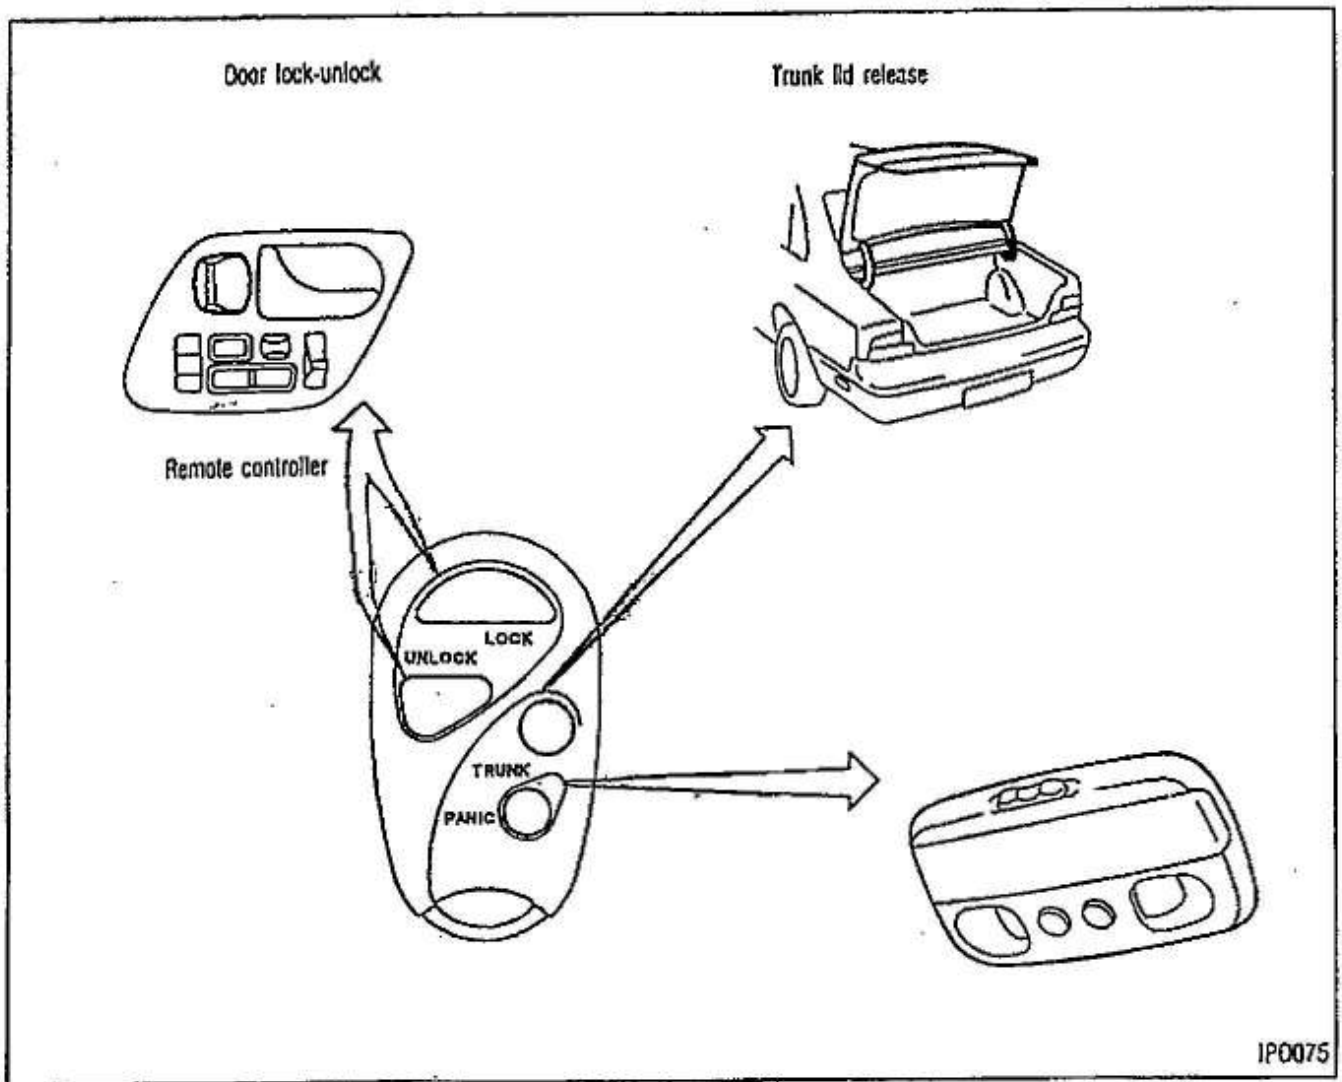

## **UNLOCKING DOORS**

1. Push the unlock button on the remote controller.
2. Only the driver side door will unlock. Push the unlock button on the remote controller again within 3 seconds.
3. All doors will unlock.
4. The interior light will stay on for 30 seconds.  
The interior light can be turned off without waiting for 30 seconds by inserting the key into the ignition or by locking the doors with the remote controller.

## **OPENING THE DRIVER'S AND PASSENGER'S WINDOW**

1. Push the unlock button on the remote controller for longer than 1.5 seconds after all doors are unlocked.
2. The driver's and passenger's window will open.  
The driver's and passenger's window cannot be closed by using the remote controller.

## **RELEASING THE TRUNK LID**

1. Push the trunk lid release button for longer than 1.0 second.
2. The trunk lid will open.  
The trunk will not open with the trunk lid release cancel switch to OFF.

## **USING THE PANIC ALARM**

If you are near your vehicle and feel threatened, you may activate the alarm to call attention as follows:

1. Push the panic button on the remote controller for longer than 1.5 seconds.
2. The theft warning alarm and headlight will stay on for 30 seconds.
3. The alarm will stop when any of the key functions are used.

## **BATTERY REPLACEMENT**

Replace the battery as follows;

1. Open the lid using a suitable tool.
2. Replace the battery with a new one.  
Recommended battery: Sanyo CR2025 or equivalent
3. Close the lid securely.
4. Press the key button two or three times to check its operation.

If the battery is removed for any reason other than replacement, perform step 4 above.

- An improperly disposed battery can harm the environment. Always confirm local regulations for battery disposal.
- The remote controller is water-proof; however, if it does get wet, immediately wipe completely dry.
- The operational range of the remote controller extends to approximately 49 ft (15 m) from the vehicle.

This device complies with Part 15 of FCC Rules and RSS-Gen of IC Rules. Operation is subject to the following two conditions:

(1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of this device.

## FCC WARNING

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

