

### Users Manual

6. Repeat steps 3-5 for opposite door. If the door does not rest in the fully open position, repeat Steps 1-4 again. If the door still does not operate correctly.
  7. Turn the ignition switch to OFF.
  8. Remove the PSD fuse (fuse #6) from the passenger fuse panel and leave it out for thirty (30) seconds. Refer to *Fuses and relays* in the *Roadside emergencies* chapter.
  9. Reinstall the fuse and wait ten (10) seconds.
  10. Repeat steps 1-6 above.
- If the door still does not operate correctly, see your dealer for service.

#### Sliding Door Child Safety Lock

Your vehicle is equipped with a sliding door child safety lock that helps prevent passengers from operating the sliding door by using the inside door handle. This lock is on both doors if equipped. The child safety lock lever is located in the inside of the sliding door, on the front edge of the door. Lift the control up to engage the child lock.

If you have the optional power sliding door, disable the power sliding door by pushing the ON/OFF control in the overhead console to the OFF position. The power sliding door cannot be opened from the rear seat when both this feature and the child lock are engaged.

- If you want to open the sliding door when the child safety lock is on:
- Unlock the sliding door and open the door from the outside.
  - If you have the optional power sliding door, press the right or left hand control on the overhead console to open the door.

#### CENTER CONSOLE (IF EQUIPPED)


Your vehicle may be equipped with a variety of console features. These include:

- Utility compartment
- Compact disc changer (if equipped)

#### POSITIVE RETENTION FLOOR MAT (IF EQUIPPED)

To install floor mats that have a retention post:

Position the floor mat so that the eyelet is over the pointed end of the retention post and rotate forward to lock in. Make sure that the mat does not interfere with the operation of the accelerator or the brake pedal. To remove the floor mat, reverse the installation procedure.

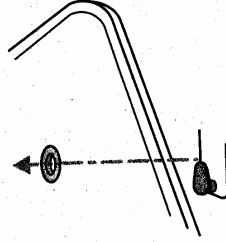

#### To install floor mats that have a screw in retainer:

1. Move the driver's seat to the most rearward position
  2. Position the driver's side floor mat with the rear of the mat against left (outboard) front edge of seat track mounting bracket.
  3. Use a screwdriver to screw locator post into vehicle carpeting. Exert pressure while turning to pierce the carpeting.
- When installed properly, the locator will not screw down tightly, but will rotate freely.

Use only Ford original Equipment floor mats. Do not stack multiple floor mats over the Ford original equipment floor mats as they are not positively retained.

#### REMOTE ENTRY SYSTEM


The remote entry system allows you to:

- lock or unlock all vehicle doors and lift-gate without a key.
  - unlock/open a RH power sliding door and/or LH power sliding door (if equipped).
  - activate the personal alarm.
  - arm and disarm the perimeter anti-theft system (if equipped).
- The lock/unlock and power sliding door features will operate with the vehicle in P (Park) or N (Neutral) and the ignition in the OFF, ACC or RUN positions. The panic control feature only operates with the ignition in the OFF position.


If there is any potential remote keyless entry problem with your vehicle, ensure **ALL key fobs** (remote entry transmitters) are brought to the dealership, to aid in troubleshooting.

**Unlocking the doors** 


- 3-button remote

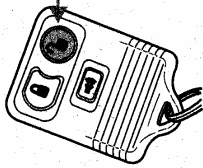

- 4-button remote

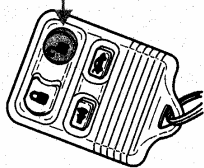

- 5-button remote

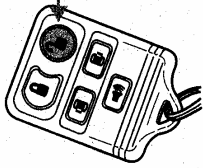


Press this control to unlock the driver door and disarm the anti-theft system (if equipped). The interior lamps will illuminate. Press the control again within three seconds to unlock all doors and liftgate. If the control is pressed a third time within three seconds, the


vehicle will chirp the horn once if all doors/hood are closed or twice if any door/hood is open.

**Opening power sliding doors**


- 4-button remote

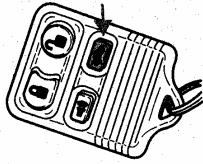


- 5-button remote

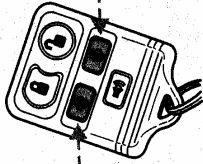


Press this control twice within three seconds to open the power sliding door (if equipped). The interior lamps will illuminate. Press this control another two times within three seconds to close the power sliding door and turn off the interior lights.

**Locking the doors** 


- 3-button remote

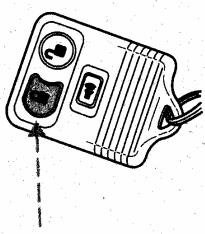

- 4-button remote

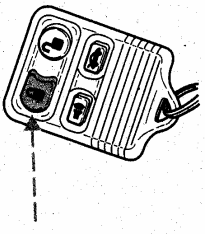


- 5-button remote

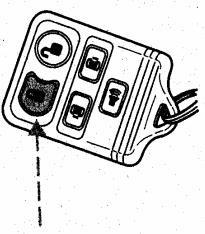


Press this control to lock all doors and liftgate, turn off the interior lights (if they were on) and arm the perimeter anti-theft system (if equipped). To confirm doors/hood are closed and locked, press the control a second time within three seconds. The door(s) will lock again and the horn will chirp once. If any of the doors are open or ajar, the horn will make two quick chirps, reminding you to properly close all doors/hood.

**Sounding a panic alarm** 


- 3-button remote

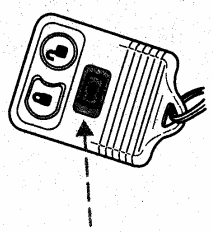

- 4-button remote

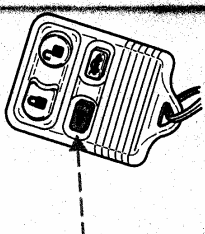

- 5-button remote

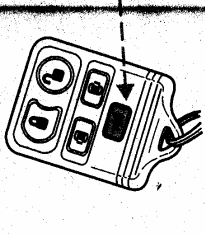

Press this control to activate the personal panic alarm. The personal panic alarm will cycle the horn and turn signals on/off plus illuminate the interior lights. To deactivate the alarm, press the control again or turn the ignition to RUN or ACC. This device complies with part 15 of the FCC rules and with RS-210 of Industry Canada. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

**Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.**

#### **Illuminated entry**

The interior lights will illuminate when the remote entry Unlock or Panic control is pressed with the doors closed or when unlocking or opening a power sliding door (if equipped).

The system automatically turns off after 25 seconds or when the ignition is turned to the RUN position. The panel dimmer control must **not** be set to the OFF position for the illuminated entry to operate.

The inside lights will not turn off if:

- they have been turned on with the instrument panel dimmer control or
- any door is open.

The battery saver will shut off the interior lamps 30 minutes after the last door is closed even if the panel dimmer control is left on.

#### **Illuminated exit**

The interior lights will illuminate when the key is removed from the ignition. When the headlamp control is on the "sleeping baby mode", only the lower interior lights will illuminate.

The system automatically turns off after 25 seconds or when the driver's door is opened. The panel dimmer control must **not** be set to the OFF position for the illuminated entry to operate.

#### **Replacing the battery**

The remote transmitter is powered by one coin type three-volt lithium battery CR2032 or equivalent. Typical operating range will allow you to be up to 10 meters (33 feet) away from your vehicle. A decrease in operating range can be caused by:

- weather conditions
- nearby radio towers
- structures around the vehicle
- other vehicles parked next to the vehicle



To replace the battery:

1. Twist a thin coin between the two halves of the transmitter near the key ring. **DO NOT TAKE THE FRONT PART OF THE TRANSMITTER APART.**
2. Place the positive (+) side of new battery in the same orientation. Refer to the diagram inside the transmitter unit.
3. Snap the two halves back together.

Replacement of the battery will **not** cause the remote transmitter to become deprogrammed from your vehicle. The remote transmitter should operate normally after battery replacement.


#### **Replacing lost transmitters**

- 3-button remote

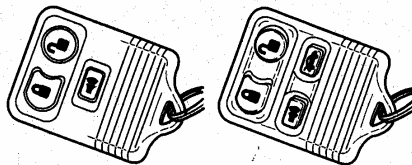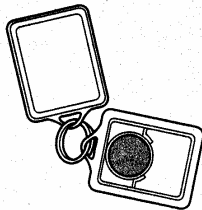

- 4-button remote

- 5-button remote

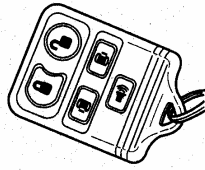

If a transmitter has been lost or if you would like to purchase additional transmitters for your vehicle (up to four may be programmed into memory), take **all** your vehicle's transmitters to your dealer or perform the reprogramming procedure yourself. It will be necessary to reprogram **all** the transmitters to the vehicle at the same time while performing this procedure.

#### **Reprogramming transmitters**

To reprogram the transmitters yourself, place the key in the ignition and turn from OFF to ON eight times in rapid succession (within 10 seconds) ending in the ON position. After doors lock/unlock, press any control on all transmitters (up to four). With each control press of the transmitters, the door should cycle (lock/unlock) to confirm programming. When completed, turn the ignition to OFF. The door locks should cycle (lock/unlock) one last time to confirm completion of programming.

#### **Autolock**

This feature automatically locks all doors when:

- all vehicle doors are closed
- the ignition is in the ON/START position
- you shift into or through R (Reverse)

#### **Relock**

The autolock feature repeats when:

- the ignition is in the ON/START position
- the vehicle speed is below 5 km/h (3 mph) and any door is opened then closed
- the vehicle speed exceeds 5 km/h (3 mph)

#### **Deactivating/activating the autolock feature**

The autolock/relock feature can be turned off by your dealer.

#### **Deactivating/activating the illuminated exit feature**

The illuminated exit feature can be turned off by your dealer.

#### **PERIMETER ALARM SYSTEM (IF EQUIPPED)**

The perimeter anti-theft system will help prevent your vehicle from unauthorized entry.

If there is any potential perimeter anti-theft problem with your vehicle, ensure **ALL key fobs** (remote entry transmitters) are brought to the dealership, to aid in troubleshooting.

#### **Arming the system**

When armed, this system will help protect your vehicle from unauthorized entry. When unauthorized entry occurs, the system will flash the turn signal lamps and side repeaters and honk the horn.

The system is ready to arm whenever the key is removed from the ignition. Any of the following actions will prearm the alarm system:

- Press the remote entry lock control
  - Press the interior power door lock control while the door is open
- Twenty seconds after one of the above events occurs, any door/hood that is closed is armed.

Any door/hood that still open is prearmed and waiting for the door/hood to be closed.

Once that input is closed, the input will arm in 20 seconds and the exterior lamps may flash.

#### **Disarming the system**

You can disarm the system by any of the following actions:

- Press the transmitter unlock control.
- Unlock the doors with a key.
- Turn a programmed SecurILock key to RUN /START.

#### **SECURILOCK® PASSIVE ANTI-THEFT SYSTEM**

Your vehicle is equipped with a coded-key anti-theft system. Only the correct key will be able to start your vehicle. If your keys are lost or stolen, you must take your vehicle to your dealership for key reprogramming.

