

Wireless LAN Ethernet Bridge User Guide (Draft Copy)

Fully featured wireless local area networking made simple

Version 1.0

<http://www.3com.com/>
<http://support.3com.com/warrantyregistration/register.pl>

Published December 2001
Version 1.0

**3Com Corporation ■ 5400
Bayfront Plaza ■ Santa
Clara, California ■
95052-8145**

Copyright © 2001, 3Com Corporation. All rights reserved. No part of this documentation may be reproduced in any form or by any means or used to make any derivative work (such as translation, transformation, or adaptation) without written permission from 3Com Corporation.

3Com Corporation reserves the right to revise this documentation and to make changes in content from time to time without obligation on the part of 3Com Corporation to provide notification of such revision or change.

3Com Corporation provides this documentation without warranty, term, or condition of any kind, either implied or expressed, including, but not limited to, the implied warranties, terms or conditions of merchantability, satisfactory quality, and fitness for a particular purpose. 3Com may make improvements or changes in the product(s) and/or the program(s) described in this documentation at any time.

If there is any software on removable media described in this documentation, it is furnished under a license agreement included with the product as a separate document, in the hard copy documentation, or on the removable media in a directory file named LICENSE.TXT or !LICENSE.TXT. If you are unable to locate a copy, please contact 3Com and a copy will be provided to you.

UNITED STATES GOVERNMENT LEGEND

If you are a United States government agency, then this documentation and the software described herein are provided to you subject to the following:

All technical data and computer software are commercial in nature and developed solely at private expense. Software is delivered as "Commercial Computer Software" as defined in DFARS 252.227-7014 (June 1995) or as a "commercial item" as defined in FAR 2.101(a) and as such is provided with only such rights as are provided in 3Com's standard commercial license for the Software. Technical data is provided with limited rights only as provided in DFAR 252.227-7015 (Nov 1995) or FAR 52.227-14 (June 1987), whichever is applicable. You agree not to remove or deface any portion of any legend provided on any licensed program or documentation contained in, or delivered to you in conjunction with, this User Guide.

Unless otherwise indicated, 3Com registered trademarks are registered in the United States and may or may not be registered in other countries.

3Com, AirConnect, and XJACK are registered trademarks and the 3Com logo is a trademark of 3Com Corporation.

Microsoft, Windows, and Windows NT are registered trademarks of Microsoft Corporation. Wi-Fi is a trademark of the Wireless Ethernet Compatibility Alliance.

All other company and product names may be trademarks of the respective companies with which they are associated.

EXPORT RESTRICTIONS: This product or software contains encryption code which may not be exported or transferred from the US or Canada without an approved US Department of Commerce export license.

CONTENTS

1 INTRODUCTION

- How Does a Wireless LAN Work? 5
 - Network Association 5
 - Roaming 5
 - Security 5
 - Ad Hoc Networks 5
- Setting Up a 3Com Wireless LAN 6
 - All Wireless Networks 6
 - Wired/Wireless Networks 6
- Product Registration and Support 7

2 INSTALLING THE WIRELESS BRIDGE

- Requirements 9
- Disk Factory 9
- Inserting the Ethernet Bridge 10
- Installing the Software 11
- Windows Wizard Installation 11
 - Installing Files 11
 - Setting Up the Ethernet Bridge 12
 - Installing Utilities 12
- Windows NT Installation with Networking Installed 13
 - Installing Under Service Pack 4 13
 - Installing Under Service Pack 5 and Above 13
 - Installing Files 13
 - Installing CardWizard 14
 - Setting Up the Ethernet Bridge 14
 - Installing Utilities 15
- Confirming the Installation 15
- Custom Installation Options 16
 - WLAN Service Area 16
 - Security Settings 16
 - 40-bit Shared Key (Wi-Fi) Encryption 16
 - 128-bit Shared Key Encryption 17
 - 128-bit Dynamic Security Link Authentication 17
- Installing the Documentation 18

3 USING THE WIRELESS LAN

- About the 3Com Icon 20

| | |
|---|----|
| Using the 3Com WLAN Configuration Utility | 20 |
| Using 3Com Administrator Utilities | 21 |

4 CONFIGURING THE WIRELESS CLIENT

| | |
|---|----|
| Changing Network and Security Settings | 23 |
| Network Settings | 23 |
| Security Settings | 24 |
| 40-bit Shared Key (Wi-Fi) Encryption Settings | 24 |
| 128-bit Shared Key Encryption | 25 |
| 128-bit Dynamic Security Link Settings | 26 |
| Setting up Auto Network Connect | 26 |
| Setting up an Ad Hoc Network | 27 |
| Starting an Ad Hoc Network Session | 27 |
| Joining an Ad Hoc Network Session | 27 |
| Ending an Ad Hoc Network Session | 28 |
| Changing Power, Traffic, and Address Settings | 28 |
| Changing Your Password | 29 |
| Running Diagnostics | 29 |
| Viewing Configuration Information | 30 |


5 TROUBLESHOOTING

| | |
|---|----|
| Diagnosing Problems | 31 |
| Using the Tools Window | 32 |
| Uninstalling Software Utilities | 33 |
| Updating Ethernet Bridge Driver Software | 33 |
| Windows 95, Windows 98, and Windows 98 SE | 33 |
| Windows Millenium Edition (Windows Me) | 34 |
| Windows 2000 | 34 |
| Windows NT | 35 |
| Upgrading Ethernet Bridge Firmware | 36 |

A TECHNICAL SUPPORT

| | |
|------------------------------------|----|
| Online Technical Services | 39 |
| World Wide Web Site | 39 |
| 3Com Knowledgebase Web Services | 39 |
| 3Com FTP Site | 39 |
| Support from Your Network Supplier | 40 |
| Support from 3Com | 40 |
| Returning Products for Repair | 42 |

REGULATORY COMPLIANCE INFORMATION

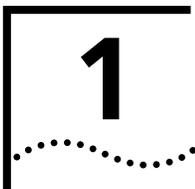

1

INTRODUCTION

3Com wireless technology brings the benefits of a local area network (LAN) to your office without the restraints and expense of network wiring. If your office already has an Ethernet LAN, the 3Com 11 Wireless Ethernet LAN Bridge can extend the network without adding more wires.

How Does a Wireless LAN Work?

In a traditional LAN, computers communicate through wires. Instead of wires, a wireless LAN uses radio signals to communicate.

Network Association

Computers that are equipped for wireless LAN communication are called wireless LAN *clients*. The wireless communication is called *network association*. Clients associate through one or more *access points*, which are wireless base stations that act as wireless hubs.

An access point can be connected to a wired network device such as an Ethernet hub, switch, or router to give clients access to the wired network where they can share files and printers and gain access to the Internet.

Roaming

If the office space is large, you can set up multiple access points on the same network to increase coverage. When a wireless client begins to lose the signal as it moves away from an access point, it can reassociate seamlessly with another access point. This is called *roaming*.

Security

You can set up security to encrypt your wireless transmissions so that your data cannot be deciphered if it is intercepted, and to prevent access to the network by unauthorized clients.

Ad Hoc Networks


Wireless clients can associate among themselves at close range without an access point by using *ad hoc* (temporary) networks. You may wish to set up an ad hoc network, for example, if a group is working away from the office, or if a group in the office needs to share files apart from the LAN.

Setting Up a 3Com Wireless LAN


The type of network you decide to set up depends on the size of your office and whether or not you require connection to a wired LAN. You can also set up security for each of the different types of networks. Your setup will probably resemble one or more of the following examples.

All Wireless Networks

The simplest 3Com wireless LAN consists of several clients associating in an ad hoc network without an access point.

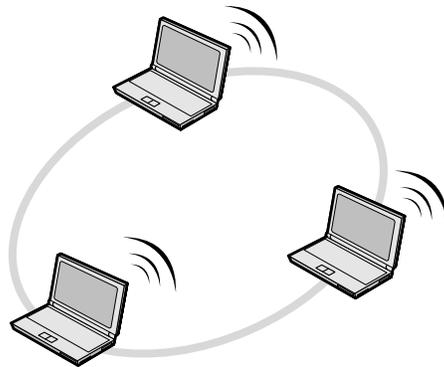

A simple configuration consists of one access point and several clients. The clients can associate with the wireless network anywhere within the coverage area of the access point. The access point is not connected to any other network segments.

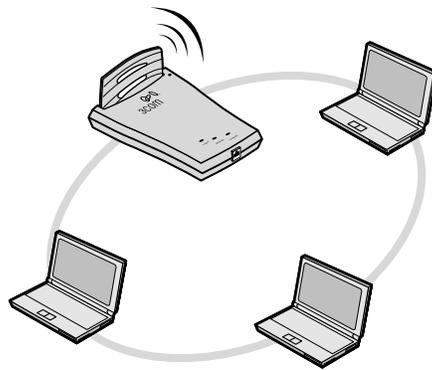


For more complex requirements, you can configure several access points as separate networks at the same site. The access points use different network identifiers called *wireless LAN service areas* (*WLAN service areas*, also called *Extended Service Set Identities* or *ESSID*). Clients can roam within the coverage areas of access points that have the same WLAN service areas. They cannot roam to the coverage areas of access points that are configured with different WLAN service areas.

Wired/Wireless Networks

An access point can be connected to a wired LAN with an Ethernet cable to create a mixed wired/wireless network. In this configuration, the access point provides the link between the wired network and wireless clients. Clients can move freely throughout the service area of the access point and remain associated with the larger network for services such as printing and Internet access.

Multiple access points can be connected to an existing LAN to provide complete wireless network coverage. Wireless clients can roam seamlessly between different access points with the same WLAN service areas and remain associated with the larger network.

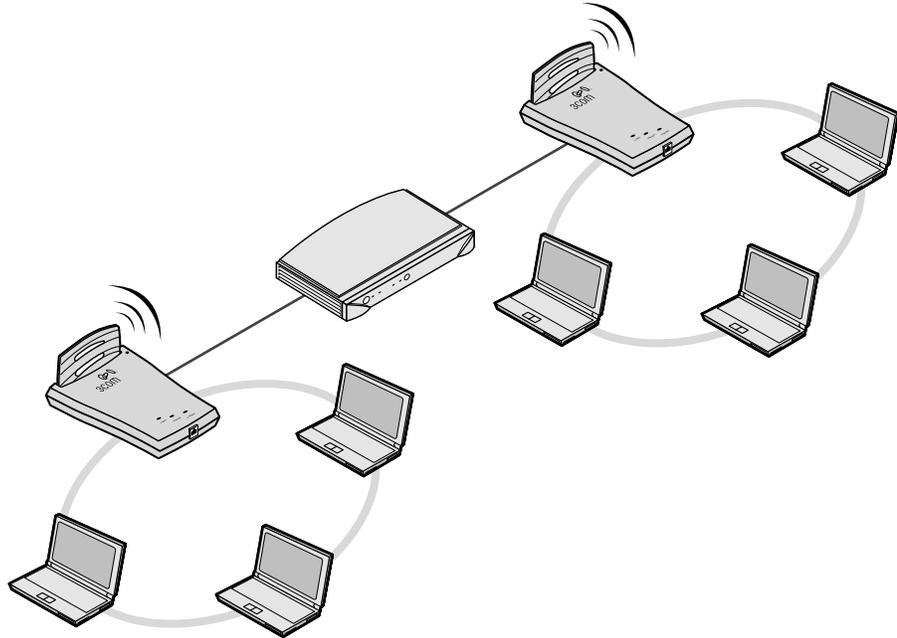

Product Registration and Support

To register your product with 3Com, go to the following Web page:

<http://support.3com.com/registration/frontpg.pl>

For support information, see "Technical Support" on page 39 or log on to the 3Com Web site at <http://www.3com.com> and navigate to the product support page.

2

INSTALLING THE WIRELESS BRIDGE

Installing a wireless client consists of inserting the 3Com Wireless Ethernet LAN Bridge to your computer and installing the software driver and utilities. If you have 3Com Administrator Utilities installed on a wireless client, you can manage access points or run a site survey.

Requirements

Before you start the installation, make sure that you have the following items:

| | |
|---------------------------|--|
| Computer | Any computer with an Ethernet (RJ-45) port. |
| Operating System | One of the following: <ul style="list-style-type: none">■ Windows 95 The 3Com Wireless Ethernet Bridge runs under Windows 95 version B or higher. If you do not know which version of Windows 95 is installed on your computer, you can display it as follows: In the Control Panel, double-click <i>System</i> to display the System Properties dialog box. Click the <i>General</i> tab to display the Windows 95 version information. Version B (also known as OSR 2) is identified as 4.00.950b.■ Windows 98■ Windows Millennium Edition (Windows Me)■ Windows NT with Service Pack 4 or above (Service Pack 6 or later recommended)■ Windows 2000 |
| Web Browser | Internet Explorer version 4 required. Internet Explorer version 5.5 recommended. You can download Internet Explorer from www.microsoft.com |
| Interface | 3Com Wireless Ethernet Bridge |
| Installation Media | One of the following 3Com CDs: <ul style="list-style-type: none">■ <i>3Com End User Utilities CD</i>, which comes with the Ethernet Bridge and contains utilities for users.■ <i>3Com Administrator Utilities CD</i>, which comes with the 3Com 11 Mbps Wireless LAN access point 6000 and contains utilities for users and tools for administrators. |
| Other Requirements | <ul style="list-style-type: none">■ The installation program may ask for the operating system installation media (usually a CD supplied with your computer) or for a path to the operating system files. If you have other networking software installed on your computer, the installation program may ask for its installation media.■ If you need to install from diskettes, see "Disk Factory" below. |

Disk Factory

If you are installing the software on a computer that does not have a CD-ROM drive, or if you choose to install the drivers manually, you will have to make

diskettes from the 3Com CD. The setup application includes Disk Factory, a utility for creating disks from CD. To use Disk Factory, you need access to a computer with a CD-ROM drive and a floppy drive and eight or more diskettes. Make sure you have enough diskettes on hand.

- 1 For the driver software, prepare two diskettes, one labelled *NT Drivers*, and the other labelled *9X and 2K Driver*.

For the application software, label diskettes numerically (*Disk 1, Disk 2, Disk 3...*).

- 2 Put the 3Com CD in the CD-ROM drive. The setup program should start automatically. If it does not start, run it manually by selecting *Run* from the Start menu and specifying the *srsetup.exe* program (for example, **d:\srsetup.exe**).
- 3 In the 3Com 11 Mbps Wireless LAN menu, click *Tools and Utilities*.
- 4 In the Tools and Utilities menu, click *Create Installation Diskettes*.
- 5 In the Disk Factory window, click *Next*.
- 6 Select the software you want to transfer to diskette. Disk Factory displays the required number of diskettes. Make sure you have that number of diskettes.
- 7 Select the action (for example, *Create and Verify Disks*), specify the destination location, and click *Next*.

Follow the prompts on the screen.

To install the drivers from diskette, use the driver diskettes when the setup wizard prompts for drivers supplied by the manufacturer.

To install the application software from diskette, put application software *Disk 1* in the floppy drive and run the *setup.exe* program.

Inserting the Ethernet Bridge

- 1 Turn on the computer.
- 2 Align the card with the computer Ethernet Bridge slot. Insert the card and make sure it seats snugly.
- 3 Gently but firmly press and release the XJACK antenna to extend it.



CAUTION: Forcing the connector into the slot can damage the computer or the card.

The antenna has two positions: extended and retracted. To extend or retract the antenna, gently but firmly press and release it. The antenna must be extended to make a network association. To prevent it from damage, the antenna should be retracted when not in use, when you are inserting the card in your computer, or when you are transporting the computer.

The figure at left below shows the Ethernet Bridge installed with its antenna retracted. The figure at right shows the antenna extended.

To get the best reception:

- Clear the area around the antenna of items that could block radio transmission, such as metal objects, electronic devices, and cordless telephones.

- Even a slight change in antenna orientation can affect the network association. If necessary, move your computer a few inches to find a better signal.

Installing the Software

Depending on how your computer is set up, the installation program may ask for the operating system installation media (usually a CD supplied with your computer) or for a path to the operating system files. If you have other networking software installed on your computer, the installation program may ask for the networking software installation media. Make sure that you have the appropriate installation CDs or that you know the appropriate paths before you begin installing the software.

If you need help during the installation, see “Troubleshooting” on page 31.

Follow the instructions for your operating system:

For this Windows version:

Windows 2000, Windows Millennium Edition (Windows Me), Windows 98, Windows 95

Windows NT

See this procedure:

“Windows Wizard Installation” below.

“Windows NT Installation with Networking Installed” on page 13, “Windows NT Installation Without Networking Installed” on page 45, or “Windows NT Installation With Softex Card Executive” on page 49.

Windows Wizard Installation

Make sure that the computer is running and the Ethernet Bridge is inserted. The driver installation process starts automatically when the Ethernet Bridge is inserted.

Installing Files

- 1 Put the *3Com CD* in the CD-ROM drive.
- 2 In the Add New Hardware Wizard window, click *Next*.
- 3 Respond to the instructions in the next windows:
 - a When the driver location is confirmed, click *Next*.
 - b Verify the driver name (3Com 3CRWE62092A Wireless Ethernet Bridge) and click *Next*.

The installation program copies files from the *3Com CD* and Windows operating system.

This copying process may take a few moments, and the progress bar may seem to update slowly.

The installation may prompt for your operating system installation CD, for a path to the operating system, or for the installation CD of other installed networking software. If it does, remove the *3Com CD* and insert the appropriate CD.

- c When you are notified that the installation is complete, remove the CD and click *Finish*.
- 4 At the prompt to restart the computer, click *Yes*.

Setting Up the Ethernet Bridge

After the computer restarts, the 3Com 11 Mbps Wireless LAN Client Setup window opens, in which you specify the Ethernet Bridge configuration.

- 1 In the 3Com 11 Mbps Wireless LAN Client Setup window, select *Typical* and click *Next*.

A *Typical* configuration sets up the Ethernet Bridge with the following default values:

WLAN Service Area—Attach to any WLAN Service Area automatically

Security Setting—No security (Open system)

If you want to customize the Ethernet Bridge configuration (to add security, for example), select *Custom*. See “Custom Installation Options” on page 16 for details on custom settings. For the fastest installation, it is recommended that you use the typical settings. You can customize the configuration later as described in “Configuring the Wireless Client” on page 23.

- 2 In the Summary window, review the Ethernet Bridge setup. To install the software utilities, make sure that the *Start client software installation when finished* box is checked.

If you are reinstalling the Ethernet Bridge and already have the software utilities installed, this box is unchecked.

- 3 Click *Finish* to complete the Ethernet Bridge setup and start the software utilities installation.

The 3Com 11 Mbps Wireless LAN Setup program starts.

If you are installing from diskettes, insert *Disk 1* and run the *setup.exe* program to start the software utilities installation.

Installing Utilities

- 1 Read the Welcome page and click *Next*.
- 2 Read the Software License Agreement and click *Yes*. (If you click *No*, the installation stops.)
- 3 Select a destination folder for the software files and click *Next*.
- 4 In the Setup Type window, select the type of installation for the software:
 - Typical*—Installs the software and documentation.
 - Compact*—Installs the software, but not documentation.
 - Custom*—Allows you to choose the components to install.
- 5 Follow the directions in the Select Program Folder window and click *Next*.
- 6 In the Desktop Icon Option window, click *Yes*.
- 7 In the Setup Complete window, click *Finish*.
- 8 If you are prompted to restart your computer, do so.

This completes the basic installation. To confirm the installation, see “Confirming the Installation” on page 15.

Windows NT Installation with Networking Installed

Use one of the following procedures if you are running Windows NT and networking is already installed on your computer. If networking is not already installed, see "Windows NT Installation Without Networking Installed" on page 45. If Softex Card Executive is already installed on your computer, see "Windows NT Installation With Softex Card Executive" on page 49.



Either CardWizard or Softex Card Executive, which are utilities that help Windows NT load and manage software, must be installed on your computer to use the Ethernet Bridge. If the installation program does not detect one of the utilities, it will ask whether you want to install CardWizard from the 3Com CD.

Internet Explorer version 4 is required to view help files. It is recommended that you install Internet Explorer version 5 or later.

Installing Under Service Pack 4

It is recommended that you upgrade to the latest service pack. If you are using Service Pack 4, you must install CardWizard before inserting the Ethernet Bridge into the computer. If you have Softex Card Executive installed, see "Windows NT Installation With Softex Card Executive" on page 49 for more details. Otherwise, follow this procedure:

- 1 Put the 3Com CD in the CD-ROM drive.
- 2 If the 3Com 11 Mbps WLAN Menu appears, click *Exit*.
- 3 From the Windows Start menu, select *Start/Run*.
- 4 In the run dialog box, type the path to the CardWizard installer on the 3Com CD. For example: **d:\cw\disk1\setup.exe**
- 5 Follow the prompts to install CardWizard.
At the prompt to restart, shut down the computer.
- 6 Insert the Ethernet Bridge, restart the computer, and continue with the installation.

Refer to "Installing Under Service Pack 5 and Above" for detailed instructions.

Installing Under Service Pack 5 and Above

The installation procedure consists of installing files, installing CardWizard, setting up the Ethernet Bridge, and installing utilities.

Installing Files

- 1 Make sure that the computer is running and the Ethernet Bridge is inserted.
- 2 Put the 3Com CD in the CD-ROM drive.
If the 3Com 11 Mbps WLAN Menu appears, click *Exit*.
- 3 From the Windows Start menu, select *Settings/Control Panel*.
- 4 In the Control Panel, double-click *Network*.
- 5 Click the *Adapters* tab.
- 6 In the Adapters tab, click *Add*.
- 7 In the Select Network Adapter window, click *Have Disk*.
- 8 In the Insert Disk window, make sure that the correct path to your CD-ROM drive appears in the entry box (for example, d:) and click *OK*.

If you are installing from diskettes, enter the path to the diskette drive.

- 9 In the Select OEM Option window, select *3Com 3CRWE62092A Wireless Ethernet Bridge* and click *OK*.
- 10 In the Ethernet Bridge Setup window, accept the default settings and click *OK*.
The default settings work in most cases. However, you may need to specify values for your installation.
Wait while the files are copied.
- 11 In the Adapters tab, click *Close*.
- 12 If the Microsoft TCP/IP Properties screen appears, enter the requested information for your network environment.
Refer to the Windows NT documentation for assistance. If you choose the DHCP server option, click *Yes* to the DHCP prompt. When you are finished entering the appropriate TCP/IP information, click *OK*.
- 13 When prompted to restart the computer, click *Yes*.

Installing CardWizard



If CardWizard was already installed before you began installing the Ethernet Bridge, the installation skips this portion and proceeds directly to "Setting Up the Ethernet Bridge."

- 1 At the prompt to install CardWizard, click *Yes*.
If you click *No* and you do not have CardWizard installed, the installation stops.
- 2 In the CardWizard window, click *Next*.
- 3 In the CardWizard welcome page, click *Next*.
- 4 Read the CardWizard Software License Agreement and click *Yes*.
- 5 When prompted to remove the Ethernet Bridge, eject the card and click *Yes*.
- 6 In the Select Type of Platform window, select your computer type and click *Next*.
If your computer type is not listed, select *Other Notebook* and click *Next*.
- 7 Respond to the prompts to install CardWizard.
- 8 When the CardWizard installation finishes, click the radio button to restart the computer and click *Finish*.
- 9 Insert the Ethernet Bridge.

Setting Up the Ethernet Bridge

After the computer restarts, the 3Com 11 Mbps Wireless LAN Client Setup window opens, in which you specify the Ethernet Bridge configuration.

- 1 In the 3Com 11 Mbps Wireless LAN Client Setup window, select *Typical* and click *Next*.

The *Typical* configuration sets up the Ethernet Bridge with the following default values:

WLAN Service Area—Attach to any WLAN Service Area automatically

Security Setting—No security (Open system)

If you want to customize the Ethernet Bridge configuration (to add security, for example), select *Custom*. See “Custom Installation Options” on page 16 for details on custom settings. For the fastest installation, it is recommended that you use the Typical settings. You can customize the configuration later as described in “Configuring the Wireless Client” on page 23.

- 2 In the Summary window, review the Ethernet Bridge Ethernet Bridge setup and click *Finish*.
- 3 When prompted to run the Setup program, click *OK*.
- 4 Run the Setup program:
 - a From the Windows Start menu, select *Run*.
 - b In the Run dialog box, enter a path to the Setup program on the 3Com CD. For example, **d:\srsetup.exe**.

The 3Com 11 Mbps Wireless LAN Setup program starts.

Installing Utilities

- 1 Read the Welcome page and click *Next*.
- 2 Read the Software License Agreement and click *Yes*. (If you click *No*, the installation stops.)
- 3 Select a destination folder for the software files and click *Next*.
- 4 In the Setup Type window, select the type of installation for the software:
 - Typical*—Installs the software and documentation.
 - Compact*—Installs the software but not documentation.
 - Custom*—Allows you to choose the components to install.
- 5 Follow the directions in the Select Program Folder window and click *Next*.
- 6 In the Desktop Icon Option window, click *Yes*.
- 7 In the next window, if the option to restart the computer appears, select it and click *Finish*.

If you had a service pack installed before setting up the Ethernet Bridge, reinstall it and restart the computer.

This completes the basic installation. To confirm the installation, see “Confirming the Installation.”

Confirming the Installation

When the Ethernet Bridge and software are installed correctly, you will see the following items after you restart the computer:

- The Ethernet Bridge LED is blinking.
- The 3Com WLAN Launcher is running. This utility shows the status of your network association.
- The 3Com icon is in the Windows system tray.
- The shortcut icon to the 3Com WLAN Launcher is on your desktop (unless you specified no icon during the installation).

If you do not see the 3Com WLAN Launcher window, click the 3Com icon in the Windows system tray to display it.

If the 3Com WLAN Launcher is not already running, you can start it by double clicking the shortcut on your desktop, or, from the Windows Start menu, select *Start/Programs/3Com 11 Mbps Wireless LAN/3Com WLAN Launcher*.

For more information, see “Using the Wireless LAN” on page 19.

Custom Installation Options

If you want to set up a custom configuration during installation, when the installation program asks for the Setup Type, select *Custom* and click *Next*.

You can change the WLAN Service Area and Security settings.

WLAN Service Area

Attach to any WLAN Service Area automatically—This option associates the client automatically to the WLAN service area with the best signal strength.

Specify a WLAN Service Area—Select this option and enter the name of a WLAN service area. The name must match the name of the access point WLAN Service Area exactly.

For more information on these settings, see “Changing Network and Security Settings” on page 23.

Security Settings

In the Security settings window, select one of the options and click *Next*.

If you select *No Security* for no encryption, no further configuration is necessary.

The other options require you to configure encryption keys or authentication settings in the next window. The settings must match those on the access point. For more information on these settings, see “Security Settings” on page 24.

40-bit Shared Key (Wi-Fi) Encryption

40-bit Shared Key (Wi-Fi) security requires you to set up encryption keys using one of the following:

- An *encryption string*, which is a string of case-sensitive characters 6 to 30 characters long. The string is a combination of letters and numbers and is case sensitive. The encryption string can be used only with other 3Com 11 Mbps Wireless LAN clients and access points, and must match exactly across all devices in the wireless network.
- Hexadecimal keys (for use with compatible equipment from other manufacturers). The key sequences must match exactly across all devices in the wireless network.

Ask your system administrator for the encryption string or hexadecimal keys.

To enter an encryption string:

- 1 In the Security settings window, select *40-bit Shared Key (Wi-Fi)* and click *Next*.
- 2 In the Encryptions Settings window, select *Text Message*.
- 3 Type the encryption string in the spaces provided.

- 4 Click *Next* when finished.

To enter hexadecimal keys:

- 1 In the Security settings window, select *40-bit Shared Key (Wi-Fi)* and click *Next*.
- 2 In the Encryptions Settings window, select *Hexadecimal Keys*.
- 3 Type the encryption key sequences in the spaces provided. You must enter key sequences for all four keys.
- 4 Click one of the radio buttons to select a key to use for encrypting data from your computer.
- 5 Click *Next* when finished.

128-bit Shared Key Encryption

128-bit Shared Key security requires you to set up encryption keys using one of the following:

- An *encryption string*, which is a string of case-sensitive characters 6 to 30 characters long. The string is a combination of letters and numbers and is case sensitive. The encryption string can be used only with other 3Com 11 Mbps Wireless LAN clients and access points, and must match exactly across all devices in the wireless network.
- Hexadecimal keys (for use with compatible equipment from other manufacturers). The key sequences must match exactly across all devices in the wireless network.

Ask your system administrator for the encryption string or hexadecimal keys.

To enter an encryption string:

- 1 In the Security settings window, select *128-bit Shared Key* and click *Next*.
- 2 In the Encryptions Settings window, select *Text Message*.
- 3 Type the encryption string in the spaces provided.
- 4 Click *Next* when finished.

To enter hexadecimal keys:

- 1 In the Security settings window, select *128-bit Shared Key* and click *Next*.
- 2 In the Encryptions Settings window, select *Hexadecimal Keys*.
- 3 Type the encryption key sequences in the spaces provided. You must enter key sequences for all four keys.
- 4 Click one of the radio buttons to select a key to use for encrypting data from your computer.
- 5 Click *Next* when finished.

128-bit Dynamic Security Link Authentication

128-bit Dynamic Security Link security can only be used with other 3Com 11 Mbps Wireless LAN clients and access points.

- 1 Ask your network administrator for the user name and password.
- 2 In the Security settings window, select *128-bit Dynamic Security Link* and click *Next*.

- 3 In the Authentication Settings window, type the user name and password in the spaces provided.
- 4 Enter the password again to confirm it.
- 5 Click *Next* when finished.

Installing the Documentation

Documentation in PDF and HTML formats is supplied on the *3Com CD* and is installed automatically during a typical installation. If you chose not to install documentation when you installed the Ethernet Bridge and utilities, you can use *Add/Remove Programs* in the Control Panel to install it.

- 1 From the Windows Start menu, select *Start/Settings/Control Panel*.
- 2 Double click *Add/Remove Programs*.
- 3 In the next window, select *3Com 11 Mbps Wireless LAN* and click *Add/Remove*.
- 4 In the Install Shield Wizard window, click the *Modify* radio button and click *Next*.
- 5 In the next window, check the boxes next to the documents that you want to install and click *Next*.
A dialog box containing a document file name appears.
- 6 Insert the *3Com CD*.
- 7 Browse to the path on the CD that contains the file name indicated in the dialog box and click *OK*.



You need Acrobat Reader to read the documentation in PDF format and a Web browser to read the documentation in HTML format. The English versions of Acrobat Reader and the Internet Explorer Web browser are on the 3Com CD.

You can obtain versions of Acrobat Reader in languages other than English from the Adobe Web site at www.adobe.com.

You can obtain versions of Internet Explorer in languages other than English from the Microsoft Web site at www.microsoft.com.

3

USING THE WIRELESS LAN

The 3Com WLAN Launcher shows the status of your network association and allows you to perform network association and configuration tasks.



To display the 3Com WLAN Launcher, click the 3Com icon in the Windows system tray. If the 3Com WLAN Launcher is not already running, you can start it from the Windows Start menu. Select *Start/Programs/3Com 11 Mbps Wireless LAN/3Com WLAN Launcher*.

The functions of the 3Com WLAN Launcher buttons are:

- | | | |
|---|---------------------|---|
|  | Access point | Refreshes the association with the access point when you are associated with an access point. When you are associated with an ad hoc network, this button ends the ad hoc session and associates you to an access point. |
|  | Computer | Displays the Ad Hoc Network Login window, in which you can do the following: <ul style="list-style-type: none">■ When you are associated with an access point, you can end the access point association and start an ad hoc session.■ When you are associated with an ad hoc network, you can start a new ad hoc session or edit the current ad hoc configuration. |
|  | Padlock | Displays the Network/Security tab of the 3Com WLAN Configuration utility. |
|  | Hammer | Displays the Tools tab of the 3Com WLAN Configuration utility. |
|  | Help | Displays help. |
|  | Close | Minimizes the 3Com WLAN Launcher window, but does not quit the application. |

About the 3Com Icon

When the 3Com WLAN Launcher is running, the 3Com icon in the Windows system tool tray displays the status of the network association:

| | |
|-----------------------|---|
| Associating | Blue magnifying glass indicates client is searching for a network association. |
| Associated | Green radio waves indicate a good association with an access point. |
| Not Associated | Red circle with a white X indicates no association with an access point. |
| Card Removed | Yellow circle with a black X indicates that the computer does not detect a PC Card. |


If the 3Com WLAN Launcher is hidden, click the 3Com icon to display it. You can also right-click the 3Com icon and select from these menu items:

| | |
|----------------------------------|---|
| Open | Displays the 3Com WLAN Launcher. |
| Refresh AP | Disconnects you from an ad hoc network session and reconnects you to an access point. |
| End AP/Start Ad hoc | Displays the Ad Hoc Network Login window, where you can start or join an ad hoc network session. |
| Cancel Association | Ends client attempt at associating with a network. This menu option appears only while the client is trying to associate with a network (that is, while the blue magnifying glass is visible in the 3Com icon). |
| Security Settings | Displays the Network/Security tab, where you can set up security. |
| Tools | Displays the Tools tab, where you can run WLAN Launcher applications. |
| Show Ethernet Link Status | Controls the Ethernet status display. This option appears only if you are associating with a 3Com 11 Mbps Wireless LAN access point 6000. |
| Show Launcher at Startup | Controls the display of the 3Com WLAN Launcher when you turn on the computer. If you turn this option off, the 3Com WLAN Launcher is hidden until you click the 3Com icon to display it. This option is turned on by default. |
| Exit | Quits the WLAN Launcher program and any associated utilities that are running. After you exit, the 3Com icon no longer displays in the Windows system tray unless you restart the WLAN Launcher. |

Using the 3Com WLAN Configuration Utility

You can use the 3Com WLAN Configuration Utility window to customize the wireless client set up after installation. If you have 3Com Administrator Utilities, you can also launch administration tools. To display the 3Com WLAN Configuration Utility window:

- 1 In the Windows system tray, click the 3Com icon to display the 3Com WLAN Launcher.
If the 3Com WLAN Launcher is not already running, you can start it from the Windows Start menu. Select *Start/Programs/3Com 11 Mbps Wireless LAN/3Com WLAN Launcher*.
- 2 In the 3Com WLAN Launcher, click the *Padlock* or the *Hammer* icon to display the 3Com WLAN Configuration Utility window. (The tab that appears on top depends on the icon used to open the window.)

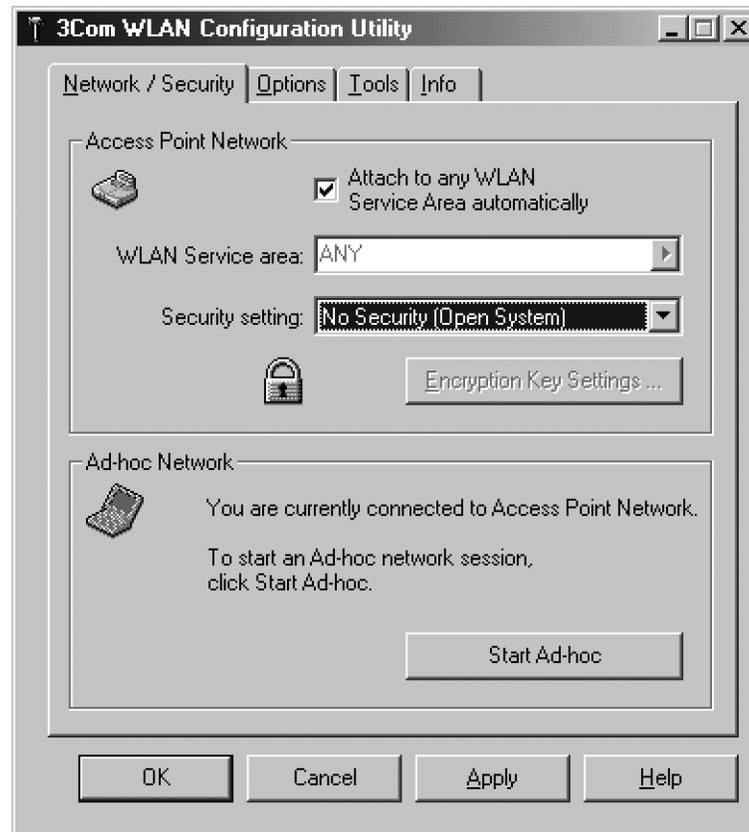

The 3Com WLAN Configuration Utility window contains these tabs:

- Network/Security—See “Changing Network and Security Settings” on page 23 and “Setting up an Ad Hoc Network” on page 27.
- Options—See “Changing Power, Traffic, and Address Settings” on page 28.
- Tools—See “Changing Your Password” on page 29, “Running Diagnostics” on page 29, or “Upgrading Ethernet Bridge Firmware” on page 36. If you have 3Com Administrator Utilities, you can also perform access point management tasks.
- Info— See “Viewing Configuration Information” on page 30.

Using 3Com Administrator Utilities

The *3Com CD* contains tools for managing the PC Card. With the tools installed on a wireless client, you can change your password, check for firmware upgrades, or perform a diagnostic test. To install the tools, use the *3Com CD* when you install the client on your computer. The installed tools are located on the 3Com WLAN Configuration Utility window:

- 1 In the Windows system tray, click the 3Com icon to display the 3Com WLAN Launcher.

If the 3Com WLAN Launcher is not already running, you can start it from the Windows Start menu. Select *Start/Programs/3Com 11 Mbps Wireless LAN/3Com WLAN Launcher*.

- 2 In the 3Com WLAN Launcher, click the *Hammer* icon to display the Tools tab in 3Com WLAN Configuration Utility window.



The Tools tab contains these tools:

- Change Password—Changes the wireless client password. See “Changing Your Password” on page 29.
- Firmware Upgrade—Upgrades the firmware on the wireless client. See “Upgrading Ethernet Bridge Firmware” on page 36.
- Diagnostics—Runs diagnostics on the wireless client. See “Running Diagnostics” on page 29.

4

CONFIGURING THE WIRELESS CLIENT

Changing Network and Security Settings

You can change security and network settings for the wireless client in the Network/Security tab.

- 1 In the Windows system tray, click the 3Com icon to display the 3Com WLAN Launcher.

If the 3Com WLAN Launcher is not already running, you can start it from the Windows Start menu. Select *Start/Programs/3Com 11 Mbps Wireless LAN/3Com WLAN Launcher*.
- 2 In WLAN Launcher, click the *Padlock* icon.

In the top half of the Security/Network tab, you can change settings for an access point network. In the lower half of the tab, you can configure settings for an ad hoc network.
- 3 To configure settings for an access point network, see "Network Settings" and "Security Settings" on page 24.

To configure settings for an ad hoc network, click *Start Ad hoc*. See "Setting up an Ad Hoc Network" on page 27.
- 4 If your selection requires encryption key settings, click *Encryption Key Settings* and enter the encryption key settings in the next window. (Ask your network administrator for the encryption settings.) See "40-bit Shared Key (Wi-Fi) Encryption Settings" on page 24 or "128-bit Shared Key Encryption" on page 25.

Network Settings

Network settings determine the wireless network with which the client can associate. Some wireless LANs are set up with different WLAN service areas. Clients can roam within the coverage areas of access points that have the same WLAN service areas. They cannot roam to the coverage areas of access points that have different WLAN service areas.

To change the settings:

- 1 In the Windows system tray, click the 3Com icon to display the 3Com WLAN Launcher.

If the 3Com WLAN Launcher is not already running, you can start it from the Windows Start menu. Select *Start/Programs/3Com 11 Mbps Wireless LAN/3Com WLAN Launcher*.
- 2 In WLAN Launcher, click the *Padlock* icon.

- 3 In the Security/Network window, WLAN Service Area displays the name of the wireless network with which the wireless PC client can associate. You can change this setting as follows:

Attach to any WLAN Service Area automatically

Check this box to associate the client automatically to the WLAN service area with the best signal strength. This is recommended.

Specify a WLAN Service Area

First uncheck the *Attach to any WLAN Service Area automatically* box. Then, you can either enter the name of a service area (up to 32 characters long), or select from recently used WLAN service areas or from all available WLAN Service Areas within the range of the client.

Security Settings

You can set the level of security used to protect the network communications between the client and the access point from interception by unintended recipients. The security settings must match those that the network administrator has set up on the network. Some security levels require you to supply encryption settings. The levels of security are:

| | |
|--------------------------------------|--|
| No Security (Open System) | No encryption is used. The network communications could be intercepted by unintended recipients. |
| 40-bit Shared Key (Wi-Fi) | This option encrypts the wireless transmissions to protect your data and is compatible with other Wi-Fi certified wireless PC clients and access points from other manufacturers. |
| 128-bit Shared Key | This option encrypts the wireless transmissions to protect your data and is compatible with wireless PC clients and access points from other select manufacturers. |
| 128-bit Dynamic Security Link | This option can only be used with a 3Com 11 Mbps Wireless LAN access point 6000 units. It is the highest level of security, in which you must enter a user name and password. These must match the user name and password set up by the administrator on the access points with which you associate. Each network session automatically creates a unique, one-time, 128-bit encryption key. You never have to enter a key. |

To maintain wireless association between clients and access points, follow these guidelines:

- The security setting on the client and the access points must match exactly.
- For 40-bit Shared Key (Wi-Fi) or 128-bit Shared Key security, the encryption settings on the client and the access point must match exactly.
- For 128-bit Dynamic Security Link security, the user name and password on the client and the access points must match exactly.

40-bit Shared Key (Wi-Fi) Encryption Settings

40-bit Shared Key (Wi-Fi) security requires you to set up encryption keys. Your network administrator sets up encryption keys for the wireless network and gives you an encryption string or hexadecimal keys.

- An encryption string is a string of characters 6 to 30 characters long. The string can be any combination of letters and numbers and is case sensitive. The

encryption string can be used only with other 3Com 11 Mbps Wireless LAN clients and access point 6000 units.

- Hexadecimal keys are sequences of hexadecimal digits arranged into four keys. A hexadecimal digit may be a letter from A to F or a number from 0 to 9. This type of encryption is compatible with Wi-Fi certified equipment from other manufacturers.

To enter an encryption string:

- 1 In the Security/Network window, select *40-bit Shared Key (Wi-Fi)* from the Security setting list.
- 2 Click *Encryption Key Settings*.
- 3 In the next window, select *Specify Encryption String*.
- 4 Type the encryption string in the space provided.
- 5 Click *OK* when finished.

To enter hexadecimal keys:

- 1 In the Security/Network window, select *40-bit Shared Key (Wi-Fi)* from the Security setting list.
- 2 Click *Encryption Key Settings*.
- 3 In the next window, select *Specify Encryption Keys*.
- 4 Enter the key settings.
You must enter settings for all four keys.
- 5 Click one of the radio buttons to select a key to use.
- 6 Click *OK* when finished.

128-bit Shared Key Encryption

128-bit Shared Key security requires you to set up encryption keys using one of the following:

- An *encryption string*, which is a string of case-sensitive characters 6 to 30 characters long. The string is a combination of letters and numbers and is case sensitive. The encryption string can be used only with other 3Com 11 Mbps Wireless LAN clients and access points, and must match exactly across all devices in the wireless network.
- Hexadecimal keys (for use with compatible equipment from other manufacturers). The key sequences must match exactly across all devices in the wireless network.

Ask your system administrator for the encryption string or hexadecimal keys.

To enter an encryption string:

- 1 In the Security settings window, select *128-bit Shared Key* and click *Next*.
- 2 In the Encryptions Settings window, select *Text Message*.
- 3 Type the encryption string in the spaces provided.
- 4 Click *Next* when finished.

To enter hexadecimal keys:

- 1 In the Security settings window, select *128-bit Shared Key* and click *Next*.
- 2 In the Encryptions Settings window, select *Hexadecimal Keys*.
- 3 Type the encryption key sequences in the spaces provided. You must enter key sequences for all four keys.
- 4 Click one of the radio buttons to select a key to use for encrypting data from your computer.
- 5 Click *Next* when finished.

128-bit Dynamic Security Link Settings

128-bit Dynamic Security Link security requires a user name and password. Ask your network administrator for the user name and password.

- 1 In the Network/Security window, select *128-bit Dynamic Security Link* from the Security setting list.
- 2 Click *Apply*.
- 3 In the next window, type the user name and password in the spaces provided.
- 4 Click *OK* when finished.

After you log in successfully the first time, Windows remembers the password the next time you log in. Your network administrator may require you to log on every time.

Setting up Auto Network Connect

Auto Network Connect ensures network association even when traversing subnets. The client automatically associates with the nearest access point that has compatible encryption settings and automatically obtains a valid IP address.

This option requires a Dynamic Host Control Protocol (DHCP) server, and only works when associating with a 3Com 11 Mbps Wireless LAN Access Point 6000. The client's network configuration must be set to obtain its IP address automatically. For more information on DHCP, see the documentation for your operating system.

Follow these steps to set up Auto Network Connect:

- 1 In the Windows system tray, click the 3Com icon to display the 3Com WLAN Launcher.
If the 3Com WLAN Launcher is not already running, you can start it from the Windows Start menu. Select *Start/Programs/3Com 11 Mbps Wireless LAN/3Com WLAN Launcher*.
- 2 In WLAN Launcher, click the *Padlock* icon.
- 3 In the Security/Network window, check the *Attach to any WLAN Service Area automatically* box.
- 4 Click the *Options* tab.
- 5 In the Options window, check the *Automatically release/renew the IP address* box.
- 6 Click *OK*.

Setting up an Ad Hoc Network

An ad hoc network is useful when you are out of the range of an access point or when you want to share files with others, but not with the entire network. When two or more clients are in ad hoc mode and within range of each other, they can communicate with each other directly through their 3Com Wireless LAN clients without an access point. One client starts the ad hoc session and names it. Other clients can then join the ad hoc network session.

Starting an Ad Hoc Network Session

- 1 In the Windows system tray, click the 3Com icon to display the 3Com WLAN Launcher.
If the 3Com WLAN Launcher is not already running, you can start it from the Windows Start menu. Select *Start/Programs/3Com 11 Mbps Wireless LAN/3Com WLAN Launcher*.
- 2 In WLAN Launcher, click the *Computer* icon.
- 3 In the Ad hoc Network Login window, type a new network name in the space provided. This name identifies your ad hoc network to the rest of the clients.
- 4 Select a security setting.
You can select *No Security (Open System)* or *40-bit Shared Key (Wi-Fi)*. If you select *40-bit Shared Key (Wi-Fi)*, enter the required encryption information. (For details on encryption settings, see "40-bit Shared Key (Wi-Fi) Encryption Settings" on page 24.)
This security setting only applies to this ad hoc network and only affects the transmissions among the participating ad hoc clients. It does not affect security settings for communication with access points.
- 5 Select the performance mode.
If only 3Com 11 Mbps Wireless LAN clients will be participating in the ad hoc network session, click the *Enhanced* radio button. If clients from other manufacturers will be participating, click the *Wi-Fi interoperable* radio button.
- 6 Click *OK*.

Joining an Ad Hoc Network Session

The TCP/IP or NetBEUI protocol settings of clients participating in an ad hoc network session must match. For example, TCP/IP must be configured on the same subnet and NetBEUI must be configured with the same workgroup.

After a client has started an ad hoc network session, other clients may join it as follows:

- 1 In the Windows system tray, click the 3Com icon to display the 3Com WLAN Launcher.
If the 3Com WLAN Launcher is not already running, you can start it from the Windows Start menu. Select *Start/Programs/3Com 11 Mbps Wireless LAN/3Com WLAN Launcher*.
- 2 In WLAN Launcher, click the *Computer* icon.
- 3 In the Ad-hoc Network Login window, select the network name of the ad hoc session you are joining from the drop-down list.

- 4 Set your security to match that of the client that started the ad hoc session.
- 5 Set the performance mode to match that of the client that started the ad hoc session.
- 6 Click OK.

Ending an Ad Hoc Network Session

There are two ways to end an ad hoc network session and reassociate with an access point:

- Right-click the 3Com icon in the Windows system tray and select *End Ad Hoc/Connect to AP* from the menu.
- Display the WLAN Launcher and click the *Access Point* icon.

Changing Power, Traffic, and Address Settings

You can change power management, network traffic, and IP address settings as follows:

- 1 In the Windows system tray, click the 3Com icon to display the 3Com WLAN Launcher.
If the 3Com WLAN Launcher is not already running, you can start it from the Windows Start menu. Select *Start/Programs/3Com 11 Mbps Wireless LAN/3Com WLAN Launcher*.
- 2 In WLAN Launcher, click either the *Padlock* or the *Hammer* icons.
- 3 In the WLAN Configuration Utility window, click the *Options* tab.
In the Options window you can change the settings described below.

Automatically manage power based on the detected power source

When this radio button is selected, and if your computer is able to detect its power source automatically, the Ethernet Bridge automatically switches between the following modes:

Power saving mode—Recommended when the computer is using battery power.

Continuous access mode—Gives faster network performance and is recommended when the computer is using AC power.

Manually set the power management

When this radio button is selected, you can select the power mode manually. You may want to select this mode, for example, if your computer cannot detect its power source or if you want to improve performance by forcing continuous access even though you are using battery power.



Windows NT users must select the power mode because the operating system cannot detect its power source.

Network Traffic Accelerator

If only 3Com 11 Mbps Wireless LAN equipment is being used, it is recommended that you turn this option on to increase the rate at which traffic is handled.

Automatically release/renew the IP address

Your Internet Protocol address (IP address) contains the information that allows network traffic to find its way to your computer.

This option requires a Dynamic Host Control Protocol (DHCP) server, and only works when associating with a 3Com 11 Mbps Wireless LAN Access Point 6000. The client's network configuration must be set to obtain its IP address automatically. For more information on DHCP, refer to the documentation for your operating system.

When this box is checked, your computer automatically requests another IP address if you travel outside of your subnet, so the network connection remains active. Leave the box unchecked if your network does not have a DHCP server.

To force the system to release and renew an IP address, click *Release/Renew Now*. You may want to click this button, for example, if you cannot establish association with the network or if you roam in an installation that has multiple access points and you lose network association.

Changing Your Password

The Change Password utility lets you update the password used in the access control list of the access point with which the client is associated. This is only applicable if you have configured the client to use 128-bit Dynamic Security Link security.

Because access points maintain separate User Access Lists, you must update the password separately on each access point that you associate with.

- 1 In the Windows system tray, click the 3Com icon to display the 3Com WLAN Launcher.

If the 3Com WLAN Launcher is not already running, you can start it from the Windows Start menu. Select *Start/Programs/3Com 11 Mbps Wireless LAN/3Com WLAN Launcher*.

- 2 In WLAN Launcher, click the *Hammer* icon.
- 3 In the Tools window, double-click the *Change Password* icon.
- 4 In the Change Password dialog box, follow the instructions to change the password and click *OK*.

Running Diagnostics

The Diagnostics tool checks adapter presence, network connection, signal strength, and link quality.

- 1 In the Windows system tray, click the 3Com icon to display the 3Com WLAN Launcher.

If the 3Com WLAN Launcher is not already running, you can start it from the Windows Start menu. Select *Start/Programs/3Com 11 Mbps Wireless LAN/3Com WLAN Launcher*.

- 2 In WLAN Launcher, click the *Hammer* icon.
- 3 In the Tools tab, double-click the *Diagnostics* icon.
- 4 Check the boxes next to the tests you want to run.
- 5 Click *Start*.

The tests run and the results appear in the status column of the Tools tab.

Viewing Configuration Information

The Info tab summarizes configuration information about the Ethernet Bridge and the wireless LAN. To view configuration information:

- 1 In the Windows system tray, click the 3Com icon to display the 3Com WLAN Launcher.

If the 3Com WLAN Launcher is not already running, you can start it from the Windows Start menu. Select *Start/Programs/3Com 11 Mbps Wireless LAN/3Com WLAN Launcher*.

- 2 In WLAN Launcher, click either the *Padlock* or the *Hammer* icons.
- 3 In the WLAN Configuration Utility window, click the Info tab.

The following information appears in the *Info* tab:

| Item | Description |
|----------------------------|--|
| Driver version | Useful for troubleshooting. |
| Firmware version | Useful for troubleshooting. |
| MAC Address | Unique hardware name for your Ethernet Bridge. |
| IP Address | Your computer's current IP address. |
| Card Type | Type of client adapter; for example, PCMCIA or PCI. |
| Power Source | AC power or battery power. |
| Network Type | Access point or Ad hoc. |
| Security Settings | Type of security set for the Ethernet Bridge. For information on security, see "Security Settings" on page 24. |
| WLAN Service Area | If the network type is access point, shows the currently associated WLAN service area. For information on the WLAN service area, see "Changing Network and Security Settings" on page 23. If the network type is Ad hoc, this item does not appear in the list. |
| Channel | Radio frequency (RF) channel. |
| Network Name | If the network type is Ad hoc, shows the name of the ad hoc network. For information on ad hoc networks, see "Setting up an Ad Hoc Network" on page 27. If the network type is access point, this item does not appear in the list. |
| Access Point MAC Address | Unique hardware name for the associated access point. If the network type is Ad hoc, this field shows N/A. |
| Power Management | Power mode. For more information on power modes, see "Changing Power, Traffic, and Address Settings" on page 28. |
| Associated Signal Strength | Indicates the strength of the radio signal. All light green indicates the best signal; all dark green indicates no signal. |
| Data Rate | Data transfer speed. For example, 11 Mbps, 5.5 Mbps, 2 Mbps, or 1 Mbps. |

5

TROUBLESHOOTING

Diagnosing Problems

The icons in the 3Com WLAN Launcher window indicate the network status and can help you diagnose problems. To display the 3Com WLAN Launcher, double-click the 3Com icon in the Windows system tray.

If you have difficulty using the Ethernet Bridge, try the solutions in the following table. If you continue to experience difficulty, see "Upgrading Ethernet Bridge Firmware" on page 36 .

| Symptom | Solutions |
|--|--|
| Ethernet Bridge LED is off. | Make sure the card is properly inserted in the slot. Check the Ethernet Bridge icon in the Windows control panel and make sure that the card type can be recognized. |
| Ethernet Bridge LED is on, but not blinking. | Make sure the card is properly inserted in the slot . Uninstall the card and reinstall it. |
| Ethernet Bridge installs as an unknown device. | The Windows Add Hardware Wizard was unable to locate the Ethernet Bridge drivers. You may have had no CD or the wrong CD inserted in the drive, or the 3Com CD may not have been ready when the wizard looked for the drivers. Remove the unknown device and repeat the installation procedure. Make sure that you insert the 3Com CD when the installation calls for it and that you wait for it to come up to speed in the drive. |
| Installation program does not finish. The driver fails to load. | There may be a resource conflict. Use the Device Manager to resolve resource conflicts. Select <i>System</i> from the Control Panel, and then click the Device Manager tab. |
| Network association is intermittent. In the WLAN Launcher window, the green dotted line between associated devices blinks to red with an X, indicating that the radio signal is weak. The diagnostic signal strength or link quality tests fail. | Make sure that the XJACK antenna attached to the end of the card is extended. Try reorienting the antenna. For best use of the antenna: <ul style="list-style-type: none">Keep the area around the antenna clear from materials that could block radio transmission, such as metal objects, electronic devices, and cordless telephones.If the signal is weak, change the direction of the antenna slightly.If necessary, move your computer a few inches to find a better signal. |
| Computer operating system does not recognize the card . In the WLAN Launcher window, you see a yellow X on the client icon. The diagnostic adapter presence test fails. | Make sure the card is properly inserted in the slot . Make sure that PCMCIA support is installed. Check whether another client is already in use. Windows 95, Windows 98, Windows Millennium Edition (Windows Me), and Windows 2000: Check whether the computer has a Plug and Play BIOS. Windows NT: Make sure CardWizard or Softex Card Executive is installed on your computer. |

| Symptom | Solutions |
|---|--|
| Client cannot associate with an access point. In the WLAN Launcher window, you see a red dotted line with an X. Diagnostic network connection test fails. | Click the <i>Padlock</i> icon to display Security/Network settings. Make sure that the WLAN Service Area set on the client matches that set on the access point. Or, set the client to <i>Attach to any WLAN Service Area</i> . Make sure that encryption is set up correctly and matches security set on the access point. See “Changing Network and Security Settings” on page 23 and “40-bit Shared Key (Wi-Fi) Encryption Settings” on page 24. If you are associating with a 3Com AirConnect® access point, make sure that the Short RF Preamble parameter is disabled on the access point. |
| There is no network association when the computer becomes active again after being in sleep mode or after the client is removed and reinserted. | Log out and log in again, or restart the computer to restore the connections. |
| Client cannot communicate with the network. | Make sure that fixed IP settings are correct. If you are connecting to a wired network, make sure that the access point you are associated with is connected to the wired network. If you are using a DHCP server, release/renew the IP address. |
| Client is not working under Windows NT. | Make sure CardWizard or Softex Card Executive is installed. |

The Ethernet Bridge LED indicates the following:

| Condition | Description |
|----------------------|---|
| Off | The computer does not recognize the Ethernet Bridge. |
| On, but not blinking | The computer recognizes the Ethernet Bridge, but the card is not functioning. |
| Blinking | The Ethernet Bridge is operating. The blink speed ranges from approximately once every 2.5 seconds to approximately 10 times per second. Slow blinking indicates that the client is either not associated to an access point or is associated at a slow rate. Fast blinking indicates a good network association and fast transmission. |

Using the Tools Window

In the Tools window you can change your password, run diagnostics, or upgrade the Ethernet Bridge firmware. If you have 3Com Administrator Utilities, you can also connect to the access point and perform management administration functions.

See the following topics for more information:

- “Changing Your Password” on page 29
- “Running Diagnostics” on page 29
- “Upgrading Ethernet Bridge Firmware” on page 36

Uninstalling Software Utilities

If you want to uninstall the 3Com 11 Mbps Wireless LAN software utilities, you can either use the standard operating system procedure for removing programs or use the following shortcut procedure:

- 1 From the Windows Start menu, select *Programs*, then *3Com 11Mbps Wireless LAN*, then *Uninstall 3Com 11Mbps Wireless LAN*.
- 2 When prompted to confirm, click *OK*.

Updating Ethernet Bridge Driver Software

To update your Ethernet Bridge driver software, find your operating system below, then follow the procedure.

Windows 95, Windows 98, and Windows 98 SE

- 1 Turn on the power to the computer and start Windows.
- 2 From the Windows Start menu, select *Settings*, then select *Control Panel*.
- 3 Double-click the *System* icon.
- 4 Select the *Device Manager* tab.
- 5 In the Device Manager Window, expand the Network Adapters list.
- 6 Select *3Com 3CRWE62092A* and click *Properties*.
- 7 Select the *Driver* tab and click *Update Driver*.
- 8 In the Update Device Driver Wizard, follow the prompts to install the upgrade.
- 9 When prompted, click *Restart* for the changes to take effect.
After the computer restarts, the 3Com 11 Mbps Wireless LAN Setup window appears, in which you specify the Ethernet Bridge configuration.
- 10 In the 3Com 11 Mbps Wireless LAN Client Setup window, select *Typical* and click *Next*.
For the fastest installation, it is recommended that you use the typical settings. You can customize the configuration later. Typical configures the Ethernet Bridge with the following default values:
WLAN Service Area—Attach to any WLAN Service Area automatically
Security Setting—No security (Open system)
- 11 In the Summary window, review the Ethernet Bridge setup. To install the software utilities, check the *Start client software installation when finished* box.
- 12 If the 3Com WLAN Launcher is already running, it is recommended that you exit it and end the Ethernet Bridge service routine by doing the following:
 - a In the Windows system tray, right-click the *3Com* icon and select *Exit*.
 - b Press *Ctrl+Alt+Delete* to bring up the Close Program window.
 - c In the Close Program window, select *SR Services* and click *End Task*.
- 13 Click *Finish* to complete the Ethernet Bridge setup and start the software utilities installation.

The 3Com 11 Mbps Wireless LAN Setup program starts.

- 14 Read the Welcome page and click *Next*.
- 15 In the Setup Complete window, click *Finish*.
- 16 If you are prompted to restart your computer, do so.

The software is now updated.

Windows Millenium Edition (Windows Me)

- 1 Turn on the power to the computer and start Windows.
 - 2 From the Windows Start menu, select *Settings*, then select *Control Panel*.
 - 3 Double-click the *System* icon, then select *Device Manager*.
 - 4 In the Device Manager window, expand the Network Adapters list.
 - 5 Select *3Com 3CRWE62092A* and click *Properties*.
 - 6 Select *Driver* and click *Update Driver*.
 - 7 In the Update Device Driver Wizard, follow the prompts to install the upgrade.
 - 8 When prompted, click *Restart* for the changes to take effect.
 - 9 If the 3Com WLAN Launcher is already running, it is recommended that you exit it and end the Ethernet Bridge service routine:
 - a In the Windows system tray, right-click the *3Com* icon and select *Exit*.
 - b Press *Ctrl+Alt+Delete* to bring up the Close Program window.
 - c In the Close Program window, select *SR Services* and click *End Task*.
 - 10 Run the Setup program by doing the following:
 - a From the Windows Start menu, select *Run*.
 - b In the Run dialog box, enter the path to start the Setup program on the 3Com CD. For example: **d:srsetup.exe**.
- The 3Com 11 Mbps Wireless LAN Setup program starts.
- 11 Read the Welcome page and click *Next*.
 - 12 In the Setup Complete window, click *Finish*.
 - 13 If you are prompted to restart your computer, do so.

The software is now updated.

Windows 2000

- 1 Turn on the power to the computer and start Windows.
- 2 Log in to the Windows 2000 Administrator account.
- 3 From the Windows Start menu, select *Settings*, then *Control Panel*.
- 4 Double-click the *System* icon.
- 5 In the System Properties window, select the *Hardware* tab.
- 6 In the next window, click *Device Manager*.
- 7 In the Device Manager window, expand the Network Adapters list.
- 8 Double-click *3Com 3CRWE62092A*.

- 9 In the next window, select the *Driver* tab.
- 10 Click *Update Driver*.
- 11 In the Upgrade Device Driver Wizard, follow the prompts to install the upgrade:
 - a In the Install Hardware Device Driver window, click the *Display list of known drivers so that I can choose a specific driver* radio button and click *Next*.
 - b In the next window, click *Have Disk*. In the dialog box, specify the directory where you downloaded the software and click *Continue*.
- 12 When the installation is finished, click *Finish*.

The 3Com 11 Mbps Wireless LAN Setup window appears, in which you specify the Ethernet Bridge configuration.
- 13 In the 3Com 11 Mbps Wireless LAN Client Setup window, select *Typical* and click *Next*.

For the fastest installation, it is recommended that you use the typical settings. You can customize the configuration later. *Typical* configures the Ethernet Bridge with the following default values:

WLAN Service Area—Attach to any WLAN Service Area automatically
Security Setting—No security (Open system)
- 14 In the Summary window, review the Ethernet Bridge setup. To install the software utilities, check the *Start client software installation when finished* box.
- 15 If the 3Com WLAN Launcher is already running, it is recommended that you exit it and end the Ethernet Bridge service routine:
 - a In the Windows system tray, right-click the *3Com* icon and select *Exit*.
 - b Press *Ctrl+Alt+Delete* to bring up the Close Program window.
 - c In the Close Program window, select *SR Services* and click *End Task*.
- 16 Click *Finish* to complete the Ethernet Bridge setup and start the software utilities installation.

The 3Com 11 Mbps Wireless LAN Setup program starts.
- 17 Read the Welcome page and click *Next*.
- 18 In the Setup Complete window, click *Finish*.
- 19 If you are prompted to restart your computer, do so.

The software is now updated.

Windows NT

- 1 Turn on the power to the computer and start Windows.
- 2 Log in to the Windows NT Administrator account.
- 3 From the Windows Start menu, select *Settings*, then select *Control Panel*.
- 4 Double-click the Network icon.
- 5 In the Network window, select the *Adapters* tab.
- 6 In the Adapters tab, click *Update*.
- 7 In the Windows NT Setup window, enter the path to the directory where you downloaded the software and click *Continue*.

- 8 Follow the prompts to update the driver.
- 9 Restart the computer.
- 10 If the 3Com WLAN Launcher is already running, it is recommended that you exit it and end the Ethernet Bridge service routine:
 - a In the Windows system tray, right-click the 3Com icon and select *Exit*.
 - b Press *Ctrl+Alt+Delete* to bring up the Close Program window.
 - c In the Close Program window, select *SR Services* and click *End Task*.
- 11 Run the Setup program:
 - a From the Windows Start menu, select *Run*.
 - b In the Run dialog box, enter the path to start the Setup program on the 3Com CD. For example, **d:srsetup.exe**.

The 3Com 11 Mbps Wireless LAN Setup program starts.
- 12 Read the Welcome page and click *Next*.
- 13 In the Setup Complete window, click *Finish*.
- 14 If you are prompted to restart the computer, do so.

The software is now updated.

Upgrading Ethernet Bridge Firmware


Firmware is the software that is installed on the Ethernet Bridge at the factory. Some problems can be solved by installing a new version of the firmware (*upgrading firmware*). The following firmware upgrade procedure describes how to download a firmware update from the 3Com customer support Web site and install it on your Ethernet Bridge.

- 1 Log on to the 3Com Web site at <http://www.3com.com>.
- 2 Navigate to the product support page.
- 3 Navigate to the software download page and locate the files you want to download.
- 4 Follow the prompts to download the files into a directory on your computer.
- 5 Make sure that the computer is plugged into an AC power source and that the Ethernet Bridge is inserted.
- 6 Double click the 3Com icon in the Windows system tray.
- 7 In WLAN Launcher, click the *Hammer* icon.
- 8 In the Tools tab, double click the *Firmware Upgrade* icon.
- 9 In the *Firmware Upgrade Tool* window, enter the firmware file location path in the space provided. This is the directory name you selected when you downloaded the firmware upgrade from the 3Com customer support Web site.

If you do not remember the file location, click *Browse*, locate the firmware upgrade file you downloaded, and click *OK*. The file is loaded automatically into the Firmware Filename space.
- 10 Click *Upgrade*.
- 11 Read the Firmware Upgrade Warning information and click *OK*.

When the upgrade is finished, restart the computer.



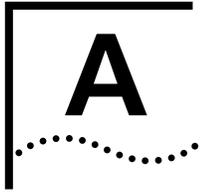

TECHNICAL SUPPORT

3Com provides easy access to technical support information through a variety of services. This appendix describes these services.

Information contained in this appendix is correct at time of publication. For the most recent information, 3Com recommends that you access the 3Com Corporation World Wide Web site.

Online Technical Services

3Com offers worldwide product support 24 hours a day, 7 days a week, through the following online systems:

- World Wide Web site
- 3Com Knowledgebase Web Services
- 3Com FTP site

World Wide Web Site

To access the latest networking information on the 3Com Corporation World Wide Web site enter this URL into your Internet browser:

`http://www.3com.com/`

This service provides access to online support information, such as technical documentation and software library, as well as support options that range from technical education to maintenance and professional services.

3Com Knowledgebase Web Services

This interactive tool contains technical product information compiled by 3Com expert technical engineers around the globe. Located on the World Wide Web at **`http://knowledgebase.3com.com`**, this service gives all 3Com customers and partners complementary, around-the-clock access to technical information on most 3Com products.

3Com FTP Site

Download drivers, patches, software, and MIBs across the Internet from the 3Com public FTP site. This service is available 24 hours a day, 7 days a week.

To connect to the 3Com FTP site, enter the following information into your FTP client:

- Hostname: **`ftp.3com.com`**
- Username: **`anonymous`**
- Password: **`<your Internet e-mail address>`**



You do not need a user name and password with Web browser software, such as Netscape Navigator and Internet Explorer.

Support from Your Network Supplier

If you require additional assistance, consult your network supplier. Many suppliers are authorized 3Com service partners who are qualified to provide a variety of services, including network planning, installation, hardware maintenance, application training, and support services.

When you contact your network supplier for assistance, have the following information ready:

- Product model name, part number, and serial number
- A list of system hardware and software, including revision levels
- Diagnostic error messages
- Details about recent configuration changes, if applicable

If you are unable to consult your network supplier, see the following section on how to contact 3Com.

Support from 3Com

If you are unable to obtain assistance from the 3Com online technical resources or from your network supplier, 3Com offers technical telephone support services. To find out more about your support options, call the 3Com technical telephone support phone number at the location nearest you.

When you contact 3Com for assistance, have the following information ready:

- Product model name, part number, and serial number
- A list of system hardware and software, including revision levels
- Diagnostic error messages
- Details about recent configuration changes, if applicable

Here is a list of worldwide technical telephone support numbers. These numbers are correct at the time of publication. Refer to the 3Com Web site for updated information.

| Country | Telephone Number |
|----------------------------|--|
| Asia, Pacific Rim | |
| Australia | 1 800 678 515 |
| Hong Kong | 800 933 486 |
| India | +61 2 9937 5085 or 000800 6501111 |
| Indonesia | 001 800 61 009 |
| Japan | 03 5783 1270 |
| Malaysia | 1800 801 777 |
| New Zealand | 0800 446 398 |
| Pakistan | +61 2 9937 5083 |
| Philippines | 1235 61 266 2602 |
| P.R. of China | 10800 61 00137 or 021 6350 1590 or 00800 0638 3266 |
| Singapore | 800 6161 463 |
| S. Korea | 82 2 3455 6455 |
| From anywhere in S. Korea: | 00798 611 2230 |
| From Seoul: | 00798 611 2230 |
| Taiwan, R.O.C. | 0080 611 261 |
| Thailand | 001 800 611 2000 |

| Country | Telephone Number |
|--|--|
| Europe, Middle East, and Africa | |
| From anywhere in these regions, call: | +44 (0)1442 435529 phone +44 (0)1442 436722 fax |
| Europe and South Africa | |
| From the following countries, you may use the toll-free numbers: | |
| Austria | 0800 297468 |
| Belgium | 0800 71429 |
| Denmark | 800 17309 |
| Finland | 0800 113153 |
| France | 0800 917959 |
| Germany | 0800 1821502 |
| Hungary | 06800 12813 |
| Ireland | 1800 553117 |
| Israel | 1800 9453794 |
| Italy | 800 8 79489 |
| Luxembourg | 0800 3625 |
| Netherlands | 0800 0227788 |
| Norway | 800 11376 |
| Poland | 00800 3111206 |
| Portugal | 0800 831416 |
| South Africa | 0800 995014 |
| Spain | 900 983125 |
| Sweden | 020 795482 |
| Switzerland | 0800 55 3072 |
| U.K. | 0800 966197 |
| Latin America | |
| Brazil | 0800 13 3266 |
| Mexico | 01 800 849CARE |
| Puerto Rico | 800 666 5065 |
| Central and South America | AT&T +800 998 2112 |
| North America | |
| | 1 800 527 8677 |

Returning Products for Repair

Before you send a product directly to 3Com for repair, you must first obtain an authorization number. Products sent to 3Com without authorization numbers will be returned to the sender unopened, at the sender's expense. To obtain an authorization number, call or fax:

| Country | Telephone Number | Fax Number |
|---------------------------------------|-----------------------------------|----------------|
| Asia, Pacific Rim | +65 543 6500 | +65 543 6348 |
| Europe, South Africa, and Middle East | +31 30 6029900 | +31 30 6029999 |
| Central and South America | 525 201 0075 | |
| Argentina | 0810 222 3266 | |
| Bolivia | 511 241 1691 | |
| Brazil | 0800 133266 or 55 11 5643 2700 | |
| Caribbean | 525 201 0004 | |
| Chile | 562 240 6200 | |
| Colombia | 525 201 0004 | |
| Ecuador | 525 201 0004 | |
| Mexico | 525 201 0004 | |
| Paraguay | 525 201 0004 | |
| Peru | 511 241 1691 | |
| Uruguay | 525 201 0004 | |
| Venezuela | 525 201 0004 | |

From the following countries, you may call the toll-free numbers; select option 2 and then option 2:

| | | |
|-------------------|---|-----------------------------------|
| Austria | 0800 297468 | |
| Belgium | 0800 71429 | |
| Denmark | 800 17309 | |
| Finland | 0800 113153 | |
| France | 0800 917959 | |
| Germany | 0800 1821502 | |
| Hungary | 00800 12813 | |
| Ireland | 1800553117 | |
| Israel | 1800 9453794 | |
| Italy | 1678 79489 | |
| Netherlands | 0800 0227788 | |
| Norway | 800 11376 | |
| Poland | 00800 3111206 | |
| Portugal | 0800 831416 | |
| South Africa | 0800 995014 | |
| Spain | 900 983125 | |
| Sweden | 020 795482 | |
| Switzerland | 0800 55 3072 | |
| U.K. | 0800 966197 | |
| U.S.A. and Canada | 1 800 NET 3Com (1 800 638 3266) | 1 408 326 7120 (not toll-free) |
| | Enterprise Customers: 1 800 876 3266 | |

INDEX

Numbers

128-bit Dynamic Security Link 17, 24, 26
128-bit Shared Key Encryption 17, 25
3Com Administrator Utilities CD 9
3Com CDs 9
3Com End User Utilities CD 9
3Com icon, in Windows system tray 20
3Com Knowledgebase Web Services 39
3Com URL 39
3Com WLAN Configuration Utility 20
3Com WLAN Launcher 19
40-bit Shared Key (Wi-Fi) security 16, 24

A

access point 5
ad hoc network 5, 6, 27
antenna, adjusting 10
association 5
association, maintaining across
 subnets 26
Auto Network Connect 26

B

base station 5
buttons, 3Com WLAN Launcher 19

C

changing passwords
 user 29
clients, wireless, defined 5
computer requirements 9
configuration 6
 ad hoc, defined 6
 custom 16
 examples 6
 utility 20
configuring network settings 23
confirming the installation 15
connection (association) 5
continuous access mode 28
custom configuration 16

D

DHCP server 26, 29
disk factory 10
diskettes, installation from 10
Dynamic Security Link 24, 26

E

encryption 24
 string 16, 17, 24, 25
Ethernet status display 20
Extended Service Set Identity (ESSID) 6

F

firmware upgrade 36
 PC Card 36

G

guidelines, security 24

H

hexadecimal keys 25

I

improving reception 10
Info tab 21
installation 11
 confirming 15
 firmware
 PC Card 36
 making diskettes 10
 media 9
 typical 12, 14
installation media requirements 9
Internet Protocol address 28
IP address 28
 releasing and renewing 29
 setting 26, 28

L

LAN, wireless 5
launcher 19
LED
 PC Card 32

M

making installation diskettes 10
MIBs, downloading 39

N

network 5
 ad hoc 5, 6, 27
 settings, configuring 23
network association, defined 5
network supplier support 40
Network/Security tab 21, 23
No Security 24

O

online technical services 39
open system 24
operating system requirements 9
Options tab 21

P

password
 changing user 29
PC Card
 LED 32
power management
 continuous access mode 28
 power saving mode 28
 setting 28
product registration 7

R

reception 10
registration 7
requirements 9
returning products for repair 42
roaming, defined 5

S

security 5
 128-bit Dynamic Security Link 17,
 24, 26
 128-bit Shared Key 17, 25
 40-bit Shared Key (Wi-Fi) 16, 24
 and network settings 23
 guidelines 24
 no security 24
 settings 24
server, DHCP 26, 29
service area, defined 6
set up, wireless LAN 6
settings
 encryption 24
 network, configuring 23
 security 24
 security and network 23
starting the 3Com WLAN Launcher 19
status 19
 display, Ethernet 20
string, encryption 25

T

technical support
 3Com Knowledgebase Web
 Services 39
 3Com URL 39
 network suppliers 40
 product repair 42
Tools tab 21, 22
troubleshooting 31
 PC Card firmware 36
typical installation 12, 14

U

upgrading
 PC Card firmware 36
URL 39

W

warranty, registration 7
Web browser requirements 9
Windows system tray, 3Com icon 20
wireless 5
 association (connection) 5
 clients, defined 5
wireless LAN 5
wireless LAN service area 6, 23
WLAN Configuration Utility 20
WLAN launcher 19
WLAN service area 6
 setting up 23
World Wide Web (WWW) 39

REGULATORY COMPLIANCE INFORMATION

FCC RADIO-FREQUENCY EXPOSURE NOTICE

This device generates and radiates radio-frequency energy. In order to comply with FCC radio-frequency radiation exposure guidelines for an uncontrolled environment, this equipment has to be installed and operated while maintaining a minimum body to antenna distance of 5 cm.

This product does not contain any user serviceable components. Any unauthorized product changes or modifications will invalidate 3Com's warranty and all applicable regulatory certifications and approvals.

FCC PART 15 NOTICE (APPLICABLE TO USE WITHIN THE USA)

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

WARNING: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from the one which the receiver is connected to.
- Consult the dealer or an experienced radio/TV technician for help.

The user may find the following booklet prepared by the Federal Communications Commission helpful:

The Interference Handbook

This booklet is available from the U.S. Government Printing Office, Washington, D.C. 20402. Stock No. 004-000-00345-4.

MANUFACTURER'S DECLARATION OF CONFORMITY

3Com Corporation
5400 Bayfront Plaza
P.O. Box 58145
Santa Clara, CA 95054-8145
(408) 326-5000

Declares that the product:

Date: 1 December 2001

Brand Name: 3Com Corporation

Model Number: WL-308

Equipment Type: Wireless Ethernet LAN Bridge

Complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

INDUSTRY CANADA NOTICE (APPLICABLE TO USE WITHIN CANADA)

This Class B digital apparatus complies with Canadian ICES-003.

To prevent radio interference to the licensed service, this device is intended to be operated indoors and away from windows to provide maximum shielding. Equipment (or its transmit antenna) that is installed outdoors is subject to licensing.

AVIS DE CONFORMITÉ À LA RÉGLEMENTATION D'INDUSTRIE CANADA

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Pour empêcher que cet appareil cause du brouillage au service faisant l'objet d'une licence, cet appareil doit être utilisé à l'intérieur seulement et devrait être placé loin des fenêtres afin de fournir un écran de blindage maximal.

EUROPEAN COMMUNITY - CE NOTICE

Marking by the symbol:



indicates compliance of this equipment to the R&TTE Directive 1999/5/EC. Such marking is indicative that this equipment meets or exceeds the following technical standards:

- ETS 300 328 - Electromagnetic compatibility and Radio spectrum Matters (ERM); Wideband Transmission systems; data transmission equipment operating in the 2,4 GHz ISM band and using spread spectrum modulation techniques
- ETS 300 826 - Electromagnetic compatibility and Radio spectrum Matters (ERM); ElectroMagnetic Compatibility (EMC) standard for 2,4 GHz wideband transmission systems and High Performance Radio Local Area Network (HIPERLAN) equipment
- ES 59005 - Considerations for the evaluation of human exposure to electromagnetic fields (EMF's) from mobile telecommunication equipment (MTE) in the frequency range 30 MHz - 6 GHz
- EN 55022 - Limits and Methods of Measurement of Radio Interference Characteristics of Information Technology Equipment. (CISPR 22 Class B).
- EN 60950 - Safety of information technology equipment, including electrical business equipment.

SAFETY COMPLIANCE NOTICE

This device has been tested and certified according to the following safety standards and is intended for use only in Information Technology Equipment which has been tested and certified to these or other equivalent standards:

- UL Standard 1950 / CSA C22.2 No. 950
- IEC 60950
- EN 60950

Published September, 2001

User Guide Version 2.0.3