Location of the LM1 Wireless Antenna w/r Case




Thom Brace 12/06/2017



LM1 Main PCBA


Wireless Antenna Location on Main PCBA

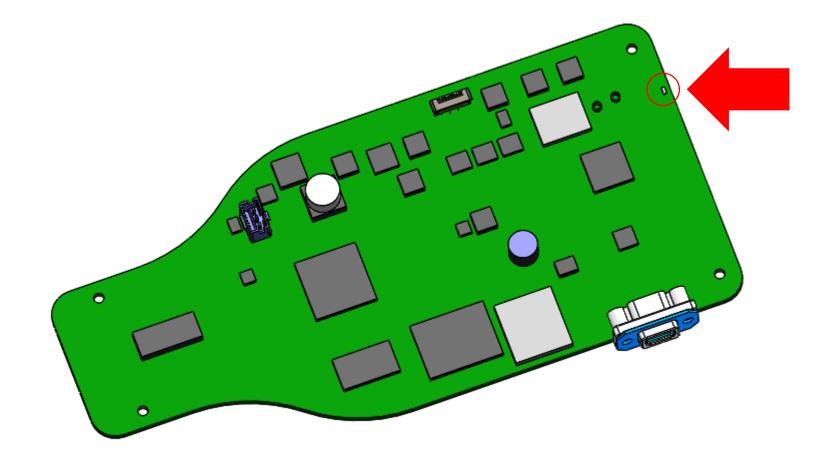



Main PCBA in LM1


See-thru Rear Case and Cap

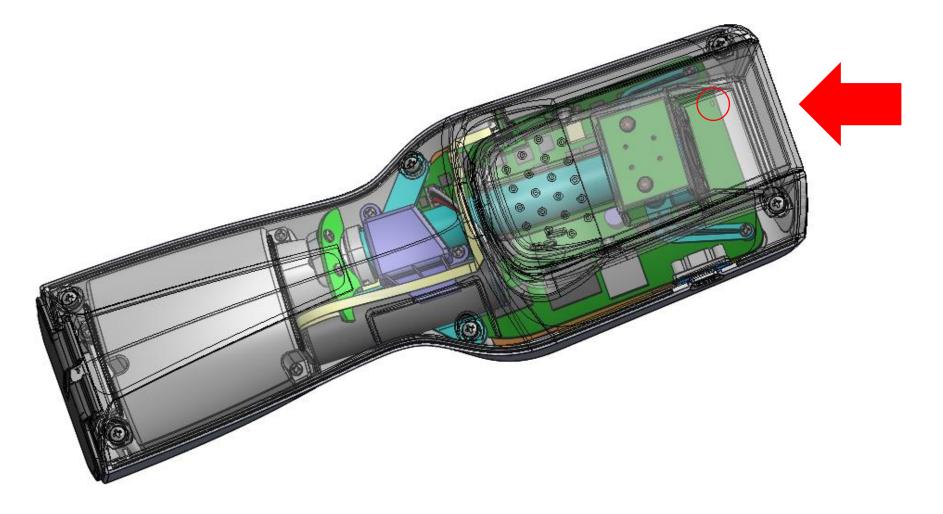



LM1 w/Main PCBA


Location of Antenna w/Rear Case and Cap removed

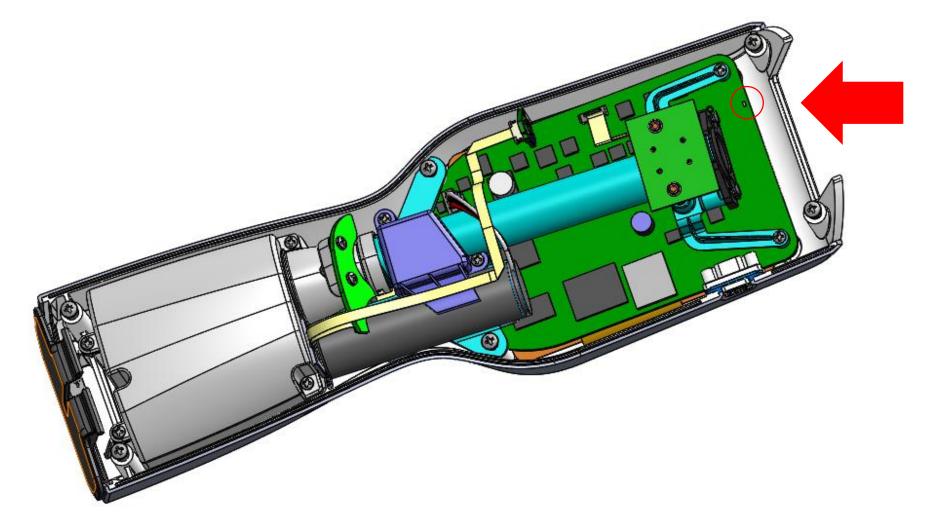



Main PCBA and Front Case


Distance to closest surface (highlighted in green): 0.486 inches

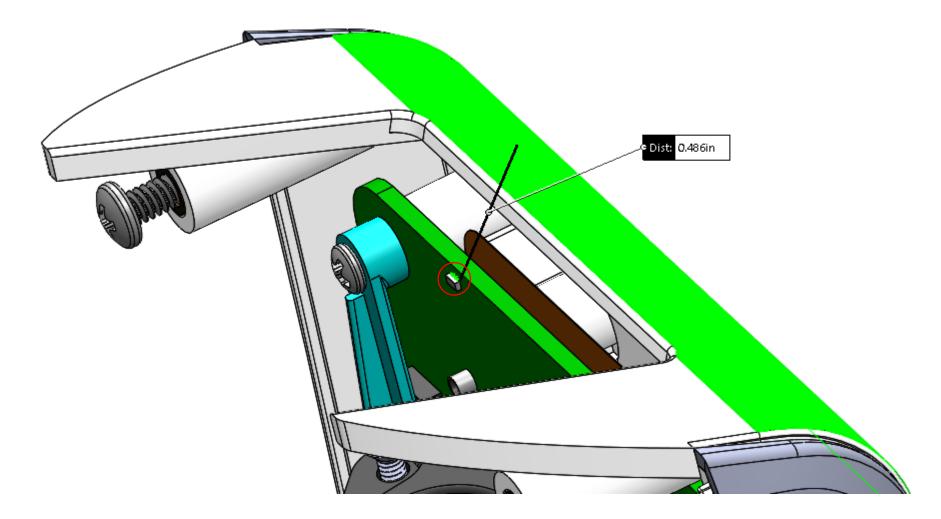



Main PCBA and Front Case


[Normal] Distance to front surface (highlighted in green): 0.536 inches

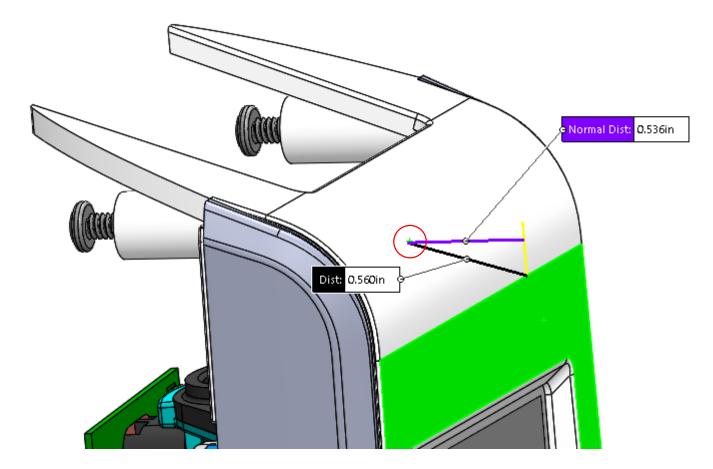



Main PCBA and Front Case

Distance to closest side surface (highlighted in green): 0.894 inches

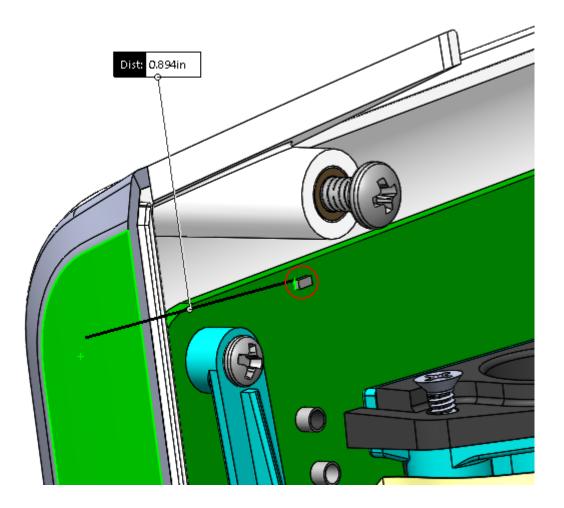



Main PCBA and Rear Case

Distance to rear Cap surface (highlighted in green): 1.323 inches

