



MODEL HA01 In-Wall Receptacle

For Indoor Use And
For Outdoor Use With
Weather Proof Enclosure
(Not Included)

Thank you for purchasing Intermatic's HomeSettings In-Wall Receptacle. With the HomeSettings program, you can reliably and remotely control lighting and appliances throughout your home.

The outstanding features of the HomeSettings HA01 In-Wall Receptacle include:

- 2 Receptacles - one standard outlet and one Z-Wave™ controlled outlet (both Outlets will work under normal conditions).
- Feedback that will allow you to see whether your device has received the ON/OFF signal.
- RF signal reliability – each HomeSettings product has a special feature that virtually guarantees that RF signals are received.
- Ease of installation.
- Replaces standard receptacle.
- Interoperable with all other Z-Wave enabled devices.



This product is compatible with other Z-Wave™ enabled products.

The HA01 In-Wall Receptacle is a Z-Wave enabled device and is fully compatible with any HomeSettings network and any Z-Wave enabled network. HomeSettings Z-Wave enabled devices displaying the Z-Wave logo can also be used with other Z-Wave enabled products regardless of the manufacturer. HomeSettings modules and controllers can also be used in other manufacturer's Z-Wave enabled networks. Each module in a HomeSettings network is designed to act as a repeater. Repeaters will re-transmit the RF signal to ensure that the signal is received by its intended destination by routing the signal around obstacles and radio dead spots. The network becomes stronger as more devices are added.

INSTALLATION

BEFORE INSTALLING MAKE SURE THAT YOU:

1. Understand basic wiring principles and techniques (IF NOT, USE A QUALIFIED ELECTRICIAN FOR THIS INSTALLATION).
2. Can interpret wiring diagrams.
3. Have circuit-wiring experience.
4. Read all instructions and documentation and save for future reference.
5. Are prepared to test your work, making sure you have wired the receptacle according to your local electrical code.

WARNING: TO AVOID FIRE, SHOCK, OR DEATH, TURN OFF POWER AT CIRCUIT BREAKER OR REMOVE FUSE FROM FUSE BOX AND TEST THAT POWER IS OFF BEFORE WIRING.



1. Remove wall plate and pull existing receptacle from wall.
2. Disconnect Wires.

NOTE: Wire connectors provided are suitable for copper wire only. For aluminum wire, consult an electrician.

3. Wire the HA01 - using the wire connectors provided.
 - Connect the HA01 ground wire to the ground wire in the wall box. If there is no ground wire in your wall box, Consult an electrician.
 - Connect the HA01 *white* wire to the neutral wire in the wall box.
 - Connect the HA01 *black* wire to the Hot wire (the wire leading to the circuit breaker or fuse box).

IMPORTANT WIRING INFORMATION - When making wire connections, twist and trim all wires to the proper length as indicated: 1/2" for 10, 12, or 14 gauge.

4. Check that all wire connections are secure.
5. Place all wires inside junction box. Mount and align the HA01 (using the included screws) and complete installation by attaching and securing wall plate (not included).

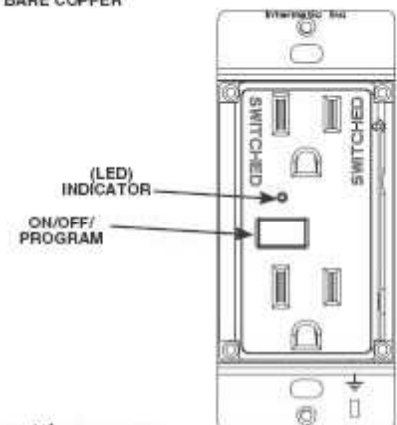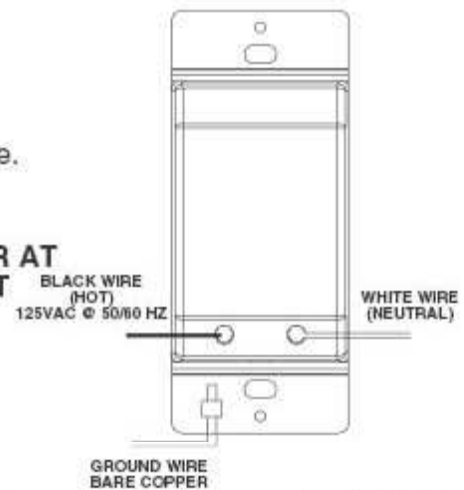

6. Reconnect your electrical power.
7. Plug a lamp or appliance into the receptacle.
8. Turn the knob or switch on the lamp or appliance to the ON position.
9. To manually turn ON the HA01 In-Wall Receptacle, press and release the Program/ON/OFF button. The green indicator LED will turn ON, and the lamp or appliance plugged into the HA01 In-Wall Receptacle will also turn ON.
10. To manually turn OFF the HA01 In-Wall Receptacle, simply press and release the Program/ON/OFF button. The green indicator will turn OFF and the lamp or appliance plugged into the HA01 In-Wall Receptacle will also turn OFF.

PROGRAMMING AND RECOMMENDATIONS

1. After hardwiring the HA01 into the location where it will be used, it is ready to be programmed.
2. For best results do not relocate the HA01 after it has already been included in the network. If you wish to re-locate or move the HA01 from its location, first delete it from the network, then include it back to the network after you have re-located it.
3. Devices (such as lamps) should be plugged into the modules before adding modules to the network and should be turned to the ON position.
4. For including modules and setting up your network, see the instructions in your Remote Control manual.

Federal Communications Commission / Industry Canada Statement

This device complies with part 15 of the FCC rules. Operation of this device is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna or device.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTICE

Changes or modifications not expressly approved by Intermatic Inc. could void the user's authority to operate the equipment.

The term "IC:" before the radio certification number only signifies that Industry Canada technical specifications were met.

TECHNICAL INFORMATION

For Indoor Use - or Outdoor Use with Weather Proof Enclosure

Ratings:

Radio Operating Frequency: 908.42 MHz

15A, 125VAC 50/60Hz

Operating Temperature Range: 32° to 104°F (0° to 40°C)

RF range: 50-100 feet under normal operating conditions.

Made In China

WARRANTY INFORMATION

LIMITED 6-YEAR WARRANTY

If within six (6) years from the date of purchase, this product fails due to a defect in material or workmanship, Intermatic Incorporated will repair or replace it, as its sole option, free of charge. This warranty is extended to the original household purchaser only and is not transferable. This warranty does not apply to: (a) damage to units caused by accident, dropping or abuse in handling, acts of God or any negligent use; (b) units which have been subject to unauthorized repair, opened, taken apart or otherwise modified; (c) units not used in accordance with instructions; (d) damages exceeding the cost of the product; (e) sealed lamps and/or lamp bulbs, LED's and batteries; (f) the finish on any portion of the product, such as surface and/or weathering, as this is considered normal wear and tear; (g) transit damage, initial installation costs, removal costs, or reinstallation costs.

INTERMATIC INCORPORATED WILL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU. THIS WARRANTY IS IN LIEU OF ALL OTHER EXPRESS OR IMPLIED WARRANTIES. ALL IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY AND THE WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE, ARE HEREBY MODIFIED TO EXIST ONLY AS CONTAINED IN THIS LIMITED WARRANTY, AND SHALL BE OF THE SAME DURATION AS THE WARRANTY PERIOD STATED ABOVE. SOME STATES DO NOT ALLOW LIMITATIONS ON THE DURATIONS OF AN IMPLIED WARRANTY, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

This warranty service is available by either (a) returning the product to the dealer from whom the unit was purchased, or (b) mailing the product, along with proof of purchase, postage prepaid to the authorized service center listed below. This warranty is made by: Intermatic Incorporated/After Sales Service/7777 Winn Rd., Spring Grove, Illinois 60081-9698/815-675-7000 <http://www.homesettings.com> Please be sure to wrap the product securely to avoid shipping damages.

Intermatic Inc., Spring Grove, IL 60081-9698