

AVX

Quick Guide

Kurzanleitung | Guide rapide | Guía rápida | Instrucciones resumidas | Guida rápido | Beknopte handleiding |
Краткая инструкция | 快速指南 | クイックガイド | 요약 설명서

Accessories shown: EKP AVX, SKM AVX-S, SKM AVX, BA 20, NT 5-10U, SK AVX, EKP holder, CI 400, BA 10, BA 30.

Battery

Instructions for inserting and removing the battery, with 'CLICK!' labels indicating the correct orientation.

Charging

SK/SKM	Battery Level	EKP
1:00 h	30%	0:15 h
2:00 h	60%	0:30 h
3:00 h	75%	0:40 h
4:30 h	100%	1:15 h

Setup

Instructions for attaching the device to a camera lens.

Belt

Instructions for attaching the device to a camera belt.

Warning: max. 320° rotation range.

On/Off

SHORT = ON
3 s = OFF

Paired

Change device

3s Pair

No Link!

No Link!
3s Pair

max. 320°

Battery check

Check	1	2	3	4
> 3 h	█	█	█	█
> 2 h	█	█	█	█
> 1 h	█	█	█	█
> 15 min	█	█	█	█
< 15 min	██	█	█	█

Set AF-OUT

AF Out

Sennheiser electronic GmbH & Co. KG

Am Labor 1, 30900 Wedemark, Germany
www.sennheiser.com
Printed in Germany, Publ. 11/14, 554637/A02