




# ew 100 G4

Quick Guide  
Kurzanleitung  
Guide rapide  
Guida rapida  
Guía de inicio rápido  
Guia rápido  
Beknopte handleiding  
Krótka instrukcja obsługi  
Snabbguide

Kort vejledning  
Pikaohje  
Γρήγορος οδηγός  
Kısa Kılavuz  
Краткая инструкция  
快速指南  
快速使用指南  
クイックガイド  
퀵 가이드

SENNHEISER

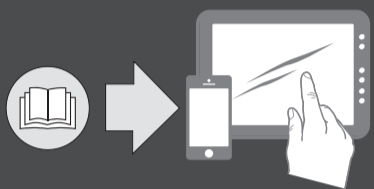

Sennheiser Documentation App



ANDROID APP ON  
Google play

Available on the  
App Store

or online at  
[www.sennheiser.com/download](http://www.sennheiser.com/download)  
ew 100 G4\_


Sennheiser electronic GmbH & Co. KG  
Am Labor 1, 30900 Wedemark, Germany  
[www.sennheiser.com](http://www.sennheiser.com)

Printed in Germany, Publ. 01/18, 575860/A01


## EM 100



## SKM 100

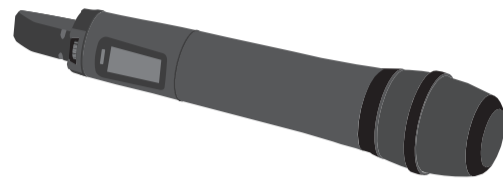


## SKM 100-S

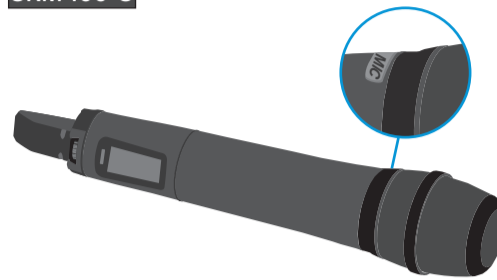

## SK 100



## Battery

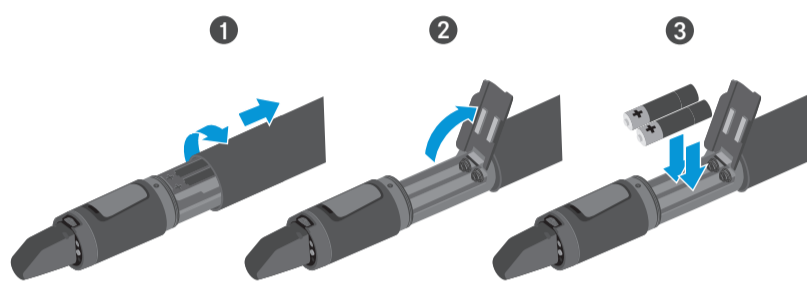


## Low Battery




	100 %	> 8 h
	70 %	4 - 6 h
	30 %	2 - 3 h
LOW BATT		

## Setup

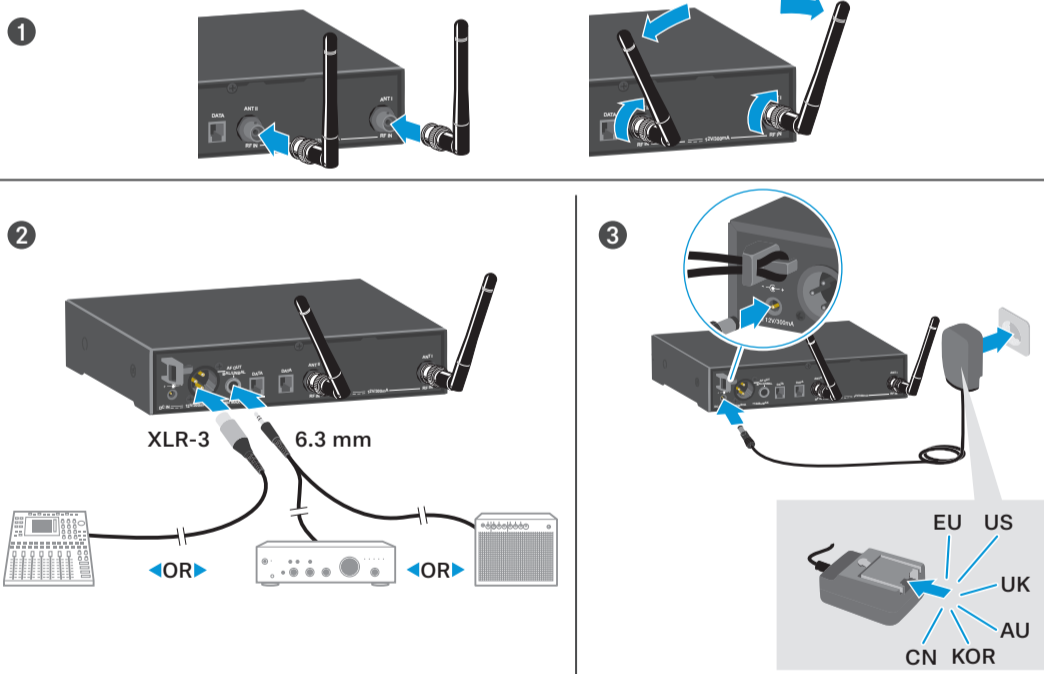


## On

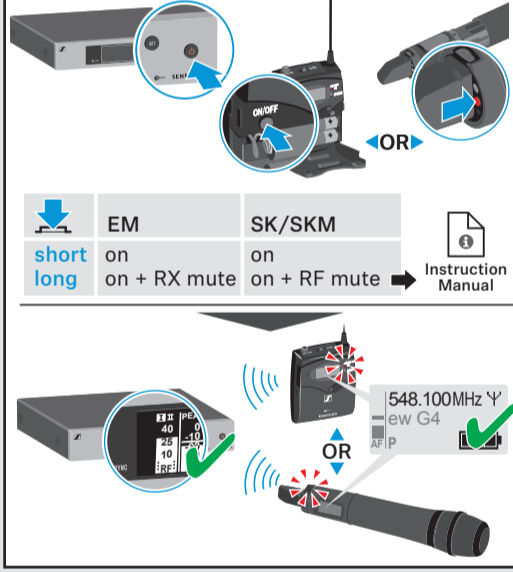



## Off




## Menu

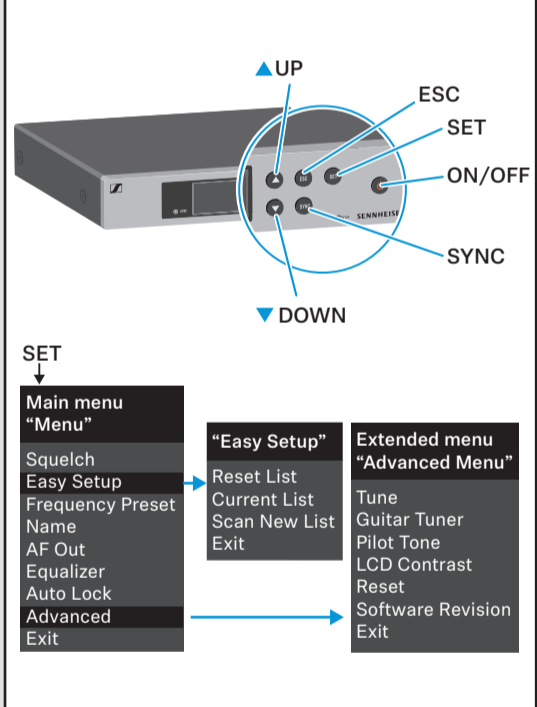

## Standard display

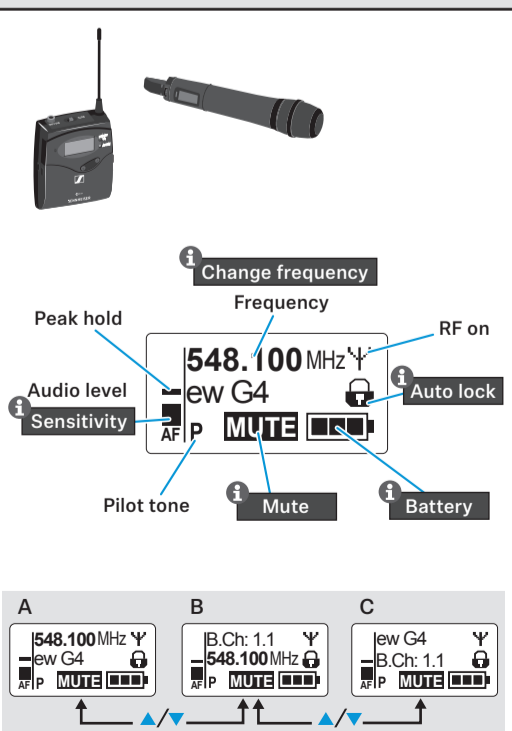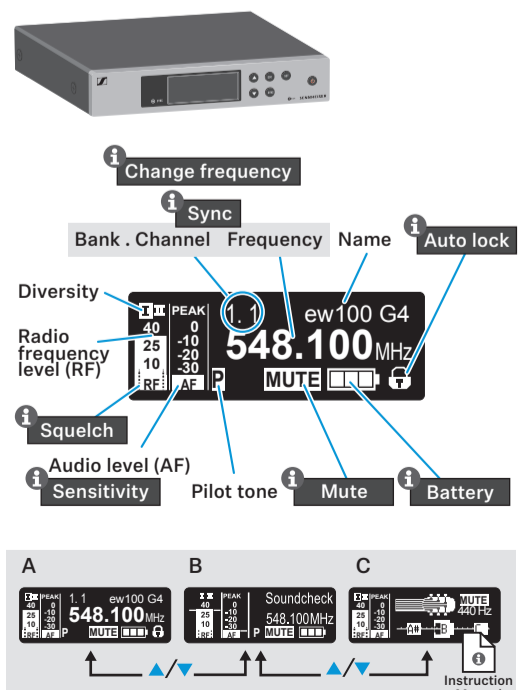

## Menu

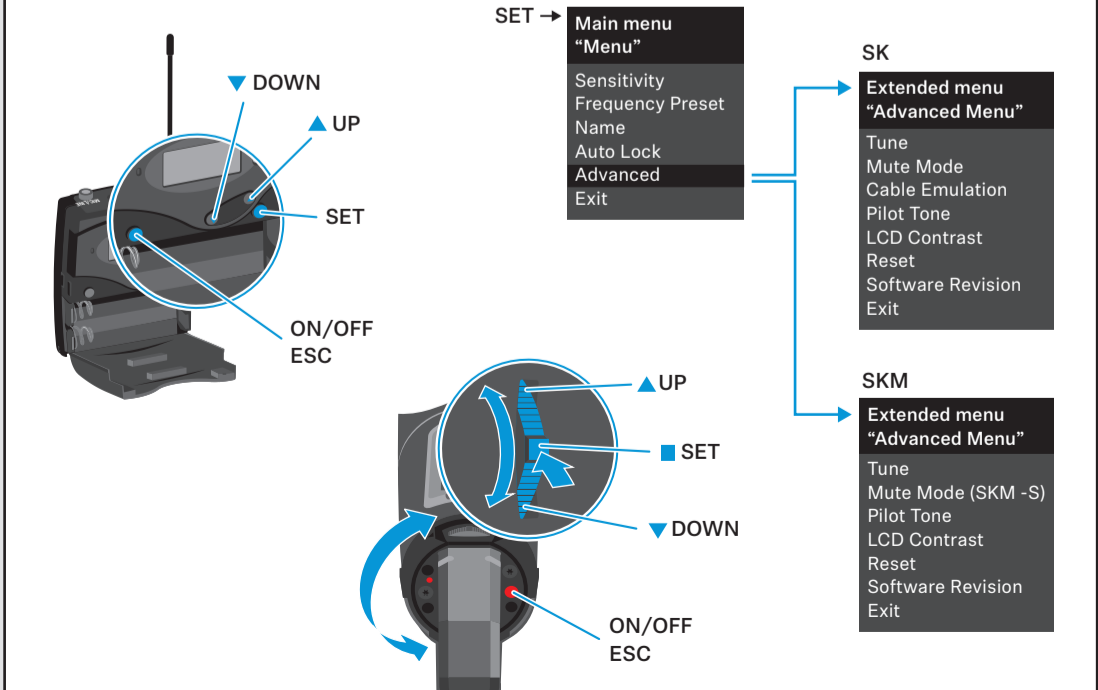

**Auto lock**

**EM**

- 1
- 2
- 3

Locked  $\Delta/\nabla$  Unlock?

SET  $\Delta/\nabla$  SET

**SK**

- 1
- 2
- 3

Locked  $\Delta/\nabla$  Unlock?

SET  $\Delta/\nabla$  SET

**SKM**

- 1
- 2
- 3

Locked  $\Delta/\nabla$  Unlock?

SET  $\Delta/\nabla$  SET

10 s → Auto lock

Instruction Manual

**Mute**

Instruction Manual

EM 100

SKM 100

short

RF Mute On?  $\Delta/\nabla$  SET

RF Mute Off?  $\Delta/\nabla$  SET

RX Mute On?  $\Delta/\nabla$  SET

RX Mute Off?  $\Delta/\nabla$  SET

AF Mute Mute On

AF Mute Mute Off

RF Mute Mute On

RF Mute Mute Off

**New frequency**

**Squelch**

- 1

High

Middle

Low

40

25

10

RF

**Change frequency**

- 2
- 3

SKM/SK off!

Easy Setup EM	Frequency Preset EM, SK, SKM
Menu Easy Setup $\Delta/\nabla$ SET	Menu Frequency Preset $\Delta/\nabla$ SET
Easy Setup Scan New List $\Delta/\nabla$ SET	Frequency Preset B.Ch: 1.1 $\Delta/\nabla$ SET
Scan New List 734 ... 776 MHz WAIT 30s	Frequency Preset B.Ch: 15.6 $\Delta/\nabla$ SET
Easy Setup Bank 1 ... 20 $\Delta/\nabla$ SET	Frequency Preset B.Ch: 15.6 $\Delta/\nabla$ SET
Easy Setup B.Ch: 1...12 $\Delta/\nabla$ SET	Sync 758.200 MHz
Stored	Stored

No frequency → 1 Squelch: Middle ...

Instruction Manual

**Sync**

- 4

≤ 10 cm

≤ 4"

OR

✓ SYNC

OR

✗ SYNC

Instruction Manual

**SK 100**

SKM 100-S

Menu Advanced  $\Delta/\nabla$  SET

Advanced Mute Mode AF On/Off  $\Delta/\nabla$  SET

Mute Mode AF On/Off  $\Delta/\nabla$  SET

Mute Mode RF On/Off  $\Delta/\nabla$  SET

AF Mute Mute On

AF Mute Mute Off

RF Mute Mute On

RF Mute Mute Off

**Multichannel - Easy Setup**

Bank 1 ... 20; U

Channel 1 ... 12

max. 12 channels

>12 channels → Instruction Manual

RJ 10

Instruction Manual

**Sensitivity**

- 5

Menu Sensitivity -24dB

-60 dB ... 0 dB

-48 dB ... 0 dB

AF PEAK

Instruction Manual

**AF out**

- 6

LEVEL

Menu AF Out +18 dB

-24 dB ... +24 dB

**SKM**

ME 2 | ME 4

ME 2

ME 4

ME 3-II

ME 2 | ME 4

ME 2

25 cm (10")

ME 4

ME 3-II

2...3 cm (1")